
Hanwha Techwin America

500 Frank W. Burr Blvd. Suite 43 Teaneck, NJ 07666

Toll Free +1.877.213.1222 Direct +1.201.325.6920

Fax +1.201.373.0124

www.hanwhasecurity.com

PUBLIC VIEW MONITOR

User Guide

SMT-3211PVM-PIP & SMT-3211PVM

WISENET

Public View Monitor

User Guide

Copyright

©2018 Hanwha Techwin Co., Ltd. All rights reserved.

Trademark

Each of trademarks herein is registered. The name of this product and other trademarks mentioned in this manual are the registered trademark of their respective company.

Restriction

Copyright of this document is reserved. Under no circumstances, this document shall be reproduced, distributed or changed, partially or wholly, without formal authorization.

Disclaimer

Hanwha Techwin makes the best to verify the integrity and correctness of the contents in this document, but no formal guarantee shall be provided. Use of this document and the subsequent results shall be entirely on the user's own responsibility. Hanwha Techwin reserves the right to change the contents of this document without prior notice.

☞ Design and specifications are subject to change without prior notice.

☞ The initial administrator ID is "admin" and the password should be set when logging in for the first time.

Please change your password every three months to safely protect personal information and to prevent the damage of the information theft.

Please, take note that it's a user's responsibility for the security and any other problems caused by mismanaging a password.

☞ Equipment shall be installed in accordance with the latest local/national codes of practice, and standards
eg - UL 1203 Edn. 5, CSA22.2 No30-M1986 Edn1 reaffirmed 2012, CSA C22.2 No25-1966 reaffirmed 2014,
CSA C22.2 No 60065-03 Edn. 1, UL60065 Edn. 7,

| | | | | |
|---|---------|-----|--------------------|---|
| 4 | GENERAL | 1.1 | Scope | 4 |
| | | 1.2 | Safety Precautions | 4 |
| | | 1.3 | Before You Begin | 5 |

| | | | | |
|---|---------------------------|-----|---------------------------|---|
| 7 | FUNCTIONAL SPECIFICATIONS | 2.1 | Functional Specifications | 7 |
|---|---------------------------|-----|---------------------------|---|

 
| | | | | |
|---|-------------------------|-----|------------------------------------|----|
| 8 | CONTROLS AND INDICATORS | 3.1 | Connectors | 8 |
| | | 3.2 | Control Buttons (on the back) | 9 |
| | | 3.3 | Bottom Panel View (PIP model only) | 10 |
| | | 3.4 | LED Indication | 10 |
| | | 3.5 | Remote Control Accessories | 11 |

CABINET

Material: Metal. Finish: Black

DIMENSIONS

Unit: mm(inch)

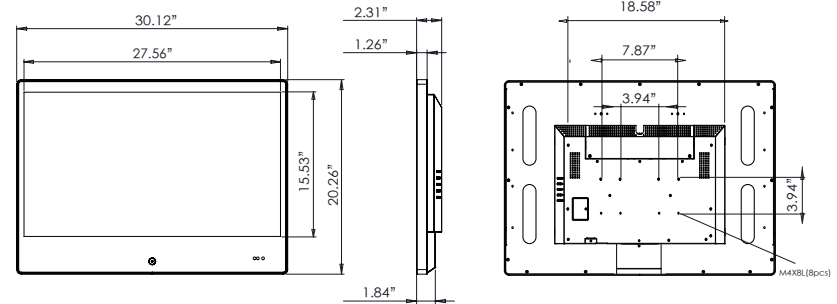

Net Weight: 13.6Kg /30 lbs.

Shipping Weight: 17.19Kg / 37.91lbs.

Packing Dimension (W x H x D): 896x666x214mm / 35.31 x 26.25 x 8.46 inch

VESA MOUNTING

MTBF shall be 30,000 hours minimum at 90% confidence level and 100% duty cycle continuous operation at 25 C. The calculation does not include LCD panel.

| VESA | Spec. of screw hole |
|------------|---------------------|
| 100x100 mm | M4 x 8mm |
| 200x100 mm | |

- Use appropriate screws to mount VESA bracket (Screw hole: M4 x 5mm), failure to do so may cause serious injury.
- Ensure that the VESA bracket has an adequate size mounting plate, screws and/or fixings to support the weight of the monitor and bracket to the surface to which it is being attached. Failure to do so may cause serious injury.
- If there is any doubt of the suitability of a mount or fixing method, a qualified technician should be consulted.



Caution

This 21.5" / 27" PVM is intended to be fixed to a surface during use. Use a bracket rated for the weight of the unit. Follow the bracket instructions for fixing to a surface.

SAFETY APPROVALS

This series design shall meet the standards of the following domestic and foreign agencies:
UL : UL 60950-1

EMI/EMS EMISSION APPROVALS

This series design shall meet following EMI/EMS specifications:
FCC Compliance: FCC Rules and Regulations, Part 15, subpart B, Class A.

OSD MENU

12

| | | |
|------|-------------------------|----|
| 4.1 | Hot Key | 12 |
| 4.2 | Main Menu | 12 |
| 4.3 | Main Adjust | 12 |
| 4.4 | Color Adjust | 13 |
| 4.5 | Scan Setting | 13 |
| 4.6 | Image Adjust (VGA Only) | 14 |
| 4.7 | Information | 14 |
| 4.8 | Language | 15 |
| 4.9 | Setup Menu | 15 |
| 4.10 | Source Trigger | 16 |
| 4.11 | Factory Reset | 16 |
| 4.12 | Audio Control | 16 |
| 4.13 | Banner Function | 17 |

REGULATORY AGENCY & RELIABILITY

17

| | | |
|-----|----------------------------|----|
| 5.1 | Safety Approvals | 18 |
| 5.2 | EMI/EMS Emission Approvals | 18 |

MECHANICAL

18

| | | |
|-----|---------------|----|
| 6.1 | Cabinet | 19 |
| 6.2 | Dimensions | 19 |
| 6.3 | VESA mounting | 19 |

SCOPE

This document is used to define the performance of the LCD Public View Monitor (PVM) series. The system supports HDMI and PC inputs, as well as from the built-in camera. The On Screen Display (OSD) menu makes the system easy to operate.

SAFETY PRECAUTIONS

 
1. Do not modify the three-prong grounding type monitor power plug in any way.
2. Operate this unit only from the type of power source indicated on the label.
3. Do not block or cover ventilation openings on the back or bottom of the monitor cabinet.
4. Do not place this monitor near a radiator or heating vent.
5. Do not push objects of any kind through cabinet openings. This may result in fire or electrical shock.
6. Before adding attachments always ask a service technician to perform routine safety tests to determine that equipment is in safe operating condition. Ground potential tests should be part of the routine safety check made by the service technician.
7. Do not place monitor on an unstable cart, stand, or shelf where it may fall and injure personnel or damage equipment.
8. Route power cords so that they cannot be walked upon or tripped over. Do not allow anything to rest on the power cord.
9. Do not install monitor in wet areas, or where it may be exposed to rain or water. Do not spill liquid of any kind on the unit.
10. Unplug the power cord from the unit before cleaning the display. Use only a damp cloth. Do not use alcohol, spirits, or ammonia to clean the display. **DO NOT ATTEMPT TO CLEAN THE INTERIOR OF THIS UNIT- THIS ACTION MUST BE PERFORMED BY THE SERVICE TECHNICIAN AS REQUIRED DURING NORMAL MAINTENANCE.**
11. Refer all servicing to qualified service personnel. **REMOVAL OF BACK COVER BY UNAUTHORIZED PERSONNEL MAY EXPOSE THE USER TO DANGEROUS VOLTAGES OR OTHER HAZARDS.**
12. Unplug the unit immediately and notify the service technician.
 - A. If liquid has been spilled into the display or the display has been exposed to rain or water.
 - B. If the unit has been dropped or the cabinet damaged.
 - C. If fuses continue to blow.
 - D. If the power cord is damaged or frayed.
 - E. If a distinct change from normal operation is apparent.

When replacement parts are required, be sure that the service technician uses components specified by the manufacturer which have the same characteristics as the original parts. **UNAUTHORIZED SUBSTITUTIONS MAY RESULT IN FIRE, ELECTRICAL SHOCK OR OTHER HAZARDS.**

Upon completion of any service or repairs, ask the technician to perform safety checks to determine that the equipment is in safe operating condition.

WARNING: SERIOUS SHOCK HAZARDS EXIST WITHIN THE COVERS OF THIS MONITOR. DO NOT OPEN THE COVERS UNDER ANY CIRCUMSTANCES, THERE ARE NO USER SERVICEABLE COMPONENTS INSIDE

BANNER FUNCTION

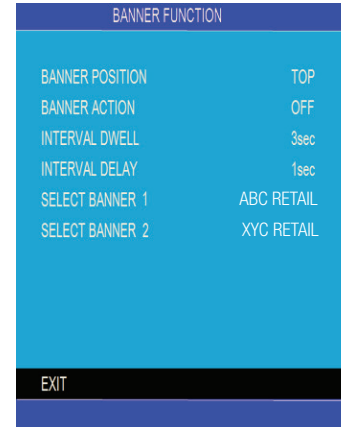


1. Press ▼ / ▲ KEY to select an icon
2. Press ◀ / ▶ KEY to selection and adjust the value
3. Press EXIT KEY button to return

BANNER POSITION – Select Banner Position TOP / BOTTOM
BANNER ACTION – Select Banner Action OFF/ Blinking/Switching
INTERVAL DWELL – Set Banner on Dwell Timer 1~5 sec.
INTERVAL DELAY – Set Banner off Time 1~5 sec.
SELECT BANNER 1 – Select Banner 1 Type
SELECT BANNER 2 – Select Banner 2 Type
EXIT – Press OK KEY to return to the main menu

SOURCE TRIGGER

 Press OK KEY to enter the sub-menu

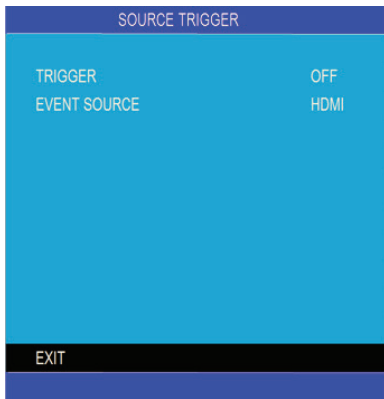

1. Press ▼ / ▲ KEY to select an icon
3. Press ◀ / ▶ KEY to selection and adjust the value
4. Press EXIT KEY to return

TRIGGER – Select trigger OFF/MOTION

EVENT SOURCE – Select Motion event source HDMI/VGA

EXIT – Press OK KEY to return to the main menu

 
FW. UPDATE (USB) – Plug USB with update FW then select this icon to update PVM FW

FACTORY RESET

Press OK KEY to reset PVM Monitor to factory default setting.

AUDIO CONTROL

Press OK KEY to enter the sub-menu

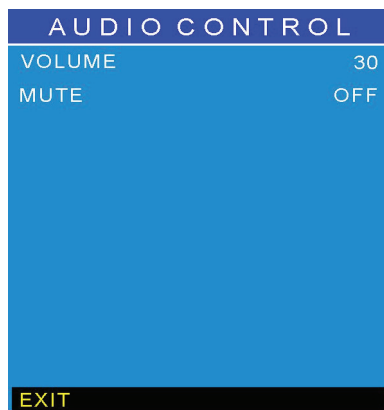

1. Press ▼ / ▲ KEY to select an icon
2. Press ◀ / ▶ KEY to selection and adjust the value
3. Press EXIT KEY to return

VOLUME – Adjust the PVM Monitor volume.

MUTE – Select Audio MUTE ON/OFF.

EXIT – Press OK KEY to return to the main menu.

BEFORE YOU BEGIN

Read these instructions before installing or operating this product.

Note: This installation should be made by a qualified service person and should conform to local codes.

This manual provides installation and operation information. To use this document, you must have the following minimum qualifications:

- A basic knowledge of CCTV systems and components
- A basic knowledge of electrical wiring and low-voltage electrical connections

Intended use

Only use this product for its designated purpose; refer to the product specification and user documentation.

Customer Support

For assistance in installing, operating, maintaining and troubleshooting this product refer to this document and any other documentation provided.

Conventions Used in this Manual

Boldface or button icons highlight command entries. The following **WARNING**, **CAUTION** and **Note** statements identify potential hazards that can occur if the equipment is not handled properly:



* WARNING:

Improper use of this equipment can cause severe bodily injury or equipment damage.



** Caution:

Improper use of this equipment can cause equipment damage.

Note: Notes contain important information about a product or procedure.



All lead-free products offered by the company comply with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive: 2011/65/EU, which means our manufacture processes and products are strictly “lead-free” and without the hazardous substances cited in the directive.

The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste.

* This symbol indicates electrical warnings and cautions.

** This symbol indicates general warnings and cautions.

WARNINGS AND CAUTIONS:

To reduce the risk of fire or electric shock, do not insert any metallic objects through the ventilation grills or other openings on the equipment.

WARNING:

 
This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

WARNINGS AND CAUTIONS:

To reduce the risk of fire or electric shock, do not insert any metallic objects through the ventilation grills or other openings on the equipment.

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

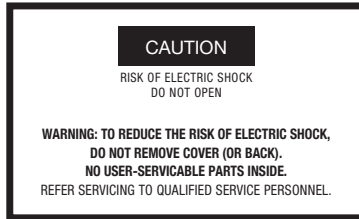

LANGUAGE

 
Press OK KEY to enter the sub-menu



1. Press ▼ / ▲ button to select an icon
2. Press OK KEY to confirm the selection and return.

SETUP MENU

Press OK KEY to enter the sub-menu

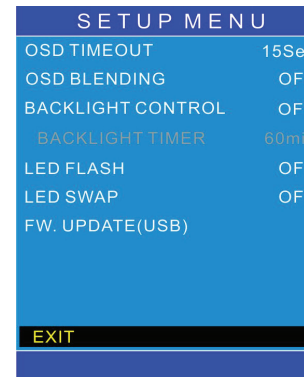

1. Press ▼ / ▲ KEY to select an icon
2. Press ◀ / ▶ KEY to selection and adjust the value
3. Press EXIT KEY to return

OSD TIMEOUT – Adjust the OSD timeout 5~60 sec/OFF.

OSD BLENDING – Select OSD blending LOW/MIDDLE/HIGH/OFF

BACKLIGHT CONTROL – Select backlight control TIMER/SENSOR/OFF

BACKLIGHT TIMER – Set backlight timer 10min~120min, 10min increment/click

POWER INDICATOR LED – Select Power Indicator LED ON/FLASH

POWER LED COLOR – Set LED color BLUE or RED or RED+BLUE

SOURCE TRIGGER – Press OK KEY to enter the sub-menu

IMAGE ADJUST (VGA ONLY)

Press OK KEY to enter the sub-menu

| IMAGE ADJUST | |
|--------------|----|
| AUTOADJUST | |
| H. POSITION | 50 |
| V. POSITION | 50 |
| CLOCK | 50 |
| PHASE | 5 |
| EXIT | |

1. Press ▼ / ▲ KEY to select an icon
3. Press ◀ / ▶ KEY to selection and adjust the value
4. Press EXIT KEY to return

AUTO ADJUST – Press OK KEY to auto adjust Image Settings

H. POSITION – Adjust the horizontal position value manually

V. POSITION – Adjust the vertical position value manually

PHASE – Adjust the phase value manually

CLOCK – Adjust the clock value manually

EXIT – Press OK KEY to return to the main menu

INFORMATION

Press OK KEY to enter the sub-menu

| INFORMATION |
|---------------|
| NO SIGNAL |
| H:0KHz V:0Hz |
| CAMERA |
| -- |
| FW.VER: v0.01 |

Power Supply

PVM Monitor Power Requirements:

Voltage: DC 24V
Current: 1.8A max

Use only a PSU rated at 24Vdc with a minimum current rating of 1.8A

D-SUB Input

Analog RGB: 0.707Vrms
Support VESA Standard Timing

HDMI Input - HDMI Compatible Interface

480i / 480p / 576i / 576p
720p / 1080i / 1080p

Audio Input

Signal Level: 1.0Vrms

Environmental

Temperature:

- Operating: 0°C to +40°C
- Storage: -20°C to +60°C

 
Humidity:

- Operating: 10% to 85% (non-condensing)
- Storage: 10% to 95% (non-condensing)

EDID

This series of displays support EDID (HDMI & VGA input)


CONNECTORS

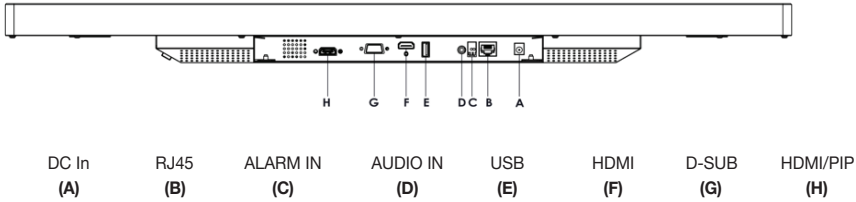

- A. DC IN: 2.5mm x 5.5mm
DC power connector (DC 24V Input)
- B. RJ45: Ethernet (from Hanwha camera)
- C. ALARM IN: Alarm input from Hanwha Camera
- D. AUDIO IN: Firmware update
- E. USB: FW Update
- F. HDMI: HDMI input
- G. D-SUB 15pin: VGA input
- H. HDMI/PIP: PIP HDMI input.(PIP Model only)

COLOR ADJUST

 Press OK KEY to enter the sub-menu

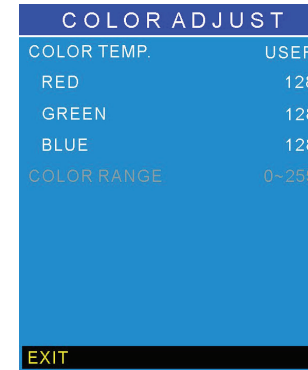

1. Press ▼/▲ KEY to select an icon
2. Press ◀/▶ KEY to selection and adjust the value
3. Press EXIT KEY to return

COLOR TEMP – Select the color temperature USER/ 6500K / 7500K / 9300K

RED – Adjust the RED value under USER setting

GREEN – Adjust the GREEN value under USER setting

 
BLUE – Adjust the BLUE value under USER setting

COLOR RANGE – Select the color range 16~235/0~255

EXIT – Press MENU button to return to the main menu

SCAN SETTING

Press OK KEY to enter the sub-menu

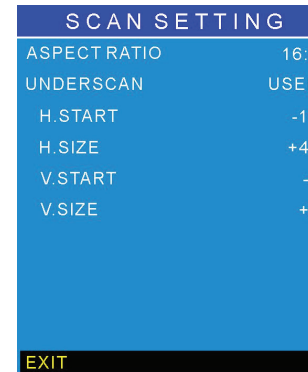

1. Press ▼/▲ KEY to select an icon
2. Press ◀/▶ KEY to selection and adjust the value
3. Press EXIT KEY button to return

ASPECT RATIO – Select aspect ratio Normal/16:9/4:3

UNDERSCAN – Select underscan ON/OFF/USER

H.START – Adjust horizontal start value under USER setting

H.SIZE – Adjust horizontal size value under USER setting

V.START – Adjust vertical start value under USER setting

V.SIZE – Adjust vertical size value under USER setting

UPSIDE DOWN – Select the image upside down ON/OFF

EXIT – Press OK KEY to return to the main menu

OSD menu

HOT KEY



 
VOLUME : Press ◀/▶ KEY to adjust the volume.

KEY LOCK : Press remote control KEY LOCK to enable this function.

KEY UN-LOCK : Press remote control KEY LOCK again to disable this function.

MAIN MENU

Press MENU KEY to enter the sub-menu

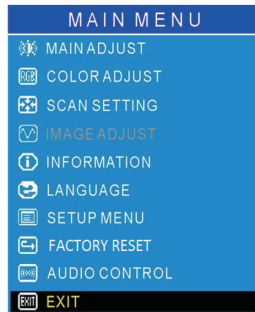


- Main Adjust
- Color Adjust
- Scan Setting
- Image Adjust
- Information
- Language
- Setup Menu
- Factory Reset
- Audio Control
- Exit

Press ▼/▲ KEY to select an icon, then press OK KEY to confirm the selection.

MAIN ADJUST

 Press OK KEY to enter the sub-menu

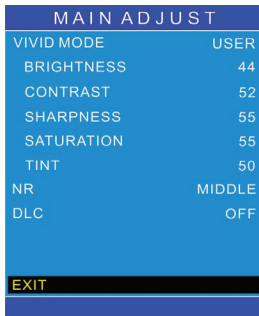


1. Press ▼/▲ KEY to select an icon
2. Press ◀/▶ KEY to selection and adjust the value
3. Press EXIT KEY button to return

VIVID MODE – Select Vivid mode
BRIGHTNESS – Adjust the brightness value
CONTRAST – Adjust the contrast value
SHARPNESS – Adjust the sharpness
SATURATION – Adjust the saturation
NR – Set Noise Reduction level OFF/LOW/MIDDLE/HIGH
DLC – Set Dynamic Luminance Control ON/OFF
EXIT – Press OK KEY to return to the main menu

controls & indicators

 CONTROL BUTTON (ON THE BACK)

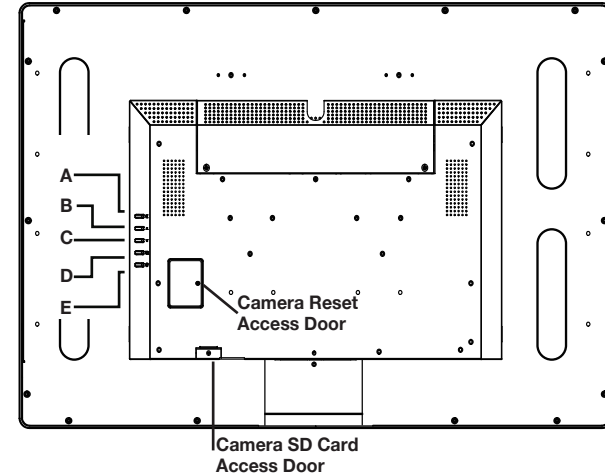

(A) “→” Source button

- Press the button to show source menu. Select VGA, HDMI, and CAMERA input.

(B) “▲” Up button

- Press the buttons to scrolling the cursor to desired function.
- Press the buttons to increase the value of selected function in sub OSD menu.

(C) “▼” Down button

- Press the buttons to scrolling the cursor to desired function.
- Press the buttons to decrease the value of selected function in sub OSD menu.

(D) “□” Menu button

 
- Press the button to show the OSD main menu.
- As a confirmation key during the OSD operation.

(E) “⏻” Power button

- Press the button to turn ON or turn OFF the monitor.


controls & indicators

BOTTOM PANEL VIEW (PIP MODEL ONLY)

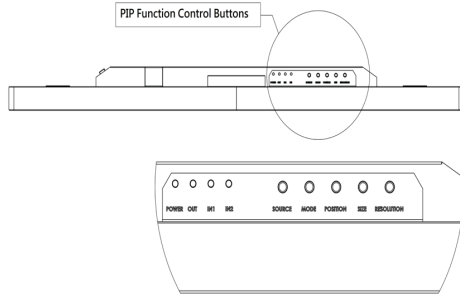

1. POWER LED : This red LED illuminates when power on
2. OUTPUT LED : This red LED illuminates when the PIP HDMI output
3. N1 LED : This red LED illuminates when the Camera video is selected as main image
4. N2 LED : This red LED illuminates when the HDMI/PIP is selected as main image
5. SOURCE : Press the button to select the input source as main
6. MODE : Press the button to select display mode
7. POSITION : Press the button to select the position of sub image when in PIP mode
8. SIZE : Press the button to select the size of sub image when in PIP mode
7. RESOLUTION : Press the button to select the output resolution

 LED INDICATION

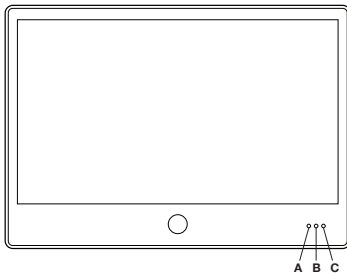

- (A) Light sensor: (measures ambient light for auto adjust settings)
- (B) IR Receiver: (for remote control)
- (C) LED: **ON** - GREEN/FLASH GREEN / FLASH RED. (Programmable from OSD menu);
OFF - RED

REMOTE CONTROL



- POWER KEY:** Monitor Power On/Off.
- MUTE KEY:** Mute the Audio.
- SOURCE KEY:** Select input signal.
- ◀ ▶ ▼ ▲ KEY:** OSD scrolling the cursor to desired function.
- OK KEY:** Confirmation key during the OSD operation
- EXIT KEY:** Exit the OSD menu
- MENU KEY:** Monitor OSD control
- CAMERA KEY:** Select camera mode
- KEY LOCK:** Monitor KEY LOCK
- VGA:** Select VGA input
- HDMI:** Select HDMI input
- SWAP :** Swap camera video & HDMI/PIP input source, (PIP Model only)
- PIP icon:** Select PIP size & PIP position and Sequential Display Dwell time setting.(PIP Model only)
- MODE :** Select MODE 1 (One view mode), MODE 2 (PIP mode), MODE 3 (POP mode A), MODE 4 (POP mode B) & Sequential Display. (PIP Model only).

Notes:

- The remote control requires 2xAAA batteries. Ensure batteries are inserted in the correct polarity according to the + and – symbols in the battery compartment.
- To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time.
- Batteries should last more than 2 years with normal use.

ACCESSORIES

All of the accessories listed below are included with the PVM.

1. Remote Control x 1
2. DC Terminal x 1
3. AAA battery x 2
4. User's Manual x 1
5. M4 x10mm Bolts x 5
6. Self-adhesive wire tiedown x 1
7. Screw M3 x 6mm x 1