



GV-POS Text Sender

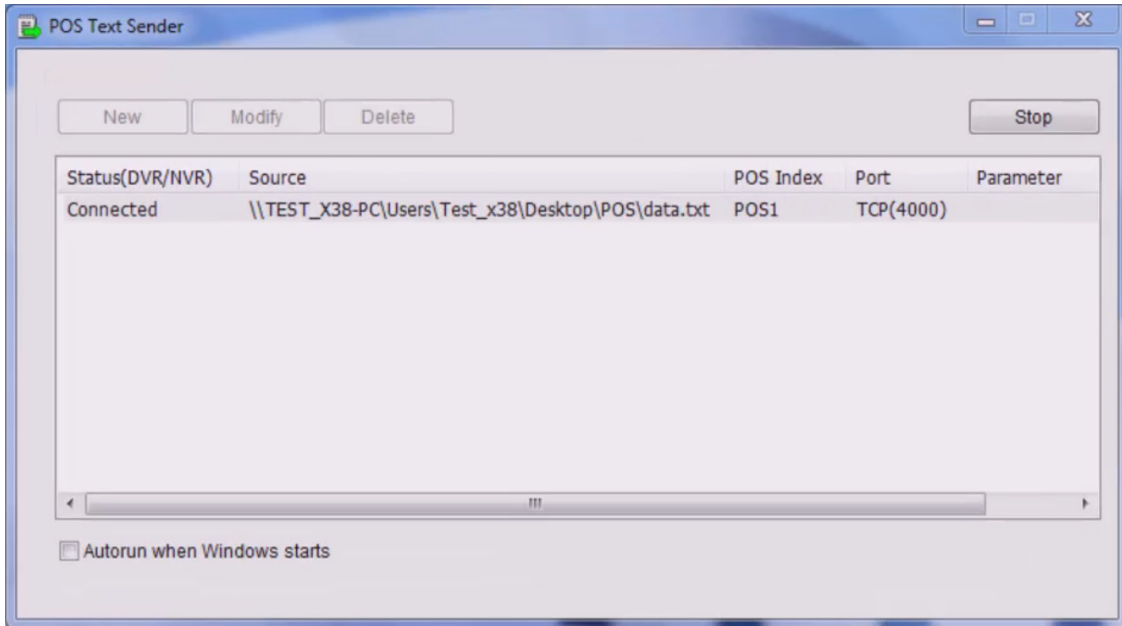

Introduction

Using GV-POS Text Sender, on your GV-VMS / DVR / NVR, you can directly retrieve transaction data from a POS device, under the same LAN, generating TXT, INI, JNL or any other raw (unprocessed) text files. The POS transaction data is retrieved through file share and can be displayed on the desired lives images and recordings of the GV-VMS / DVR / NVR.

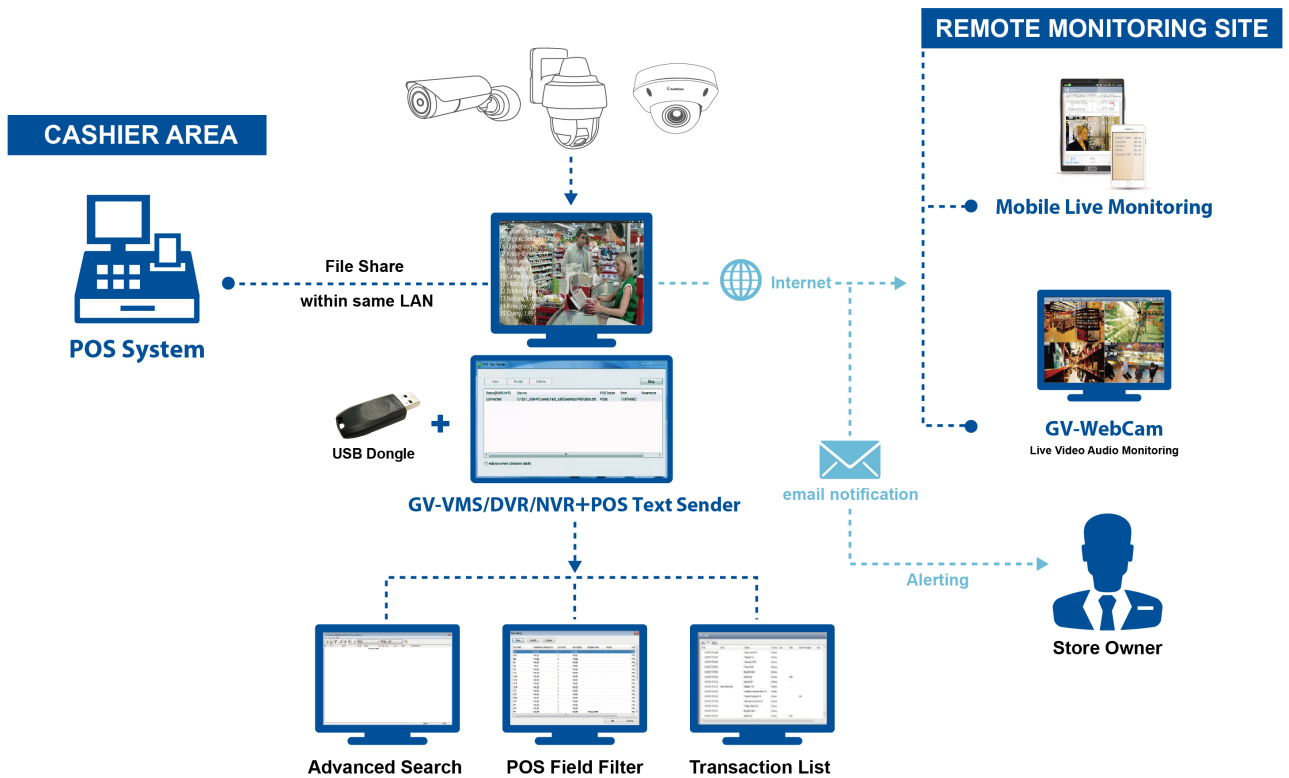

Specifications		
Supported POS Device Type		Generating TXT, INI, JNL or other raw (unprocessed) text files, OPOS protocol
Software		GV-POS Text Sender
Hardware	For GV-DVR / NVR V8.4 or later	GV-USB Dongle with 1, 2, 4, 8, 12, or 16 port(s)
	For GV-VMS	GV-USB Dongle with 1, 2, 4, 8, 12, 16 or 32 port(s)
	For GV-DVR / NVR earlier than V8.4	GV-USB Dongle with 16 ports
Max. number of POS connected to GV-System	Network connection	16 for GV-DVR / NVR 32 for GV-VMS
<p>Note:</p> <ol style="list-style-type: none"> It is required to install the program GV-POS Text Sender on the same PC as GV-VMS / DVR / NVR. The program can be found on the GeoVision website. All specifications are subject to change without notice. 		