

SCWT SMART CELL 3G GSM TERMINAL

QUICK GUIDE

The SCWT only provides 3G Voice via GSM network. The SCWT terminal will convert the GSM network to Analog output. There are two available analog outputs. The analog outputs have been tested on Pach and Company Quantum and AeGIS Telephone Entry Systems. If the SCWT will be used other than Pach and Company products, we will not responsible for compatibility issues.

To activate the SCWT, you must obtain the following:

1. AT&T or T-MOBILE standard SIM CARD such as Prepaid SIM or contract. If standard SIM CARD is not available, the adapter as below must be used. The adapter can be obtained at Amazon or any cellular store.



2. Insert the SIM CARD into the SCWT SIM CARD slot. To activate the SIM CARD, IMEI (15 digit) must be provided to your service provider. The IMEI number is on the back of the unit or you must take off the back cover by removing the four screws.