


INSTALLATION INSTRUCTIONS

LR100CRK CORBIN/RUSSWIN ELECTRIC LATCH RETRACTION DEVICE KIT MODELS: ED4200, ED5200, ED5400 & ED5800

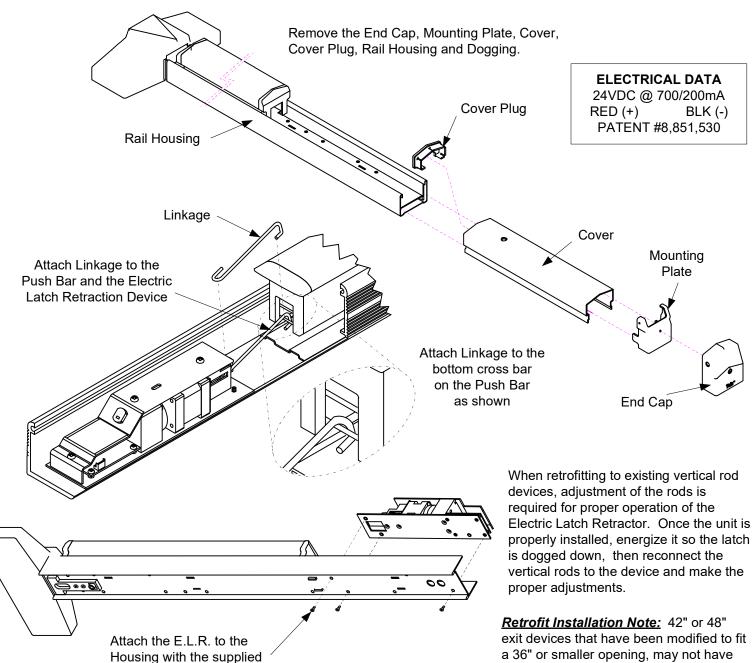

Replace Housing Cover, Cover with Plug, End Cap and the End Cap Cover.

screws.

Retrofit Installation Note: 42" or 48" exit devices that have been modified to fit a 36" or smaller opening, may not have the required space to fit the standard E. L. R. assembly. Always verify the distance from the end of the touchpad to the end rail, and if necessary, consult with the factory for appropriate selection.