

Quick Reference for the Vista-128FBPT/Vista-250FBPT Fire System

This document provides a brief procedure for performing some common system functions. For detailed procedures and additional functions, refer to your User Guide 800-09619, dated 1/12.

ACTION	PROCEDURE
Displaying Events	<p>The system is programmed to lock the keypad display with the first event that occurred in priority order.</p> <ol style="list-style-type: none">1. Fire – highest priority2. Life Safety3. Trouble and Supervisory4. System Events (i.e. low battery) – lowest priority <p>To display the next event, press the [*] key. Repeat as necessary.</p> <p>To revert to the first event displayed, press the # key.</p>
Silencing Fire Alarms	<p>Enter User Code +1 (OFF). This will silence the keypad, but may or may not silence the fire bells, depending on system programming. A second User Code + 1 (OFF) sequence may be required. The Silenced LED on the 6160CR-2 keypad will light.</p>
Resetting Alarms	<p>Enter User Code + 1 (OFF) a second time. This will clear alarms from memory.</p>
Silencing Troubles and Supervisory Conditions	<p>Enter User Code +1 (OFF). The corresponding LED on the 6160CR-2 keypad will light.</p>
Resetting Troubles and Supervisory Conditions	<p>Troubles and supervisory conditions automatically reset when the condition is cleared if programmed by your installer. Otherwise reset the condition by entering User Code + 1 (OFF).</p>

IN CASE OF TROUBLE, CONTACT:

Installer Name: _____

Address: _____

Phone Number: _____

This Document Must be Framed and placed adjacent to the operating control panel.

resideo

2 Corporate Center Drive, Suite 100
P.O. Box 9040, Melville, NY 11747

www.resideo.com

© 2020 Resideo Technologies, Inc. All rights reserved.
This product is manufactured by Resideo Technologies, Inc. and its affiliates.



800-09617QRB 1/12 Rev B