GOOD BETTER

## **ATTIC**

## OUTDOOR (roof, side of house, deck)

This is the best mounting option when you want the antenna to be out of sight. Signal loss may be experienced.

Direct line of sight from the antenna to the broadcast tower provides the strongest signal strength and maximum channel reception.


Avoid obstructions (such as buildings, trees or hills) between the antenna and the broadcast tower—these can block signal. If using a splitter to distribute signal to more than one TV, connect the USB cable to the 110V adapter instead of the TV USB port.

## **WARNINGS:**

- ! Installation of this product near power lines is dangerous. The antenna should maintain a minimum clearance of 3' from power lines, wires, trees, or other obstructions. If unable to maintain this safe distance, stop! If you are not sure that you can install the antenna safely, do not try it! Contact a professional installer.
- ! To prevent fire or shock hazard, do not expose the power inserter to moisture.
- ! Do not install the power inserter outdoors; it is intended for indoor use only.
- ! Do not connect a cable from the "ANT/AMP" port of the power inserter to the TV. Incorrectly connecting the power inserter will overload & damage the power inserter.

"ANTENNA IN"

! Check your local code for grounding specifications.

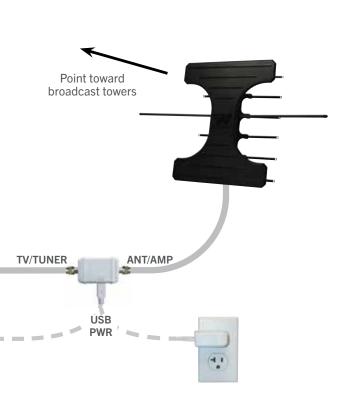

For a listing of likely channels available in your area as well as the direction of corresponding broadcast tower(s), go online to <a href="https://dx.doi.org/dtv.gov/maps">dtv.gov/maps</a>.

HDTV and coaxial cable are not included.

If you have any questions, please contact Winegard Technical Services at help@winegard.com or 1-800-788-4417.



Scan

## **HOW TO RUN A CHANNEL SCAN**

Using the television remote, select "Menu" and then "Settings." Then, select "Channel Setup." Select "Antenna" or "Air," depending on your TV. Make sure you are not on "Cable." Select "Channel Search" or "Channel Scan." Keep in mind that steps to perform a channel scan may vary. If the wording in your TV differs from the options shown, refer to your TV user manual for help.

