



# ***ALTV615DC1016 Series CCTV Power Supplies***

## ***Installation Guide***

### ***Models Include:***

#### ***ALTV615DC1016***

- 6-15VDC @ 10A
- Sixteen (16) Fuse Protected Outputs.

#### ***ALTV615DC1016CB***

- 6-15VDC @ 10A
- Sixteen (16) PTC Protected Outputs.

***For models with the line cord installed add suffix "3", e.g. ALTV615DC10163.***

### Overview:

ALTV615DC Series DC CCTV Power Supplies provide 6-15VDC distributed via sixteen (16) fuse or PTC protected outputs for powering CCTV cameras, heaters, and other video accessories.

### Sixteen (16) Output ALTV615DC1016 Reference Chart:

Altronix Model Number	Total Output Current (Power)	Output Voltage	Number of Outputs	PTC Protected Outputs (auto-resettable)	Fuse Protected Outputs	Output Current (max. per output)	115VAC 50/60Hz Input Current
ALTV615DC1016	10A	6-15VDC	16	—	✓	3.5A	1.9A
ALTV615DC1016CB	10A	6-15VDC	16	✓	—	2.5A	1.9A

### Specifications:

#### Input:

- Input 115VAC, 50/60 Hz, 1.9A.

#### Output:

- Sixteen (16) fuse or PTC protected outputs.
- 6VDC to 15VDC field adjustable.
- 10A total continuous supply current.
- Filtered and electronically regulated outputs.

#### Features:

- AC input and DC output LED indicators.
- Illuminated power disconnect circuit breaker with manual reset.
- Unit maintains camera synchronization.
- Ease of installation saves time and eliminates costly labor.

#### Enclosure Dimensions (H x W x D approx.):

13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.55mm).

### Installation Instructions:

1. Mount unit in the desired location. Mark and predrill holes in the wall to line up with the top two keyholes in the enclosure. Install two upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two upper screws; level and secure. Mark the position of the lower two holes. Remove the enclosure. Drill the lower holes and install the two fasteners. Place the enclosure's upper keyholes over the two upper screws. Install the two lower screws and make sure to tighten all screws (*Enclosure Dimensions, pg. 4*). Secure enclosure to earth ground.
2. Connect AC power to the two black and two white flying leads of the transformer (*Fig. 1, pg. 3*).

#### Units with line cord installed skip Step #2.

3. Plug the line cord into a grounded AC receptacle (*Fig. 1b, pg. 3*).
4. Adjust output voltage (unit is factory set at 12VDC); use the trimpot on the power supply board prior to connecting CCTV devices (*Fig. 1a, pg. 3*).
5. Measure output voltage before connecting devices. This helps avoiding potential damage. Terminals marked [1P - 16P] are positive (+) and terminals marked [1N - 16N] are negative.

#### CAUTION: Determine the maximum operating voltage of the equipment being powered before adjusting the output voltage.

6. Connect devices to terminals marked [1P - 1N] through [16P - 16N] on PD16W/PD16WCB board (*Fig. 1, pg. 3*), carefully observing correct polarity.
7. Green LED will illuminate when unit is powered.
8. Upon completion of the wiring, secure enclosure door with screws (supplied).

#### Caution: Equipment must be installed/serviced by authorized/trained personnel only.

Shut branch circuit power before installing/servicing equipment.

**WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to the National Electrical Code and all local codes.**

### Terminal Identification:

#### Power Supply Board


Terminal Legend	Function/Description
AC / AC	Low voltage AC input.
+ DC -	6VDC-15VDC output.

## Terminal Identification (cont'd):

### PD16W - Distribution Module

Terminal Legend	Function/Description
1P - 16P	Positive DC output.
1N - 16N	Negative DC output.

**Fig. 1 CAUTION: De-energize unit prior to servicing. For continued protection against fire hazard replace fuse with the same type and rating 3.5A, 250V. Do not expose unit to rain or moisture.**

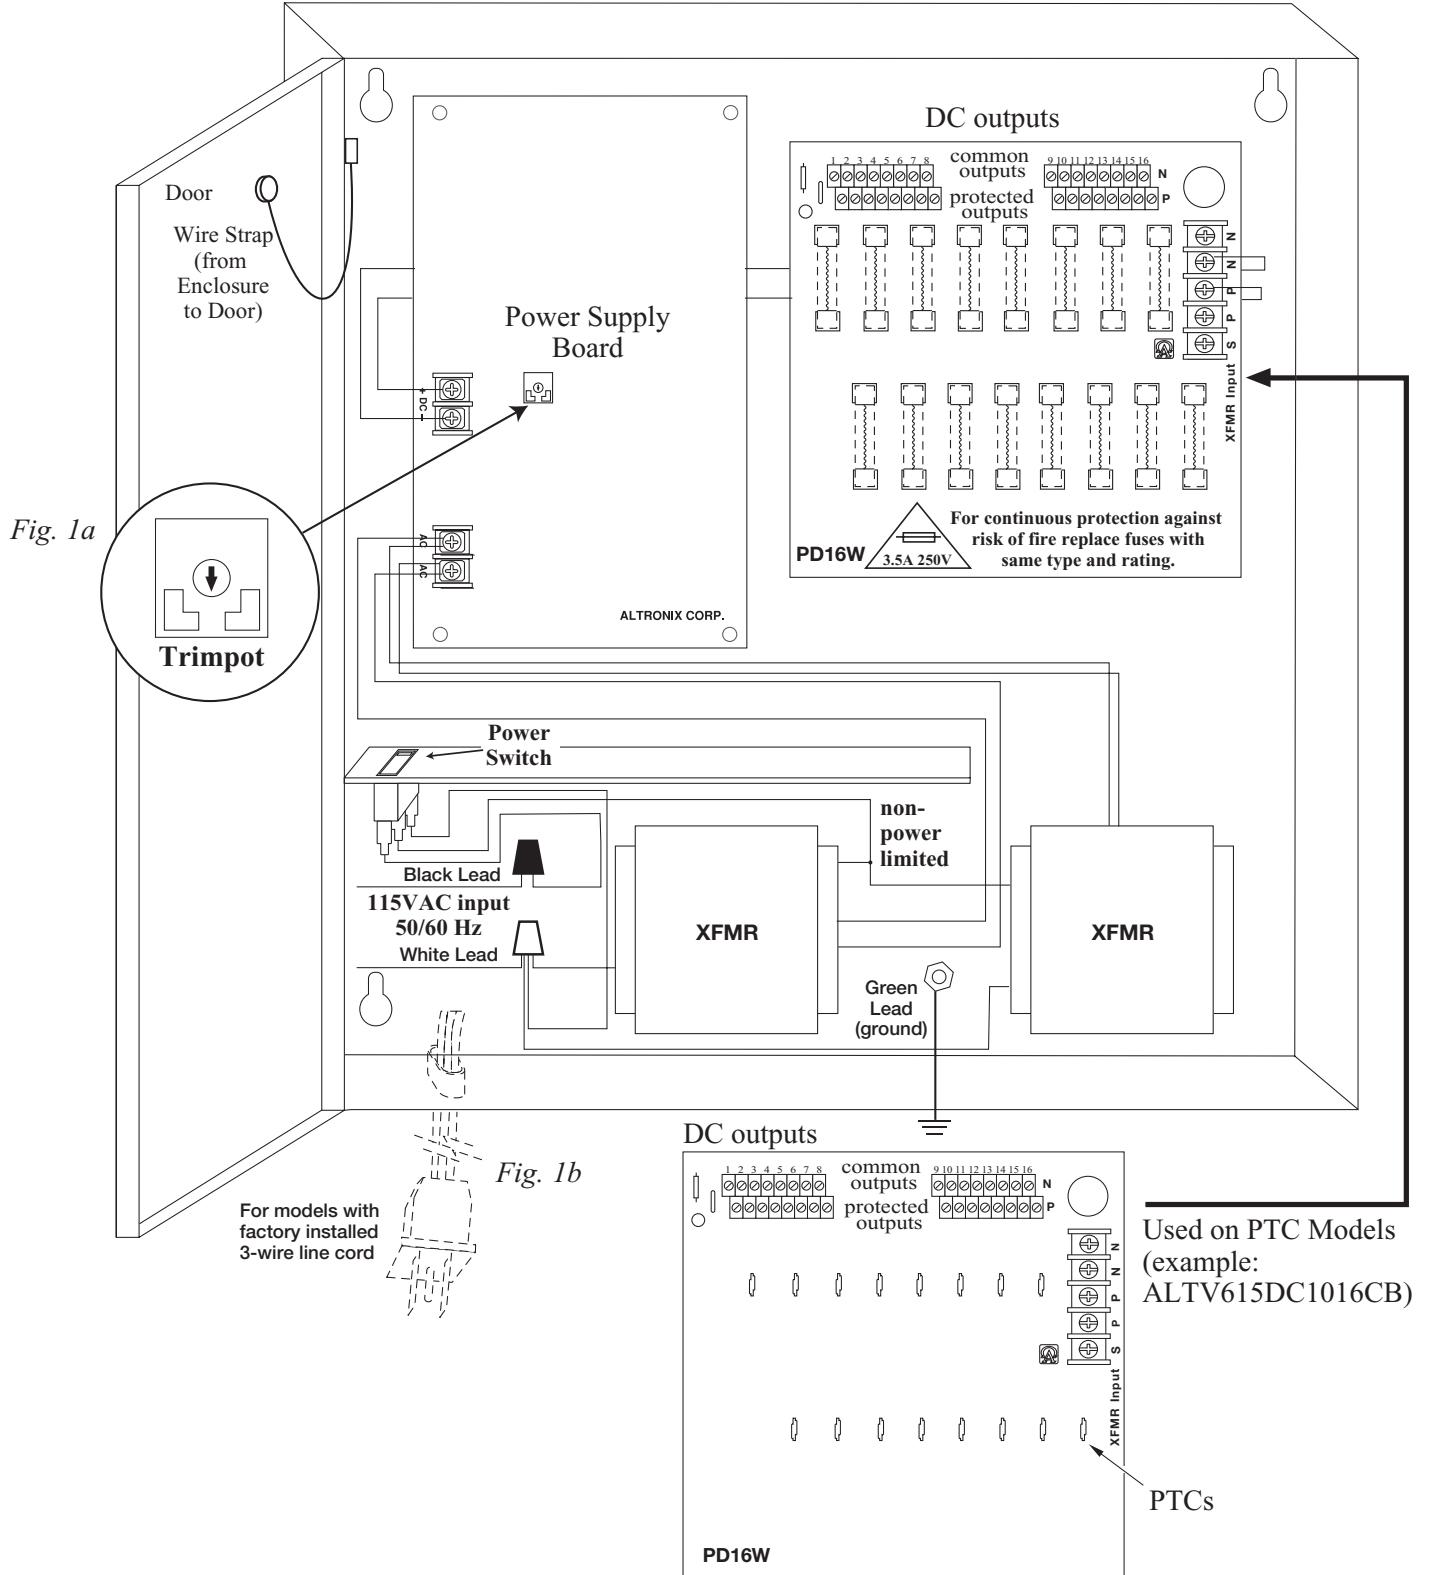



The lightning flash with arrow head symbol within an equilateral triangle is intended to alert the user to the presence of an insulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.




**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.

**Enclosure Dimensions (H x W x D approximate):**  
13.5" x 13" x 3.25" (342.9mm x 330.2mm x 82.55mm)

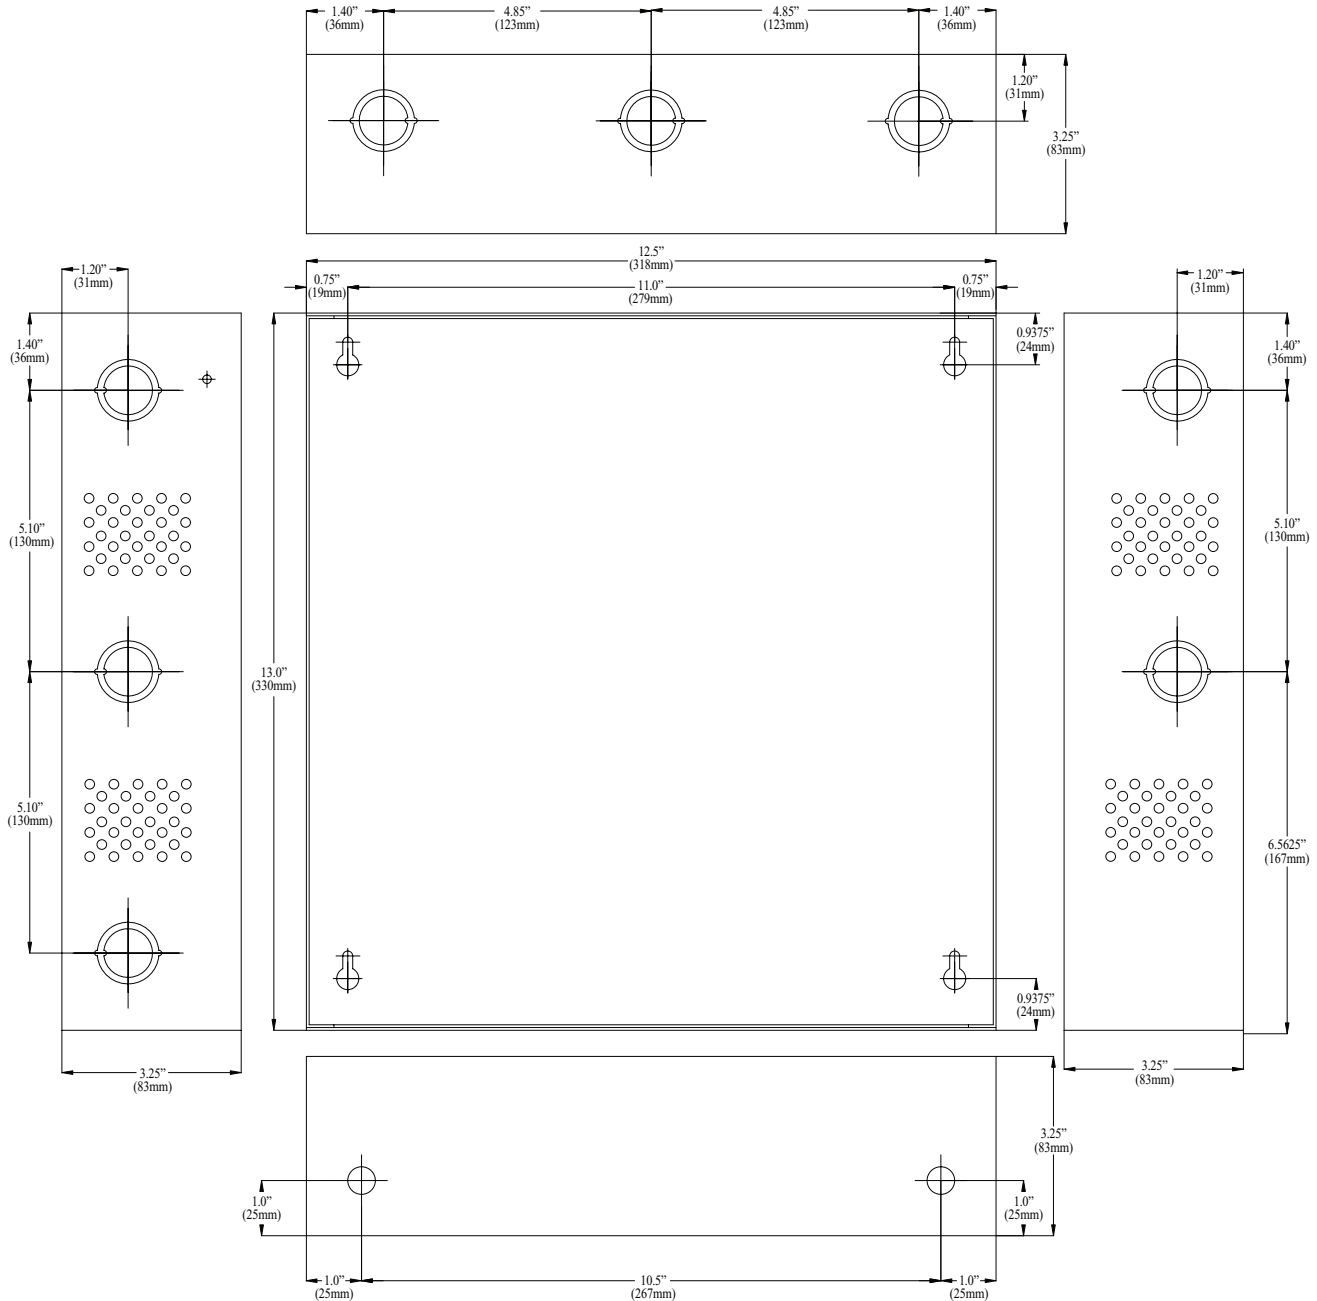

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056  
web site: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty | Made in U.S.A.  
IIALTV615DC1016 Series

E11Q



MEMBER

ALTV615DC1016 Series