



AlphaRefuge™

## STANDARD OPERATIONS (Detailed Programming Instructions)

### Programming

#### Step 1: Begin Program Mode

- a. Press **Enter**

#### Step 2: Program Emergency Numbers

- a. Press **1, Enter**, (phone number), **Stop**

To program numbers 2 - 5, repeat step 2 a

**Example:** To program emergency number 2, press **2, Enter**, (phone number), **Stop**

**Note:** If calling the Base Station, first follow the instructions in the Base Station Manual.

#### Step 3: Program Location Message

- a. To turn on message, press **1, 3, Enter, 2**

- b. Press **6, Record**

(Wait for the "beep", then speak message) **Stop**

(To replay message press **6, Play/Pause**)

- c. Program frequency of message press **1, 3, Enter, \_\_**

**2** = Plays message (2) times (default)

**3** = Plays message until receiving party presses \* on their phone

- d. For no message press **1, 3, Enter, 0**

**Note:** Called party can replay message by pressing \*,\*.

#### Step 4: Exit Program Mode

- a. Press **Stop** for 3 seconds

### Optional Programming Features

#### Phone Line Check (Default is Off)

- a. To turn on press **23, Enter, 3, 23, Enter, 7284, 11, Enter, 1**

- b. Press **3, 4, Enter**, (4 digit number in HH:MM)

**Example:** 20 minutes = 0020, 10 hours = 1000

### Phone Programming for Use with Command Center

#### Step 1: Begin Program Mode

- a. Press **Enter**

#### Step 2: Program ID Numbers for Phones 1-5

- a. Press **7, Enter**

- b. Press \*, **1-5** for corresponding phone (1-5)

#### Step 3: Program ID Numbers for Phones 6-10

- a. Press **7, Enter**

- b. Press #, **1-5** for corresponding phone (6-10)

#### Step 4: Exit Program Mode

- a. Press **Stop** for 3 seconds

#### Step 5: Confirm Consolidator Operation

- a. Dial Phone Number Com. Center is connected to All Phones Will Answer

- b. To Select Individual Phone:

Press \***1** (Phone #1) Press #**1** (Phone #6)

Press \***2** (Phone #2) Press #**2** (Phone #7)

Press \***3** (Phone #3) Press #**3** (Phone #8)

Press \***4** (Phone #4) Press #**4** (Phone #9)

#### NOTES:



1. See the individual AlphaRefuge™ 2100 system wiring diagram(s) for the balance of system wiring requirements.



42 Central Drive, Farmingdale NY 11735-1202  
(631) 777-5500 Fax: (631) 777-5599  
TOLL-FREE Technical Line 1-800-666-4800  
Email: info@alphacommunications.com

AlphaRefuge™ 2100 Series Standard  
Operation and Programming Instructions  
for the RCB2100 Series Remote Call Box  
Stations

**Wiring Diagrams: 24v Models**

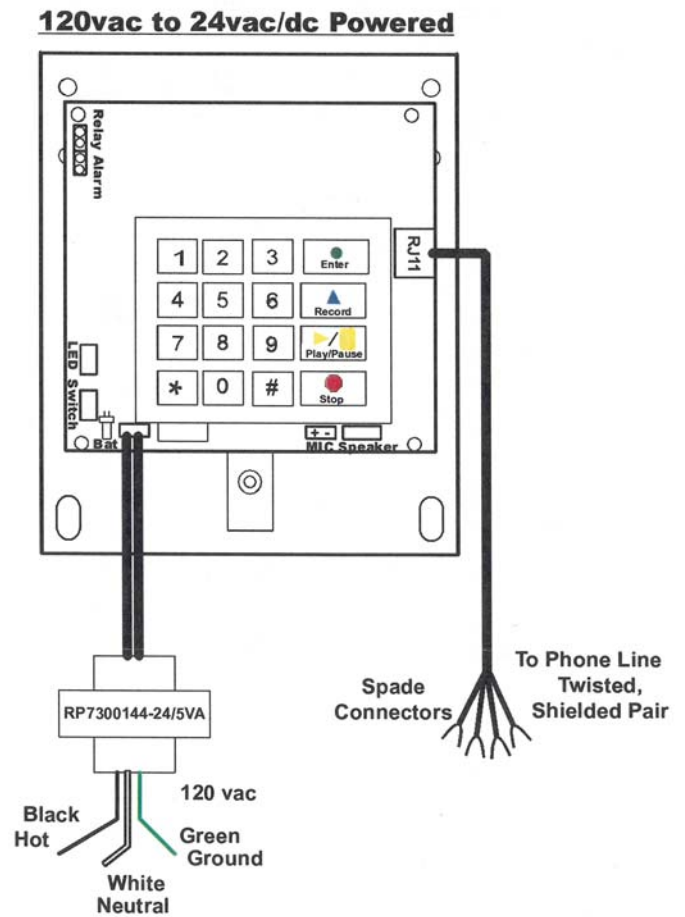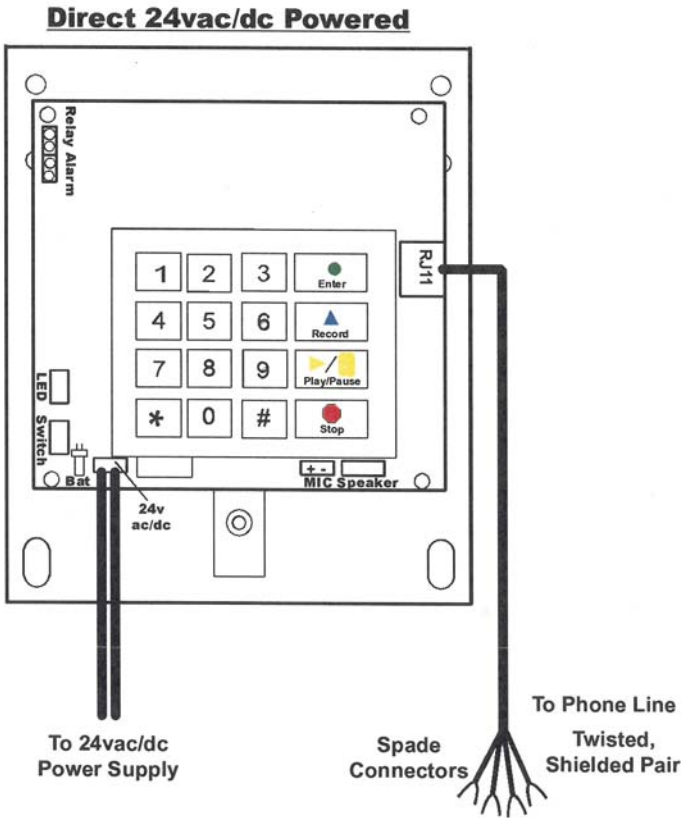

**NOTES:**

1. See the individual AlphaRefuge™ 2100 system wiring diagram(s) for the balance of system wiring requirements.



42 Central Drive, Farmingdale NY 11735-1202  
(631) 777-5500 Fax: (631) 777-5599  
**TOLL-FREE Technical Line 1-800-666-4800**  
Email: info@alphacommunications.com

**AlphaRefuge™ 2100 Series Standard  
Operation and Programming Instructions  
for the RCB2100 Series Remote Call Box  
Stations**