

AlphaRefuge 2100 Series Operation Manual **AlphaRefuge**™

A. Once all connections are made the following LED's should be lit:

1. Power LED, located on bottom edge of the faceplate, will be constant lit green
2. Battery LED, also located on bottom edge of the faceplate, will be constant lit.
 - Red = Low level charge
 - Yellow = Mid level charge
 - Green = Full Charge

B. Initiate a Call to an Emergency Phone or Sub-Master from the Base Station

1. Lift handset on Base Station
2. Press the Talk button corresponding to the Emergency Phone or Sub-Master you wish
3. The green LED will light next to that button
4. You should have two way communication to that Phone
5. You can place the Phone on hold by pressing the Talk button a second time.
6. To resume communication press the Talk button a third time.
7. To disconnect hang up handset.

C. Emergency Phone places a call into the Base Station

1. You will hear an alternating audible tone at the Base Station indicating a call has been initiated by one of the Phones.
2. The corresponding green LED, will light on the Base Station next to the phone that placed the call.
3. Lift handset and there is two-Way Communication between the and the Emergency phone. The handset can be hung up on the Base Station at any time to end the call.

D. Emergency Phone places a call into the Base Station then an outside number

1. You will hear an alternating audible tone at the Base Station indicating a call has been initiated by one of the Phones (if programmed to call outside line only, no tone)
2. The corresponding green LED will light on the Base Station next to the phone that placed the call.
3. If call is not answered at the Base Station the Emergency Phone will hang-up and re-dial the second number programed into the Emergency Phone.
4. The CO Line LED, located next to Red Button, will also be lit indicating that the outside line is active. Two-way communication can then take place between the outside line and emergency phone once the call is answered.
5. The Base Station can join the conversation by the handset being lifted at the Base Station.
6. To talk to Rescue Services only from the Base Station, place the Phone on hold by pressing the corresponding Talk button. To bring them back into the conversation, press the Talk button again.
7. To disconnect Rescue Services, press the red button at the top of the face plate. The Rescue Services LED will go off and leave you communicating with the Phones only.



Alpha Communications
42 Central Drive - Farmingdale NY 11735-1202
P: 631-777-5500 F: 631-777-5599
TOLL-FREE: 800-666-4800

