

INSTALLATION INSTRUCTIONS



156-5101-001

3825 Ohio Avenue, St. Charles, Illinois 60174
800/736-7672, FAX: 630/377-6495
www.systemsensor.com

Bezels

Model Numbers: BZR, BZW, BZGR, BZGW, BZSPR, BZSPW, BZRC, BZWC, BZSPCR, BZSPCW
- F, -AL, -AG, -EV, -P, -SP, -PG.

SPECIFICATIONS

Operating Temperature: -40° F to 151° F (-40° C to 66° C)

Note: This product is only for use with indoor System Sensor L-series models.

Notice: This manual shall be left with the owner/user of this equipment.

GENERAL DESCRIPTION



For installation with indoor System Sensor L-series strobes, horns, chimes, speakers, horn strobes, chime strobes, and speaker strobes. The accessory bezels allow for flexibility in the field. Each bezel pack ships in a package of 5 units.

Bezel are offered in red and white for both wall and ceiling devices. The following extensions designate specific bezel packs:

- Fire: -F
- Alert: -AL
- Evac: -EV
- Agent: -AG
- Plain (no marking): -P
- Fuego (Spanish): -SP
- Fogo (Portuguese): -PG

INSTALLATION

1. Orient the bezel to the System Sensor L-series device.
2. Gently snap the desired bezel into place to display the desired wording from the list above.

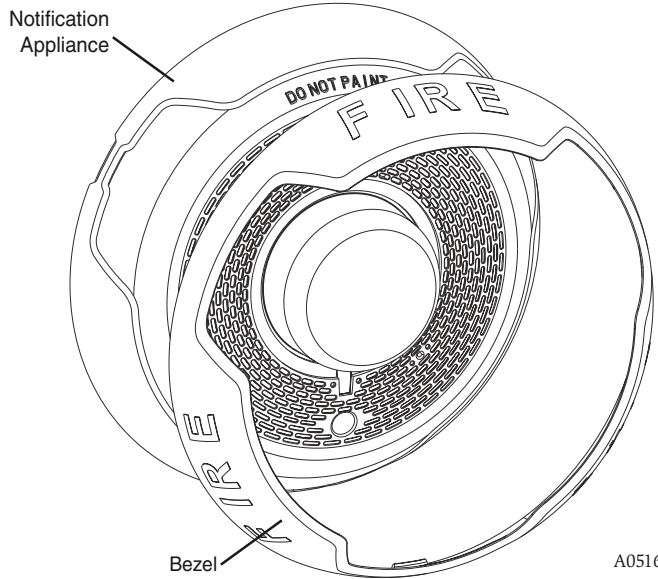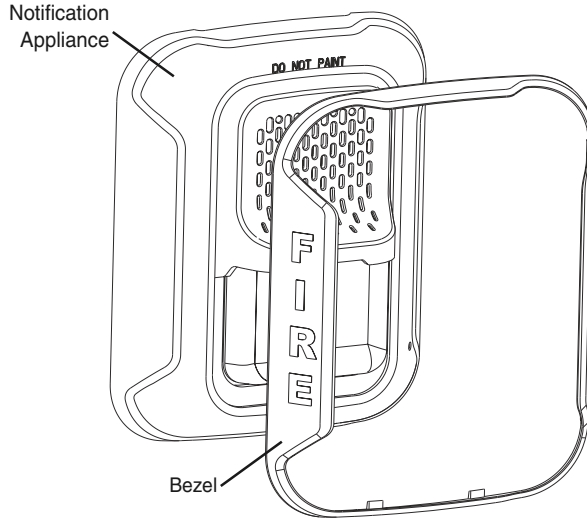

A0516-00