


# PCLINK-USB

## LOCAL DOWNLOAD KIT - USB


### INSTALLATION INSTRUCTIONS

The **PCLINK-USB** adaptor allows the installer to perform on-site downloading of supported panels quickly and easily. The **PCLINK-USB** package includes: PCLINK adaptor, connecting cable, DB-9 serial connector, and USB-Serial Adaptor.

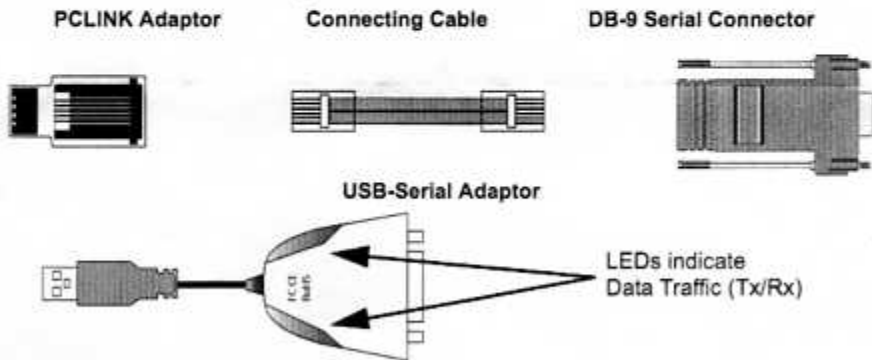

### Connecting the PCLINK-USB to Control Panel

1. Locate the 4-pin PCLINK connector on the control panel. Plug the PCLINK adaptor into the 4-pin connector.
2. Align the base of the adaptor to the white line underneath the pins, as indicated in the diagram below:

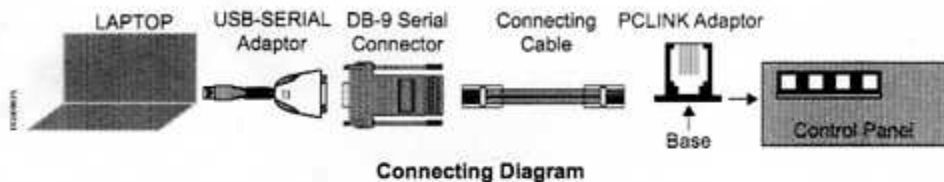

3. Attach the connecting cable to the PCLINK adaptor and to the DB-9 serial connector.
4. Attach the DB-9 serial connector to the USB-Serial Adaptor, then attach the adaptor to a USB port on the computer to be used for downloading.

**Note: For proper operation, a driver for USB-Serial Adaptor MUST be installed.**

### Initiating Download

To initiate download, first ensure that the computer and panel are connected in the manner described above. Verify that the version of DLS software being used supports the panel that has been connected. To initiate the link, follow the instructions located in the panel's Installation Manual under "PCLINK" or "Downloading."

### Disconnecting

To disconnect, simply terminate the session from the downloading computer or press [#] before the connection has been made. Remove the PCLINK adaptor from the control panel.

**DSC**  
A Tyco International Company

© 2011 Tyco International Ltd. and its Respective Companies. All Rights Reserved.  
Toronto, Canada • [www.dsc.com](http://www.dsc.com)  
Tech. Support: 1-800-387-3830 (Canada/US) or 905-760-3036  
Printed in Canada

