
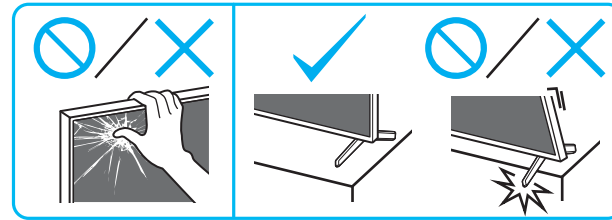


# Setup Guide

Pantalla LCD

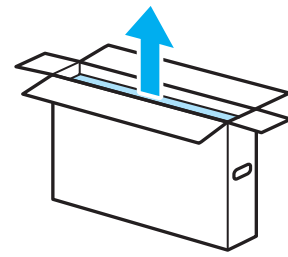

**1**

★1

★3

1.5 N-m/15 N-m (15 kgf-cm)

**2**

★3

WA

**3**

**4**

5 (A)

5 (B)

★2

**5 (A)**

1

2

VS

CL

1 × 2

2 × 2

SONY

SONY

★1 Refer Reference Guide / Reportez-vous au Manuel de référence / Consulte la Guía de referencia

★2 Only for limited region/country/model. / Uniquement pour certaines régions/pays/modèles. / Solo para regiones/paises/modelos limitados.

★3 Refer Wall-Mount Adjuster Operating Instructions / Se reporter au manuel d'instructions dispositif de réglage du support mural / Consulte el Manual de instrucciones del soporte de montaje mural



