

Marshall

Broadcast A/V Division

AR-DM51-B

Digital Audio Monitor



User Manual

Table of Contents

1. Introduction	02
2. Features	02
3. Package Contents	03
4. Front Panel	03
5. Control Buttons	04
6. Rear Panel	05
7. Specifications	06
8. Operation	07
9. Software	08
9.1. Connecting by Ethernet	09
9.2. Connecting by Serial Link	10
9.3. Using the Remote Control Application	11
Warranty	12

1. Introduction

The Marshall AR-DM51-B Digital Audio Monitor emphasizes a straight-forward, high-quality design and simplicity of operation. The AR-DM51-B exceeds the capabilities of many larger 2RU designs, and is equally at home in production fly packs, news vans, remote OB vans, and equipment rooms.

2. Features

High Performance Audio

- Matches or exceeds many larger 2RU designs
- Enough “punch” for the noisiest server rooms (up to 100dB)

Multiple Input Types

- 3G SDI with Looping Output
- HDMI
- Analog XLR Balanced - 2 Channels
- Analog RCA Unbalanced Line Level - 2 Channels

Flexible Output Types

- AES-EBU Pair Balance XLR (110-ohms)
- Analog Unbalanced RCA Line Level - 2 Channels

2” Video Display

- Provides confidence image of selected HDMI or SDI source
- Text indicates Source, Format, Selected Channels and more

Controllable via Ethernet or RS-232 Serial

- Control application downloadable from Marshall website
- Select audio scale types, sources, etc.

Compact 1RU Design Saves Rack Space

- Minimum size
- Low power consumption, low heat emission into rack


3. Package Contents

Please ensure the following are included:

- One AR-DM51-B Main Chassis
- One 12-Volt Universal Power supply (120/240V – 50/60Hz)

Additionally, free control software is available for download on the Marshall website. Visit www.marshall-usa.com for more information.)

4. Front Panel

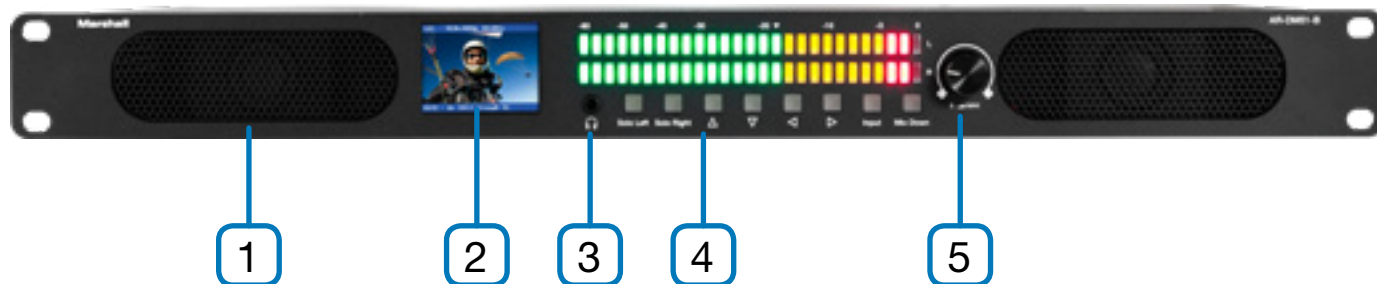

1. Speakers

Provides sound from two channels except when Solo Buttons are pressed.

2. LCD Video Display

When an HDMI or SDI source is being monitored, the associated video will appear here. Also a text overlay shows input source, selected audio channels, and source video parameters.

Note: The LCD display will be black when Analog Sources are selected.

3. Headphone Jack

Designed to accept stereo headphones with 3.5mm plug.

4. Control Buttons


Provides quick access for standard equipment operation.

5. Volume / Mute Knob

Turn the knob to adjust the sound level of both speakers.

Press in on the knob to instantly Mute the speakers.

5. Control Buttons

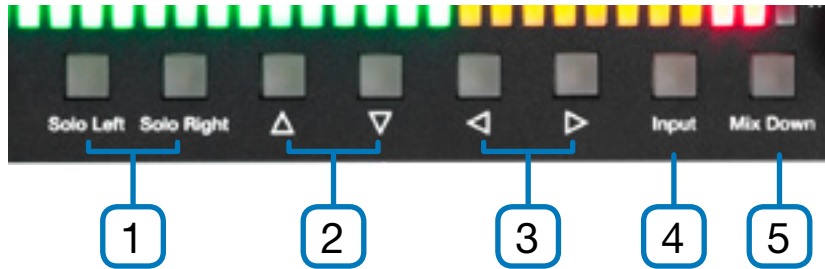

1. Solo Left & Solo Right

Press one of these to isolate the left or right channel only.

Note: Sound will come out of both speakers when a solo channel is selected but will originate from a single source.

2. Left / Right Arrow Buttons

Press the Left Arrow button to select a lower numbered pair of channels, press the Right Arrow button to select a higher numbered pair of channels.

For example, when monitoring channels 3 & 4, pressing Left Arrow will switch to channels 1 & 2, pressing Right Arrow will switch to channels 5 & 6. The lower-numbered channel audio in a selected pair will play from the Left speaker. The higher-numbered channel audio will play from the Right speaker.

3. Up / Down Arrow Buttons

Press the Up Arrow to select channel group 1 – 8, press the Down Arrow to select channel group 9 – 16.

Note: This applies to SDI sources only

4. Input


Press to change input source (input type) in this order:

- HDMI
- SDI
- Analog (XLR Balanced)
- Analog (RCA Unbalanced)

5. Down Mix

The button on the far right provides a stereo mix from 5.1 or 7.1 surround sources.

6. Rear Panel

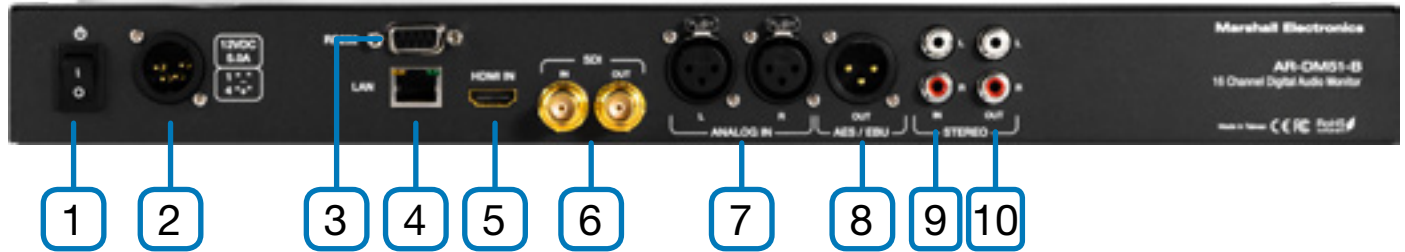

1. Power Switch
2. 12-Volt DC Power Input XLR 4-pin
3. RS-232 Serial Control 9-pin D-Sub Port
4. Ethernet Control RJ-45 Port
5. HDMI Input
6. SDI Input and Loop Out
7. Analog Balanced XLR Inputs (2 channels)
8. AES/EBU Output XLR (2 channel pair)
9. Stereo Unbalanced Input 2 channel RCA jacks
10. Stereo Unbalanced Output 2 channel RCA jacks

7. Specifications

Model Name	AR-DM51-B
Technical	
Video Inputs	HDMI 2.0 x 1 3G SDI x 1 with looping output
Video Formats Supported	HDMI Up to 4K2K@60fps (4:4:4 sampled 8-bits) SDI up to 1080p50, 59.94,60 (4:2:2 sampled 10-bits)
HDMI HDCP	HDCP 2.2 and 1.4 Supported
Audio Inputs	Analog Balanced x 2 XLR Female Analog Unbalanced x 2 RCA Jack
Audio Outputs	AES/EBU x 1 (Digital Pair) XLR Male Analog Unbalanced x 2 RCA Jack
Digital Audio Supported	PCM 2, 5.1, 7.1 channels
HDMI connector	HDMI type A
Serial Control Connector	DE-9 [9-pin D-sub female] supports RS-232
Network Connector	WE/SS 8P8C for control via Ethernet
Mechanical & Electrical	
Housing	Metal enclosure
Dimensions [H x W x D]	1.75" X 19" x 8.5" / 4.45 cm x 48.25 cm x 21.6 cm
Weight	7.3 lbs / 3.3 Kg
Mounting	Chassis has "ears" for standard 19" rack mount
Included Power supply	DC 12-Volts 5-Amps 4-pin XLR connector
Power consumption	6 Watts Avg
Operation temperature	0~40°C [32~104°F]
Storage temperature	-20~60°C [-4~140°F]
ESD protection	Human*body model — ±15kV [air-gap discharge] & ±8kV [contact discharge]
Relative humidity	20~90% RH [no condensation]

8. Operation

Controls on the AR-DM51-B are designed to be extremely straight-forward. To start, simply press the Input button to select the desired source, then adjust the volume knob to the desired listening level.

Metering Type

The default audio metering type is PPM (Peak Program Meter). The metering type can be switched to VU (averaging) using the remote control software (available from the Marshall website at: www.marshall-usa.com/)

Monitoring HDMI Sources

When HDMI is selected, video from that source will appear on the front panel LCD display along with information about the video format and selected audio channels. This is a convenient feature allowing quick confirmation that the desired source is being monitored. Channels 1 & 2 will appear on the LED meters and be heard from the speakers. Up to 8 audio channels may be carried in an HDMI program. These are often arranged as 5.1 or 7.1 surround. Use the Right or Left arrow buttons to hear other channel pairs or press the Mix Down button to hear all of the channels as a stereo mix.

Monitoring SDI Sources

When SDI is selected, video from that source will appear on the front panel LCD display along with information about the video format and selected audio channels. Channels 1 & 2 will appear on the LED meters and be heard from the speakers. SDI can carry up to 16 channels, organized as two groups of 8 channels each. Press the Right or Left arrow buttons to hear other channels in the first group (channels 1 – 8).

Press the Up or Down arrows to select the second group (channels 9 – 16) then press Left or Right to select channels in this group.

Monitoring Analog Sources

Connectors are provided for either broadcast level +4dBm balanced audio (XLR) or AV line level -10dBm unbalanced (RCA) audio. Broadcast level tone at +4dBm will indicate at the arrow mark on the meter bar, line level 10 at -10dBm will indicate at the same point when connected via the RCA connectors.


In addition to metering and monitoring, analog sources are sampled and converted to AES digital and will appear at the AES/EBU connector on the back panel. The AES connection is balanced 110-ohm type.

Note: If it is desired to connect to equipment that accepts AES digital audio on a 75-ohm BNC connector, please use a 110-ohm to 75-ohm “balun” converter.

9. Software

A free application is available for download from the Marshall Electronics website at: www.marshall-usa.com/. The AR-DM51-B may be operated and configured from a Windows® computer either by an Ethernet or Serial (RS-232) link.


Download and unzip and extract the file “xxxx.exe” to a folder or to the desktop. Double-click the file and it will open immediately and appear similar to this:

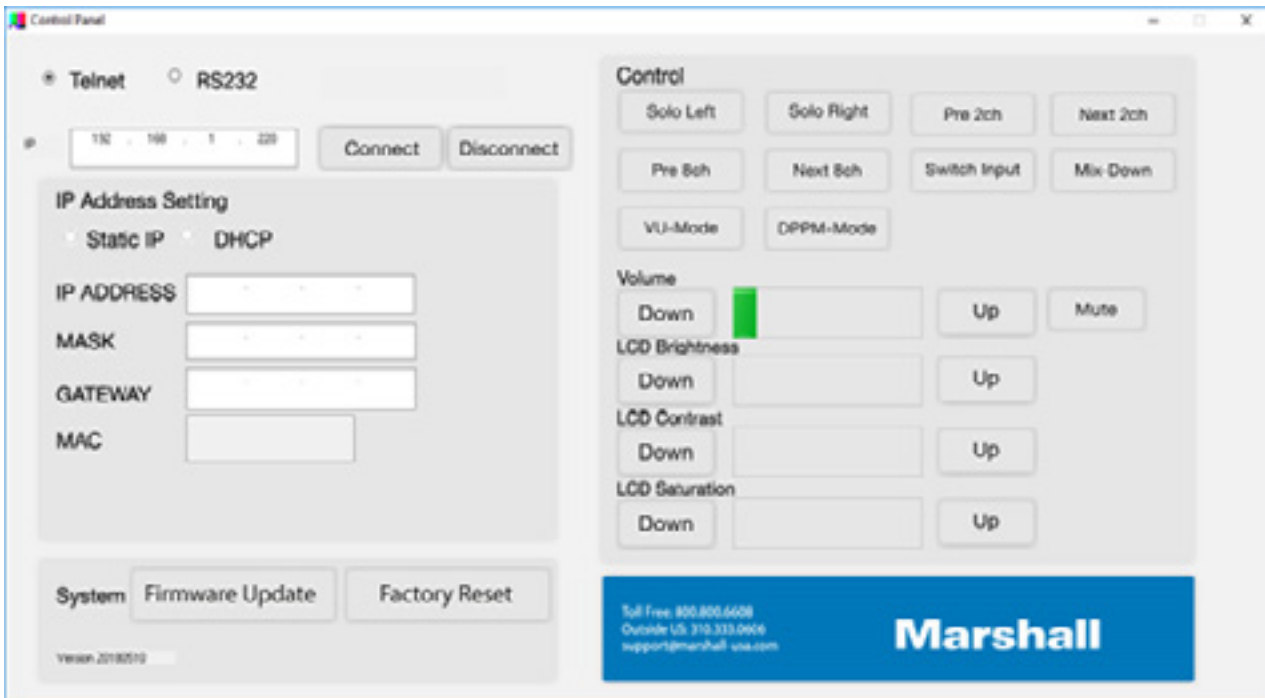

9.1 Connecting by Ethernet

To control the AR-DM51-B using an Ethernet connection, first select the “Telnet” radio button in the upper left corner, then select “Static IP” if you wish to enter IP parameters manually. Select “DHCP” if the IP address will be automatically assigned from a network router or DNS server.

Next, click the “Connect” button to establish a connection between the PC and the audio rack. When connection is successful, the MAC address of the audio rack will appear in the window at the bottom.

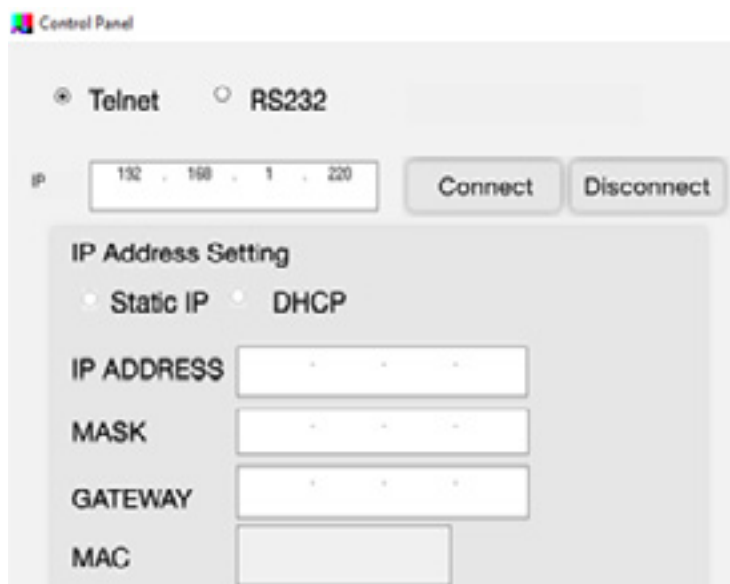

The screenshot shows a web-based control panel titled "Control Panel". At the top, there are two radio buttons: "Telnet" (which is selected) and "RS232". Below this, there is an "IP" field containing the address "192 . 168 . 1 . 220". To the right of the IP field are two buttons: "Connect" and "Disconnect". Below these elements is a section titled "IP Address Setting" which contains two radio buttons: "Static IP" (selected) and "DHCP". Underneath, there are four input fields labeled "IP ADDRESS", "MASK", "GATEWAY", and "MAC". The "IP ADDRESS", "MASK", and "GATEWAY" fields each contain three dots, indicating they are ready for manual input. The "MAC" field is currently empty.

9.2 Connecting by Serial Link

To control the AR-DM51-B using an RS-232 serial link, first select the “RS232” radio button, then select the port number. The correct port number will likely be the one with the highest numeric value.

Note: A serial connection will require either a serial port on the PC or a serial adapter device most likely attached to the computer by USB. The most common connector type will be a 9-pin DSub similar to the one on the back of the AR-DM51-B. When that is the case, a successful connection can be made using a “Null Modem Cable” or making a cable like this:

Computer	AR-DM51-B
Pin 2 -----	Pin 3 (Tx to Rx)
Pin 3-----	Pin 2 (Rx to Tx)
Pin 5 -----	Pin 5 (Ground)

The screenshot shows a web-based control panel for the AR-DM51-B device. At the top, there are two radio buttons: "Telnet" (unselected) and "RS232" (selected). Below this is a "PORT" dropdown menu. A section titled "IP Address Setting" contains two radio buttons: "Static IP" (selected) and "DHCP" (unselected). Underneath are four input fields: "IP ADDRESS", "MASK", "GATEWAY", and "MAC". At the bottom of this section are two buttons: "Read" and "Apply".


9.3 Using the Remote Control Application

Once a connection has been established between the control application and the AR-DM51-B, operation is simply a matter of clicking on the desired functions.

All of the front panel functions can be operated through the control application screen.

In addition, the metering scale can be switched between VU-Mode (averaging) and DPPM-Mode (instantaneous peak-reading).

Also, there are controls for the front panel video display Brightness, Contrast, and Color Saturation.

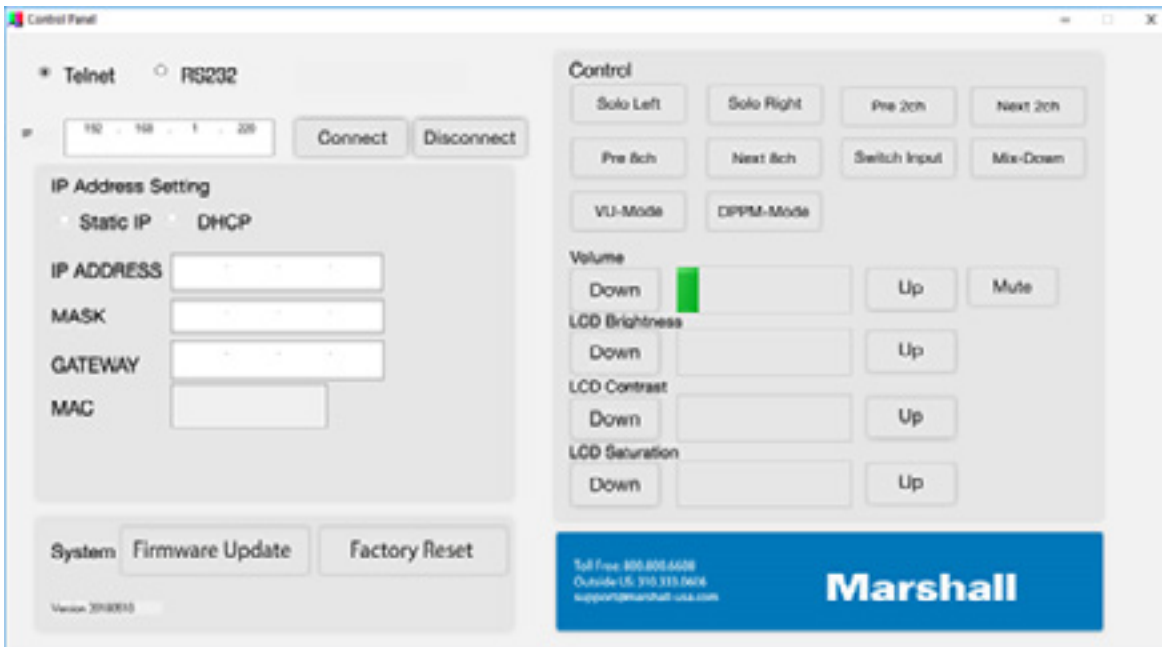

When a firmware update is issued for the AR-DM51-B, the Firmware Update button will initiate the update process. Updates may be performed over Ethernet or RS-232 serial link. Please follow the latest instructions included with the update as procedures may change with the update.

The Factory Reset button returns all LCD monitor settings to their mid position.

Warranty

Marshall Electronics warranties to the first consumer that this device will, under normal use, be free from defects in workmanship and materials, when received in its original container, for a period of two years from the purchase date. This warranty is extended to the first consumer only, and proof of purchase is necessary to honor the warranty. If there is no proof of purchase provided with a warranty claim, Marshall Electronics reserves the right not to honor the warranty set forth above. Therefore, labor and parts may be charged to the consumer. This warranty does not apply to the product exterior or cosmetics. Misuse, abnormal handling, alterations or modifications in design or construction void this warranty. No sales personnel of the seller or any other person is authorized to make any warranties other than those described above, or to extend the duration of any warranties on behalf of Marshall Electronics, beyond the time period described above.

Due to constant effort to improve products and product features, specifications may change without notice.

Safety

Listening to audio at excessive volumes can cause permanent hearing damage. Over exposure to excessive sound levels can damage your ears resulting in permanent noise-induced hearing loss (NIHL). Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs.

dB SPL Level	Maximum time exposure
90	8 hours
95	4 hours
100	2 hours

Marshall

20608 Madrona Avenue, Torrance, CA 90503

Tel: (800) 800-6608 / (310) 333-0606 • Fax: 310-333-0688

www.marshall-usa.com

support@marshall-usa.com