

Multi-Code by Linear / Model: 308911 1-Channel Visor Transmitter

DIGITAL TRANSMITTER MODEL 3089

One-button, one-channel, 9-Volt battery powered transmitter with removable visor clip, 1024 selectable codes

With a little care this transmitter should provide you with many years of excellent service. Please take a moment to read the following instructions and you will find that setting your new transmitter will be quite an easy matter.



TRANSMITTER INSTALLATION

The transmitter is completely self-contained, including battery, and can be operated while mounted in the car. It is supplied with a clip for attaching to the sun visor, if desired. If the clip is used attach to the case by sliding it into the recess provided on the back of the transmitter until the small dimples fit into the holes in the clip.

OPERATIONAL CHECK

To check operation, move back a reasonable distance (about 50 ft.) and press the transmitter button. Operation should be reliable at this distance but environment and location of both the transmitter and receiver will affect the range. If the transmitter is stowed well out of sight, it may be necessary to remove it from its mounting and hold near the windshield. Try different locations and positions. If operation is still unsatisfactory, the problem may be isolated by:

ACCESSING THE BATTERY AND CODE SWITCH

Insert a small coin into the slot located at the bottom end of the transmitter. Twist the coin and remove the access cover to expose the code switch and battery




TRANSMITTER BATTERY REPLACEMENT

Replacement battery - 9 volt NEDA 1604 (Eveready 216 or equivalent). The battery in the transmitter can be checked or changed by removing the front lower half of the transmitter. Refer to the directions under "accessing the code switch" for battery replacement.

SELECTING A CODE

You may set your transmitter to any code you desire but be sure that the code you set matches the code that has been set on your radio receiver. The digital code is determined by the positions of the 10 small switches numbered 1 through 10 located in the receiver and transmitter. Any combination of ON (CLOSED) or OFF (OPEN) positions can be selected by using a small screwdriver or ball point pen. (NOTE: The switches are in the "On" position when the side next to the number is pressed in.) In setting your own personal code we strongly urge that several coding schemes be avoided: ALL ON; ALL OFF; 2,4,6,8,10 ON; 1,3,5,7,9 ON. These positions are similar to our or other manufacturer's test positions, or are frequently used. Once the code has been set, check the operation and replace the hatches.

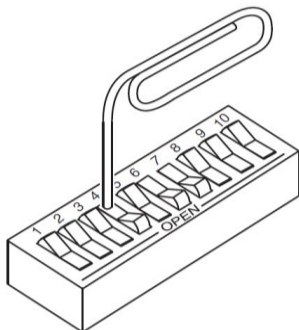

TRANSMITTER CODE FOR GLASS CLUB LAKE, INC. – DECEMBER 2013

1	2	3	4	5	6	7	8	9	10
OFF	OFF	OFF	ON	ON	ON	OFF	ON	ON	ON

OFF / Switch DOWN
ON / Switch UP

CAUTION: Any changes or modifications in intentional or unintentional radiators which are not expressly approved by LINEAR LLC could void the user's authority to operate this equipment. This applies to intentional and unintentional radiators certified per Part 15 of the F.C.C. rules and regulations.