

THANK YOU

Thank you for purchasing the REB Series Rotating Sliding Base. Please read these instructions thoroughly before installing this product.


PRODUCT FEATURES

- Provides easy access to rear equipment connections and cables
- Locks closed to prevent unintentional opening
- Included accessories to manage cables and keep wires neat and organized




I-00215 Rev B

PARTS

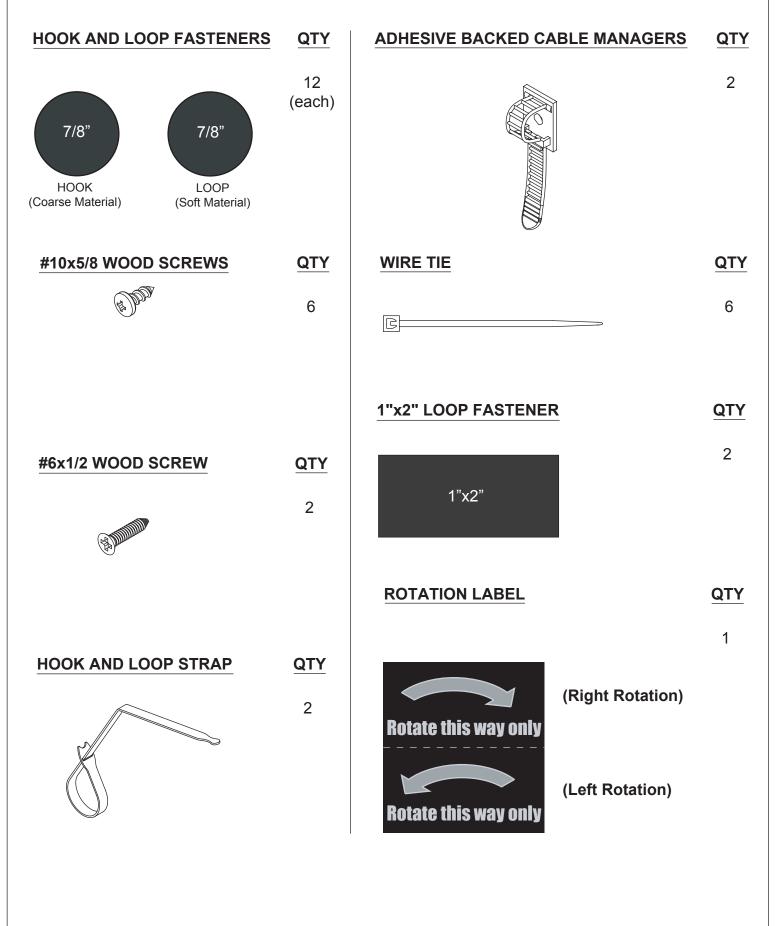


SPECIFICATIONS

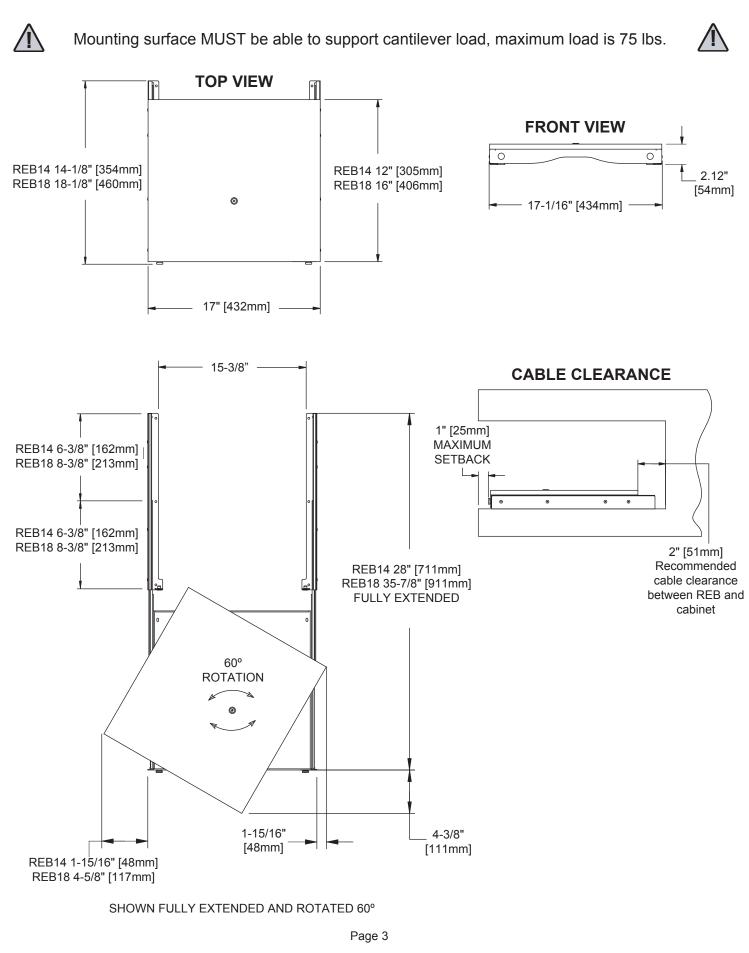


INSTALLATION


1) Determine rotation direction (Default rotation is to the left). To switch rotation, turn over and move Set Screw to opposite side. (FIGURE A)

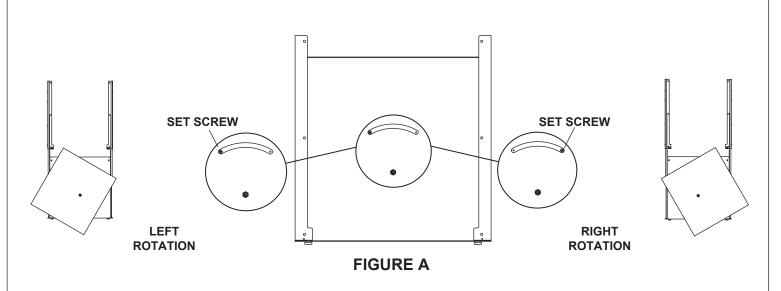


- 2) Place in desired location with Thumbscrews in secured position (This ensures a square installation). Check clearance and setback for door closure, room for cables, etc.
- 3) If required, mark exposed mounting holes in the back of the rails and remove REB. Drill pilot holes with 3/32" drill bit. (FIGURE B)

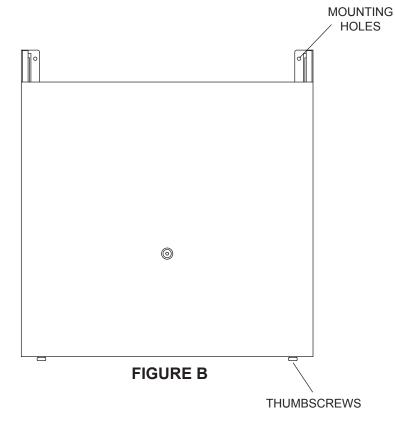

4) Place REB back in desired location. Affix to surface using provided #10x5/8 Wood Screws. (FIGURE C)

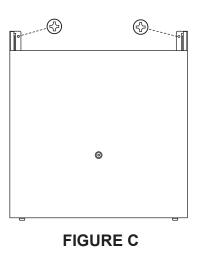


- 5) Loosen Thumbscrews and extend to next set of mounting holes. Install two #10x5/8 Wood Screws. If required, drill pilot holes using 3/32" drill bit. **(FIGURE D)**
- 6) Fully extend and install remaining 10x5/8 screws (six total screws, three per slide). If required, drill pilot holes using 3/32" drill bit. **(FIGURE E)**

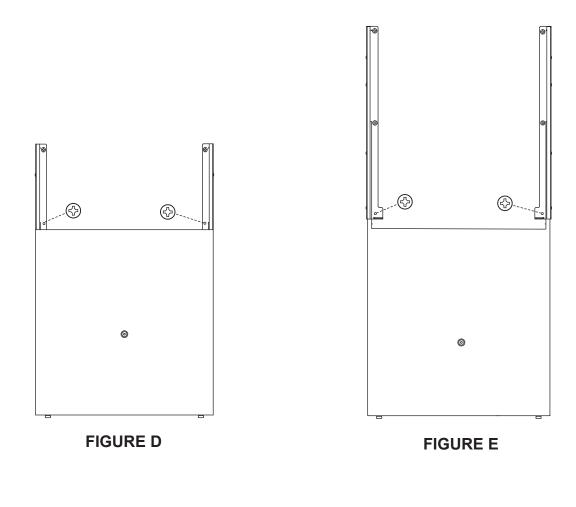


7) With REB fully extended, determine location of components.

- 8) Place components on base and verify clearance of knobs, doors, etc.
- 9) Remove components.
- 10) Turn the bottom component over.
- 11) Remove adhesive backing on 7/8" Loop Fastener.
- 12) Place Loop Fastener on solid portion of component's feet. If no feet are on the component, place on flat locations as close to the corners as possible. (FIGURE F)
- 13) Attach 7/8" Hook Fastener to Loop Fastener. Remove backing. (FIGURE G) Hook and Loop Fasteners ensure component(s) are secure on REB.

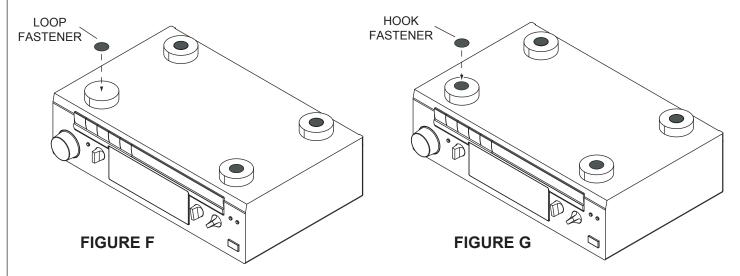


- 14) Turn component over and place on predetermined location on the REB. Gently press down on component to adhere. (FIGURE H)
- 15) Repeat steps 10-14, stacking components one on top of the other. (FIGURE J)

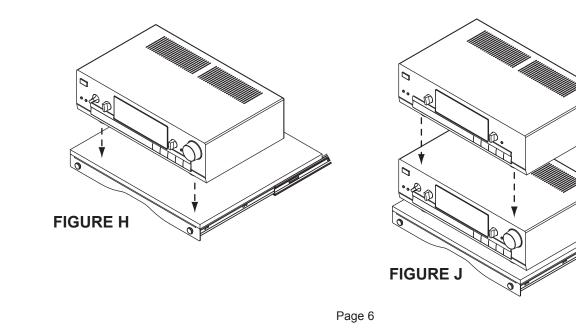



16) Connect all cables.

17) Route cabling to cabinet exit point.

18) Install 1"x2" Loop Fastener in appropriate location. Do not cover vents on component. (FIGURE J)

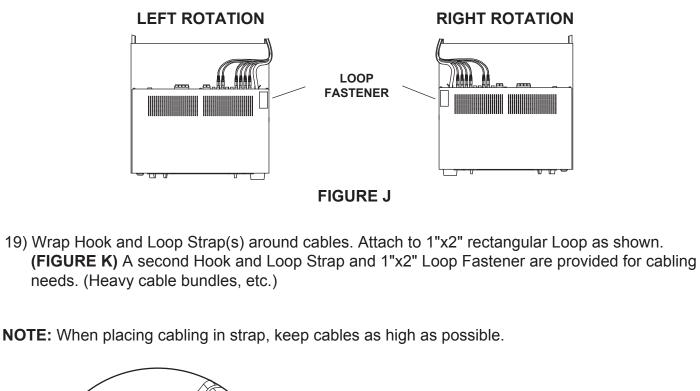

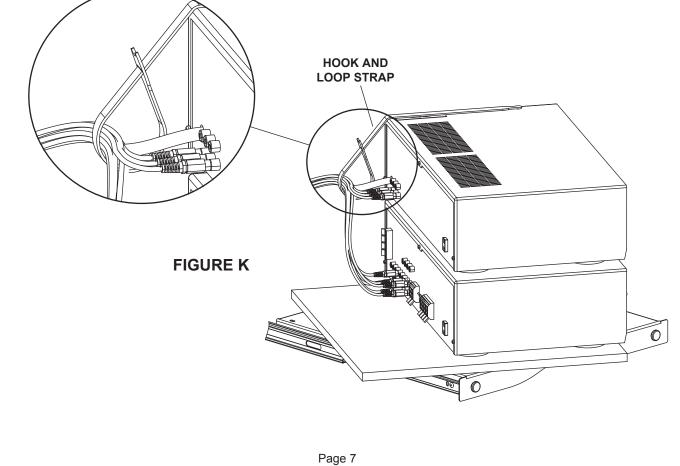

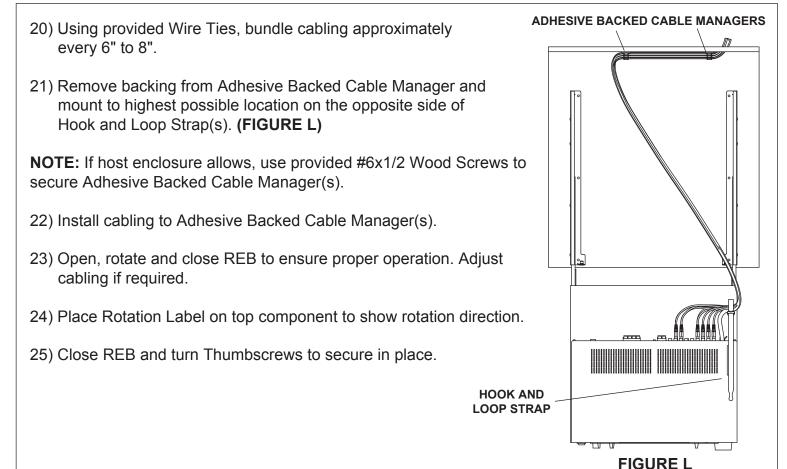

WARRANTY

Middle Atlantic Products (the "Company") warrants the REB Series Rotating Equipment base to be free from defects in material or workmanship under normal use and conditions for a period of (3) three years from date of shipment by company.

The Company's entire liability to the purchaser, and the purchaser's (or any other party's) sole and exclusive remedy, under this warranty shall be limited, at the Company's option, to either (a) return of and refund of the price paid for, or (b) repair or replacement at the Company's factory of the products purchased, or any part or parts thereof, which the Company has determined to be defective after inspection thereof at the Company's factory.

This warranty does not cover damage due to acts of God, accident, misuse, abuse or negligence by parties other than the Company, or any modification or alteration of the products. In addition, this warranty does not cover damage due to improper handling, assembly, installation or maintenance.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF THE PRODUCTS PURCHASED, EVEN IF THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE COMPANY'S LIABILITY TO THE PURCHASER (OR ANY OTHER PARTY) HEREUNDER, IF ANY, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCTS PAID TO THE COMPANY.

Corporate Headquarters

Corporate Voice 973-839-1011 - Fax 973-839-1976 / International Voice +1 973-839-8821 - Fax +1 973-839-4982 middleatlantic.com - info@middleatlantic.com

Middle Atlantic Canada Voice 613-836-2501 - Fax 613-836-2690 / middleatlantic.ca - customerservicecanada@middleatlantic.ca

Factory Distribution USA: NJ - CA - IL Canada: ON - BC

At Middle Atlantic Products we are always listening. Your comments are welcome.

Middle Atlantic Products is an ISO 9001 and ISO 14001 Registered Company.