



HOW TO REMOVE/REPLACE THE FISH TAPE:

1. Unreel the fish tape fully. 2. Snake the other end of the fish tape through the front hole & out the topmost hole on the back.



4. Fix this end to the clear plastic backing. 5. Reel the fish tape back in.



**MADE FOR LIFE
GUARANTEED FOR LIFE**