

 
Television Téléviseur Televisor digital a color con pantalla de diodo orgánico de emisión de luz (OLED)

Reference Guide

Manuel de référence / Guía de referencia



XR-77A95L / 65A95L / 55A95L

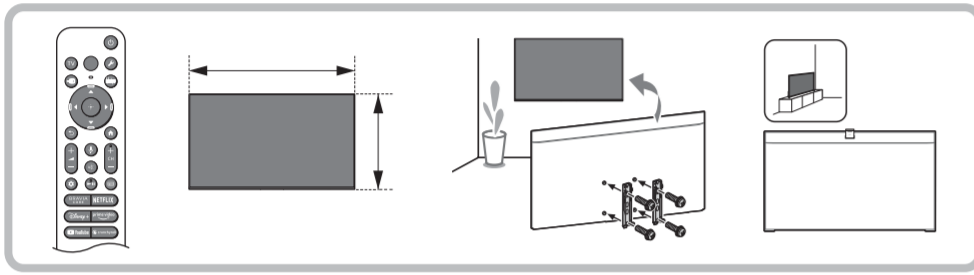

Read this manual before using this product / Lisez ce manuel avant d'utiliser le produit / Lea este manual antes de usar el producto

Sony Customer Support

U.S.A.:
https://www.sony.com/tvsupport
Canada:
https://www.sony.ca/support
United States 1.800.222.SONY
Canada 1.877.899.SONY

Call the telephone number that appears on your warranty card/policy. Please do not return the product to the store.

© 2023 Sony Corporation

Dimensions and weight (without Table-Top Stand) / Dimensions et poids (sans support de table) / Dimensiones y peso (sin soporte de sobremesa)

	(mm)/(inches/pouces/pulgadas) ^{*1}			(kg)/(lb.) ^{*1}
	(A)	(B) ^{*2}	(C) ^{*2}	
XR-77A95L	1716 / 67 3/8 1716 / 67 3/8	1000 / 39 3/8 1000 / 39 3/8	45 / 1 9/16 45 / 1 9/16	35.2 / 77.6 35.2 / 77.6
XR-65A95L	1443 / 56 7/8 1443 / 56 7/8	846 / 33 3/8 846 / 33 3/8	45 / 1 9/16 45 / 1 9/16	23.4 / 51.6 23.4 / 51.6
XR-55A95L	1224 / 48 1/4 1224 / 48 1/4	723 / 28 1/2 723 / 28 1/2	45 / 1 9/16 45 / 1 9/16	17.6 / 38.8 17.6 / 38.8

*1 (Approx. / Environ / Aprox.)
*2

Dimensions and weight (Table-Top Stand) / Dimensions et poids (support de table) / Dimensiones y peso (soporte de sobremesa)

	(mm)/(inches/pouces/pulgadas) ^{*1}							(kg)/(lb.) ^{*1}
	(A)	(B) ^{*2}	(C) ^{*2}	(D) ¹	(E) ¹	(F) ¹	(G)	
XR-77A95L	1716 / 67 3/8 1716 / 67 3/8	1014 / 40 1024 / 40	1024 / 40 1024 / 40	1075 / 42 3/8 1075 / 42 3/8	411 / 16 1/4 411 / 16 1/4	1715 / 58 5/8 1715 / 58 5/8	1715 / 58 5/8 1715 / 58 5/8	36.9 / 81.3 36.9 / 81.3
XR-65A95L	1443 / 56 7/8 1443 / 56 7/8	859 / 33 3/8 859 / 33 3/8	-	920 / 36 1/4 920 / 36 1/4	339 / 13 3/8 339 / 13 3/8	1442 / 56 7/8 1442 / 56 7/8	1442 / 56 7/8 1442 / 56 7/8	24.9 / 54.9 24.9 / 54.9
XR-55A95L	1224 / 48 1/4 1224 / 48 1/4	737 / 29 1/8 737 / 29 1/8	-	798 / 31 1/2 798 / 31 1/2	275 / 10 7/8 275 / 10 7/8	1223 / 48 1/4 1223 / 48 1/4	1223 / 48 1/4 1223 / 48 1/4	19 / 41.9 19 / 41.9

*1 (Approx. / Environ / Aprox.)
*2

Note: Use the following device for wireless functionalities: Model: UE87B Brand: UEI

 
* To see the model name of the remote control, open the remote control cover and see the label on the remote control.

Notice for customers in the United States of America

Supplier's Declaration of Conformity
Trade Name: SONY
Model: XR-77A95L / XR-65A95L / XR-55A95L
Responsible Party: Sony Electronics Inc.
Address: 16355 Via Esprillo, San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

Compatible Wall-Mount Bracket Information
Use the following Sony Wall-Mount Bracket with your TV model.

- ① TV's rear cover / Couvercle arrière du téléviseur / Parte posterior del TV
- ② Wall-Mount Bracket / Support de fixation murale / Soporte de montaje mural

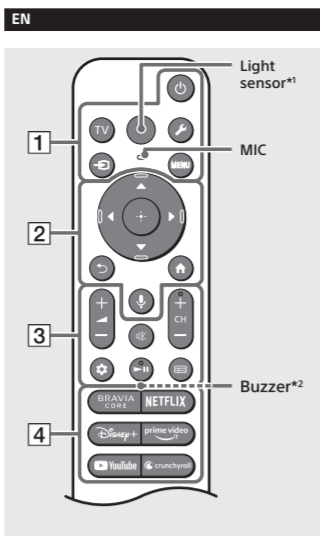

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.*¹

- (Power)**
TV: Display TV channel list or switch to input.
▶ **[Quick settings]:** Display Quick Settings.
▶ **[Input]:** Display and select the input source, etc.
MENU (Control menu): Display the Control menu.
- Navigation and Selection:**
▶ **[Back] (Home)**
▶ **[Google Assistant / Microphone]:** Use Google Assistant*^{1,2}.
- (Volume)**
▶ **[Mute]**⁴
▶ **[CH + / - (Channel)]**
▶ **[Dashboard]:** Display Dashboard.
- App buttons**

- The remote control backlight will illuminate when the light sensor detects the ambient light is low. Automatic illumination of the backlight can be turned off.
- The buzzer will emit a sound when you use the remote control finder function. Refer to the online Help Guide for details.
- For other remote control models, refer to the online Help Guide for details.
- Power limited region/country/model/language.
- Google Assistant requires an internet connection.
- Accessibility shortcut is available by pressing and holding Ⓜ (Mute).
- Cable/Satellite box setup setting is required.

Note:
• Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
• Read the supplied safety documentation for additional safety information.

Location of the identification label
Labels for the Model Name and Power Supply rating are located on the rear of the TV. They can be found by removing the terminal cover.

IMPORTANT NOTICE	
Owner's Record	The model and serial numbers are located at the side and/or rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.
Model Name	
Serial No.	

IMPORTANT NOTICE FOR MEXICO
Operation of this equipment is subject to the following two conditions: (1) It is possible that this equipment or device may not cause harmful interference and (2) This equipment or device must accept any interference, including interference that may cause undesired operation.

For information related to the certificate number, refer to the package label and / or product.

Note:
This product uses the following module for wireless functionalities:
Model: J20H103
Brand: FOXCONN

WLAN:
2.4 GHz (2,400 GHz - 2,4835 GHz)
5 GHz (5,150 GHz - 5,850 GHz)
Bluetooth®:
2.4 GHz (2,400 GHz - 2,4835 GHz)

Information for the remote control with voice command included with this product:
Model: RMF-TX910U¹
Brand: Sony

Note: Use the following device for wireless functionalities:
Model: UE87B
Brand: UEI

 
* To see the model name of the remote control, open the remote control cover and see the label on the remote control.

Supplier's Declaration of Conformity

Trade Name: SONY
Model: XR-77A95L / XR-65A95L / XR-55A95L
Responsible Party: Sony Electronics Inc.
Address: 16355 Via Esprillo, San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

Compatible Wall-Mount Bracket Information
Use the following Sony Wall-Mount Bracket with your TV model.

- ① TV's rear cover / Couvercle arrière du téléviseur / Parte posterior del TV
- ② Wall-Mount Bracket / Support de fixation murale / Soporte de montaje mural

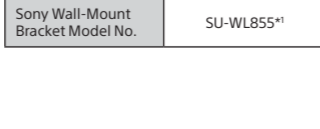

Use with other Wall-Mount Brackets* may cause instability and could result in property damage or injury.

*1 Only for limited region/country/model.
*2 For instructions on using the Wall-Mount Bracket with your TV please go to <https://www.sony.com/am/support> for your TV model and download "Wall-Mount Bracket".

To Customers
Sufficient expertise is required for TV installations. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

Before setting up your TV
Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to the Wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).

Be sure to consider the following while setting up your TV:
• Disconnect all cables when carrying the TV.
• Before transporting the TV set, remove the terminal covers.
• Two or more persons are needed to transport a large TV set.
• Correct hand placement while carrying the TV is very important for safety and to avoid damage.
• When handling or mounting the TV set, do not lay down the TV (for applicable TV model only).

The BRAVIA® 4K TV Experience
Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV. Please take a moment to register your TV at:
U.S.A.:
<https://productregistration.sony.com>
Canada:
<https://www.sony.ca/registration>
This TV displays all video input signals in a resolution of 3840 dots x 2160 lines.

Note:
• For supported PC formats, refer to the online Help Guide.
Guidelines for IR Remote Control
• Point your remote control directly at the IR sensor located on your TV.
• Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

Note:
• For supported PC formats, refer to the online Help Guide.
Guidelines for IR Remote Control
• Point your remote control directly at the IR sensor located on your TV.
• Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

Securing the TV
Sony strongly recommends taking measures to prevent the TV from toppling over. Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

Preventing the TV from Toppling
• Secure the TV to a wall and/or Stand.
• Do not allow children to play or climb on furniture and TV sets.
• Avoid placing or hanging items on the TV.
• Never install the TV on:
- slippery, unstable and/or uneven surfaces... furniture that can easily be used as steps, such as a chest of drawers.
- Install the TV where it cannot be pulled, pushed, or knocked over.
- Install the TV so that the TV's Table-Top Stand does not protrude out from the Stand (not supplied). If the Table-Top Stand protrudes out from the Stand, it may cause TV set to topple over, fall down, and cause personal injury or damage to the TV.

Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
If you have any problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

Installing the TV to the Wall
Using the optional Wall-Mount Bracket (SU-WLB55 only)* (not supplied)

To Customers:
For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.

To Sony Dealers and Contractors:
Provide full attention to safety during the installation, periodic maintenance and examination of this product.

Wall-Mount Bracket Installation Information
For instructions on Wall-Mount Bracket installation, see the Installation Information (not supplied) on the Sony Customer Support website for your TV model at the following address:
<https://www.sony.com/am/support>
• Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
• Sony is not liable for any damage or injury caused by mishandling or improper installation.
• Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

Troubleshooting
General troubleshooting for issues like: black screen, no sound, freeze picture, TV does not respond, or network is lost, do the following steps:
1 Restart your TV by pressing the power button on the remote control for about five seconds. The TV will restart. If the TV does not recover, try unplugging the AC power cord then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord.
Or, press the power button on the TV for about 40 seconds until the TV turns off.
2 Refer to the Help menu shown below.
3 Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
4 Visit Sony support website (information provided at the end of each language).
5 Perform the factory data reset.

When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.
It takes time to initialize the system. Wait for about one minute, then operate it again.
How to reset the TV to factory settings
WARNING: The reset will clear all of your customized settings including the parental lock setting.
You can reset the TV to factory settings by selecting [Factory data reset]. How to select [Factory data reset], refer to the online Help Guide.
To force factory data reset, unplug the AC power cord. Press and hold Ⓜ button on the TV then plug the AC power cord back in.
For security purposes, be sure to remove all personal and account information before discarding, selling or passing your TV to someone else by unlisting/unregistering, signing out of and deactivating all network services as well as factory reset the TV.

The remote control does not function.
• Replace the batteries.
The parental lock password has been forgotten.
• Enter 4321 for the PIN and enter the new PIN.
The screen becomes darker while watching TV.
• If the whole image or part of the image remains still, the screen brightness will be gradually reduced to prevent image retention. This is not a malfunction of the TV.
You are concerned about image retention.
If the same image is displayed repeatedly or for long periods of time, image retention may occur. To reduce image retention, we recommend that you turn off the TV normally by pressing the power button on the remote control or the TV.
Note
• Perform Panel refresh only when image retention is particularly noticeable. Avoid performing Panel refresh more than once a year because it may affect the usable life of the panel.


Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

Note:
• Read the supplied safety documentation for additional safety information.
• For more detailed information, visit Sony Customer Support website.*
• Only for limited region/country/model.

Model Name	Wall-mount hole pattern
XR-77A95L	300 × 300 mm
XR-65A95L	300 × 300 mm
XR-55A95L	300 × 300 mm

Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

 Note:
• Read the supplied safety documentation for additional safety information.
• For more detailed information, visit Sony Customer Support website.*
• Only for limited region/country/model.

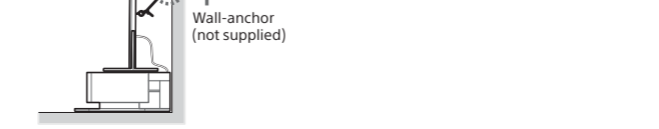

1 Remove the stand covers and terminal covers.

2 Remove the screws from the rear of the TV.

3 Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).

Note:
• Using an electric screwdriver, set the torque at approximately 1.5 N m (15 kgf cm).

Detaching the Table-Top Stand from the TV
To detach the Table-Top Stand from the TV, remove the screws.

Note:
• Be careful when lifting the TV as the Table-Top Stand is detached. The Table-Top Stand may topple over and cause personal injury. Take care when removing the Table-Top Stand from the TV to prevent it from falling over and damaging the surface that the TV is sitting on.
• Do not remove the Table-Top Stand for any reason other than to install corresponding accessories on the TV.
• Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the panel facing down.
• When attaching the Table-Top Stand again, be sure to fasten the screws (previously removed) to the original holes on the rear of the TV.

Using the Camera and Microphone Unit (supplied)
A software update may be required to use the Camera and Microphone Unit. For the latest information about software updates for your TV, visit: <https://www.sony.com/am/support>

Power and others
Power requirements
110 V - 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)
Power consumption
XR-77A95L: 506
XR-65A95L: 444
XR-55A95L: 348
In standby*
Less than 0.5 W with 120 V AC and less than 0.5 W with 240 V AC
Screen size (measured diagonally) (Approx. (cm))
XR-77A95L: 195.2 / 76.8 (77" class)
XR-65A95L: 163.9 / 64.5 (65" class)
XR-55A95L: 138.8 / 54.6 (55" class)
Display resolution (horizontal × vertical) (pixels)
3840 × 2160
Output rating
500 mA (for USB 1), 900 mA (for USB 2)

Others
Optional accessories
Wall-Mount Bracket: SU-WLB55
Operating temperature
0 °C - 40 °C / 32 °F - 104 °F
*1 Only for limited region/country/model.
*2 2 - 36 for NEXTGEN TV scanning range in U.S.A.
*3 When 4096 × 2160 is input and [Wide mode] is set to [Vertical fit], the resolution is supported up to 3840 × 2160. To display 4096 × 2160, set [Wide mode] setting to [Horizontal fit] [Auto] or [Full].
*4 Refer to the on screen menu to set [HDMI signal format].
*5 Refer to the online Help Guide for details.
*6 HDMI IN 3 and 4 only. Use the Ultra High Speed HDMI Cable to connect.
*7 Connect your audio system to the HDMI IN 3 to route TV audio to your audio system.
*8 Specific standby power is reached after the TV is powered on for a certain period of time.
*9 Standby power consumption will increase when your TV is connected to the network.

Note
• Optional accessories available depends on countries/region/TV model/stock.
• Design and specifications are subject to change without notice.
• Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using Google Assistant.
• Power consumption will increase when the built-in MIC (a software update may be required to use this feature) is enabled as it is always listening.
• Visit Sony website for more information on product specifications.

Licensing Information
• Dolby, Dolby Vision, Dolby Atmos, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2022 Dolby Laboratories. All rights reserved.
• Gracenote, the Gracenote logo and logotype, "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.

Images that include logos and bright colors (including white) easily cause image retention. Avoid displaying these types of images for long periods of time, otherwise image retention may occur.
A red, green, or blue line appears on the screen.
• The Panel refresh has been performed. A red, green, or blue line may be displayed on the screen during the Panel refresh. This is not a malfunction of the TV. Panel refresh starts after the TV is turned off and takes about one hour to complete.
The message [Panel refresh did not finish...] is displayed.
• When [i] is turned on, the AC power cord is unplugged, or if the room temperature falls outside of the range between 50 °F and 104 °F (10 °C and 40 °C) during the Panel refresh, the Panel refresh is not completed. Please avoid the above three conditions during the Panel refresh.

For more information, refer to the Help Guide.
Press Ⓜ (Input) on the remote control and select [Help]. ([Help] does not exist, select [Edit] and add [Help].

Specifications
System
TV system
NTSC: National Television System Committee
ATSC: 8VSB Terrestrial
NEXTGEN TV: ATSC 3.0 compliant (Single tuner)
QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality)
Channel coverage
Depending on your country/area selection/TV model:
Analog terrestrial: 2 - 69 / Digital terrestrial: 2 - 69*
Analog Cable: 1 - 135 / Digital Cable: 1 - 135
Panel system
OLED (Organic Light Emitting Diode) Panel
Speaker output (W)
20 + 20 + 10 + 10
Wireless technology
Protocol IEEE 802.11a/b/g/n/ac/ax
Bluetooth®
Version 5.2

Input/Output jacks
CABLE/ANTENNA
75 ohm external terminal for RF inputs
HDMI IN 1/2/3/4 (HDCP 2.3-compatible)
Video:
4096 × 2160 (60 Hz)**^{1,2}, 4096 × 2160 (24 Hz)**^{1,2}, 3840 × 2160 (60 Hz)**^{1,2}, 3840 × 2160 (24, 30 Hz)^{1,2}, 1080p (24, 30, 60, 120 Hz)^{1,2}, 1080i (60 Hz)^{1,2}, 720p (24, 30, 60 Hz)^{1,2}, 480p, PC Formats:
3840 × 2160 (120 Hz)**^{1,2}
Audio:
eARC (Enhanced Audio Return Channel) mode
Refer to the online Help Guide for details. Except eARC mode.
7.1 channel linear PCM: 32/44.1/48/96/2.956/176/192 kHz 16/20/24 bits, Dolby Audio, Dolby Atmos, DTS, DTS-D, DTS-X
eARC/ARC (Enhanced Audio Return Channel/ Audio Return Channel) (HDMI IN 3 only)**
In eARC mode
Refer to the online Help Guide for details. In ARC mode
Power requirements
Linear PCM: 48 kHz 16 bits, Dolby Audio, Dolby Atmos, DTS
DIGITAL AUDIO OUT (OPTICAL)
Digital optical jack (Two channel linear PCM: 48 kHz 16 bits, Dolby Audio, DTS)
USB port 1 supports High Speed USB (USB 2.0)
USB port 2 supports Super Speed USB (USB 3.2 Gen 1)
LAN
10BASE-T/100BASE-TX connector (Depending on the operating environment of the network, communication rate and quality are not guaranteed.)
Home Network supported files and formats*
MP3, AAC, HE-AAC, AAC-LC, HE-AAC v2, HE-AAC v3, AAC-LD, HE-AAC v4, HE-AAC v5, HE-AAC v6, HE-AAC v7, HE-AAC v8, HE-AAC v9, HE-AAC v10, HE-AAC v11, HE-AAC v12, HE-AAC v13, HE-AAC v14, HE-AAC v15, HE-AAC v16, HE-AAC v17, HE-AAC v18, HE-AAC v19, HE-AAC v20, HE-AAC v21, HE-AAC v22, HE-AAC v23, HE-AAC v24, HE-AAC v25, HE-AAC v26, HE-AAC v27, HE-AAC v28, HE-AAC v29, HE-AAC v30, HE-AAC v31, HE-AAC v32, HE-AAC v33, HE-AAC v34, HE-AAC v35, HE-AAC v36, HE-AAC v37, HE-AAC v38, HE-AAC v39, HE-AAC v40, HE-AAC v41, HE-AAC v42, HE-AAC v43, HE-AAC v44, HE-AAC v45, HE-AAC v46, HE-AAC v47, HE-AAC v48, HE-AAC v49, HE-AAC v50, HE-AAC v51, HE-AAC v52, HE-AAC v53, HE-AAC v54, HE-AAC v55, HE-AAC v56, HE-AAC v57, HE-AAC v58, HE-AAC v59, HE-AAC v60, HE-AAC v61, HE-AAC v62, HE-AAC v63, HE-AAC v64, HE-AAC v65, HE-AAC v66, HE-AAC v67, HE-AAC v68, HE-AAC v69, HE-AAC v70, HE-AAC v71, HE-AAC v72, HE-AAC v73, HE-AAC v74, HE-AAC v75, HE-AAC v76, HE-AAC v77, HE-AAC v78, HE-AAC v79, HE-AAC v80, HE-AAC v81, HE-AAC v82, HE-AAC v83, HE-AAC v84, HE-AAC v85, HE-AAC v86, HE-AAC v87, HE-AAC v88, HE-AAC v89, HE-AAC v90, HE-AAC v91, HE-AAC v92, HE-AAC v93, HE-AAC v94, HE-AAC v95, HE-AAC v96, HE-AAC v97, HE-AAC v98, HE-AAC v99, HE-AAC v100, HE-AAC v101, HE-AAC v102, HE-AAC v103, HE-AAC v104, HE-AAC v105, HE-AAC v106, HE-AAC v107, HE-AAC v108, HE-AAC v109, HE-AAC v110, HE-AAC v111, HE-AAC v112, HE-AAC v113, HE-AAC v114, HE-AAC v115, HE-AAC v116, HE-AAC v117, HE-AAC v118, HE-AAC v119, HE-AAC v120, HE-AAC v121, HE-AAC v122, HE-AAC v123, HE-AAC v124, HE-AAC v125, HE-AAC v126, HE-AAC v127, HE-AAC v128, HE-AAC v129, HE-AAC v130, HE-AAC v131, HE-AAC v132, HE-AAC v133, HE-AAC v134, HE-AAC v135, HE-AAC v136, HE-AAC v137, HE-AAC v138, HE-AAC v139, HE-AAC v140, HE-AAC v141, HE-AAC v142, HE-AAC v143, HE-AAC v144, HE-AAC v145, HE-AAC v146, HE-AAC v147, HE-AAC v148, HE-AAC v149, HE-AAC v150, HE-AAC v151, HE-AAC v152, HE-AAC v153, HE-AAC v154, HE-AAC v155, HE-AAC v156, HE-AAC v157, HE-AAC v158, HE-AAC v159, HE-AAC v160, HE-AAC v161, HE-AAC v162, HE-AAC v163, HE-AAC v164, HE-AAC v165, HE-AAC v166, HE-AAC v167, HE-AAC v168, HE-AAC v169, HE-AAC v170, HE-AAC v171, HE-AAC v172, HE-AAC v173, HE-AAC v174, HE-AAC v175, HE-AAC v176, HE-AAC v177, HE-AAC v178, HE-AAC v179, HE-AAC v180, HE-AAC v181, HE-AAC v182, HE-AAC v183, HE-AAC v184, HE-AAC v185, HE-AAC v186, HE-AAC v187, HE-AAC v188, HE-AAC v189, HE-AAC v190, HE-AAC v191, HE-AAC v192, HE-AAC v193, HE-AAC v194, HE-AAC v195, HE-AAC v196, HE-AAC v197, HE-AAC v198, HE-AAC v199, HE-AAC v200, HE-AAC v201, HE-AAC v202, HE-AAC v203, HE-AAC v204, HE-AAC v205, HE-AAC v206, HE-AAC v207, HE-AAC v208, HE-AAC v209, HE-AAC v210, HE-AAC v211, HE-AAC v212, HE-AAC v213, HE-AAC v214, HE-AAC v215, HE-AAC v216, HE-AAC v217, HE-AAC v218, HE-AAC v219, HE-AAC v220, HE-AAC v221, HE-AAC v222, HE-AAC v223, HE-AAC v224, HE-AAC v225, HE-AAC v226, HE-AAC v227, HE-AAC v228, HE-AAC v229, HE-AAC v230, HE-AAC v231, HE-AAC v232, HE-AAC v233, HE-AAC v234, HE-AAC v235, HE-AAC v236, HE-AAC v237, HE-AAC v238, HE-AAC v239, HE-AAC v240, HE-AAC v241, HE-AAC v242, HE-AAC v243, HE-AAC v244, HE-AAC v245, HE-AAC v246, HE-AAC v247, HE-AAC v248, HE-AAC v249, HE-AAC v250, HE-AAC v251, HE-AAC v252, HE-AAC v253, HE-AAC v254, HE-AAC v255, HE-AAC v256, HE-AAC v257, HE-AAC v258, HE-AAC v259, HE-AAC v260, HE-AAC v261, HE-AAC v262, HE-AAC v263, HE-AAC v264, HE-AAC v265, HE-AAC v266, HE-AAC v267, HE-AAC v268, HE-AAC v269, HE-AAC v270, HE-AAC v271, HE-AAC v272, HE-AAC v273, HE-AAC v274, HE-AAC v275, HE-AAC v276, HE-AAC v277, HE-AAC v278, HE-AAC v279, HE-AAC v280, HE-AAC v281, HE-AAC v282, HE-AAC v283, HE-AAC v284, HE-AAC v285, HE-AAC v286, HE-AAC v287, HE-AAC

