

 
Television
Telesivir digital a color con pantalla de diodo organico de emision de luz (OLED)

Reference Guide
Manuel de référence
Guía de referencia



https://rd1.sony.net/help/tv/lustin/h_us1tn/

K-77XR80 / 77XR80C / 65XR80 / 65XR80C
K-55XR80 / 55XR80C

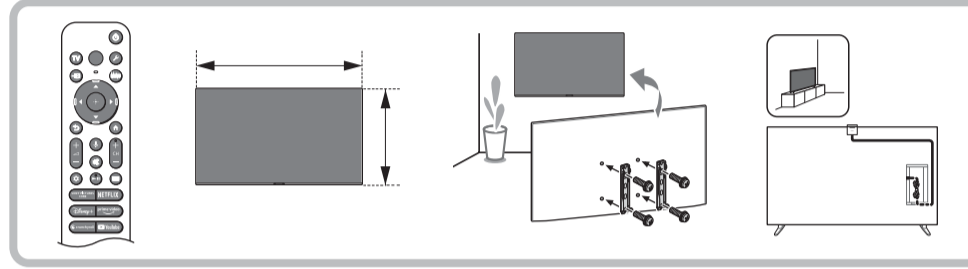

Read this manual before using this product. Use ce manuel avant d'utiliser le produit. Lea este manual antes de usar el producto.

Sony Customer Support
U.S.A.: https://www.sony.com/tvsupport
Canada: https://www.sony.ca/support
U.S.A. Canada 1.800.222.SONY (7669) 1.877.899.SONY (7669)

Service à la clientèle Sony Canada: https://www.sony.ca/support
États-Unis: https://www.sony.com/tvsupport
Canada États-Unis 1.877.899.SONY (7669) 1.800.222.SONY (7669)

Centro de Asistencia de Sony
https://esupport.sony.com/ES/LA
Llame al número de teléfono que aparece en su tarjeta/pólea de garantía. Por favor no devuelva el producto a la tienda donde adquirió el producto.

Appelz le numéro de téléphone qui apparaît sur votre carte/pole de garantie. Ne retournez pas le produit au magasin.

© 2024 Sony Corporation

Dimensions and weight (without Table-Top Stand) / Dimensiones y peso (sin soporte de sobremesa) / Dimensiones y peso (sin soporte de sobremesa)


Table with columns for model, width, height, and weight in mm/inches/pouces/pulgadas and kg/lb. Models include K-77XR80, K-65XR80, and K-55XR80.

Dimensions and weight (with Table-Top Stand) / Dimensiones y peso (con soporte de sobremesa) / Dimensiones y peso (con soporte de sobremesa)

Table with columns for model, width, height, and weight in mm/inches/pouces/pulgadas and kg/lb. Models include K-77XR80, K-65XR80, and K-55XR80.


Table with columns for model, width, height, and weight in mm/inches/pouces/pulgadas and kg/lb. Models include K-77XR80, K-65XR80, and K-55XR80.

 The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness. / La longitud del tornillo para el soporte de fijación mural varía dependiendo del espesor del soporte de montaje mural.

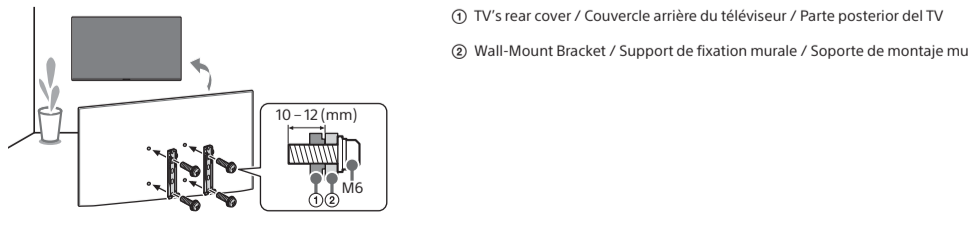

Optional Camera and Microphone Unit (cable Management / Gestion du câble de la caméra avec microphone en option)
Information for the remote control with voice command included with this product: Model: RMF-TX920U* Brand: Sony

 Compatible Wall-Mount Bracket Information
Sony TV Model No. K-77XR80 / K-77XR80C / K-65XR80 / K-65XR80C / K-55XR80 / K-55XR80C

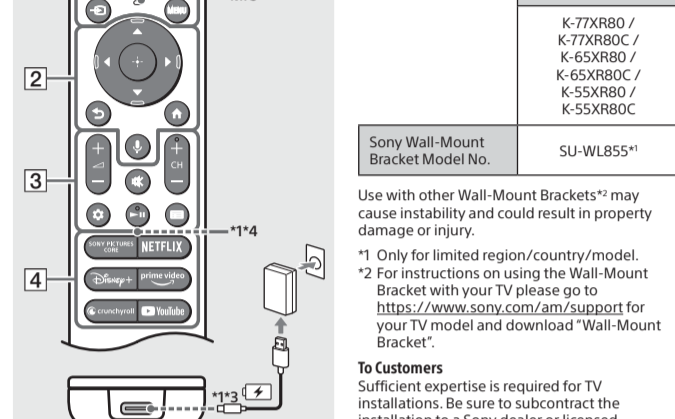

1. Power TV channel list or switch to input. (Quick settings): Display Quick Settings. (Input): Display and select the input sources, etc. (MENU/Control menu): Display the Control menu.

2. App buttons. RMF-TX920U only. To see the model name of the remote control, open the remote control cover and see the label on the remote control.


3. Securing the TV. Sony strongly recommends taking measures to prevent cables from being unplugged or unsecured. TVs may topple and result in property damage.

4. Preventing the TV from Topping. Secure the TV to a wall and/or Stand. Do not allow children to play or climb on furniture and TV sets.


5. Location of the identification label. Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

6. IMPORTANT NOTICE. Operation of this equipment is subject to the following two conditions: (1) It is possible that this equipment or device may not cause harmful interference and (2) this equipment must accept any interference which is received.

2. Secure the TV to the Stand. Use the optional hardware listed as follows (not supplied): M6 machine screws (screwed into the TV's rear cover). A screw or similar (attach to the Stand). Rope or chain (strong enough to support the weight of the TV).

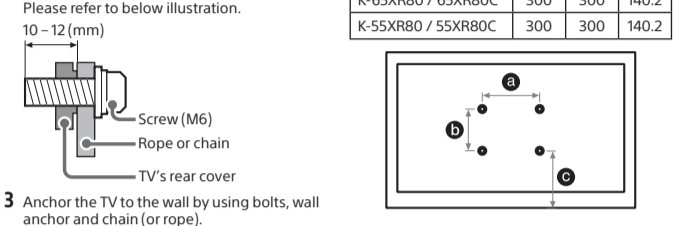

3. Anchor the TV to the wall by using bolts, wall anchor and chain (if applicable). Wall-mount bolts. Rope or chain (not supplied). M6 eye bolts (not supplied).

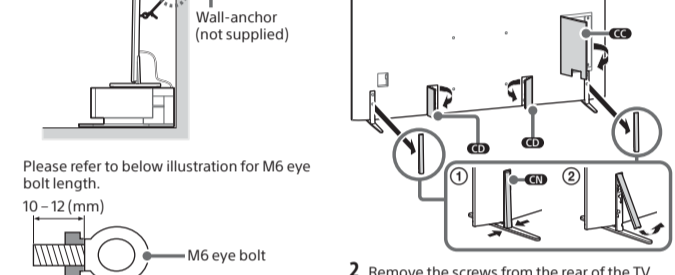

4. Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied). Wall-Mount Bracket (not supplied). Screw (not supplied).

5. The BRAVIA™ 4K X-Experience. Thank you for choosing Sony! Your new BRAVIA™ TV offers you the "4K TV Experience".

6. Preventing the TV from Topping. Secure the TV to a wall and/or Stand. Do not allow children to play or climb on furniture and TV sets.

7. Location of the identification label. Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.

8. IMPORTANT NOTICE. Operation of this equipment is subject to the following two conditions: (1) It is possible that this equipment or device may not cause harmful interference and (2) this equipment must accept any interference which is received.

Using the optional Wall-Mount Bracket (except SU-WL85S) (not supplied). This TV's instruction manual only provides the steps to prepare the TV for wall mounting.

For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.

The remote control does not function. Replace the batteries (except RMF-TX920U). Charge the remote control and confirm the remote control is connected via Bluetooth.

The parental lock password has been forgotten. Enter 037 for the PIN and enter the new PIN. The screen becomes darker while watching TV.

The message [Panel refresh not supported] is displayed. When the TV is turned on or if the AC power cord is unplugged during the Panel refresh.

System TV system. NTS-C: National Television System Committee. ATSC-B:5/6 Terrestrial. ATSC-TX: ATSC 3.0 compliant (Single Tuner).

Power and others. Power requirements: 110 V ~ 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz).

6. IMPORTANT NOTICE. Operation of this equipment is subject to the following two conditions: (1) It is possible that this equipment or device may not cause harmful interference and (2) this equipment must accept any interference which is received.

9. IMPORTANT NOTICE FOR MEXICO. Operation of this equipment is subject to the following two conditions: (1) It is possible that this equipment or device may not cause harmful interference and (2) this equipment must accept any interference which is received.

AVIS IMPORTANT. L'exploitation de ce panneau est autorisée aux deux conditions suivantes: (1) Il faut que cet équipement ou appareil ne provoque pas d'interférences nuisibles, et (2) cet équipement ou appareil doit accepter toute interférence, y compris les interférences pouvant entraîner un fonctionnement inadéquat.

WLAN: 2.4 GHz (2,4000 GHz ~ 2,4835 GHz) 5 GHz (5,150 GHz ~ 5,850 GHz) 6 GHz (5,925 GHz ~ 6,425 GHz) Bluetooth®: 2.4 GHz (2,4000 GHz ~ 2,4835 GHz)

Information concernant la télécommande à commande vocale incluse dans ce produit: Modèle: RMF-TX920U* Marque: Sony

Information sur le support de fixation murale compatible. Utilisez le support de fixation murale Sony compatible correspondant au modèle de votre téléviseur.

Le forme de la télécommande, l'agencement, la disponibilité et la fonction des touches de la télécommande peuvent varier selon votre région ou pays ou le modèle/réglages du téléviseur.

1. (Alimentation) TV: Affiche la liste des canaux de télévision en français ou en anglais.

2. (Retour) (Accueil) (Assistant Google / Microphone): Utilisez l'Assistant Google™.

3. (Sourdis) CH +/- (Canal) (Tableau de bord): Affichez le tableau de bord.

4. Touches de l'application. RMF-TX920U uniquement. Pour connaître le nom du modèle de la télécommande, ouvrez le couvercle de la télécommande.

1. Fixez le support de fixation murale (non fourni) à l'aide de vis (non fournies). Support de fixation murale (non fournie).

2. Fixer solidement le téléviseur à la base. Utilisez la quincaillerie optionnelle mentionnée (non fournie).

3. Fixez le support de fixation murale (non fourni) à l'aide de vis (non fournies).

4. Retirez les vis à l'arrière du téléviseur.

5. Retirez les vis à l'arrière du téléviseur.

6. Assurez-vous de ranger les vis non utilisées et le support de table en un endroit sûr jusqu'à ce que vous soyez prêt à fixer le support de table.

7. Retirez les vis à l'arrière du téléviseur.

8. Retirez les vis à l'arrière du téléviseur.

9. Retirez les vis à l'arrière du téléviseur.

Le message [Actualisation du panneau n'est pas terminée...S'affiche. Si le téléviseur est allumé ou si le cordon d'alimentation CA pendant l'installation de la fonction d'actualisation panneau.

1. (Alimentation) TV: Muestra una lista de canales de televisión en español o en inglés.

2. (Retour) (Inicio) (Asistente de Google / Microfono): Usa el Asistente de Google™.

3. (Sourdis) CH +/- (Canal) (Panel de visualización): Muestra la guía de programación digital del televisor o su interfaz de usuario de canales de televisión.

4. Botones de las aplicaciones. Solo RMF-TX920U. Para ver el nombre del modelo de control remoto, abra la cubierta del control remoto y consulte la etiqueta del mismo.

5. Ubicación de la etiqueta de identificación. Las etiquetas que identifican el No. de modelo y las Características Eléctricas se encuentran en la parte posterior del TV.

6. Asistencia de Google. Si la asistencia de Google requerida estará disponible manteniendo pulsado [Inicio] (Silenciar).

7. Registro de propiedad. El modelo y los números de serie están ubicados en el costado y/o en la parte posterior del televisor.

8. Para consultar la información relacionada al número del certificado, refiérase a la etiqueta del empaque y/o del producto.

ES

ES

ES

ES

ES

ES

ES

ES

ES

