

Setup Guide

Téléviseur
Telesor digital a color con pantalla de cristal líquido
Telesor

5-057-950-12(1)



EN	Setup Guide
FR	Manuel de configuration
ES	Guía de configuración
PT	Guia de Configuração

Sony Customer Support

U.S.A.:
<https://www.sony.com/tvsupport>
Canada:
<https://www.sony.ca/support>
U.S.A. 1.800.222.SONY (7669) Canada 1.877.899.SONY (7669)
Please Do Not Return the Product to the Store

Service à la clientèle Sony

Canada:
<https://www.sony.ca/support>
États-Unis:
<https://www.sony.com/tvsupport>
Canada 1.877.899.SONY (7669) États-Unis 1.800.222.SONY (7669)
Ne retournez pas le produit au magasin


Lea este manual antes de usar el producto

Centro de Asistencia de Sony

<https://esupport.sony.com/ES/LA/>
Llame al número telefónico que aparece en su póliza de garantía.
Por favor no devuelva el producto a la tienda donde adquirió el producto.

BRAVIA

K-85XR90 / 85XR90C / 75XR90
K-75XR90C / 65XR90 / 65XR90C

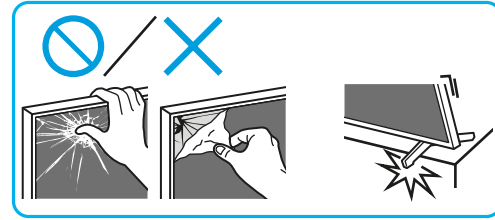

1

*1

*2

85
75
65

2

3

*2

85 75 65

CD4 CD3 CC CC

4

65

65

5

A

B

C

D

1

A

B

2

M5L12 x 2

1

A

B

2

M5L12 x 2

1

A

B

2

M5L12 x 2

6

85 85

*1 Refer Reference Guide. / Reportez-vous au Manuel de référence. / Consulte la Guía de referencia. / Consulte o manual de instruções.

*2 Only for limited region/country/model. / Uniquement pour certaines régions/pays/modèles. / Solo para regiones/paises/modelos limitados. / Exclusivo para regiões/paises/modelos especificados.



