


Television Téleviser Televisor digital a color con pantalla de cristal líquido

Reference Guide Manuel de référence Guía de referencia

K-85XR90 / 85XR90C / 75XR90
K-75XR90C / 65XR90 / 65XR90C

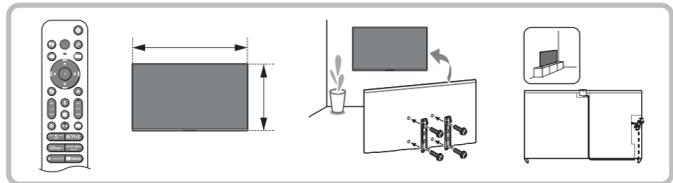

Read this manual before using this product

Sony Customer Support

U.S.A.: <https://www.sony.com/tvsupport>
Canada: <https://www.sony.ca/support>
U.S.A. Canada
1.800.222.SONY (7669) 1.877.899.SONY (7669)
Call the telephone number that appears on your warranty card policy.
Please do not return the product to the store.

© 2024 Sony Corporation

Dimensions and weight (without Table-Top Stand) / Dimensiones y pesos (sin soporte de sobremesa)

	A		B		C		D		E	
	(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
K-85XR90 / 85XR90C	1888 / 74 3/8	1085 / 42 1/4	1888 / 74 3/8	1085 / 42 1/4	49 1 1/16	49 1 1/16	52.4 / 115.5	52.4 / 115.5		
K-75XR90 / 75XR90C	1667 / 65 7/8	960 / 37 3/8	1667 / 65 7/8	960 / 37 3/8	48 1 1/16	48 1 1/16	42.3 / 93.2	42.3 / 93.2		
K-65XR90 / 65XR90C	1443 / 56 7/8	835 / 32 7/8	1443 / 56 7/8	835 / 32 7/8	48 1 1/16	48 1 1/16	32.4 / 71.4	32.4 / 71.4		

*1 (Approx. / Environ / Aprox.)

Dimensions and weight (with Table-Top Stand) / Dimensiones y pesos (con soporte de sobremesa)

	A		B		C		D		E	
	(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
K-85XR90 / 85XR90C	1888 / 74 3/8	1097 / 43 1/4	1158 / 45 5/8	457 / 18	1882 / 74 1/8	753 / 29 3/4	55.7 / 122.7	55.7 / 122.7		
K-75XR90 / 75XR90C	1667 / 65 7/8	972 / 38 1/4	1034 / 40 3/4	397 / 15 3/4	1657 / 65 1/4	543 / 21 1/2	45 / 99.2	45 / 99.2		
K-65XR90 / 65XR90C	1443 / 56 7/8	846 / 33 3/8	908 / 35 3/4	349 / 13 3/4	1419 / 55 7/8	480 / 19	34.8 / 76.7	34.8 / 76.7		

*1 (Approx. / Environ / Aprox.)

	A		B		C		D		E	
	(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
K-85XR90 / 85XR90C	1888 / 74 3/8	1097 / 43 1/4	1158 / 45 5/8	457 / 18	1882 / 74 1/8	753 / 29 3/4	55.7 / 122.7	55.7 / 122.7		
K-75XR90 / 75XR90C	1667 / 65 7/8	972 / 38 1/4	1034 / 40 3/4	397 / 15 3/4	1657 / 65 1/4	543 / 21 1/2	45 / 99.2	45 / 99.2		
K-65XR90 / 65XR90C	1443 / 56 7/8	846 / 33 3/8	908 / 35 3/4	349 / 13 3/4	1419 / 55 7/8	480 / 19	34.8 / 76.7	34.8 / 76.7		

*1 (Approx. / Environ / Aprox.)

	A		B		C		D		E	
	(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
K-85XR90 / 85XR90C	1888 / 74 3/8	1097 / 43 1/4	1158 / 45 5/8	457 / 18	1882 / 74 1/8	753 / 29 3/4	55.7 / 122.7	55.7 / 122.7		
K-75XR90 / 75XR90C	1667 / 65 7/8	972 / 38 1/4	1034 / 40 3/4	397 / 15 3/4	1657 / 65 1/4	543 / 21 1/2	45 / 99.2	45 / 99.2		
K-65XR90 / 65XR90C	1443 / 56 7/8	846 / 33 3/8	908 / 35 3/4	349 / 13 3/4	1419 / 55 7/8	480 / 19	34.8 / 76.7	34.8 / 76.7		

*1 (Approx. / Environ / Aprox.)

The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness / La longueur des vis pour le support de fixation murale diffère selon l'épaisseur du support de fixation murale / La longitud del tornillo para el soporte de montaje mural varía dependiendo del espesor del soporte de montaje mural

	A		B		C		D		E	
	(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
K-85XR90 / 85XR90C	1888 / 74 3/8	1097 / 43 1/4	1158 / 45 5/8	457 / 18	1882 / 74 1/8	753 / 29 3/4	55.7 / 122.7	55.7 / 122.7		
K-75XR90 / 75XR90C	1667 / 65 7/8	972 / 38 1/4	1034 / 40 3/4	397 / 15 3/4	1657 / 65 1/4	543 / 21 1/2	45 / 99.2	45 / 99.2		
K-65XR90 / 65XR90C	1443 / 56 7/8	846 / 33 3/8	908 / 35 3/4	349 / 13 3/4	1419 / 55 7/8	480 / 19	34.8 / 76.7	34.8 / 76.7		

*1 (Approx. / Environ / Aprox.)


	A		B		C		D		E	
	(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(mm)/(inches/pouces/pulgadas)*1		(kg)/(lb.)**1	
K-85XR90 / 85XR90C	1888 / 74 3/8	1097 / 43 1/4	1158 / 45 5/8	457 / 18	1882 / 74 1/8	753 / 29 3/4	55.7 / 122.7	55.7 / 122.7		
K-75XR90 / 75XR90C	1667 / 65 7/8	972 / 38 1/4	1034 / 40 3/4	397 / 15 3/4	1657 / 65 1/4	543 / 21 1/2	45 / 99.2	45 / 99.2		
K-65XR90 / 65XR90C	1443 / 56 7/8	846 / 33 3/8	908 / 35 3/4	349 / 13 3/4	1419 / 55 7/8	480 / 19	34.8 / 76.7	34.8 / 76.7		

*1 (Approx. / Environ / Aprox.)

Optional Camera and Microphone Unit (not supplied) Cable Management / Gestion du câble de la caméra avec microphone en option (non fourni) / Manejo del cable de la unidad de cámara y micrófono opcional (no suministrado)



EN

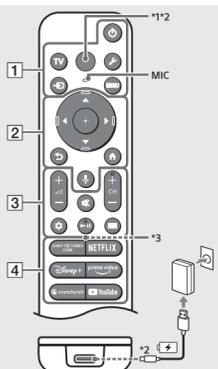

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model TV settings.

- (Power)**
TV: Display TV channel list or switch to input.
Settings: (Quick settings): Display Quick Settings.
(Input): Display and select the input source, etc.
MENU (Control menu): Display the Control menu.
- (On screen menu navigation and selection)**
(Back)
(Home)
(Google Assistant / Microphone): Use Google Assistant**.
- (Volume)**
(Mute)**
CH + / - (Channel)
(Dashboard): Display Dashboard.
(Guide): Display the digital program guide of TV or Cable/satellite box*.

- App buttons**
The remote control backlight will illuminate when the light sensor detects the ambient light is low. Automatic illumination of the backlight can be turned off.
The remote control is rechargeable. The LED indicator will show charging status (red). Use the supplied USB Type-C* cable to charge the remote control using your own USB AC adapter.
The buzzer will emit a sound either when you use the remote control finder function or when you press the power button on the remote control when the battery is low. Refer to the online Help Guide for details.
Only for limited region/country/model/language.
- Google Assistant requires an Internet connection.
- Accessibility shortcut is available by pressing and holding (Mute).
- Cable/Satellite box setup) setting is required.

Owner's Record
The model and serial numbers are located at the side and/or rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Location of the identification label
Labels for the TV Model No. and Power Supply rating are located on the rear of the TV. They can be found by removing the terminal cover.

IMPORTANT NOTICE

Important notice for Mexico
Operation of this equipment is subject to the following two conditions: (1) It is possible that this equipment or device may not cause harmful interference and (2) this equipment or device must accept any interference, including interference that may cause undesired operation.

For information related to the certificate number, refer to the package label and / or product.

Notice:
This product uses the following module for wireless functionalities:
Model: J20H03
Brand: FOXCONN

WLAN:
2.4 GHz (2.4000 GHz - 2.4835 GHz)
5 GHz (5.150 GHz - 5.850 GHz)
6 GHz (5.925 GHz - 6.425 GHz)
Bluetooth**:
2.4 GHz (2.4000 GHz - 2.4835 GHz)

Information for the remote control with voice command included with this product:
Model: RFX2920U**
Brand: Sony

Note:
Uses the following device for wireless functionalities:
Model: UE87B
Brand: UEI

*1 To see the model name of the remote control, open the remote control cover and refer to the label on the remote control.

Safety Information

Notice of concerns in the U.S.A.
Supplier's Declaration of Conformity
Trade Name: SONY
Model: K-85XR90 / K-85XR90C / K-75XR90 / K-75XR90C / K-65XR90 / K-65XR90C
Responsible Party: Sony Electronics Inc.
Address: 16535 Via Espirillo, San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

Compatible Wall-Mount Bracket Information


Use the following Sony Wall-Mount Bracket with your TV model.	a		b		c	
	(mm)		(mm)		(mm)	
K-85XR90 / 85XR90C	400	400	141	141		
K-75XR90 / 75XR90C	300	300	141	141		
K-65XR90 / 65XR90C	300	300	141	141		

Use only other Wall-Mount Brackets** may cause instability and could result in property damage or injury.
*1 Only for limited region/country/model.
*2 For instructions on using the Wall-Mount Bracket with your TV please go to <https://www.sony.com/am/support> for your TV model and download "Wall-Mount Bracket".

To Customers
Sufficient expertise is required for TV installations. Be sure to contact the installer to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

Before setting up your TV
Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See "Installing the TV to the Wall" if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand (refer to the Setup Guide).

Be sure to consider the following while setting up your TV:
• Disconnect all cables when carrying the TV.
• Two or more persons (three or more persons for 214.8 cm (85 inches) and above TV) are needed to transport large TV set.
• Correct hand placement while carrying the TV is very important for safety and to avoid damage.
• When handling or mounting the TV set, do not lay down the TV (for applicable TV model only).

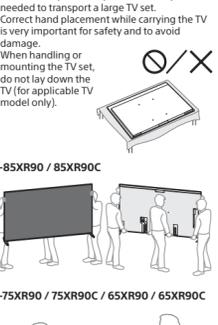

K-85XR90 / 85XR90C

K-75XR90 / 75XR90C / 65XR90 / 65XR90C

The BRAVIA™ 4K TV Experience
Thank you for choosing Sony! Your new BRAVIA™ TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV.
This TV displays all video input signals in a resolution of 3840 dots x 2160 lines.

Note
• For supported PC formats, refer to the online Help Guide.
Guidelines for IR Remote Control
• Point your remote control directly at the IR sensor located on the rear of the TV.
• Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

Preventing the TV from Toppling
• Secure the TV to a wall and/or Stand.
• Do not allow children to play or climb on furniture and TV sets.
• Avoid placing or hanging items on the TV.
• Never install the TV on:
— slippery, unstable and/or uneven surfaces.
— furniture that can easily be used as steps, such as a chest of drawers.

Recommended Measures to Secure the TV
Consider the following measures when securing your TV to a Stand (not supplied).
1. Secure the Stand for the TV.
2. Make sure the Stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the Stand. For each angle brace use the appropriate hardware to:
• Attach one side of the angle brace to the wall stand.
• Attach the other side to the Stand.

Installing the TV to the Wall
Use the optional Wall-Mount Bracket (SU-WL855 only) (not supplied).
To Customers:
For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.
For Sony Dealers and Contractors:
Provide full attention to safety during the installation, periodic maintenance and examination of this product.
Wall-Mount Bracket Installation
For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the Sony Customer Support website for your TV model at the following address:
<https://www.sony.com/am/support>
Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
• Sony is not liable for any damage or injury caused by mishandling or improper installation.
• Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.
Note
• Read the supplied safety documentation for about safety information.

Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.

Route all AC power cords and connecting cables so that they are not accessible to curious children.

For information related to the certificate number, refer to the package label and / or product.

Notice:
This product uses the following module for wireless functionalities:
Model: J20H03
Brand: FOXCONN

WLAN:
2.4 GHz (2.4000 GHz - 2.4835 GHz)
5 GHz (5.150 GHz - 5.850 GHz)
6 GHz (5.925 GHz - 6.425 GHz)
Bluetooth**:
2.4 GHz (2.4000 GHz - 2.4835 GHz)

Information for the remote control with voice command included with this product:
Model: RFX2920U**
Brand: Sony


Note:
Uses the following device for wireless functionalities:
Model: UE87B
Brand: UEI

*1 To see the model name of the remote control, open the remote control cover and refer to the label on the remote control.

Safety Information

Notice of concerns in the U.S.A.
Supplier's Declaration of Conformity
Trade Name: SONY
Model: K-85XR90 / K-85XR90C / K-75XR90 / K-75XR90C / K-65XR90 / K-65XR90C
Responsible Party: Sony Electronics Inc.
Address: 16535 Via Espirillo, San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

The length of the M6 machine screw differs depending on the rope or chain diameter. Please refer to below illustration.

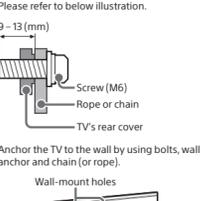

Note
• Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

Note
• Read the supplied safety documentation for additional safety information.
• For more detailed information, visit Sony Customer Support website.*

*1 Only for limited region/country/model.

1 Remove the stand covers and terminal covers.

2 Remove the screws from the rear of the TV.

3 Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).

The BRAVIA™ 4K TV Experience
Thank you for choosing Sony! Your new BRAVIA™ TV opens the door to the "4K TV Experience". This document will help you get the most out of your TV.
This TV displays all video input signals in a resolution of 3840 dots x 2160 lines.

Note
• For supported PC formats, refer to the online Help Guide.
Guidelines for IR Remote Control
• Point your remote control directly at the IR sensor located on the rear of the TV.
• Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

Preventing the TV from Toppling
• Secure the TV to a wall and/or Stand.
• Do not allow children to play or climb on furniture and TV sets.
• Avoid placing or hanging items on the TV.
• Never install the TV on:
— slippery, unstable and/or uneven surfaces.
— furniture that can easily be used as steps, such as a chest of drawers.

Recommended Measures to Secure the TV
Consider the following measures when securing your TV to a Stand (not supplied).
1. Secure the Stand for the TV.
2. Make sure the Stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the Stand. For each angle brace use the appropriate hardware to:
• Attach one side of the angle brace to the wall stand.
• Attach the other side to the Stand.

Installing the TV to the Wall
Use the optional Wall-Mount Bracket (SU-WL855 only) (not supplied).
To Customers:
For product protection and safety reasons, Sony strongly recommends that installation of your TV be performed by Sony dealers or licensed contractors. Do not attempt to install it yourself.
For Sony Dealers and Contractors:
Provide full attention to safety during the installation, periodic maintenance and examination of this product.
Wall-Mount Bracket Installation
For instructions on Wall-Mount Bracket installation, see the Installation Information (Wall-Mount Bracket) on the Sony Customer Support website for your TV model at the following address:
<https://www.sony.com/am/support>
Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
• Sony is not liable for any damage or injury caused by mishandling or improper installation.
• Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.
Note
• Read the supplied safety documentation for about safety information.

Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.

Route all AC power cords and connecting cables so that they are not accessible to curious children.

For information related to the certificate number, refer to the package label and / or product.

Notice:
This product uses the following module for wireless functionalities:
Model: J20H03
Brand: FOXCONN

WLAN:
2.4 GHz (2.4000 GHz - 2.4835 GHz)
5 GHz (5.150 GHz - 5.850 GHz)
6 GHz (5.925 GHz - 6.425 GHz)
Bluetooth**:
2.4 GHz (2.4000 GHz - 2.4835 GHz)

Information for the remote control with voice command included with this product:
Model: RFX2920U**
Brand: Sony

Note:
Uses the following device for wireless functionalities:
Model: UE87B
Brand: UEI

*1 To see the model name of the remote control, open the remote control cover and refer to the label on the remote control.

Safety Information

Notice of concerns in the U.S.A.
Supplier's Declaration of Conformity
Trade Name: SONY
Model: K-85XR90 / K-85XR90C / K-75XR90 / K-75XR90C / K-65XR90 / K-65XR90C
Responsible Party: Sony Electronics Inc.
Address: 16535 Via Espirillo, San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

• Refer to the following table for the wall-mount hole pattern.

	a		b		c	
	(mm)		(mm)		(mm)	
K-85XR90 / 85XR90C	400	400	141	141		

