

リモートコマンダー Remote Commander Télécommande 遥控器

RMT-PIBTの前面。1:ランプ、2:フォーカス/ズームボタン、3:リリース/RECボタン、4:AF-ONボタン、5:C1ボタン、6:ストラップ取り付け部、7:ZOOM/FOCUSスイッチ、8:MOVIE/STILLスイッチ、9:LOCKスイッチ、10-⑩/⑪ 電池カバー、11:電池カバー-LOCKツマミ、12:電池カバー-回転ツマミ

スタートガイド/Startup Guide/Guide de démarrage/Guia de inicio/ Einführungsanleitung/Beknopte gids/ Startguide/Guida di avvio/Guia de início/ 入门指南/入門指南

お問合わせ窓口

●各種お問い合わせ(LINEやメールなど)
詳しくは以下のホームページをご覧ください。
https://www.sony.jp/support/inquiry.html

●電話でのお問い合わせ

【使い方相談窓口】
フリーダイヤル:
0120-333-020
携帯電話 一部のIP電話:
050-3754-9577

【修理相談窓口】
フリーダイヤル:
0120-222-330
携帯電話 一部のIP電話:
050-3754-9599

ガイダンスに沿って短縮番号「4 0 2」+「#」を押すと、担当窓口へおつなぎします。

FAX: (共通) 0120-333-389

ソニー株式会社 〒108-0075 東京都港区港南1-7-1

Bluetooth®ワードマークおよびロゴは、Bluetooth SIG, Inc.が所有する登録商標であり、ソニーグループ株式会社はこれらのマークをライセンスに基づいて使用しています。

English

About the manual for this product

This guide describes the necessary preparations to start using the product, basic operations, etc. For details, refer to the "Help Guide" (web manual).

● This unit is Remote Commander which is compatible with the Bluetooth function. For the camera models that can connect to the unit, visit the following website.
https://www.sony.net/dics/p1bt/

● Handle this unit with care to avoid the risk of dropping it or letting it exposed to liquid.

● This unit is designed to be dust and moisture-resistant, but is not waterproof or splash-proof. When you use the product in rainy conditions, do not let the product get wet.

⚠ **WARNING**

Do not ingest battery, chemical burn hazard. This unit contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

● Keep new and used batteries away from children. If the battery cover does not close securely, stop using the product and keep it away from children.

● If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

For Customers in the U.S.A.

For question regarding your product or for the Sony Service Center nearest you, call 1-800-222-SONY (7669).

Supplier's Declaration of Conformity

Trade Name : SONY

Model : RMT-PIBT

Responsible Party : Sony Electronics Inc.

Address : 16535 Via Espirito, San Diego, CA 92127 U.S.A.

Telephone Number : 858-942-2230

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbol for lead (Pb) is added if the battery contains more than 0.004% lead. By ensuring that these products and batteries are disposed of correctly, you will help to prevent potential negative consequences for the environment and human health which could be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the appropriate collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the appropriate collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Inserting the battery

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Pairing the unit with the camera

• The following is an example of a procedure for Sony Interchangeable Lens Digital Cameras and Sony digital still camera. For detailed procedures, refer to the Help Guide.

• Before you start, check that the Remote Commander's LOCK switch is in the position to the opposite of "LOCK."

1 On the camera, select MENU → **(network)** → [Bluetooth Settings] or [Bluetooth] → [Bluetooth Function] → [On].

2 On the camera, select MENU → **(network)** → ([Transfer/Remote] → [Bluetooth Rmt Ctrl]) → [On].

3 On the camera, select MENU → **(network)** → [Bluetooth Settings] or [Bluetooth] → [Pairing].

4 On the Remote Commander, press and hold the Shutter-release/REC button and the + side of the Focus/Zoom button at the same time for at least 7 seconds.

5 When a confirmation message appears on the camera's screen, select [OK].

• **(network)** appears and pairing begins.

• When pairing is complete, [Paired.] appears.

Note

• If pairing fails, the Remote Commander's indicator flashes rapidly. If this happens, redo the procedure from the beginning.

• In the following situations, pair the Remote Commander and the camera again.

– When using the Remote Commander to operate a different camera (After having connected the Remote Commander with a different camera, you also must pair the Remote Commander and the original camera again when connecting to the original camera.)

– When the camera's network settings have been reset

• If the Remote Commander is not used for a period of time during a Bluetooth connection. **(no Bluetooth connection)** may appear on the camera's screen.

Confirming the setting on the camera

On the camera, select MENU → **(network)** → ([Transfer/Remote] → [Bluetooth Rmt Ctrl]) and make sure that [On] is selected.

Shooting

Use the Remote Commander to operate the camera for shooting. For details, also refer to the Help Guide.

1 Toggle the Remote Commander's MOVIE/STILL switch.

• To shoot a still image: STILL

• To shoot a video: MOVIE

2 Press the Shutter-release/REC button.

• Press the button halfway down to focus, and then press it all the way down to shoot a still image.

Specifications

Dimensions (W/H/D) (Approx.):

33 mm × 116.5 mm × 15.1 mm (1 5/16 in. × 4 5/8 in. × 5/8 in.)

Mass (Approx.):

35 g (1.3 oz) (Without the battery)

Included Items:

Remote Commander (1), Lithium coin cell battery (CR2032) (1), Set of printed documentation

Design and specifications are subject to change without notice.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation is under license.

Français

À propos du manuel de ce produit

Ce manuel présente les étapes nécessaires au démarrage de ce produit, les opérations générales, etc. Pour plus d'informations, reportez-vous au « Guide d'aide » (manuel en ligne).

« Guide d'aide » (Manuel en ligne)

https://rd1.sony.net/help/ilc/r1820/h_zz/

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

7 ZOOM/FOCUS switch

8 MOVIE/STILL switch

9 LOCK switch

10-⑩/⑪ Battery cover

11 Battery cover locking latch

12 Battery cover turning knob

Insert the battery so that the + terminal is facing upward. (+ on the battery chamber indicates the direction of the battery.) To close the battery cover, turn the battery cover toward "CLOSE" until it stops.

Identifying the parts

1 Indicator

2 Focus/Zoom button

3 Shutter-release/REC button

4 AF-ON button

5 C1 button

6 Strap holder

