


Instruction Sheet
Monitor Mount Series
MMP

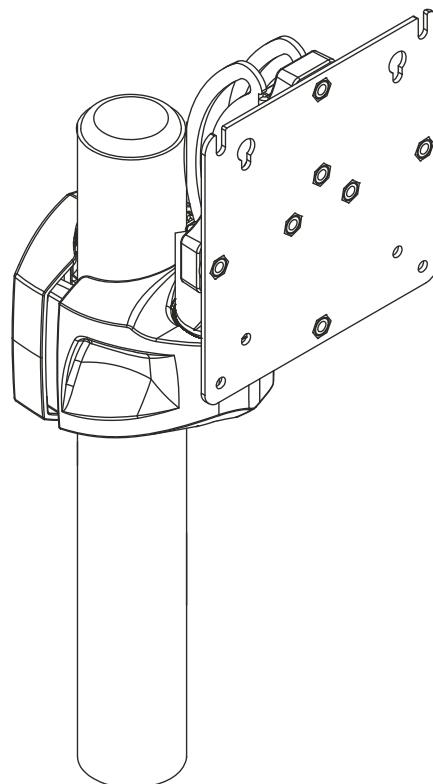

THANK YOU

Thank you for purchasing an MMP Monitor Mount. Please read these instructions thoroughly before installing or assembling this product.

PRODUCT FEATURES

- Weight Capacity = 5 lbs. minimum, 40 lbs. maximum

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Heed all warnings.
- Clean only with dry cloth.
- Keep these instructions.
- Follow all instructions.
- Only use attachments/accessories specified by the manufacturer.



DANGER HAZARDOUS VOLTAGE: The lightning flash with the arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



WARNING: A warning alerts you to a situation that could result in serious personal injury or death.



CAUTION: A caution alerts you to a situation that may result in minor personal injury or damage to the product and/or property.

NOTE: A note is used to highlight procedures pertaining to the installation, operation, or maintenance of the product.



WARNING: Failure to read, understand and follow the following information can result in serious personal injury, damage to the equipment or voiding of the warranty. It is the responsibility of the Installer/User to ensure that this product is loaded according to specifications.



WARNING: Exceeding the weight capacity may result in personal injury or equipment damage. The combined weight of all components attached to the mount must not exceed weights listed on page 3.



WARNING: Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on the child.



WARNING: Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.



WARNING: Be aware of pinch points and do not place fingers in between moving parts.



WARNING: Use this product for its intended use and only use attachments recommended by the manufacturer.



WARNING: Do not use a damaged product. Return damaged products to a qualified service center for repair.



 
WARNING: Not intended for outdoor use.

INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ

- Lire ces instructions.
- Respectez tous les avertissements.
- Conservez ces instructions.
- Suivez toutes les instructions.
- Nettoyer uniquement avec un chiffon sec.
- N'utilisez que des accessoires spécifiés par le fabricant.



DANGER TENSION DANGEREUSE: Le symbole de la pointe de flèche, dans un triangle équilatéral, est destiné à alerter l'utilisateur sur la présence de tension dangereuse non isolée dans l'enceinte du produit qui peut être d'une ampleur suffisante pour constituer un risque d'électrocution.



AVERTISSEMENT: Un avertissement vous avertit d'une situation pouvant entraîner des blessures graves ou la mort.



ATTENTION: Une attention vous avertit d'une situation pouvant entraîner des blessures mineures ou des dommages au produit et/ou à la propriété.

REMARQUE: Une remarque est utilisée pour mettre en évidence les procédures relatives à l'installation, au fonctionnement ou à l'entretien du produit.



AVERTISSEMENT: Refus de lire, comprendre et suivre la renseignements suivants peut traduire par de graves blessures, des dommages à l'équipement ou invalider la garantie. Il est la responsabilité de l'installateur / utilisateur de s'assurer que ce produit est chargé conformément aux spécifications.



AVERTISSEMENT: Dépasser la capacité de poids peut entraîner des blessures ou des dommages matériels. Le poids combiné de tous les composants reliés au support de montage ne doit pas dépasser les grammages indiqués à la page 3.



AVERTISSEMENT: Des blessures graves ou mortelles peuvent survenir si un enfant grimpe sur le meuble d'un équipement audio ou vidéo. Une télécommande ou un jouet placé sur le meuble peut encourager un enfant à grimper dessus et conduire à la chute du meuble sur ce dernier.



AVERTISSEMENT: Le transfert d'un équipement audio ou vidéo sur un meuble qui n'a pas été spécialement conçu pour soutenir un équipement audio ou vidéo peut entraîner l'effondrement ou le basculement du meuble sur un enfant et provoquer des blessures graves ou mortelles.



AVERTISSEMENT: Soyez conscient des points de pincement et de ne pas placer les doigts entre les pièces mobiles.



AVERTISSEMENT: Utilisez ce produit pour son utilisation prévue et utiliser uniquement les accessoires recommandés par le fabricant.



AVERTISSEMENT: Ne pas utiliser un produit endommagé. Retour produits endommagés à un centre de service qualifié pour la réparation.



AVERTISSEMENT: Non destiné à une utilisation en extérieur.

WEIGHT RATINGS

Model Number	Each Display	Maximum Total Rated Load
MM-P-100-BK	40 lbs. (18.14 kg)	40 lbs. (18.14 kg)



WARNING: This product is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than the maximum weights indicated may result in instability causing possible injury. Total equipment weight must not exceed the amounts specified.

AVERTISSEMENT: Cette produit est conçu pour être utilisé uniquement avec les produits et les poids maximum indiqué. uniquement avec les produits et les poids maximaux indiqués. En cas d'utilisation avec d'autres produits ou des produits plus lourds que le poids maximal indiqué, le chariot peut devenir instable et causer des blessures. Le poids total de l'équipement ne doit pas dépasser les quantités spécifiées.

SPECIFICATIONS

Reference the technical specifications at www.middleatlantic.com for further information.

REQUIRED TOOLS

- #2 Phillips Head Screwdriver
- Standard Socket Set
- (Included) Hex keys: 1/8", 5/32", 3/16"



WARNING: Use tools with caution and follow all necessary safety protocols.

AVERTISSEMENT: Utiliser des outils avec prudence et suivre tous les protocoles de sécurité nécessaires.

SUPPLIED COMPONENTS AND HARDWARE


 



Plate (A x 2)




Pole Clamp (B)

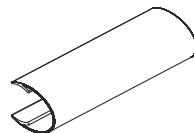

 
Cable Sheath (C)




14" Pole
(G)

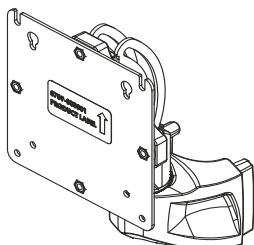

Display Assembly (D)

 

 1/4-20 x 1-1/2"
Button Head Screw
(E x 4)




3/8-16 x 3"
Hex Head Screw
(F)



1/8"
Hex Key
(H)



5/32"
Hex Key
(J)

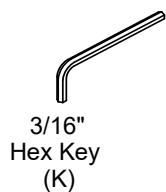


3/16"
Hex Key
(K)



M4x4 Pan
Head Screw
(L)



 M4x10 Pan
Head Screw
(M x 4)



M4x20 Pan
Head Screw
(N x 4)



10-32 x 3/8"
Button Head Screw
(P)



Nylon Spacer
(Q x 4)

INTRODUCTION

NOTE: Follow all topics in their order of appearance.

MOUNTING POLE TO SURFACE

NOTE: The MM-P-100 may be mounted to a surface with a maximum thickness of 1.65 in. (41.9mm). (See Figure A)

NOTE: The MM-P-100 may be mounted to a surface with a mounting hole size ranging from 0.4 to 1.0 in. (10.2 to 25.4mm). Alternatively, it may be mounted using a larger grommet hole (inner grommet cover may need to be removed) where cables can be routed into the hole behind the pole. (See Figure A)

1. Insert 3/8-16 x 3" hex head screw (F) through one plate (A), up through the mounting surface, through the second plate (A) and tighten into the threaded hole in the bottom of the 14" pole (G). (See Figure A)

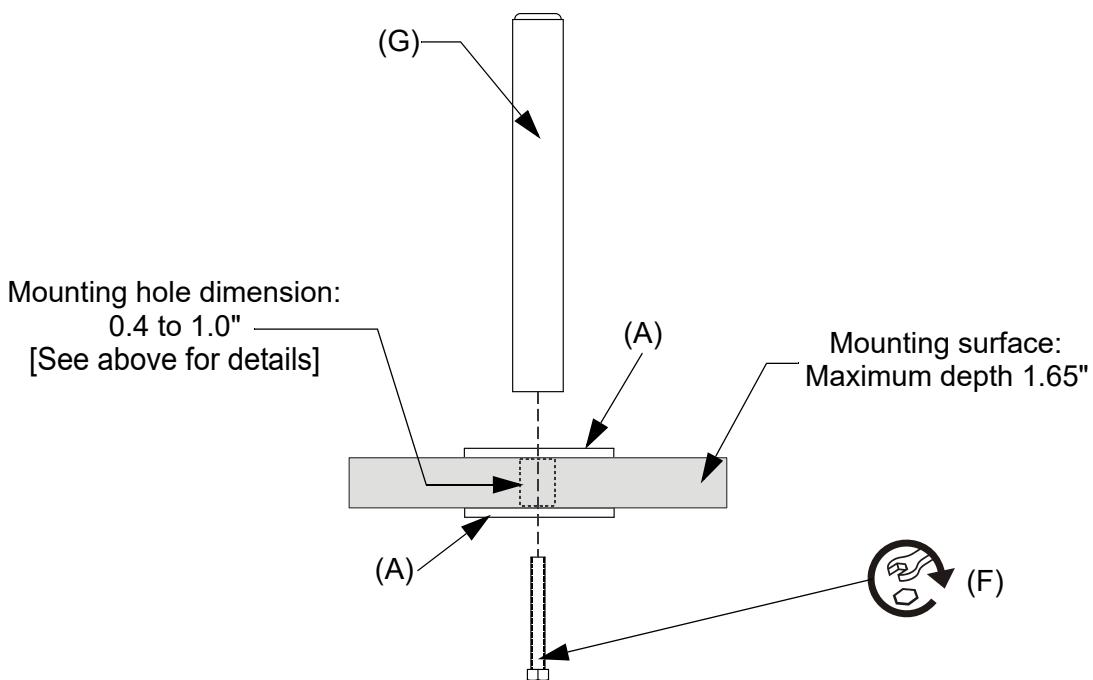


FIGURE A

CONNECTING DISPLAY MOUNT ASSEMBLY TO POLE

1. Determine approximate location for mount keeping in mind display size, extension, height adjustment requirements.
2. Place display assembly (D) against pole (G) with pole clamp (B) on opposite side of pole. (See Figure B)
3. Using 5/32" hex key (J) and four 1/4-20 x 1-1/2" button head cap screws (E), loosely attach display assembly to pole clamp (B). (See Figure B)
4. Position mount at desired height and orientation.
5. Equally tighten screws against display assembly and the pole clamp.


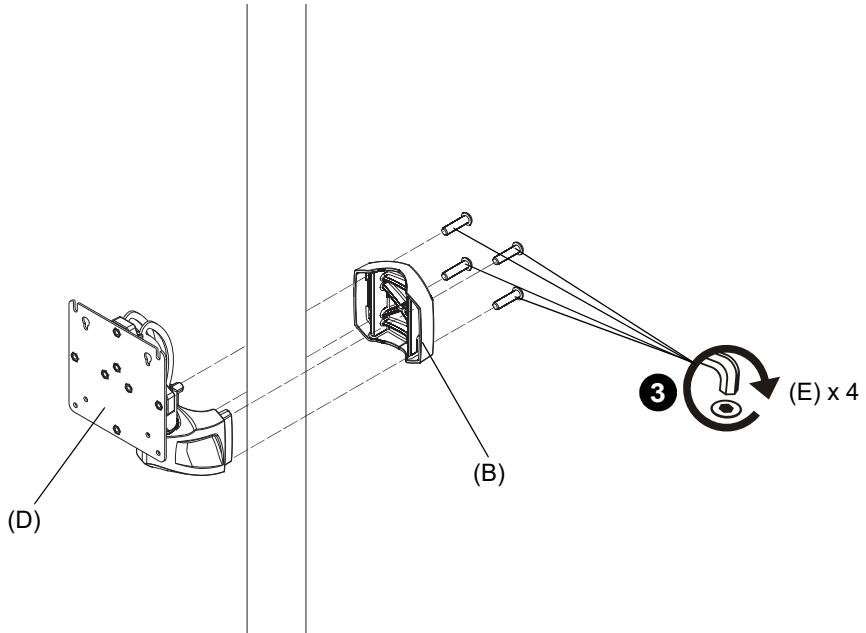


FIGURE B

DISPLAY INSTALLATION

1. Remove quick release faceplate from mount by pulling quick release lever and sliding faceplate off mount.
2. Carefully place display face down on protective surface. (See Figure C)

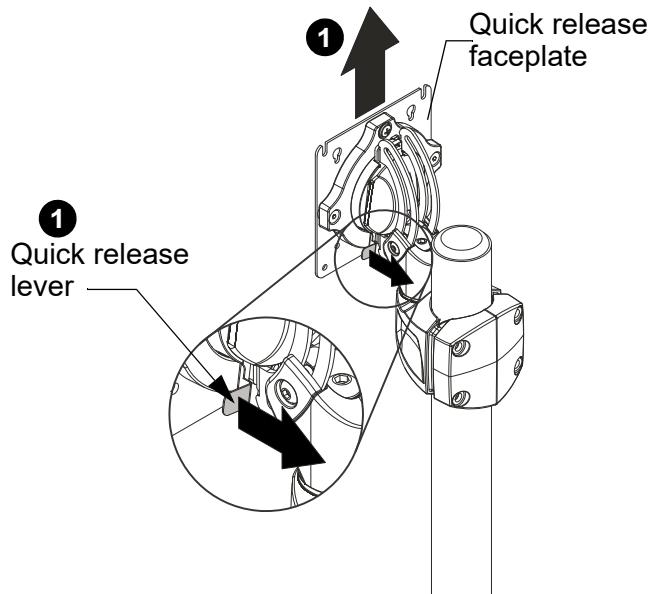

3. Connect faceplate to display.

For flush mounting hole installation:

- Using Phillips screwdriver, carefully install four M4x10mm screws (M) through corresponding holes on faceplate and into the mounting holes on the display. (See Figure D)

For recessed mounting hole installation:

- Place four spacers (Q) on top of mounting holes on back of display. (See Figure E)
- Using Phillips screwdriver, carefully install four M4x20mm screws (N) through corresponding holes on faceplate, spacers (Q) and into the mounting holes on the display. (See Figure E)

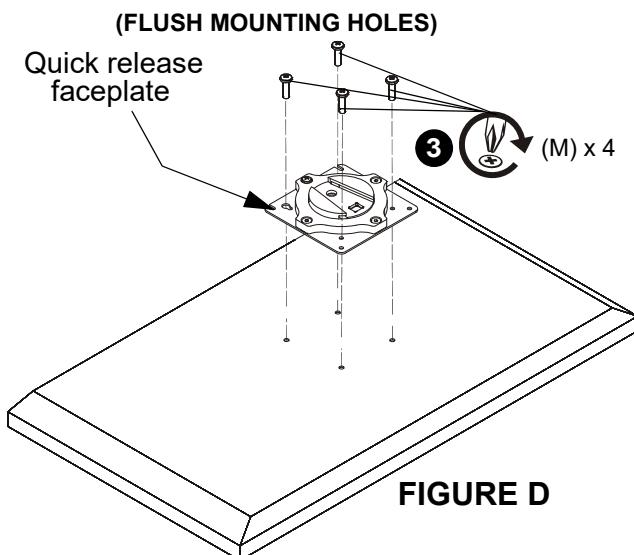


FIGURE D

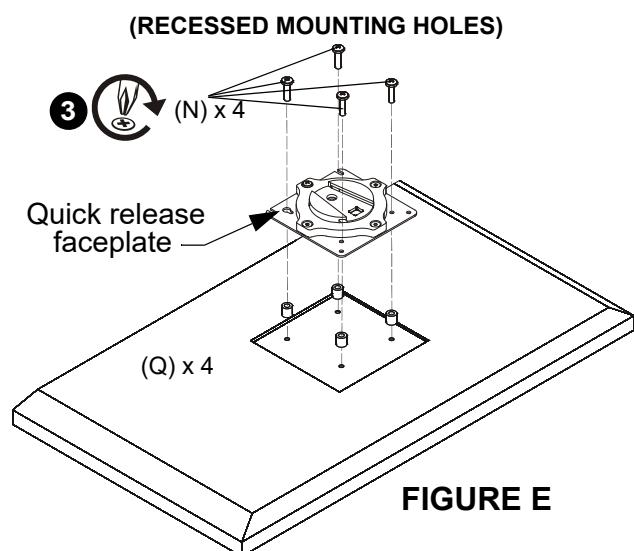


FIGURE E

4. Position display with faceplate attached above mount.
5. Slide faceplate onto mounting head until quick release tab clicks into place. (See Figure F)
6. Run cables down the pole and cover with the cable sheath (C).

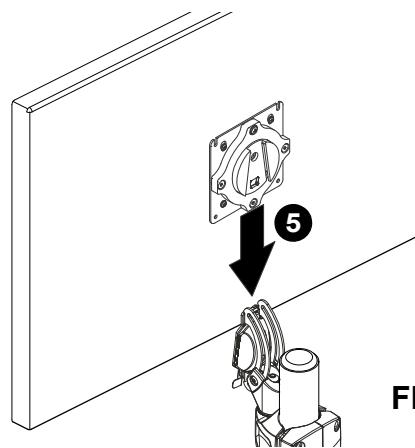


FIGURE F

ADJUSTMENTS

Pitch Adjustment

1. Adjust pitch to desired tilt position. (See Figure G)
2. Adjust pitch tension screw to change the adjustment tension. (See Figure G)

Pivot Adjustment

3. Adjust pivot position as desired. (See Figure G)
4. Use 3/16" hex key (K) to adjust pivot point tension screws to change pivot adjustment tension. (See Figure G)
5. The monitor may be adjusted 90 degrees in either direction in order to provide a portrait view of the monitor. (See Figure G)
6. Use 3/16" hex key (K) to adjust rotational adjustment screw to adjust rotational tension. (See Figure G)

Rotational Adjustment

NOTE: (Optional) Rotational adjustment may be locked by installing one 10-32 x 3/8" button head screw (P) as the rotational locking screw into back of faceplate. (See Figure H)

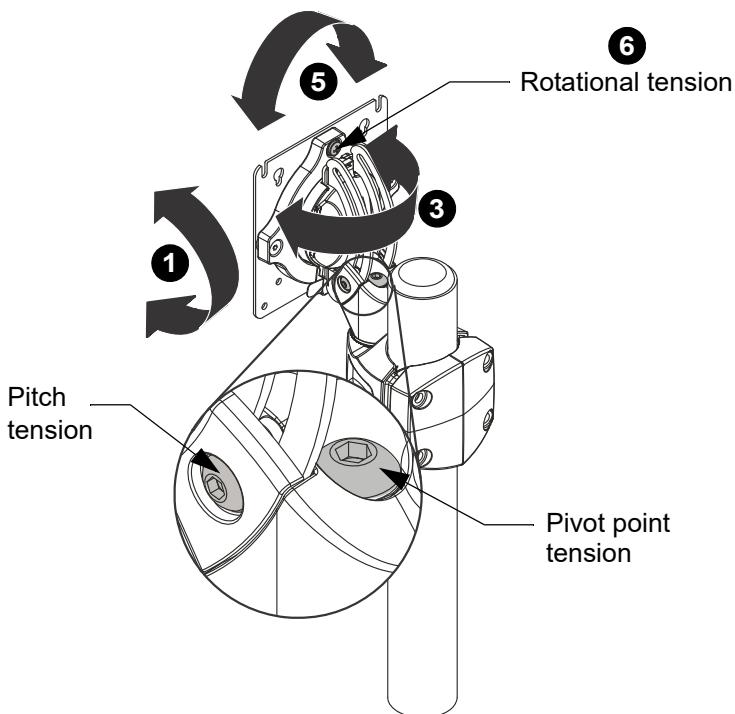


FIGURE G

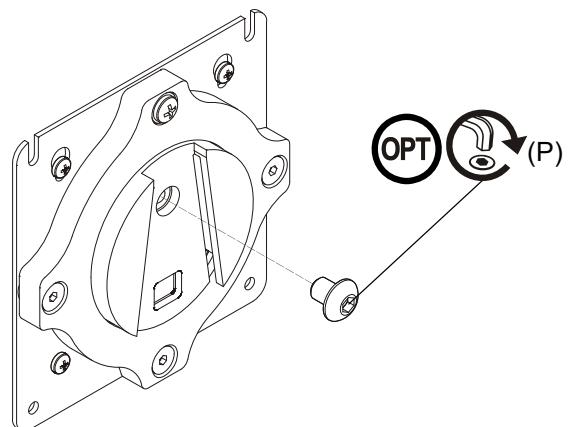


FIGURE H

Display Removal



WARNING: Only remove display from mount when the display can be lifted up from the mount! DO NOT remove display unless the display is in the upright position! (See Figure I)

1. Make sure display is in the upright position.
2. Remove quick release faceplate from mount by pulling quick release lever and sliding faceplate up and off the mount. (See Figure I)

(OPTIONAL) Display Removal Security Screw

3. In order to prevent display from being easily removed from mount using the quick release lever, install M4x4mm Phillips screw (L) into lower hole on back of faceplate. (See Figure J)

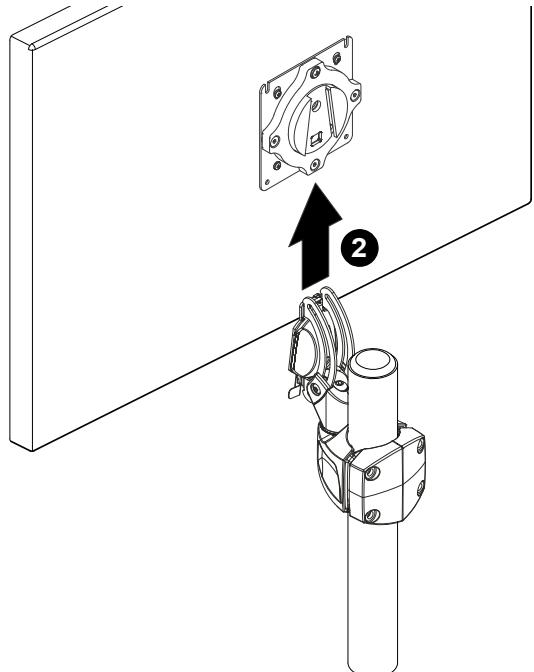


FIGURE I

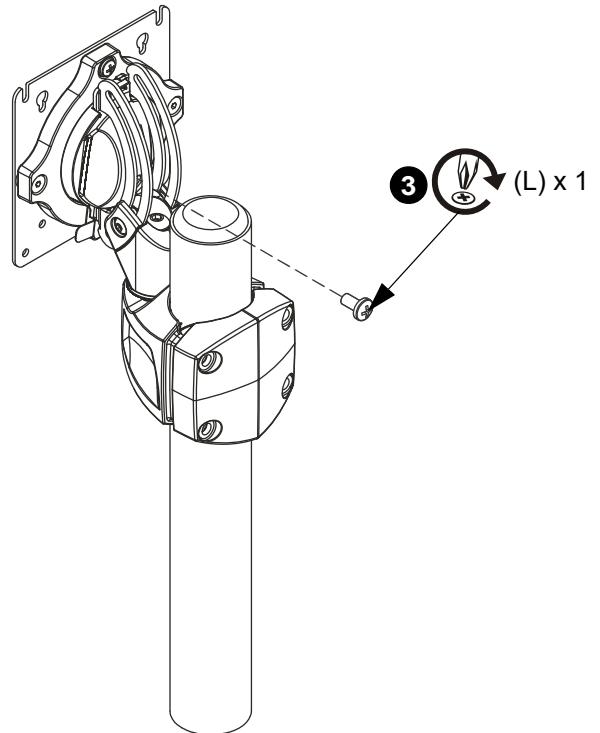


FIGURE J

WARRANTY

For warranty information, refer to <http://www.middleatlantic.com/company/about-us.aspx#warranty>

Corporate Headquarters

Voice: 973-839-1011 - Fax: 973-839-1976 - International Voice: +1 973-839-8821 -
Fax: +1 973-839-4982 - www.middleatlantic.com - info@middleatlantic.com

Middle Atlantic Canada

Voice: 613-836-2501 - Fax: 613-836-2690 - ca.middleatlantic.com -
customerservicecanada@middleatlantic.ca

Middle Atlantic EMEA Technical Support

Voice: +31 (0) 495 726002 - av.emea.middleatlantic.support@legrand.com

Factory Distribution

United States: New Jersey, California, Illinois - Canada: Ontario - The Netherlands: Weert

At Middle Atlantic Products we are always listening. Your comments are welcome.

Middle Atlantic Products is an ISO 9001 and ISO 14001 Registered Company.