


Ramp AR9000RAMP Installation

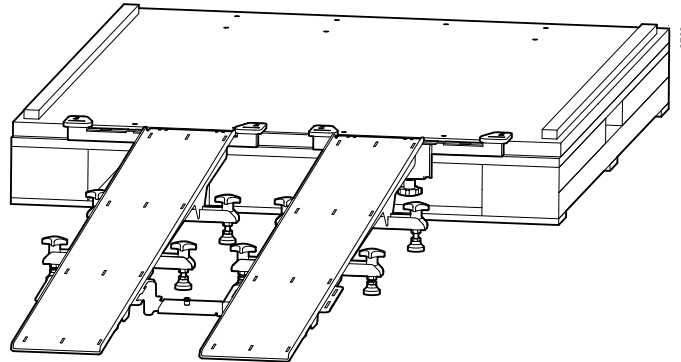

Install the ramp



⚠ WARNING

TIP HAZARD


In laboratory testing, the ramp withstood 1000 uses. Before each use, inspect the ramp for damage that may prevent the load from rolling smoothly (for example, broken leveling feet, bent attachments, or warping of the ramp surface). If the ramp is damaged, replace it. Do not use a damaged ramp.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


NOTE: See the unpacking instructions included with your equipment before you install the ramp.

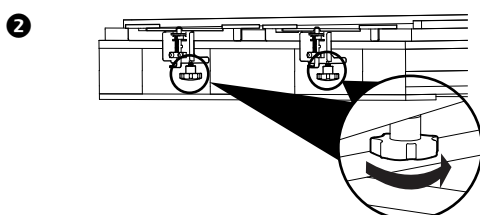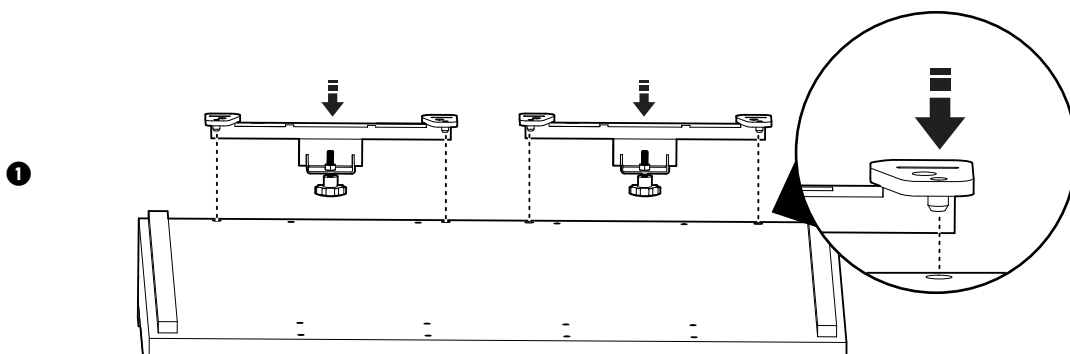


Or

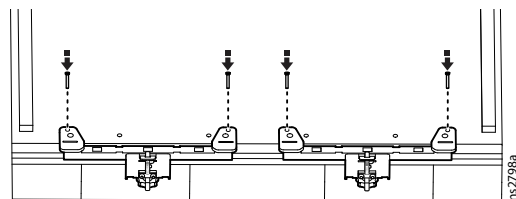


3 600 mm (24 in) width

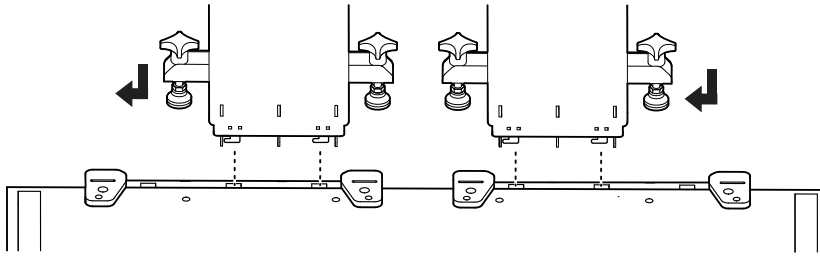


750 or 800 mm (30 or 31 in) width

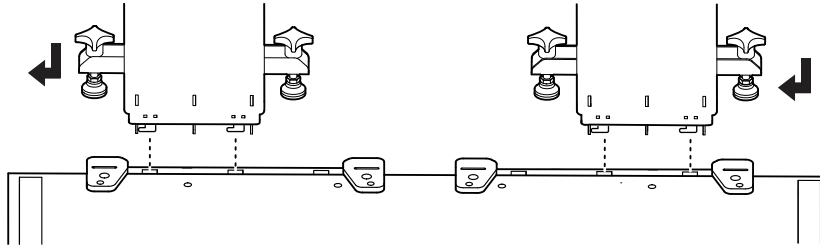



4 600 mm (24 in) width

 


750 or 800 mm (30 or 31 in) width

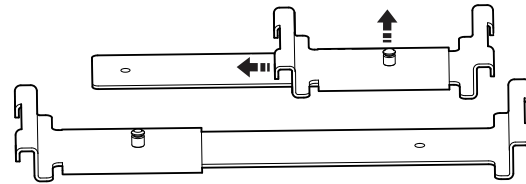


5 600 mm (24 in) width

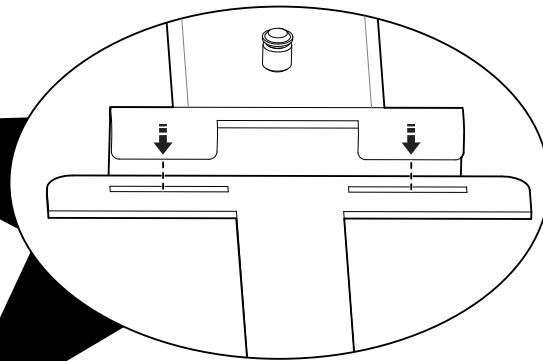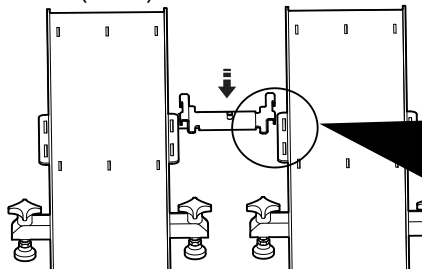

750 or 800 mm (30 or 31 in) width

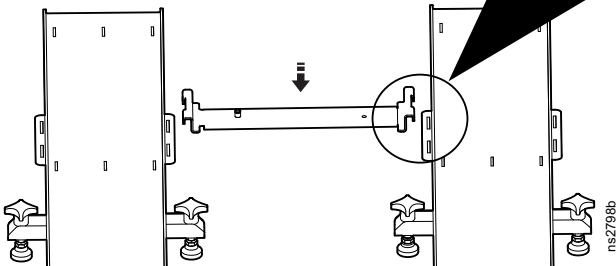

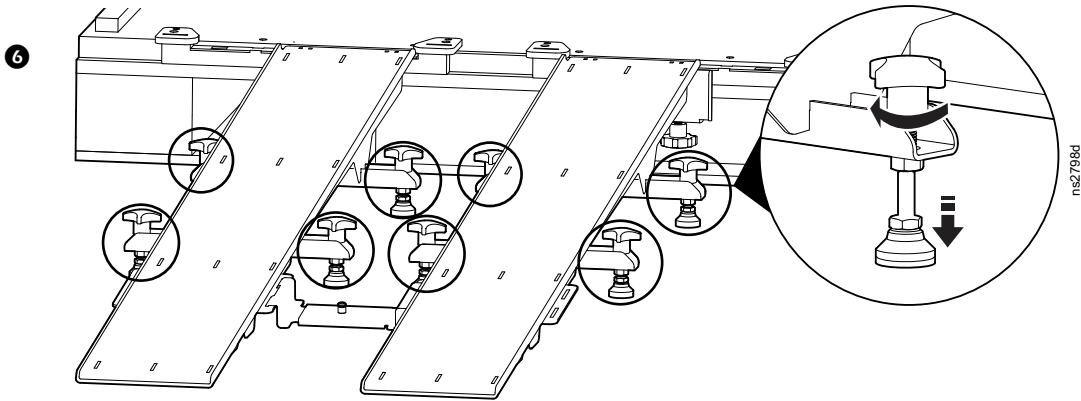



⚠ WARNING

TIP HAZARD



Lower the support feet so that they **barely** touch the floor. Ensure the end of the ramp does not lift off the floor.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


Uninstall the ramp

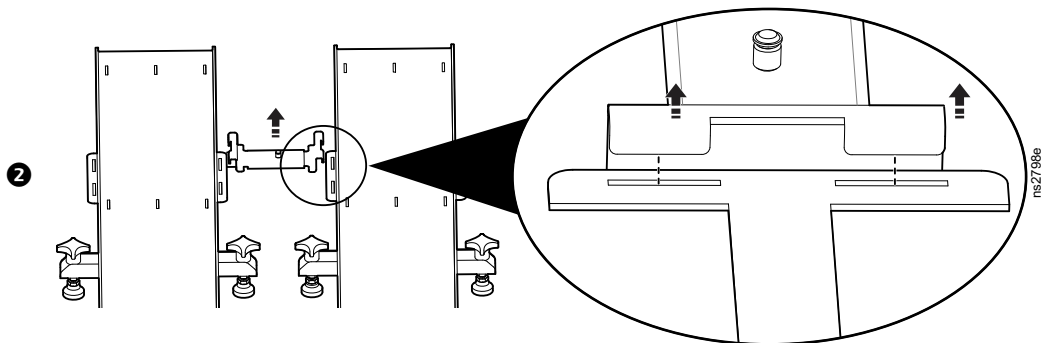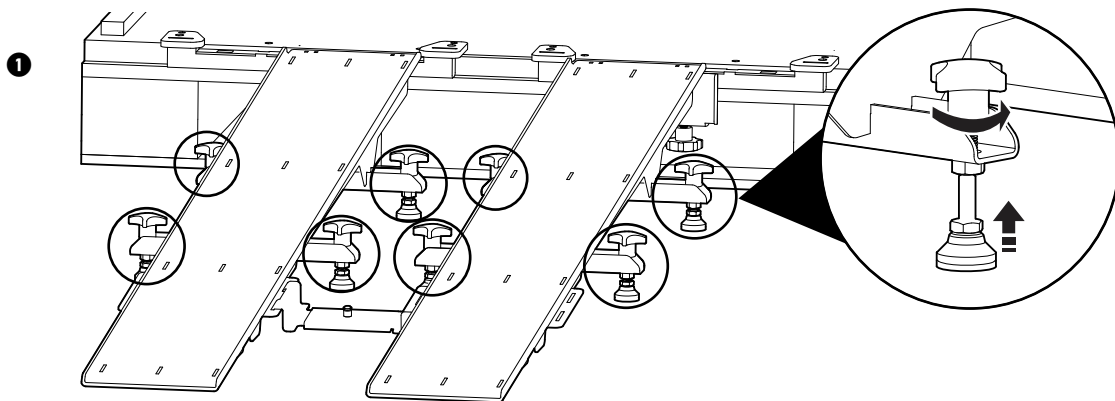


3

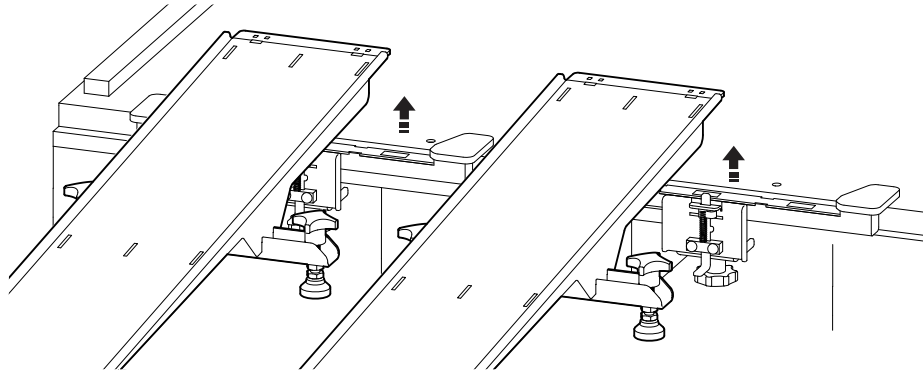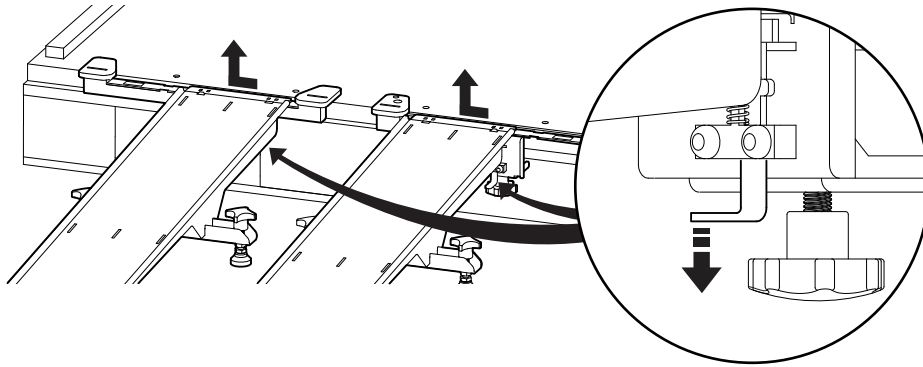


4

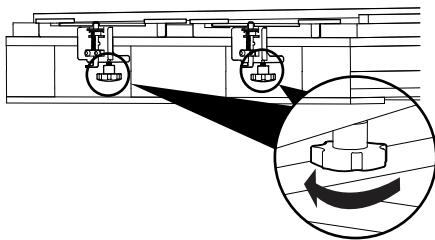

Or

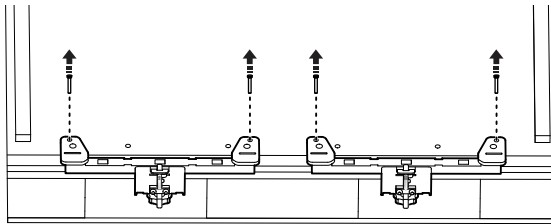

5

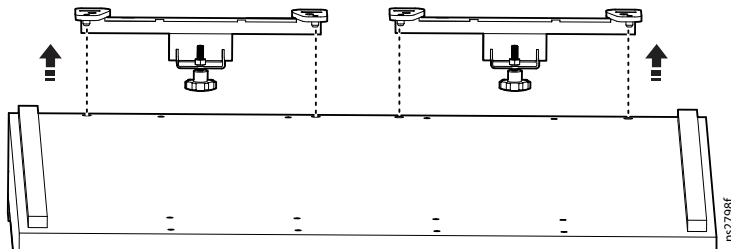

Customer support and warranty information is available at www.apc.com.

© 2018 Schneider Electric. All Rights Reserved.

990-5908-001
5/2018