



T1618100 Open Frame Transformer

Specification Chart:


Model #	Input (Primary)	Output (Secondary)
T1618100	115VAC, 50/60Hz, 1A	16VAC/100VA (6.25A) or 18VAC/100VA (5.5A)

Installation Instructions:


1. Mount transformer in the desired location/enclosure (*refer to Transformer Drawing and Dimensions below*).
2. Connect AC power 115VAC, 50/60Hz to primary leads (black and white) (*refer to Wiring Configuration below*).
3. Measure output voltage across the secondary leads before connecting devices (*refer to Wiring Configuration below*).
This helps avoiding potential damage.
 - Yellow and Brown for 16VAC (open circuit voltage @ 115VAC approx. 16.6VAC).
 - Black and Brown for 18VAC (open circuit voltage @ 115VAC approx. 18.8VAC).
4. Connect 16VAC device(s) to Yellow and Brown leads or 18VAC device(s) to Black and Brown leads (*refer to Wiring Configuration below*).

WARNING: This installation should be made by qualified service personnel and should conform to the National Electrical Code and all local codes.

Wiring Configuration:

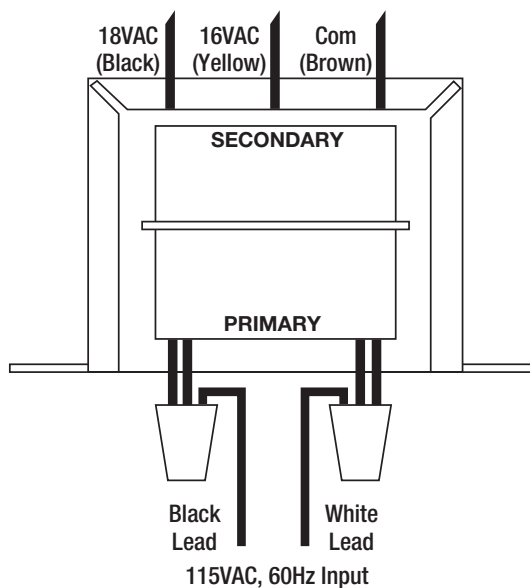

Transformer Drawing and Dimensions:

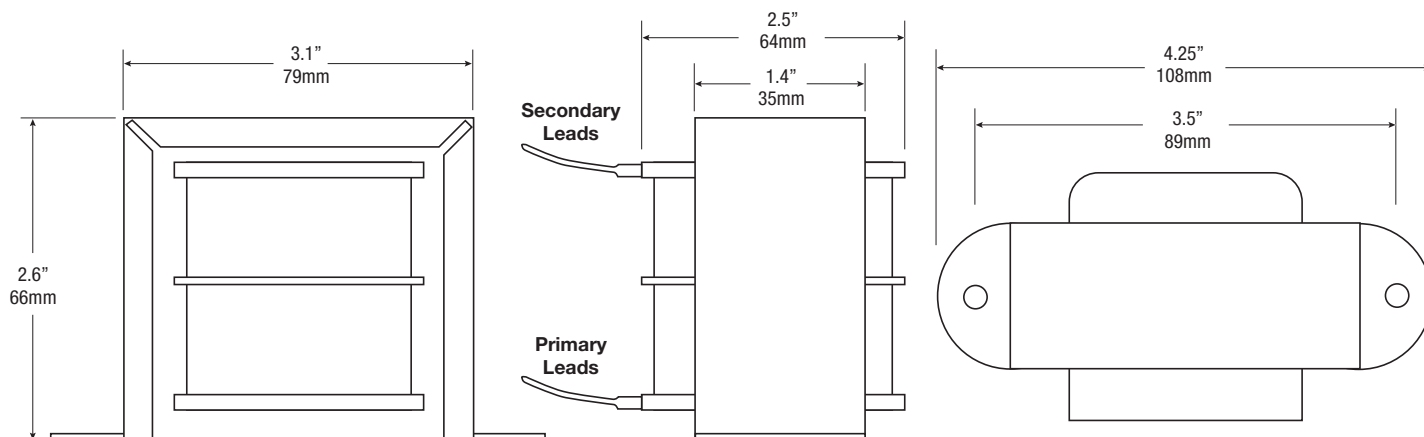

Altronix is not responsible for any typographical errors. Product specifications are subject to change without notice.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056
website: www.altronix.com | e-mail: info@altronix.com
IIT1618100 - Rev. 071318

I07U

