


Mounting for UL Installations

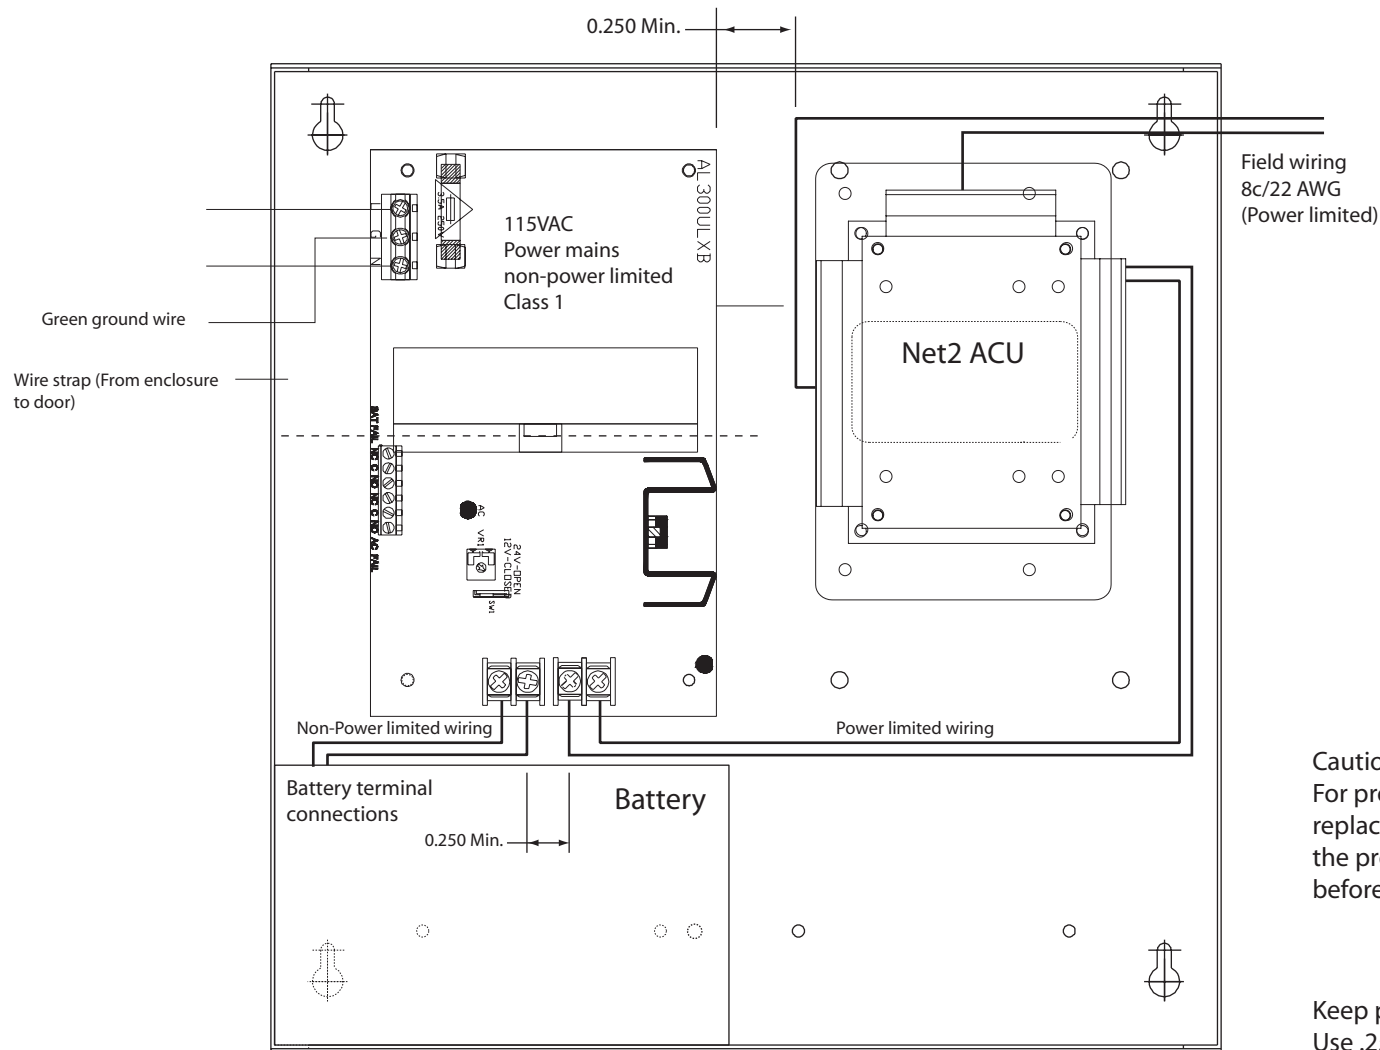

Caution: De-energize unit prior to servicing or ACU installation. For protection against risk of electric shock and fire hazard replace fuse with the same type and rating, 3.5A, 250V. Replace the protective cover on the fuse of the AL300ULXB board, before energizing the unit. Do not expose to rain or moisture.

Keep power limited wiring separate from non-power limited. Use .25" spacing.

	Description: Net2 in AL300ULX Wiring diagram				
	Part No. ins-30101-US	Unit: INCHES	Scale: NOT TO SCALE	A4	
Drawn by: M.POTTER	1	Original	07/08/08		
	Issue	Description	Date		