



**WILSONPRO™**  
A Wilson Electronics Brand



# ENTERPRISE 4330

In-Building Cell Signal Amplifier with  
Channelization Technology



## Installation Guide

**NEED HELP?**



wilsonpro.com



866.294.1660

---

# Index

Package Contents .....	1
About The Enterprise 4330 .....	2
Features .....	4
Installation Diagram .....	5
Menu System .....	10
WilsonPro Cloud .....	20
Local Amplifier Configuration Utility .....	34
Troubleshooting Local Amplifier Configuration Utility .....	41
Safety Guidelines .....	42
Specifications .....	44
Warranty .....	45

---

# Package Contents

## Enterprise 4330 SKU 462075



Enterprise 4330  
Amplifier  
(460075)



Wide Band  
Directional Antenna  
(314411)



Dome Antennas  
(qty. 4)  
(304412)



30 m. (100 ft.)  
Wilson400 Cable (qty. 5)  
(952300)



60 cm. (2 ft.)  
Wilson400 Cable  
(952302)



50 Ohm Lightning  
Surge Protector  
(859902)

## Enterprise 4330 SKU 463075



Enterprise 4330  
Amplifier  
(461075)



Wide Band  
Directional Antenna  
(314411)



Dome Antennas  
(qty. 4)  
(304412)



30 m. (100 ft.)  
Wilson400 Cable (qty. 5)  
(952300)



60 cm. (2 ft.)  
Wilson400 Cable  
(952302)



50 Ohm Lightning  
Surge Protector  
(859902)

# Enterprise 4330

In-Building Cell Signal Amplifier with Channelization Technology

Band Channelization	
Filter	Sub-Blocks
Band 25 Enable All	A D E F G C
Band 4 Enable All	A B C D E F
Band 5 Enable All	A B
Band 12 Enable All	A B C
Band 13 Enable All	C

Specific sub-blocks within a band can be selected (filtered) for amplification, if desired. Filters may be configured either through the LACU or via WilsonPro Cloud remote internet management.

ENTERPRISE 4330

Ethernet Modem Cloud Antenna

Antenna Config: Split Mode


1: Band 5  
2: Band 4 / Band 25  
3: Band 12 / Band 13

Antennas can be configured by using the Local Amp Utility from an Ethernet-connected laptop

Frequency-specific “split mode” option, facilitating separate outdoor antennas for different bands, resulting in improved indoor coverage.



Remote system monitoring. Connects to WilsonPro Cloud service via internal, pre-activated LTE modem or Ethernet.

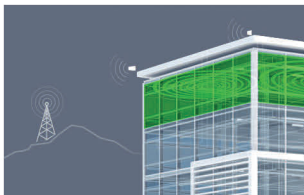

High max uplink power (up to +26 dBm): will reach distant cell towers. High max downlink power (+17 dBm per port) for up to 100,000 sq ft coverage with a strong “5 bar” outside signal.



The Enterprise 4330 cell signal amplifier systems provides significantly enhanced 4G LTE and 5G coverage inside buildings where cell signals may not otherwise penetrate. Installation of an Enterprise 4330 cell signal amplifier system results in fewer dropped calls, improved voice quality, uninterrupted texts, and faster data speeds—along with better audio and video streaming.

For installers and integrators, subscribing to the **WilsonPro Cloud** means you can sell your clients extended service plans, generating recurring revenue streams for your business. And for your clients, the WilsonPro Cloud provides ultra-high system reliability and guaranteed uptime.

The Enterprise 4330 amplifiers connect to the WilsonPro Cloud right out of the box via an LTE connection through the outside antenna, or through a standard hardwired Ethernet port. **The wireless LTE connection** is included in the annual WilsonPro Cloud subscription, so no additional Internet connection is required.

The Enterprise 4330 cell signal amplifier system now incorporates Wilson Electronics' **channelization technology**. Although traditional "wideband mode" is enabled by default, specific sub-blocks within a cell band can be selected for amplification, if desired. This capability proves critical in situations in which a strong outside carrier signal is interfering on a frequency band (a.k.a. "the near far problem"). Filtering can also be essential in installations where only one specific carrier is needed or desired. Filters are selected and changed locally within the local amplifier configuration utility (LACU) or remotely via WilsonPro Cloud, greatly simplifying remote configuration and troubleshooting.

The Enterprise 4330 also incorporates standard WilsonPro Enterprise features such as **split mode** (a.k.a. "Multi-Tower Targeting"), **XDR** (eXtended Dynamic Range: never shuts down due to a strong signal), and an easy-to-use color **LCD screen**. Like all WilsonPro cell Signal amplifiers, the Enterprise 4330 cell signal amplifier systems are universal: they work for all cellular devices, all services, and all U.S. and Canada cell phone carriers, including smaller local and regional providers.

---

# Features



**Channelization Technology:** Specific sub-blocks within a band can be selected (filtered) for amplification, if desired. Filters may be configured either through the local amplifier configuration utility (LACU) or via WilsonPro Cloud remote internet management.



**Cellular Network Scanning:** Provides RSRP (Reference Signal Received Power) and RSRQ (Reference Signal Received Quality) for major cellular carriers in the U.S. and Canada, measured at the indoor antenna ports.



**Extended Dynamic Range (XDR) for continuous connectivity:** XDR lets the Enterprise 4330 system work with an incoming signal and never shut down due to a strong outside signal.



**Choice of Wall-Mount or Rack-Mount Installation:** All indoor and outdoor port(s) are located on top of the amplifier for easy antenna connections, while an exposed mounting flange on each amplifier provides for simple installation.



**Onboard Software for Intelligent Control:** The amplifier is automatically controlled by onboard software, ensuring connectivity throughout large spaces and multi-story buildings. The amplifier will adjust its gain level up or down as required by the conditions of the immediate signal environment.



**Color LCD Touch Screen:** The Enterprise 4330 system utilize a color LCD touch screen, for assessing amplifier performance and viewing amplifier configuration.



**Independently Controlled Ports:** Four independently controlled indoor antenna ports facilitating up to 100,000 sq. ft. of indoor coverage.

---


# Installation Diagram

The Enterprise 4330 supports up to four inside antennas and are capable of operating in traditional **Common Mode**, in which all amplifier cell bands use the same outdoor antenna, or **Split Mode**, in which cell bands use separate outdoor antennas.

## Common Mode

Common mode can be used for an installation in which cell towers for different bands are located in the same direction.


Note: The Enterprise 4330 is configured to common mode by default.

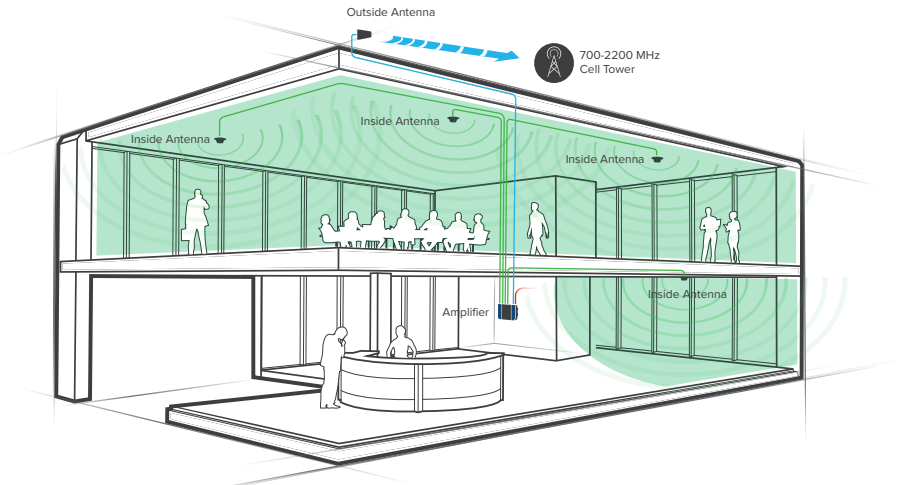

Note: A Wilson Lightning Surge Protector is recommended for all building installations. Make sure the protector is installed outside the building at point of entry connected to a suitable ground and in line between the Outside Antennas and the Signal Amplifier.

## Split Mode

Split mode is advantageous for an installation in which cell towers for different bands are located in different directions. Outdoor directional antennas can be pointed to provide maximum cell coverage for each band.

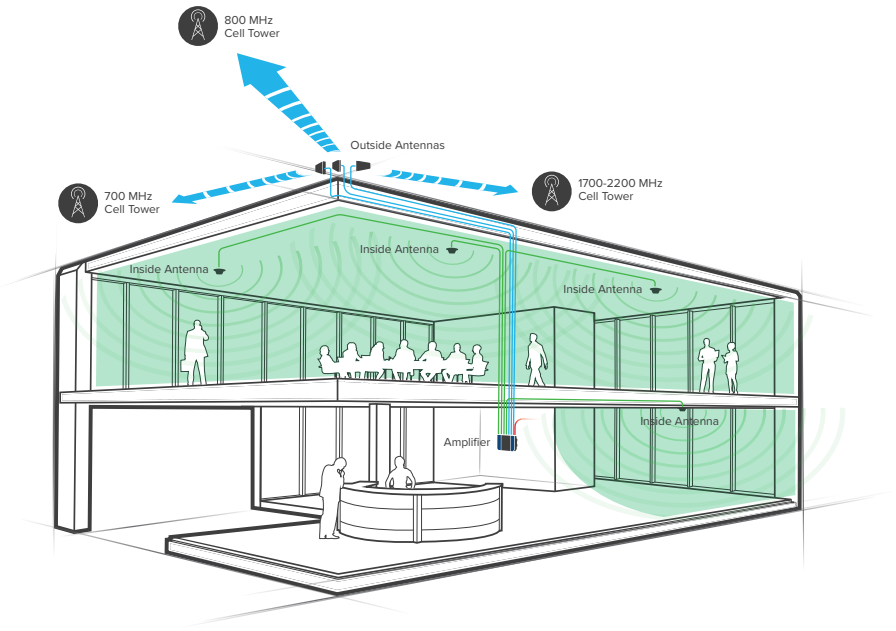




---

# Mounting Specifications

## Wall Mounting Installation (for most situations)

Fasten a sheet of 4'x4'x 3/4" plywood utilizing 4 x 3/16" x 3" toggle bolts with a minimum tensile rating of 35 lbs, then use 4x #12 x 3/4" Pan Head Wood Screws or 1/2" x 2" lag screws to secure the booster to the plywood.

Before assembling and mounting on the wall mount, please reference the below diagram:

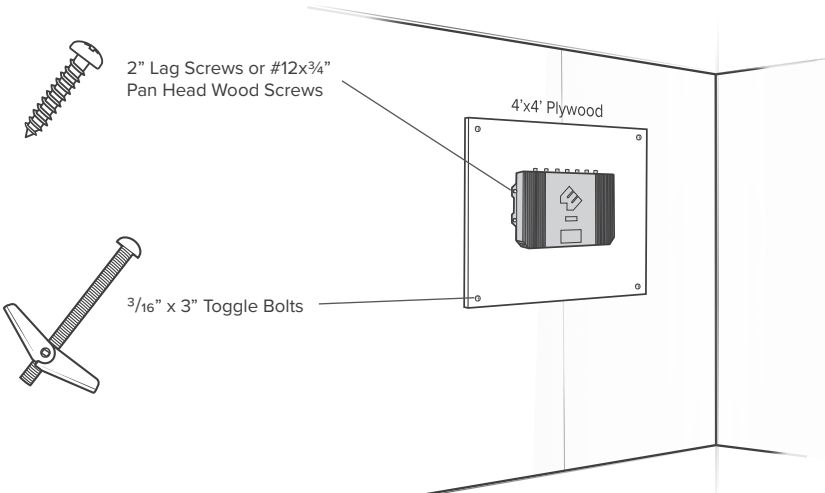

**WARNING:** Proper installation environment to reduce risks related to the environment, the unit must be installed indoors only. It is the consumer's responsibility to ensure that structural engineering requirements for potential seismic activity are met per your local requirements. This may require wall reinforcement. Do not install near sources of high heat or steam or where condensation is likely to occur, such as near air conditioners. Inspect mounting location conditions to ensure proper wall thickness and no signs of moisture or molding, etc. Do not install on a structure that is prone to vibration or movement. The unit must be plugged into an earthed outlet ONLY.


## Rack Mounting Installation

Mount to EIA Standard 19" Server Rack (compliant with EIA-310-D) with 4 standard #10 or #12 cage Screws and Nuts.

Please reference the below diagram:



Standard #10 or #12  
Cage Screws & Nuts

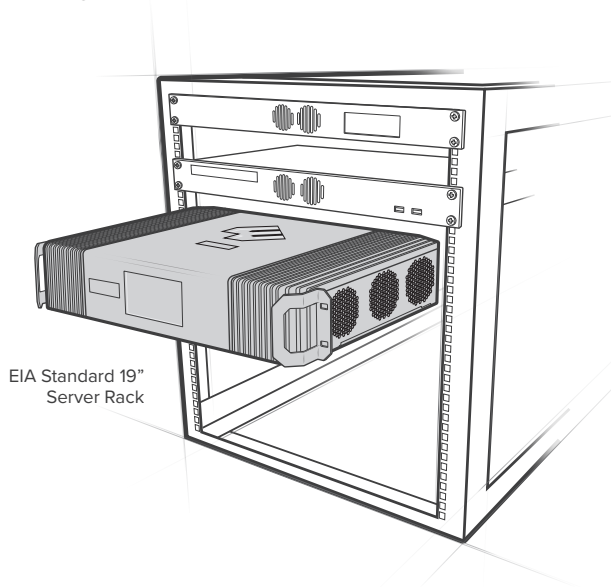

EIA Standard 19"  
Server Rack


**WARNING:** Proper installation environment to reduce risks related to the environment, the unit must be installed indoors only. It is the consumer's responsibility to ensure that structural engineering requirements for potential seismic activity are met per your local requirements. This may require wall reinforcement. Do not install near sources of high heat or steam or where condensation is likely to occur, such as near air conditioners. Do not install on a structure that is prone to vibration or movement. The power supply must be plugged into an earthed outlet ONLY.

---

# Post-Install Setup



The Enterprise 4330 systems are designed with advanced internal programming, which allows it to automatically adjust for a variety of conditions, including the added functionality, alerts, and troubleshooting of an enhanced cloud management and monitoring solution.

Once the AC power cable and antenna cables are connected, see WilsonPro Cloud section to add the amplifier to your account.

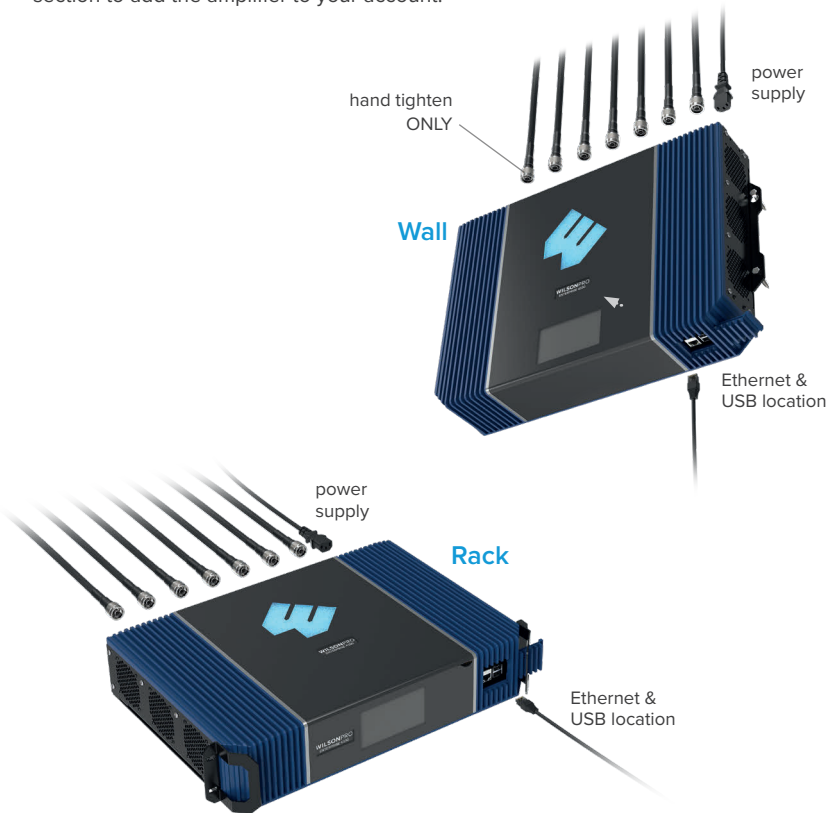

# Menu System

The Enterprise 4330 takes about 3 minutes to boot up. Once boot up is complete, the home screen will appear, showing the amplification and status of each port and band.

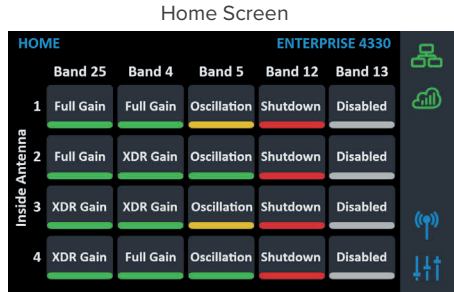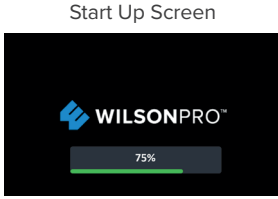

## Band Menu Color Description



**Green** indicates that a band is operating correctly with maximum allowable gain.



**Yellow** indicates band gain reduction because of an oscillation condition. Reposition antennas (increase separation between indoor and outdoor antennas, and point in opposite directions) and then reboot (turn the unit off & on) the Enterprise 4330 system to reactivate the band and maximize performance. When adequate separation is achieved, the yellow lights will return to green upon reboot.

Note: when the light is yellow, the band is operational; however, performance is reduced.

---

(MENU SYSTEM cont.)



**Red** indicates a band has been shut down because of a severe oscillation condition or repeated oscillation. Reposition antennas (increase separation between indoor and outdoor antennas, and point in opposite directions) and then reboot (turn the unit off & on) the Enterprise 4330 system to reactivate the band and maximize performance. When adequate separation is achieved, the red light(s) will return to green upon reboot.



**Gray** indicates band has been disabled.

# Settings Screen

Tap **'Settings Icon'** in the lower right corner to view the Settings Screen.




There are 5 Settings Screens represented by “tabs”. Tap the tab heading to view each Settings Screen. General settings below.

**Note:** Bands and Ports are disabled or enabled from the Cloud or Local Amplifier Configuration Utility only.




(MENU SYSTEM - SETTINGS SCREEN cont.)

Ethernet Settings Tab

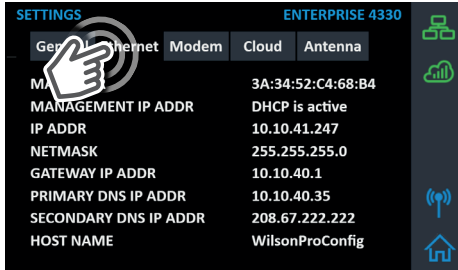


Modem Settings Tab

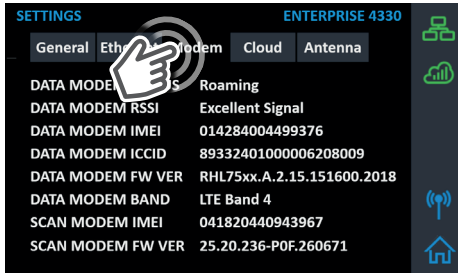

## (MENU SYSTEM - SETTINGS SCREEN cont.)


### Cloud Communication Settings Tab

**Note:** The Reset Local Comm button is used in case the user has configured the amplifier such that the Local Amplifier Configuration Utility (LACU) is not accessible, e.g., if the communication preferences are set to “LTE Only” or the LACU password needs to be reset. The “reset” function will reenable Ethernet access and also reset the login credentials for LACU to factory defaults.

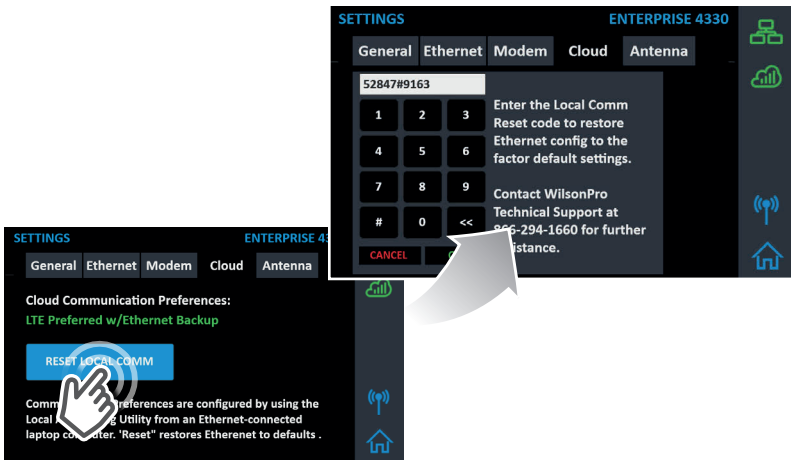

### Antenna Settings Tab

Common Mode is configured from the Local Amplifier Configuration Utility and should be set when using a single Outside Antenna.

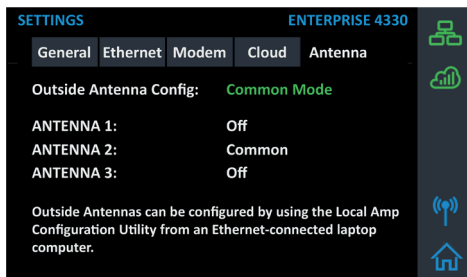





(MENU SYSTEM - SETTINGS SCREEN cont.)

### Split-Mode Configuration

Split Mode is configured from the Local Amplifier Configuration Utility and should be set when using separate Outside Antennas for Band 4/25, Band 5, and Band 12/13.

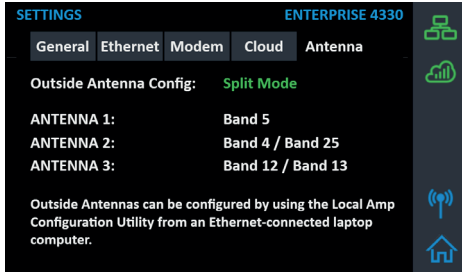


To go back to the Home Screen, tap on the **Home Icon** (in the lower right corner).

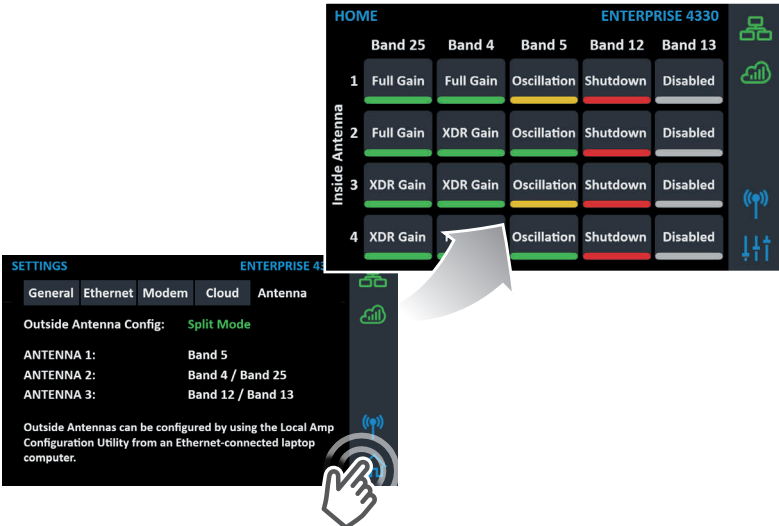


# Band-Status Screens

To view specific band information (such as the strength of the received uplink & down-link signal, outside signal strength, and amplifier gain status) tap the desired band on the home screen.

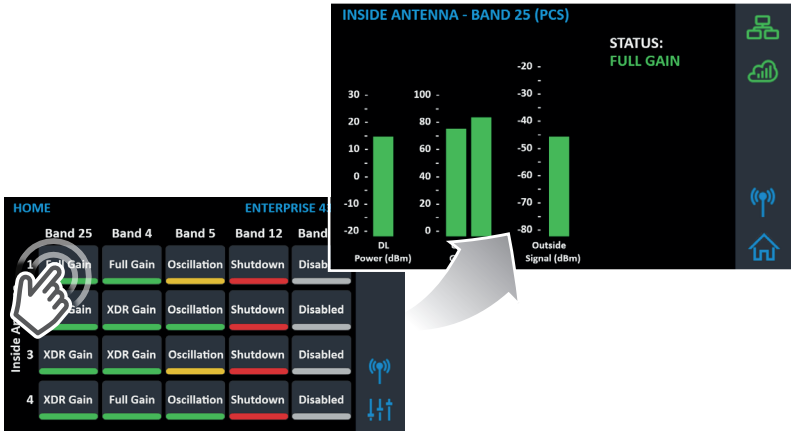


## Oscillation Example

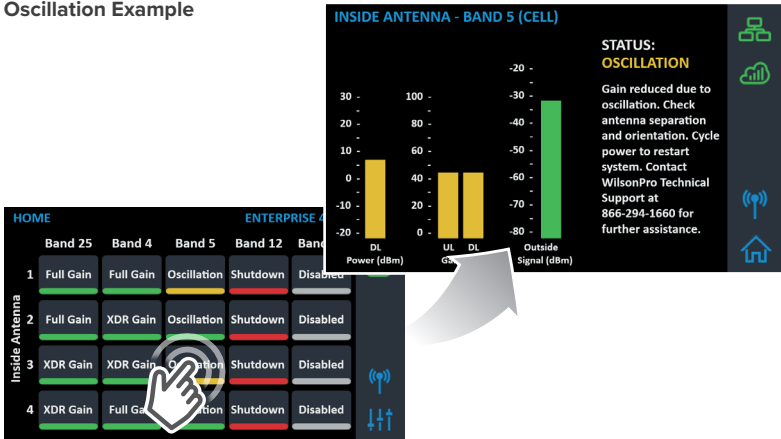

**Note:** If the reduced gain due to oscillation is greater than or equal to 60dB, the condition will be displayed as Green and no action is necessary.

(MENU SYSTEM - BAND-STATUS SCREENS cont.)

Shutdown Example

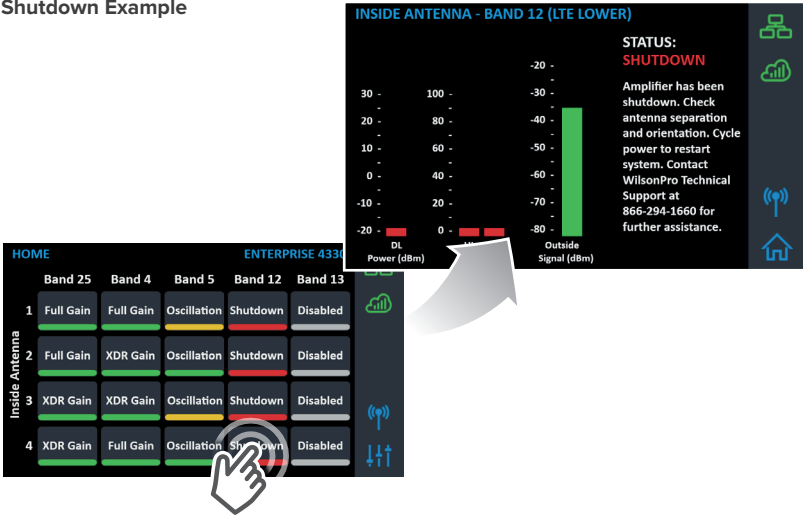

# Connectivity Status Screens

The two icons in the upper right provide status related to the Ethernet connection and Cloud connection.

## Ethernet-Status Icon

The Ethernet Status screen displays the following information:

- ETHERNET STATUS** (Enterprise 4330)
- STATUS: Ethernet Connected To Network**
- Amplifier is configured to use Ethernet and has a good connection to the network.
- Amplifier is configured to use Ethernet and has a connection to a non-networked device (e.g., a laptop).
- Amplifier is configured to use Ethernet but has no active connection.
- Amplifier is not configured to use Ethernet.
- An "underscore" beneath the Ethernet icon indicates an active connection. A long underscore indicates traffic.

The main interface shows a table of signal strength for various bands across four antennas:

	Band 25	Band 4	Band 5	Band 12	Band 13
1 Inside Antenna	Full Gain	Full Gain	Full Gain	Full Gain	Full Gain
2	Full Gain	Full Gain	Full Gain	Full Gain	Full Gain
3	Full Gain	Full Gain	Full Gain	Full Gain	Full Gain
4	Full Gain	Full Gain	Full Gain	Full Gain	Full Gain

## Cloud-Status Icon

The Cloud Comm Status screen displays the following information:

- CLOUD COMM STATUS** (Enterprise 4330)
- STATUS: Registered, Good Signal**
- Amplifier is configured to use LTE and there is a good connection to the Cloud. Bars indicate signal strength.
- LTE modem is registered but has no connection to the Cloud. Signal strength is too low to carry data.
- Amplifier is configured to use LTE but there is no connection to the Cloud. The LTE modem is not registered.
- Amplifier is not configured to use LTE.
- An "underscore" beneath the Cloud icon indicates an active connection. A long underscore indicates traffic.

The main interface shows a table of signal strength for various bands across four antennas:

	Band 25	Band 4	Band 5	Band 12	Band 13
1 Inside Antenna	Full Gain	Full Gain	Full Gain	Full Gain	Full Gain
2	Full Gain	Full Gain	Full Gain	Full Gain	Full Gain
3	Full Gain	Full Gain	Full Gain	Full Gain	Full Gain
4	Full Gain	Full Gain	Full Gain	Full Gain	Full Gain

## (MENU SYSTEM - CONNECTIVITY STATUS SCREENS cont.)

The Cellular Network Scan screen provides RSRP (Reference Signal Received Power) and RSRQ (Reference Signal Received Quality) for major cellular carriers in U.S. and Canada, measured at the indoor antenna ports (after the signal has been amplified). Band, frequency, bandwidth and cell I.D. are also shown for all cell tower channels found during scanning. Scanning begins as soon as the unit is power on, and is automatic, and continuous. A full scan cycle takes about three minutes to scan all bands and frequencies. Carrier names represented as Unknown require an active WilsonPro Cloud Subscription for name resolution.

**Note:** The Cellular Network Scanning results are dependent on the Channelization configuration for each band.

### Cellular Network Scanning Screens



---

# WilsonPro Cloud


## The cloud-based platform for remote monitoring & control of cellular signal amplifiers

Enterprise 4330 connects to WilsonPro Cloud via the internet, through a standard RJ-45 “hardwired” Ethernet connection or via LTE connection through the outside Comm antenna. The default setting is “Ethernet Preferred” (gives priority to Ethernet, but will switch to LTE if Ethernet is not connected). NOTE: The LTE modem and SIM card are installed and activated at the WilsonPro factory.

## Logging into the WilsonPro Cloud

If you don’t already have a WilsonPro Cloud™ account at [cloud.wilsonpro.com](https://cloud.wilsonpro.com), call 1-888-923-4448, Monday-Friday 8am-5pm MT so that your account can be created. Once your account is set up, you can then add multiple customers, locations, and amplifiers.

Your supported amplifiers can be added and managed via our WilsonPro Cloud website located at <https://cloud.wilsonpro.com>. Simply log in using your email address and password.

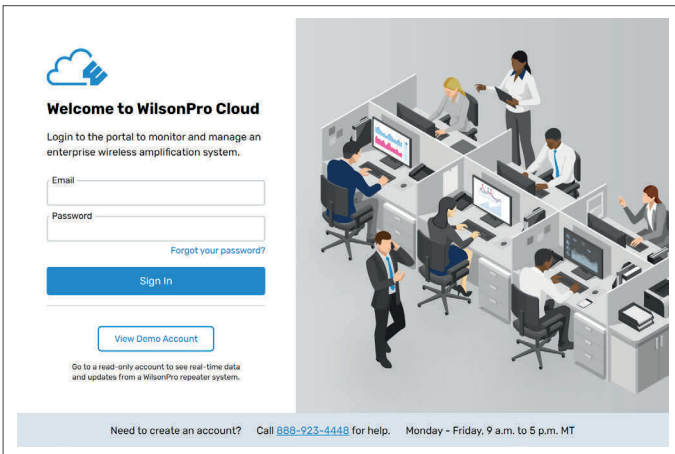

**Welcome to WilsonPro Cloud**

Login to the portal to monitor and manage an enterprise wireless amplification system.

Email

Password

[Forgot your password?](#)

**Sign In**

[View Demo Account](#)

Go to a read-only account to see real-time data and updates from a WilsonPro repeater system.

Need to create an account? Call [888-923-4448](tel:888-923-4448) for help. Monday - Friday, 9 a.m. to 5 p.m. MT

(WILSONPRO CLOUD cont.)

## Customer Dashboard

You can quickly check the status of all of your amplifiers from the **Dashboard** summary screen. The **Top Alert** field represents the highest priority alert reported by each amplifier assigned to your account, that has not been acknowledged. After all alerts have been acknowledged, they are no longer shown in this chart. **Status** represents the current, near real-time status of all amplifiers associated with your account.

Location	Amplifier	Top Alert	Status
Engineering Test		Ringle Reach1	--
Default Location		Subscription Expired	Subscription Expired

## Adding a Customer


To create a new customer from the Dashboard screen, click on **ADD CUSTOMER**.

Top Alert	Status
-----------	--------


NOTE: If you don't already have a WilsonPro Cloud account at cloud.wilsonpro.com, call **1-888-923-4448**, Monday-Friday 8am-5pm MT.

(WILSONPRO CLOUD – ADDING A CUSTOMER cont.)

Enter information for **Customer** (business/organization). After clicking on **Save** the new customer will appear on the dashboard page.

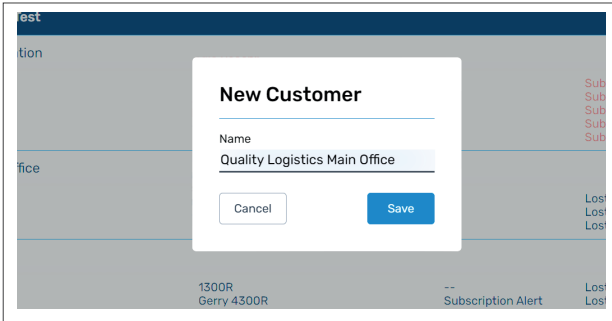

To Add Location, click on the **...** button and click **Add Location**.

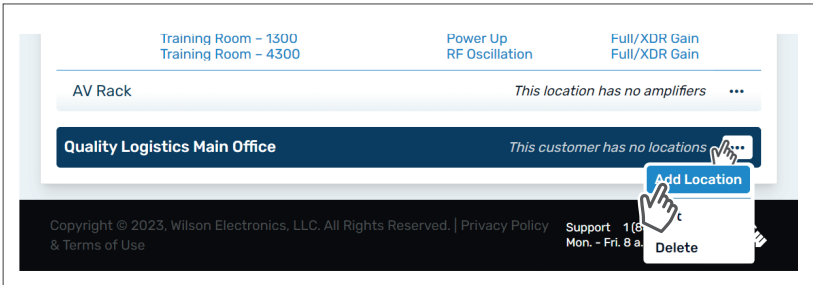



## Adding Customer Location

Enter **Location Name** and **Primary Contact** (notification recipient) information and click save.

NOTE: Fields with red asterisks are required.

**New Location**

Location Name \*

**Address**

Country \*

State/Province/Region \*

City \*

ZIP/Postal \*

Street \*

Street (Secondary)

**Contact Primary**

Email Address \*

First Name \*

Last Name \*

Phone

Phone (Secondary)

**Contact Secondary**

Email Address

First Name


Last Name


Phone

Phone (Secondary)


(WILSONPRO CLOUD cont.)

## Adding an Amplifier

To add a amplifier, click on the  button on desired location and click **View** to open location summary page.

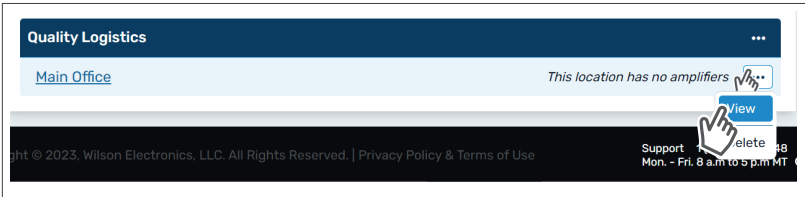


Click on **Add Amplifier** and enter the amplifier serial number, MAC address and amplifier name. An example: 1st Floor Lobby.

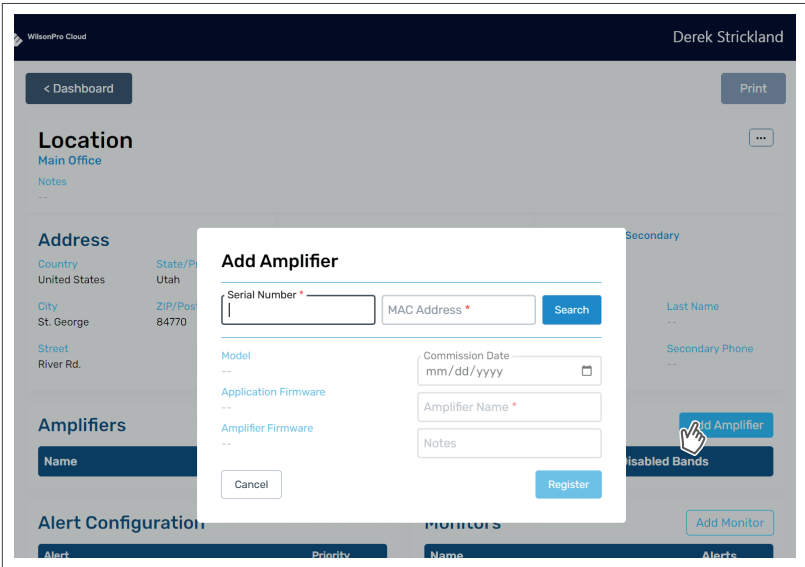

## Adding a Monitor

If a Monitor has not been created, click on **Add Monitor**. Installer/Integrator can assign monitors to track the performance of the amplifier(s). Alert priorities can be set to low, medium or high.

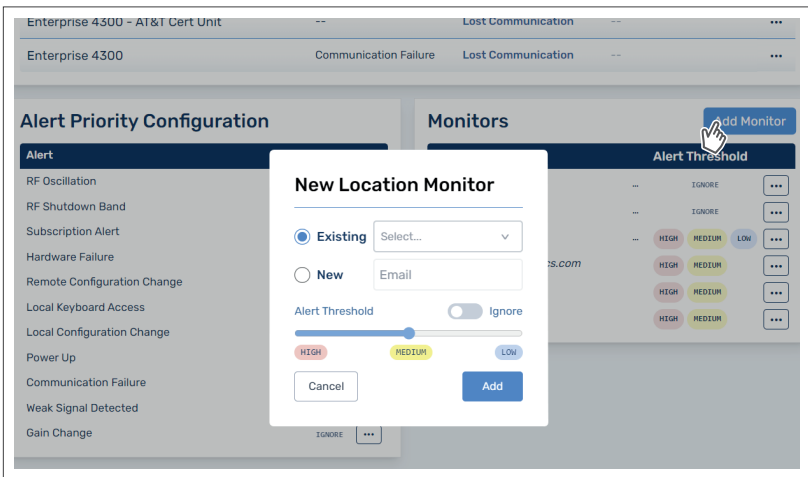

(WILSONPRO CLOUD cont.)

## Amplifier Configuration & Metrics

Now that the amplifier(s) have been added to the location, click **...** button and click **VIEW** to view details about the amplifier.

The screenshot displays the WilsonPro Cloud interface for a location named "Dallas Office". The interface is divided into several sections:

- Location:** Dallas Office. Notes: test.
- Address:** Country: United States, State/Province/Region: TX, City: Richardson, ZIP/Postal: 75081, Street: 699 W Renner Rd.
- Contact Primary:** Email Address: bdouglas@gmail.com, First Name: Brian, Last Name: Douglas, Primary Phone: 214-555-5241.
- Contact Secondary:** Email Address: --, First Name: --, Last Name: --, Primary Phone: --, Secondary Phone: --.
- Amplifiers:** A table with columns: Name, Top Alert, Status, Active Alerts, Disabled Bands. Two amplifiers are listed: "Enterprise 4330R - IT Closet" (Power Up, Full/XDR Gain, 16 Active Alerts, -- Disabled Bands) and "Enterprise 4330 - Second Floor Utility" (Power Up, Full/XDR Gain, 13 Active Alerts, -- Disabled Bands). A hand icon points to the "..." button next to the first amplifier, which has opened a dropdown menu with options: "View", "Change Location", "Delete", and "ADD MONITOR".
- Alert Configuration:** A table with columns: Alert, Priority. One alert is listed: "Subscription Alert".
- Monitors:** A table with columns: Name / Email, Alerts. No monitors are listed.

(WILSONPRO CLOUD – AMPLIFIER METRICS cont.)

The Band Details table shows per-band performance metrics. In addition, bands can be disabled and re-enabled, as well as viewing the band history.

**WARNING:** Disabling bands could disconnect the LTE connection and prevent communication with the cloud.

WilsonPro Cloud
Doug Smith
☰

< Location
Print

## Amplifier

E4330 Beta #5

Commission Date: 04/12/2024 Notes

### Details

Model: Enterprise 4330	Serial Number: 4691075001102211461
MAC Address: 10.06:48:70:01:60	Added to Account: 04/12/2024
Amplifier Firmware: 5.1.2.71	Application Firmware: 3.6.2.31

### Latest Updates

Status: Lost Communication	Connection Type: LTE
LTE Signal Strength: Excellent	Uptime: 5 min
Last Update Received: 04/17/2024	Subscription Expiry: 04/12/2025

### Band Channelization

Filter	Sub-Blocks	Center Freq <sup>down</sup>	Bandwidth
Band 25 Enable All	<span style="background-color: #2980b9; color: white; padding: 2px;">A</span> <span style="background-color: #2980b9; color: white; padding: 2px;">B</span> <span style="background-color: #2980b9; color: white; padding: 2px;">C</span> <span style="background-color: #2980b9; color: white; padding: 2px;">D</span> <span style="background-color: #2980b9; color: white; padding: 2px;">E</span> <span style="background-color: #2980b9; color: white; padding: 2px;">F</span> <span style="background-color: #2980b9; color: white; padding: 2px;">G</span>	1962.5 MHz	65.0 MHz
Band 4 Enable All	<span style="background-color: #2980b9; color: white; padding: 2px;">A</span> <span style="background-color: #2980b9; color: white; padding: 2px;">B</span> <span style="background-color: #2980b9; color: white; padding: 2px;">C</span> <span style="background-color: #2980b9; color: white; padding: 2px;">D</span> <span style="background-color: #2980b9; color: white; padding: 2px;">E</span> <span style="background-color: #2980b9; color: white; padding: 2px;">F</span>	2145.0 MHz	70.0 MHz
Band 5 Enable All	<span style="background-color: #2980b9; color: white; padding: 2px;">A</span> <span style="background-color: #2980b9; color: white; padding: 2px;">B</span>	881.5 MHz	25.0 MHz
Band 12 Enable All	<span style="background-color: #2980b9; color: white; padding: 2px;">A</span> <span style="background-color: #2980b9; color: white; padding: 2px;">B</span> <span style="background-color: #2980b9; color: white; padding: 2px;">C</span>	737.0 MHz	18.0 MHz
Band 13 Enable All	<span style="background-color: #2980b9; color: white; padding: 2px;">C</span>	751.5 MHz	11.0 MHz

### Configuration Change Log

Status	Date
No recent activity	

### Band Details

Band	Name	Status	Gain <sup>down</sup>	Power <sup>down</sup>	Signal <sup>Full Side</sup>	Oscillations <sup>24hr</sup>	
Band 25	E-PCS	Full Gain	70 dB	-1 dBm	-71 dBm	0	⋮
Band 4	AWS-1	Full Gain	69 dB	0 dBm	-69 dBm	0	⋮
Band 5	CELL	Full Gain	62 dB	-20 dBm	-80 dBm	0	⋮
Band 12	LTE Lower	Full Gain	61 dB	-6 dBm	-67 dBm	0	⋮
Band 13	LTE Upper	Full Gain	61 dB	-6 dBm	-67 dBm	0	⋮

### Inside Antenna Port Details

Port	Notes	Status	Gain <sup>up</sup>					
			Band 25	Band 4	Band 5	Band 12	Band 13	
Port 1	--	Full Gain	65 dB	63 dB	56 dB	57 dB	56 dB	⋮
Port 2	--	Full Gain	65 dB	63 dB	56 dB	57 dB	56 dB	⋮
Port 3	--	Full Gain	65 dB	64 dB	56 dB	57 dB	56 dB	⋮
Port 4	--	Full Gain	64 dB	63 dB	56 dB	57 dB	56 dB	⋮

### Cellular Network Details

Carrier	Band	DL Frq	Sub-Blocks	EARFCN	Bandwidth	Cell Id	RSRP	RSRQ	MCC	MNC	PCI	eNb Map	Updated
AT&T	B4	1924.0 MHz	A	346A	10.0 MHz	1422-17191	-61 dBm	-29 dB	310	310	1305	63100E	1/16/2024

(WILSONPRO CLOUD – AMPLIFIER METRICS cont.)

In the Band Details section, band history can be viewed by clicking **⋮** button, by each band, and then click **View History**. The Band can be disabled as well.

**Band Details**

Name	Status	Gain <sub>down</sub>	Power <sub>down</sub>	Signal <sub>outside</sub>	Oscillations <sub>24hr</sub>	
Band 25	E-PCS	Full Gain	70 dBm	-1 dBm	-71 dBm	0
Band 4	AWS-1	Full Gain	69 dBm	0 dBm	-69 dBm	0
Band 5	CELL	Full Gain	62 dBm	-20 dBm	-80 dBm	0
Band 12	LTE Lower	Full Gain	61 dBm	-6 dBm	-67 dBm	0
Band 13	LTE Upper	Full Gain	61 dBm	-6 dBm	-67 dBm	0

**Inside Antenna Port Details**

Notes	Status	Band 25	Band 4	Band 5	Band 12	Band 13
Port 1	--	Full Gain	65 dBm	63 dBm	56 dBm	57 dBm
Port 2	--	Full Gain	65 dBm	63 dBm	56 dBm	56 dBm
Port 3	--	Full Gain	65 dBm	64 dBm	56 dBm	56 dBm
Port 4	--	Full Gain	64 dBm	63 dBm	56 dBm	55 dBm

The **Band History** screen provides performance and signal level histories.

**Amplifier**  
E4330 Beta #5  
Commission Date: 04/12/2024

**Band History**  
Band 25

Start: 04/09/2024 12:00 AM | End: 04/16/2024 03:58 PM

**Status**


Status	Start Time	End Time
Full Gain	4/9/24, 17:00	4/11/24, 17:00
XDR Gain	4/12/24, 17:00	4/13/24, 17:00
XDR Gain	4/14/24, 17:00	4/15/24, 17:00

**Oscillations (24hr)**

Time	Oscillations (24hr)
4/9/24, 17:00	~4.5
4/11/24, 17:00	~4.5
4/12/24, 17:00	~4.5
4/13/24, 17:00	~4.5
4/14/24, 17:00	~4.5
4/15/24, 17:00	~4.5

## (WILSONPRO CLOUD – AMPLIFIER METRICS cont.)

If, within a band, specific carriers or sub-blocks are desired for amplification, click the configure  button at the top of the **Band Channelization** section.

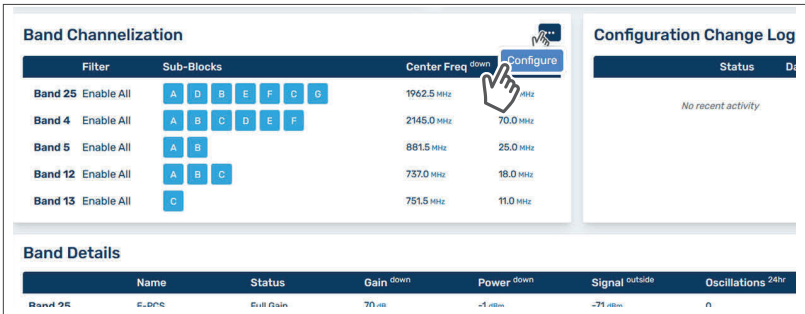


Filter	Sub-Blocks	Center Freq <sup>down</sup>	Configure
Band 25 Enable All	A D B E F C G	1962.5 MHz	
Band 4 Enable All	A B C D E F	2145.0 MHz	70.0 MHz
Band 5 Enable All	A B	881.5 MHz	25.0 MHz
Band 12 Enable All	A B C	737.0 MHz	18.0 MHz
Band 13 Enable All	C	751.5 MHz	11.0 MHz

Band Details						
Name	Status	Gain <sup>down</sup>	Power <sup>down</sup>	Signal <sup>outside</sup>	Oscillations <sup>24hr</sup>	
Band 25	E-PCS	Full Gain	70 dB	-1 dBm	-71 dBm	0

If **Custom** is selected for a particular band, sub-blocks are manually selected. Note that any number of sub-blocks may be selected; however, they must be contiguous (adjacent) frequencies. Clicking a carrier name such as **Verizon** or **AT&T** amplifies only the best quality (highest RSRQ) for the selected carrier within that band. If **Enable All** is selected, all sub-block filtering is turned off, and the band will operate in traditional **wideband mode**, amplifying all sub-blocks within the band.

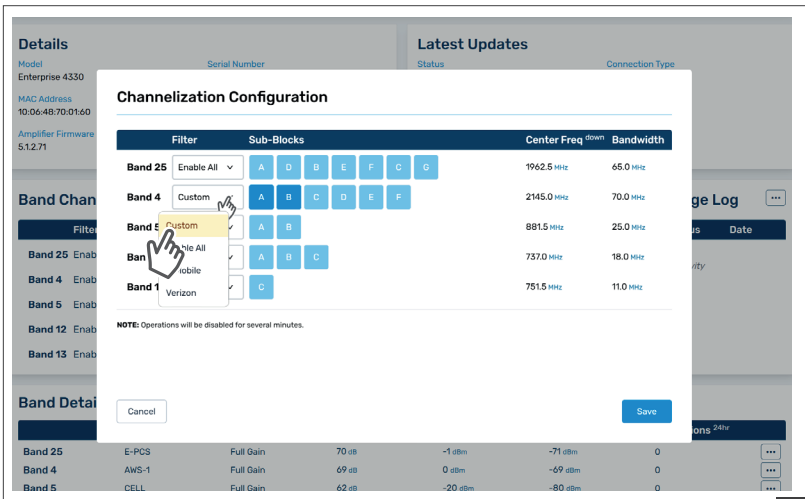


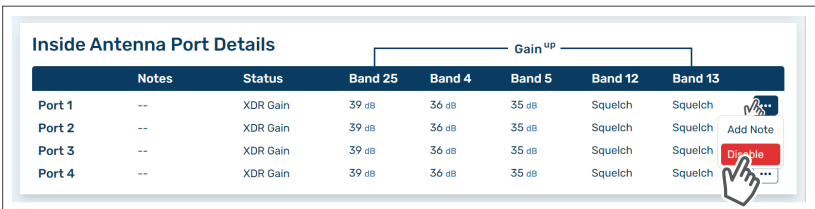
Filter	Sub-Blocks	Center Freq <sup>down</sup>	Bandwidth
Band 25 Enable All	A D B E F C G	1962.5 MHz	65.0 MHz
Band 4 Custom	A B C D E F	2145.0 MHz	70.0 MHz
Band 5 Custom	A B	881.5 MHz	25.0 MHz
Band 12 Enable All	A B C	737.0 MHz	18.0 MHz
Band 1 Verizon	C	751.5 MHz	11.0 MHz

NOTE: Operations will be disabled for several minutes.

Cancel Save

## (WILSONPRO CLOUD – AMPLIFIER METRICS cont.)

In the Inside Antenna Port Details section port(s) can be disabled by clicking the  button and click **Disable**.




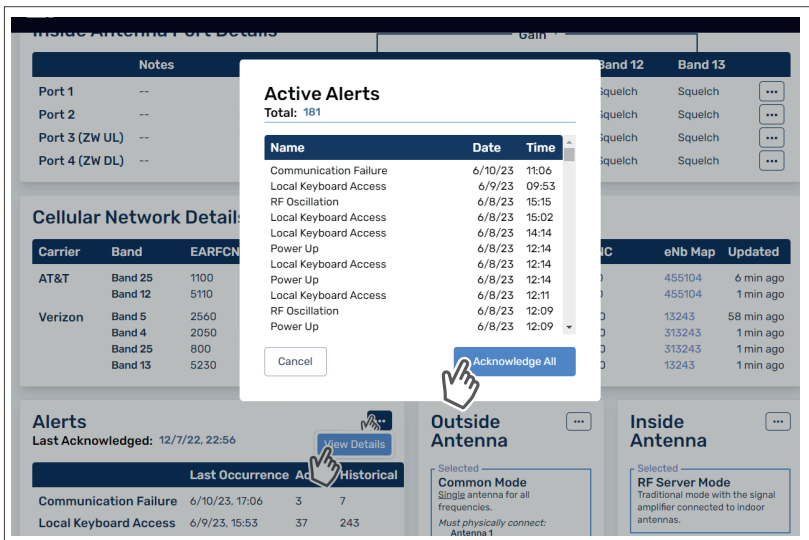
**Inside Antenna Port Details**

Notes	Status	Band 25	Band 4	Band 5	Band 12	Band 13		
Port 1	--	XDR Gain	39 dB	36 dB	35 dB	Squelch	Squelch	...
Port 2	--	XDR Gain	39 dB	36 dB	35 dB	Squelch	Squelch	...
Port 3	--	XDR Gain	39 dB	36 dB	35 dB	Squelch	Squelch	...
Port 4	--	XDR Gain	39 dB	36 dB	35 dB	Squelch	Squelch	...

Gain UP

Hand pointing to **Disable** button in the more options menu.

Active and acknowledged alerts can be viewed in the Alert section. To view alert history click  and then click **View History**. To acknowledge and remove the alert from the lists, choose the alert and click **Acknowledge All**.



**Active Alerts**  
Total: 181

Name	Date	Time
Communication Failure	6/10/23	11:06
Local Keyboard Access	6/9/23	09:53
RF Oscillation	6/8/23	15:15
Local Keyboard Access	6/8/23	15:02
Local Keyboard Access	6/8/23	14:14
Power Up	6/8/23	12:14
Local Keyboard Access	6/8/23	12:14
Power Up	6/8/23	12:14
Local Keyboard Access	6/8/23	12:11
RF Oscillation	6/8/23	12:09
Power Up	6/8/23	12:09


Buttons: Cancel, Acknowledge All

Hand pointing to **Acknowledge All** button.




(WILSONPRO CLOUD – AMPLIFIER METRICS cont.)

The outside antenna can be configured into **Split Mode** in Antenna Configuration section, if needed.

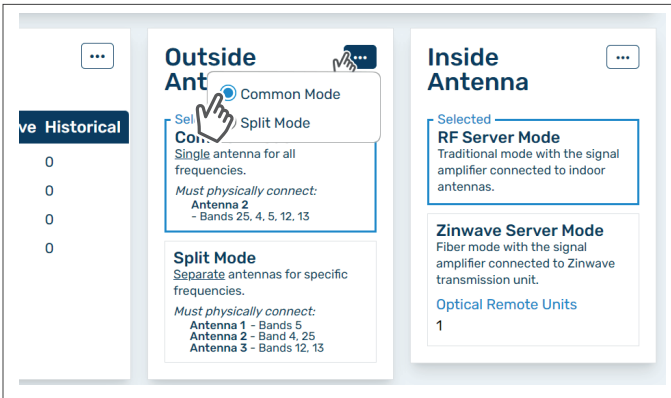

The inside antenna can be configured into **Zinwave Server Mode** in Antenna Configuration section, as well.

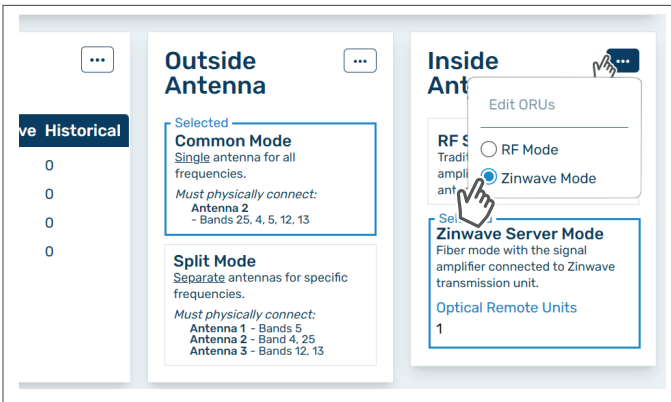

## Cellular Network Scanning

The Cellular Network Scan feature with provides RSRP (Reference Signal Received Power) and RSRQ (Reference Signal Received Quality) for major U.S. and Canadian Carrier cellular signals found by the amplifier, measured at the indoor antenna ports (after the signal has been amplified). Carrier Name, Band, Downlink Frequency, Bandwidth, Cell ID, are some examples of the additional information provided in each scan record. Scanning begins as soon as the unit is powered on, and is automatic, and continuous. The scan results are dependent on the Channelization Configuration for each band. A full scan cycle takes about three minutes to scan all bands and frequencies. Carrier names represented as **Unknown** require an active WilsonPro Cloud Subscription for name resolution.

NOTE: Scan results are cleared any time the Channelization Configuration is changed. It will take up to 6 minutes to repopulate the table.

Cellular Network Details													
Carrier	Band	DL Frq	Sub-Blocks	EARFCN	Bandwidth	Cell Id	RSRP	RSRQ	MCC	MNC	PCI	eNb Map	Updated
AT&T	B 5	874.0 MHz	A	2450	10.0 MHz	133630211	-51 dBm	-22 dB	313	100	385	521993	1 min ago
	B 4	2175.0 MHz	J	67086	10.0 MHz	133630488	-51 dBm	-25 dB	313	100	472	521994	1 min ago
	B 25	1970.0 MHz	EF	1000	10.0 MHz	133866251	-42 dBm	-17 dB	313	100	3	522915	1 min ago
T-Mobile	N 25	1984.8 MHz	CG	396970	20.0 MHz	6492631061	-33 dBm	-14 dB	310	260	489	25361840	1 min ago
	B 4	2145.0 MHz	DEF	66786	20.0 MHz	16278529	-34 dBm	-12 dB	311	490	495	63588	1 min ago
	B 25	1955.0 MHz	DB	850	20.0 MHz	16278539	-35 dBm	-13 dB	311	490	324	63588	1 min ago
	B 12	731.5 MHz	A	5035	5.0 MHz	16278549	-36 dBm	-12 dB	311	490	387	63588	3 min ago
	B 12	731.5 MHz	A	5035	5.0 MHz	20346901	-40 dBm	-19 dB	311	490	94	79480	1 min ago
Verizon	B 4	2165.0 MHz	HI	66986	10.0 MHz	34066214	-37 dBm	-12 dB	311	480	44	133071	1 min ago
	B 4	2125.0 MHz	ABC	66586	20.0 MHz	34066208	-35 dBm	-16 dB	311	480	44	133071	1 min ago
	B 13	751.0 MHz	C	5230	10.0 MHz	34066179	-31 dBm	-15 dB	311	480	44	133071	3 min ago
	B 13	751.0 MHz	C	5230	10.0 MHz	34201346	-34 dBm	-17 dB	311	480	88	133599	1 min ago

**Alerts**  
Last Acknowledged: ⋮


**Outside Antenna** ⋮  
Selected

**Inside Antenna** ⋮  
Selected

(WILSONPRO CLOUD – CELLULAR NETWORK SCANNING cont.)

eNodeB (eNB) is a unique numeric value that represents the cellular radio base station associated with a scanned signal result. Click on the eNB value to be redirected to a new browser window that opens a 3rd-party website that plots this eNB value on a map.

ARFCN	Bandwidth	Cell Id	RSRP	RSRQ	MCC	MNC	PCI	eNb Map	Updated
450	10.0 MHz	133630211	-51 dBm	-22 dB	313	100	385	<a href="#">521993</a>	1 min ago
7086	10.0 MHz	133630488	-51 dBm	-25 dB	313	100	472	<a href="#">521994</a>	1 min ago
100	10.0 MHz	133866251	-42 dBm	-17 dB	313	100	3	<a href="#">522915</a>	1 min ago
34070	20.0 MHz	440243044	-33 dBm	-14 dB	310	340	480	<a href="#">5274840</a>	1 min ago

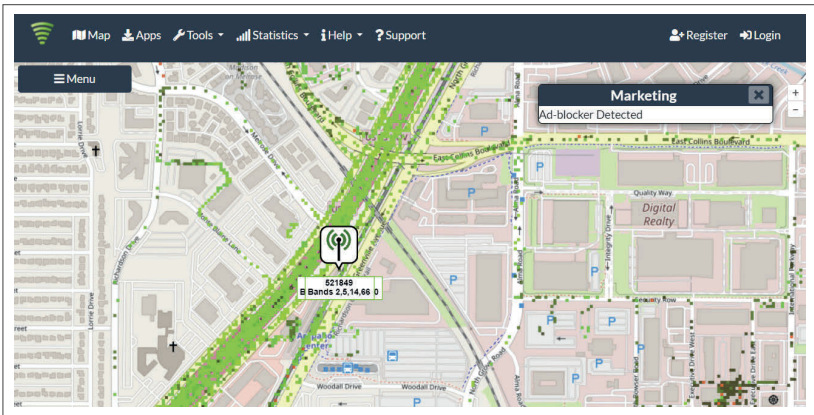


---


# Local Amplifier Configuration Utility

If you want to view or modify the amplifier configuration settings directly on the amplifier, this utility was created to help you. With this utility, you can change Communication Preferences and Ethernet settings, as well as Enable/Disable bands and ports. It can also be used to view live band details and static information such as firmware version. Additionally, the Local Amplifier Configuration Utility contains an Antenna Tuner tool to assist with system setup.

NOTE: The default setting of “Ethernet preferred, LTE backup” is almost always the best setting to use.

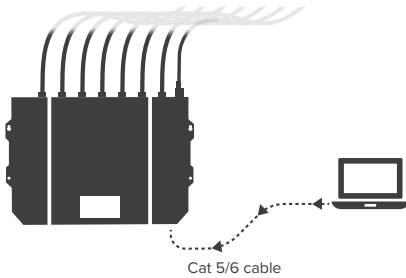

To use the Local Amplifier Configuration Utility, a laptop computer must be connected to the 4330 via a Cat 5/6 cable to the Ethernet port on the amplifier.

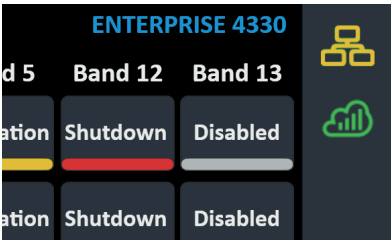



When configured with default communication settings, the network icon on the amplifier will change color from red to yellow or green after connecting to the network or a laptop. It could take up to two minutes.


## (LOCAL AMPLIFIER CONFIGURATION UTILITY cont.)

Once the network icon is yellow or green, type the **IP Address** of the amplifier that is shown on the **LCD screen under Settings / Ethernet** that is assigned when the Ethernet icon is yellow or green.

Alternately, type **wilsonproconfig** into the web browser. A login will be displayed, type the following: Factory Default Username: **admin** – Password: **admin**

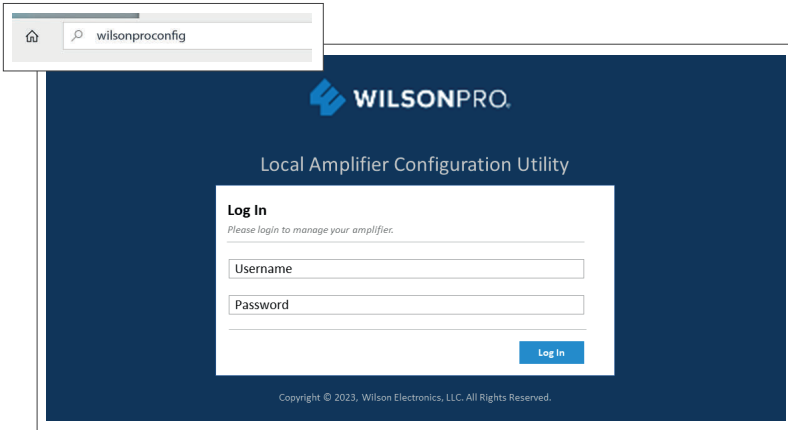


Click on  to set **AMPLIFIER**, **COMMUNICATIONS**, and **SYSTEM** configurations. Select **AMPLIFIER**, Band Configuration, Inside Antenna and Outside Antenna configuration can be set here.

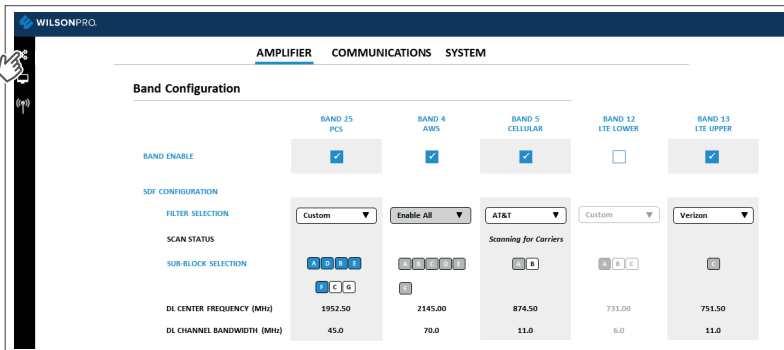

(LOCAL AMPLIFIER CONFIGURATION UTILITY cont.)

**Bands can be ENABLED/DISABLED** and they can be configured to support specific channels/carriers. **Inside Antennas can be also be ENABLED/DISABLED** and they can be configured to support interworking with a fiber transmission unit if desired. Outside Antennas can be configured to support a frequency-specific **Split Mode** option that supports separate antennas for different bands, or a **Common Mode** where only one outside antenna will be used for all bands.

**Channelization Configuration:** The default configuration for each band supports all channels (filter selection set to **Enable All**). To reconfigure a band to support a specific channels, a **Custom filter** can be selected which will enable **Sub-Block Selection**. Validation checks, such as making sure selected sub-blocks are contiguous, will ensure the new configuration is correct before sending it to the amp. It will take up to three minutes for the amp to process a new configuration setting, depending on how many bands are updated. After the amp has run for about 12 minutes using the new/current configuration, it will complete its scanning of cellular network signals and identify the available carriers for each band and add them as selectable options in the **Filter Selection pull-down menu**. You can then select a carrier and the best contiguous sub-blocks will be automatically selected. Channelization Configuration does not apply to bands that have been disabled. NOTE: Remember that you must press **SAVE** to apply your new configuration changes to the amplifier. **CANCEL** will revert all changes to the previously saved configuration.

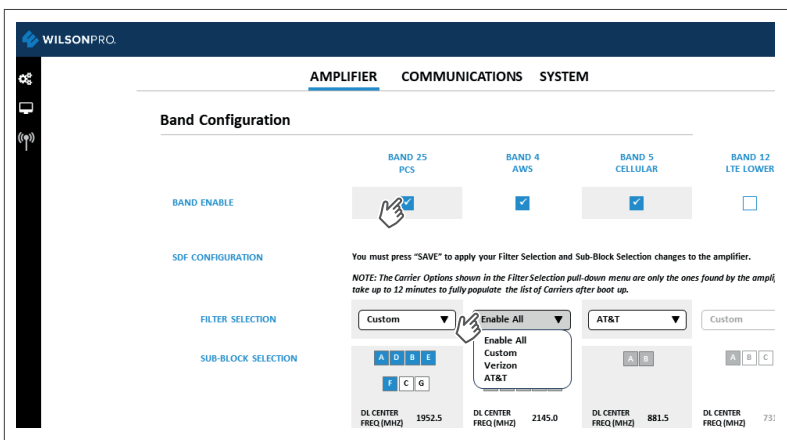


## (LOCAL AMPLIFIER CONFIGURATION UTILITY cont.)

The inside antennas can be **ENABLED/DISABLED** and, if desired, configured for **Zinwave Server Mode** for integration with a Zinwave fiber transmission unit.  
NOTE: Antenna 4 cannot be disabled. It is required for LTE modem communication.

The default outside antenna configuration is for an antenna to be connected to the Antenna 2 port, with Antenna 1 and Antenna 3 ports not being used (**COMMON MODE**). To use multiple antennas that are band specific, the outside antennas can be configured into **SPLIT MODE**.


The screenshot displays the WILSONPRO web interface. At the top, there are three tabs: **AMPLIFIER**, **COMMUNICATIONS**, and **SYSTEM**. The **COMMUNICATIONS** tab is selected. Below the tabs, the **Inside Antenna Configuration** section is visible. It includes a sub-header "Configure the Inside Antenna ports for integration with Zinwave fiber transmission unit if desired." and a checked checkbox for **ZINWAVE SERVER MODE**. A **NUMBER OF ORUs** field is set to 16. Below this, there are four columns: **ANT 1**, **ANT 2**, **FROM ZW (ANT 3)**, and **TO ZW (ANT 4)**. Under the **INSIDE ANTENNA PORT** section, there are four checkboxes: ANT 1 (unchecked), ANT 2 (unchecked), ANT 3 (checked), and ANT 4 (checked). The **Outside Antenna Configuration** section follows, with a sub-header "The default configuration is for an antenna to be connected to the Antenna 1 port, with Antenna 2 and 3 not being used (Common Mode). To use multiple outside antennas, change the configuration to Split Mode and connect antennas to all 3 antenna ports." It features two options: **COMMON MODE (Default)** (checked) and **SPLIT MODE** (unchecked). The COMMON MODE option is further detailed with "Antenna 1: Common | Antenna 2: Off | Antenna 3: Off". The SPLIT MODE option is detailed with "Antenna 1: Band 5 | Antenna 2: Band 4/Band 25 | Antenna 3: Band 12/Band 13".

Click on  then **COMMUNICATIONS**, Communications Preferences and Ethernet changes can be made here.


The screenshot shows the WILSONPRO web interface with the **COMMUNICATIONS** tab selected. The **Communication Preferences** section is active, featuring a warning: "\* Warning: If LTE Only is selected, you will lose Ethernet connectivity to this local configuration tool. Refer to the Installation Guide or Contact Customer Support to restore access." Below the warning are four radio button options: **ETHERNET PREFERRED w/LTE BACKUP (Default)** (checked), **ETHERNET ONLY** (unchecked), **LTE PREFERRED w/ETHERNET BACKUP** (unchecked), and **LTE ONLY\*** (unchecked). The **Ethernet Settings** section is partially visible, with a warning: "Warning: Saving these changes will temporarily interrupt internet communication, including the connection to this amplifier, for up to one minute."

---

(LOCAL AMPLIFIER CONFIGURATION UTILITY cont.)

Click on  then **SYSTEM** to set password for local amplifier (this password is unrelated to WilsonPro Cloud Service), reboot amplifier and restore system to factory default.

NOTE: Any settings change made to the amplifier from the Local Amplifier Configuration Utility will take up to 30 seconds to reliably save to memory. Do not power cycle the unit during this time or the new settings will not be saved.

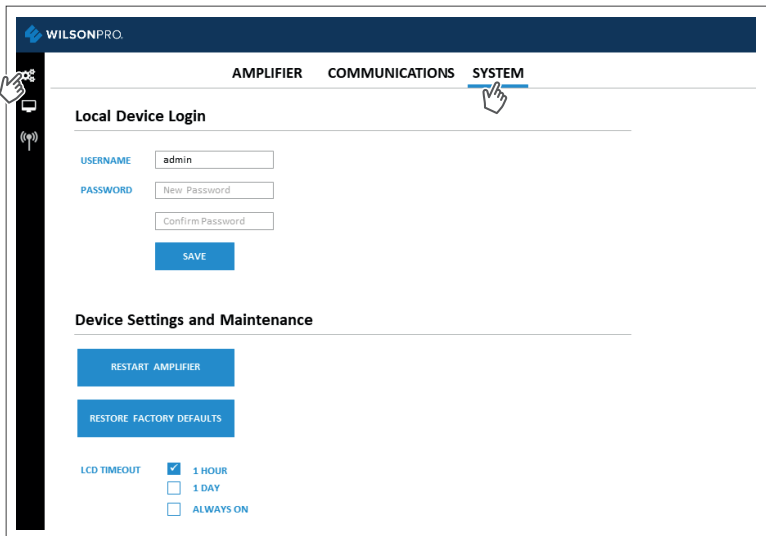

WILSONPRO.

AMPLIFIER COMMUNICATIONS **SYSTEM**

**Local Device Login**

USERNAME

PASSWORD

SAVE

**Device Settings and Maintenance**


RESTART AMPLIFIER


RESTORE FACTORY DEFAULTS

LCD TIMEOUT  1 HOUR  1 DAY  ALWAYS ON



(LOCAL AMPLIFIER CONFIGURATION UTILITY cont.)



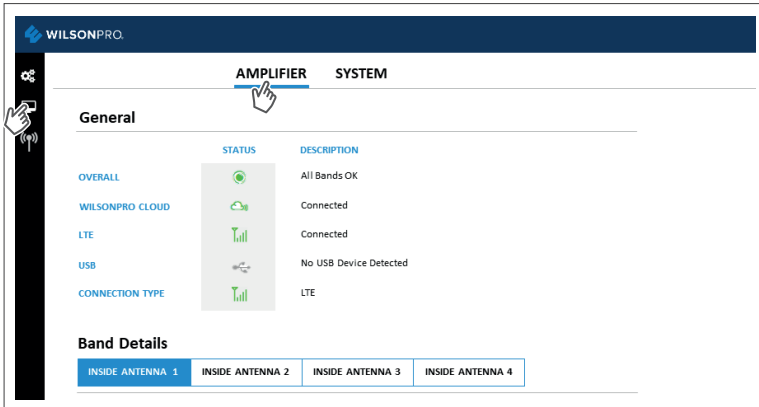


Click on  then **AMPLIFIER**, view overall status of amplifier, WilsonPro Cloud, LTE connection, Ethernet connection, USB connection and power levels for each band per inside antenna/server port.



**WILSONPRO**

 **AMPLIFIER**    **SYSTEM**


**General**

	STATUS	DESCRIPTION
OVERALL		All Bands OK
WILSONPRO CLOUD		Connected
LTE		Connected
USB		No USB Device Detected
CONNECTION TYPE		LTE

**Band Details**

INSIDE ANTENNA 1    INSIDE ANTENNA 2    INSIDE ANTENNA 3    INSIDE ANTENNA 4

Click on  then **SYSTEM**, view overall system details.

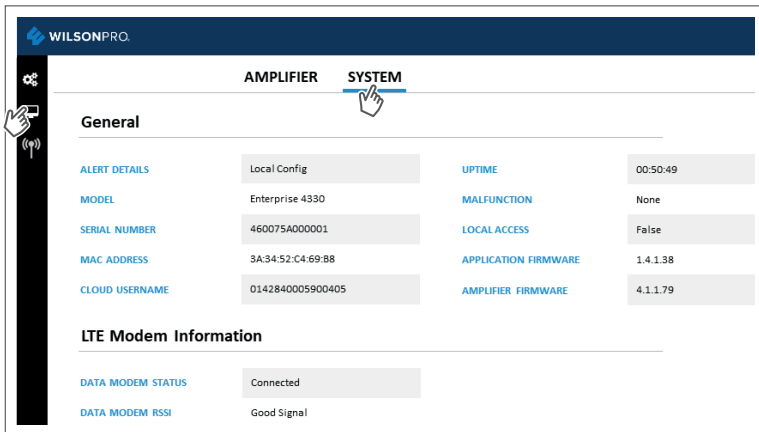

**WILSONPRO**

**AMPLIFIER**    **SYSTEM**


**General**

ALERT DETAILS	Local Config	UPTIME	00:50:49
MODEL	Enterprise 4330	MALFUNCTION	None
SERIAL NUMBER	460075A000001	LOCAL ACCESS	False
MAC ADDRESS	3A:34:52:C4:69:88	APPLICATION FIRMWARE	1.4.1.38
CLOUD USERNAME	0142840005900405	AMPLIFIER FIRMWARE	4.1.1.79


**LTE Modem Information**

DATA MODEM STATUS	Connected
DATA MODEM RSSI	Good Signal

(LOCAL AMPLIFIER CONFIGURATION UTILITY cont.)

Click on  to use the **Cellular Network Scan** feature which provides RSRP (Reference Signal Received Power) and RSRQ (Reference Signal Received Quality) for major U.S. and Canadian Carrier cellular signals found by the amplifier, measured at the indoor antenna ports (after the signal has been amplified). Carrier Name, Band, Downlink Frequency, Bandwidth, Cell ID, are some examples of the additional information provided in each scan record. **Scanning begins as soon as the unit is powered on, and is automatic, and continuous.** The scan results are dependent on the Channelization Configuration for each band. A full scan cycle takes about three minutes to scan all bands and frequencies. Carrier names represented as **Unknown** require an active WilsonPro Cloud Subscription for name resolution.

NOTE: Scan results are cleared any time the Channelization Configuration is changed. It will take up to 6 minutes to repopulate the table.

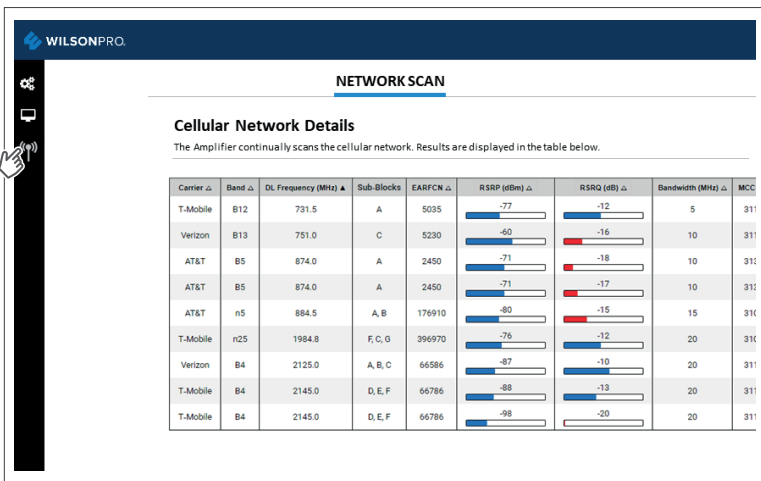

**WilsonPro**

**NETWORK SCAN**

**Cellular Network Details**  
The Amplifier continually scans the cellular network. Results are displayed in the table below.

Carrier	Band	DL Frequency (MHz)	Sub-Blocks	EARFCN	RSRP (dBm)	RSRQ (dB)	Bandwidth (MHz)	MCC
T-Mobile	B12	731.5	A	5035	-77	-12	5	311
Verizon	B13	751.0	C	5230	-60	-16	10	311
AT&T	B5	874.0	A	2450	-71	-18	10	311
AT&T	B5	874.0	A	2450	-71	-17	10	311
AT&T	n5	884.5	A, B	176910	-80	-15	15	311
T-Mobile	n25	1984.8	F, C, G	396970	-76	-12	20	311
Verizon	B4	2125.0	A, B, C	66586	-87	-10	20	311
T-Mobile	B4	2145.0	D, E, F	66786	-88	-13	20	311
T-Mobile	B4	2145.0	D, E, F	66786	-98	-20	20	311

## Troubleshooting Local Amplifier Configuration Utility

### Using the LCD screen on the amplifier to find the IP Address

You can use the LCD screen on the amplifier to find the IP Address of the Ethernet connection after the laptop is connected. This IP Address can be used instead of **wilsonproconfig**. Note that Ethernet icon must be Yellow.

### The LCD screen shows 0.0.0.0 for the IP Address

If the IP Address shown on the LCD screen is 0.0.0.0, the Ethernet connection has not been established.

### Using Apple Mac computers

Apple Mac computers are known to have a problem using the **wilsonproconfig** alias. Always use the IP Address when connecting via an Apple Mac computer.

### Can't open the utility in your default browser

If the Ethernet connection appears to be established (Yellow Ethernet Network icon) and you still can't open the utility in your default browser, try opening the URL in a different browser.

### Can't open the utility in your default browser on your laptop

If the Ethernet connection appears to be established (Yellow Ethernet Network icon) and you still can't open the utility in your default browser, try putting the laptop in **Airplane Mode** (all wireless communication turned off).

---

# Safety Guidelines

To uphold compliance with network protection standards, all active cellular devices must maintain at least 1.8 m (6 feet) of separation distance from Panel and Dome antennas.

Use only the power supply provided in this package. Use of a non-Wilson Electronics product may damage your equipment.

The Signal Amplifier unit is designed for use in an indoor, temperature-controlled environment (operating temperature ranges from 0°C to 35°C (32°F to 95°F)). It is not intended for use in attics or similar locations subject to temperatures in excess of that range.

RF Safety Warning: Any antenna used with this device must be located at least 20 cm (8 in) from all persons.

AWS Warning: The Outside Antenna must be installed no higher than 10 meters (31'9") above ground.

CAUTION: Double pole, neutral fusing. Disconnect mains before servicing.  
Replacement Fuse: 5 x 20mm, 1.6A Type T (Time-Lag), 250VAC.

This equipment is not suitable for use in locations where children are likely to be present.

## This is a CONSUMER device.

---

**BEFORE USE**, you **MUST REGISTER THIS DEVICE** with your wireless provider and have your provider's consent. Most wireless providers consent to the use of signal boosters. Some providers may not consent to the use of this device on their network. If you are unsure, contact your provider.

In Canada, **BEFORE USE** you must meet all requirements set out in ISED CPC-2-1-05. You **MUST** operate this device with approved antennas and cables as specified by the manufacturer. Antennas **MUST** be installed at least 20 cm (8 inches) from (i.e., **MUST NOT** be installed within 20 cm of) any person.

You **MUST** cease operating this device immediately if requested by the FCC (or ISED in Canada) or licensed wireless service provider.

**WARNING.** E911 location information may not be provided or may be inaccurate for calls served by using this device.

This device may be operated **ONLY** in a fixed location (i.e., may operate in a fixed location only) for in-building use.

**FOR MORE INFORMATION ON REQUIREMENTS SET OUT IN ISED CPC-2-1-05, SEE BELOW:**

<https://www.weboost.com/carrier-registration>

# Kit Components

The following accessories are certified to be used with the **ENTERPRISE 4330**.

	BAND 12/17	BAND 13	BAND 5	BAND 4	BAND 25/2
Outside antenna maximum permissible antenna gain (dBi) 50Ω	3.576	3.21	3.012	2.048	1.918
Inside antenna maximum permissible antenna gain (dBi) 50Ω	-2.43	-1.69	-2.79	-0.33	-1.29

All equivalent or lesser antennas and cables are suitable for use with 4330 amplifiers.

**314411**

Wide Band Directional Outside Antenna

**952300**

30 m (100 ft.) Wilson 400 Cable  
(for inside & outside antennas)

**304412**

Dome Inside Antenna

**311242**

Dome Inside Antenna

**859902**

50 Ohm Lightning Surge Protector

**952302**

60 cm (2 ft.) Wilson400 Cable

# Specifications

MODEL NUMBER	460075 / 461075				
FCC ID	PWO075				
IC ID	4726A-075				
CONNECTORS	N-Connectors				
ANTENNA IMPEDANCE	50 Ohms				
FREQUENCY	698-716 MHz, 729-756 MHz, 777-787 MHz, 824-894 MHz, 1850-1995 MHz, 1710-1755/2110-2155 MHz				
POWER OUTPUT FOR SINGLE CELL PHONE (Uplink) dBm	700 MHz Band 12/17 25.4	700 MHz Band 13 25.4	800 MHz Band 5 24.1	1700 MHz Band 4 24.1	1900 MHz Band 25/2 24.9
POWER OUTPUT FOR SINGLE CELL PHONE (Downlink) dBm	700 MHz Band 12/17 16.9	700 MHz Band 13 15.9	700 MHz Band 5 16.8	700 MHz Band 4 16.8	700 MHz Band 25/2 16.8
NOISE FIGURE	5 dB Nominal				
ISOLATION	>90 dB				
POWER REQUIREMENTS	120...240V / 50...60 Hz / 1.4...0.7A				

The term "IC" before the radio certification number only signifies that Industry Canada technical specifications were met.

Each Signal Amplifier is individually tested and factory set to ensure FCC compliance. The Amplifier cannot be adjusted without factory reprogramming or disabling the hardware. The Signal Amplifier will amplify, but not alter incoming and outgoing signals in order to increase coverage of authorized frequency bands only. If the Signal Amplifier is not in use for five minutes, it will reduce gain until a signal is detected. If a detected signal is too high in a frequency band, or if the Signal Amplifier detects an oscillation, the Signal Amplifier will automatically turn the power off on that band. For a detected oscillation the Signal Amplifier will automatically resume normal operation after a minimum of 1 minute. After 5 (five) such automatic restarts, any problematic bands are permanently shut off until the Signal Amplifier has been manually restarted by momentarily removing power from the Signal Amplifier. Noise power, gain, and linearity are maintained by the Signal Amplifier's microprocessor.

This device complies with Part 15 of FCC rules. Operation is subject to two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by Wilson Electronics LLC could void the authority to operate this equipment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by Wilson Electronics LLC could void the authority to operate this equipment.

 This product conforms to UL/CSA/IEC STD 62368-1 for US and Canada.

**NEED HELP?**



support@wilsonelectronics.com



866.294.1660

---

# Warranty

## ✔ 30 DAY MONEY-BACK GUARANTEE

All WilsonPro products are protected by WilsonPro 30-day money-back guarantee. If for any reason the performance of any product is not acceptable, simply return the product directly to the reseller with a dated proof of purchase.

## ✔ 3 YEAR WARRANTY

WilsonPro Amplifiers are warranted for three (3) years against defects in workmanship and/or materials. Warranty cases may be resolved by returning the product directly to the reseller with a dated proof of purchase.

Signal Amplifiers may also be returned directly to the manufacturer at the consumer's expense, with a dated proof of purchase and a Returned Material Authorization (RMA) number supplied by WilsonPro. WilsonPro shall, at its option, either repair or replace the product.

This warranty does not apply to any Signal Amplifiers determined by WilsonPro to have been subjected to misuse, abuse, neglect, or mishandling that alters or damages physical or electronic properties.

Replacement products may include refurbished WilsonPro products that have been recertified to conform with product specifications.

RMA numbers may be obtained by contacting Customer Support.

**DISCLAIMER:** The information provided by WilsonPro is believed to be complete and accurate. However, no responsibility is assumed by WilsonPro for any business or personal losses arising from its use, or for any infringements of patents or other rights of third parties that may result from its use.

**MARKETING APPROVAL:** Installer and end customer hereby grants to Wilson Electronics the express right to use installers or end customers company logo in marketing, sales, financial, and public relations materials and other communications solely to identify Customer as a Wilson Electronics customer.



3301 East Deseret Drive, St. George, UT

 [www.wilsonpro.com](http://www.wilsonpro.com)  [support@wilsonpro.com](mailto:support@wilsonpro.com)

Copyright © 2024 Wilson Electronics. All rights reserved.

Wilson Electronics products covered by U.S. patent(s) and pending application(s)

For patents go to: [weboost.com/us/patents](http://weboost.com/us/patents)



THIS PRODUCT CONFORMS TO UL/CSA STD 62368-1 FOR US AND CANADA