

## 5 Port PoE Unmanaged 10/100Mbps Switch/Extender (4 Ports Full PoE Power-up to 15.4 Watts per Port with 1 UPLINK Port up to 100Mbps) Installation Guide

### Purpose of this Guide

This Guide provides information and procedures for the product installation and operation of the 5 Port PoE Unmanaged 10/100Mbps Switch/Extender (LP-2334). This document is intended for technical personnel and to use this document effectively, you should have a working knowledge of Local Area Networking (LAN) concepts and hardware installation. In addition, you should be familiar with the following: Connection of Patch Cables with RJ45 connectors and the LAN addressing map for your particular Network, Mounting of Network hardware in a 19" equipment rack and local practices for power cord connections.

### IMPORTANT SAFETY INSTRUCTIONS FROM LAN Power

Read and keep these instructions. Follow all instructions and heed all warnings. Do not use this equipment near water and clean only with a dry cloth. Do not block any equipment ventilation openings. Install in accordance with manufacturer's instructions. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Unplug this equipment during lightning storms or when unused for long periods of time. Refer all servicing to qualified service personnel. Servicing is required when the equipment has been damaged in any way, liquid has been spilled, or object has fallen into the equipment, the equipment has been exposed to rain or moisture, does not operate normally, or has been dropped. The AC mains outlet, or appliance coupler shall be readily available to the operator as a means of power disconnection.

**CAUTION** – These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

**If You need Help** or additional support relating to the contents of this Guide, please contact LAN Power using one of the following methods: Phone: 1-510-275-4572 Fax: 1-510-824-5654 Mail: LAN Power, 47835 Westinghouse Drive, Fremont, CA 94539 Web Address: [www.lan-power.com](http://www.lan-power.com) Email: [support@lan-power.com](mailto:support@lan-power.com)

**Before contacting LAN Power for technical support**, please have the following information ready: the product model number and unit serial number. A description of the failure or symptoms of problem. A description of any action(s) already taken to resolve the problem (e.g., changing ports, rebooting the unit, etc...). The type of End device being powered including Manufacturer name and part number. Powering requirements of the End device. A description of your Network environment (layout, Ethernet switch description, cable type, etc...). The unit history (i.e., have you returned the unit before, is this a recurring problem, etc...)



**Please note only qualified personnel should install this unit and read instructions before attempting to install this unit**

**Verifying Contents of Package** - Unpack the PoE Injector and verify that you have the following items: LP-2334 5 Port PoE Unmanaged 10/100Mbps Switch/Extender  
**NOTE:** THE LP-2334 DOES NOT INCLUDE A POWER SUPPLY and MUST BE PURCHASED SEPERATELY. Use either the LAN Power **LP-2575** (Single Port ULTRA High Power Midspan PoE Injector) or **LP-2304PSU** (AC Mains Power Supply Unit)



**Technical Considerations** - Before you mount the 5 Port PoE Unmanaged 10/100Mbps Switch/Extender to a fixed location, consider all of the following: Determine optimal placement, check patch cord routing and AC outlet location. Collect and document Network information as required. Ensure the CAT 5 (or higher) cable length from the LP-2334 to the Powered End IP device does not exceed 328 feet/100 meters total length.

### Powering Up and Installing the 5 Port PoE Unmanaged 10/100Mbps Switch/Extender

1.) Connect the Power Supply Unit for the LP-2334 (which IS NOT SUPPLIED with unit and must be purchased separately) The LP-2334 can be powered with one of the following units:

a.) Connecting a LAN Power **LP-2575** (Single Port ULTRA High Power Midspan PoE Injector) – Connect a LAN data cable - CAT 5 (or higher) from the RJ45 port labelled *OUT* (bottom left) of the LP-2575 and the other end of the cable to the back of the LP-2334 into the RJ45 Port (far right RJ45) labelled *PoE POWER INPUT* (Min. 65 Watts) AND *DATA OUTPUT* (Max. 100Mbps). Once connected the **POWER IN** LED on the front of the LP-2334 will illuminate solid green.

b.) Connecting a LAN Power **LP-2304PSU** (AC Mains Power Supply Unit) – Plug the LP-2304PSU into an AC Outlet or UPS (Uninterruptible Power Supply Unit) Outlet ensuring that power cord from the LP-2304PSU and end DIN Plug Connector can reach the back of the LP-2334. Plug the DIN Plug Connector into the back of the LP-2334 round Power Input (far right of LP-2334) labelled *Mains PSU Input (LP-2304PSU) 48-56vdc 1.4-2.0A*. Once connected the **POWER IN** LED on the front of the LP-2334 will illuminate solid green.

2.) Attach a separate LAN data cable – CAT 5 (or higher) from the back of the LP-2334 for each of the 4 x RJ45 ports labelled *POE POWER OUT (15.4 Watts per Port) 1 2 3 4* to each of the IP End Devices. Note: The maximum LAN data cable distance from LP-2334 to the IP End Device is 328 Feet/100 Meters. Once the IP End Device is connected properly the following LED's will identify the following:

*DATA IN* LED will illuminate.

*PoE (15.4 Watts) POWER OUT 1 2 3 4* LED will illuminate if the IP End Device connected to the port has been detected as PoE enabled Device to IEEE 802.3af standard and up to 15.4 Watts of PoE Power is being supplied to the IP End Device.

*DATA OUT-FULL/HALF* LED will illuminate if the IP End Device is transmitting Full Duplex. If the IP End Device is transmitting in Half Duplex the LED will not illuminate but *DATA IN* LED will be lit.


*DATA OUT-10/100Mbps* LED will illuminate if the LP-2334 detects the IP End Device is transmitting up to 100Mbps. If the IP End Device is transmitting at 10Mbps or less the LED will not illuminate.

*DATA OUT-LINK* LED will Flash Yellow as the LP-2334 detects presence and transmission of any data on the respective port.

3.) If using a LAN Power LP-2304PSU to power the LP-2334 - Attach a LAN data cable – CAT 5 (or higher) from the RJ45 port on the back of the LP-2334 labelled PoE POWER INPUT (Min. 65 Watts) AND DATA OUTPUT (Max. 100Mbps) to ETHERNET SWITCH or IP Monitoring Device such as a computer. Up to 100Mbps of data will be transmitting from this cable which is generated from the IP End Devices.

The unit is now operating properly.

Note: The LP-2334 is enabled with DHCP and therefore requires no programming.

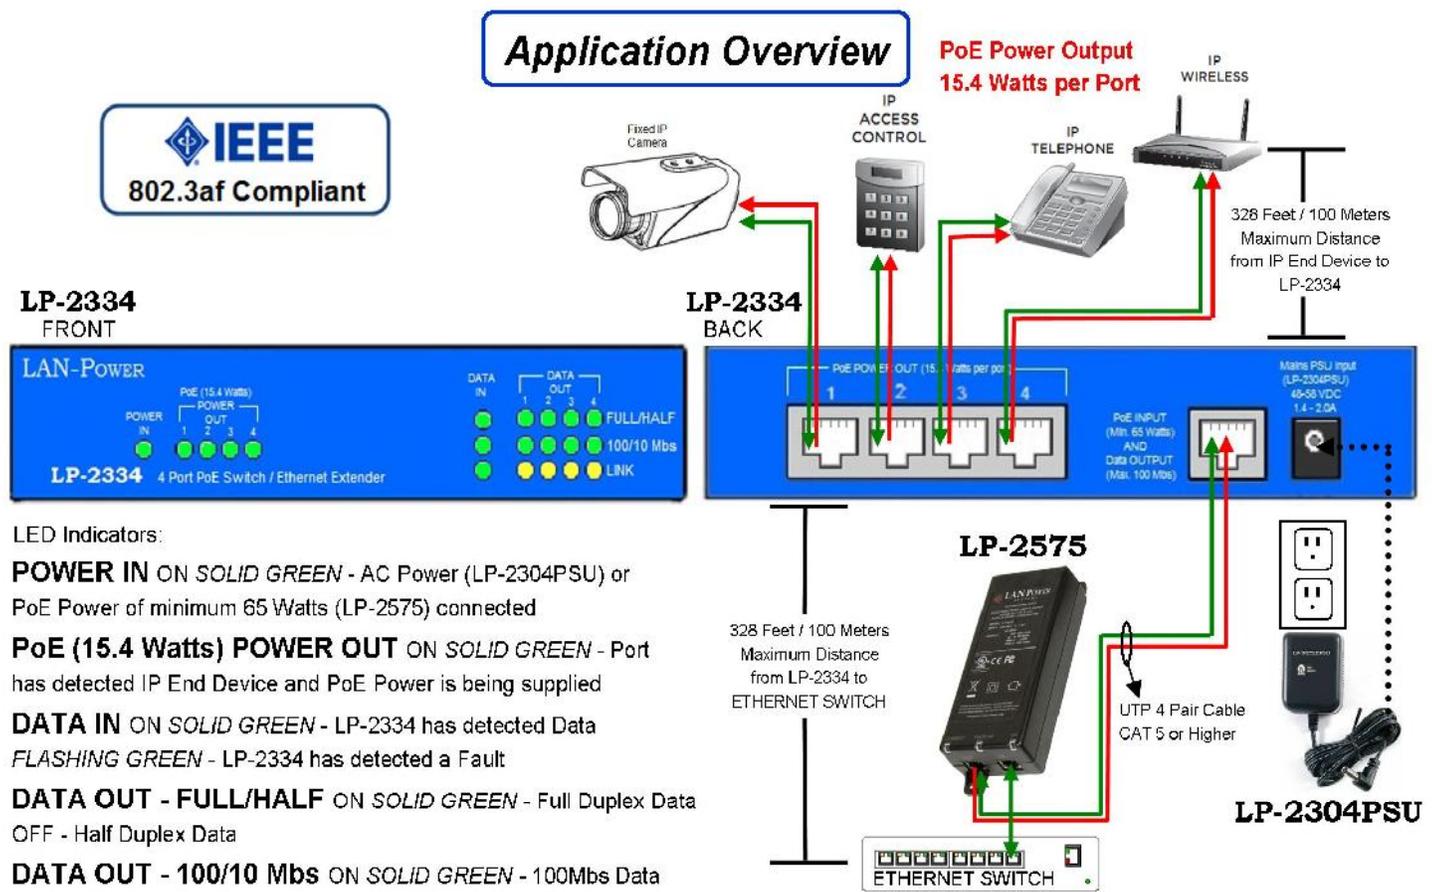

LED Indicators:

**POWER IN ON SOLID GREEN** - AC Power (LP-2304PSU) or PoE Power of minimum 65 Watts (LP-2575) connected

**PoE (15.4 Watts) POWER OUT ON SOLID GREEN** - Port has detected IP End Device and PoE Power is being supplied

**DATA IN ON SOLID GREEN** - LP-2334 has detected Data  
**FLASHING GREEN** - LP-2334 has detected a Fault

**DATA OUT - FULL/HALF ON SOLID GREEN** - Full Duplex Data  
OFF - Half Duplex Data

**DATA OUT - 100/10 Mbps ON SOLID GREEN** - 100Mbps Data  
OFF - 10Mbps Data

**DATA OUT - LINK FLASHING YELLOW** - Ethernet/Data Activity

**NOTE:** Either the **LP-2575** Single Port ULTRA High Power Midspan Injector **OR** the **LP-2304PSU** can be used to provide power to LP-2334 **(SOLD SEPERAETLY-NOT INCLUDED)**

### **Two Year Limited Warranty**

LAN Power warrants to the original consumer or purchaser that each of its products, and all components thereof, will be free from defects in material and/or workmanship for a period of 2 years from the original purchase date. Any warranty hereunder is extended only to the original consumer or purchaser and is not assignable. More at [www.lan-power.com](http://www.lan-power.com)

### **Notice to user**

LAN Power reserves the right to make changes in specifications and other information contained in this document and its web site without prior notice. The reader should in all cases consult LAN Power to determine whether any such changes have been made. The hardware described in this document is subject to change without notice due to market conditions or user requirements.

### SAFETY APPROVAL:



Rev 12-12



47835 Westinghouse Drive  
Fremont, Ca. 94539 USA  
Telephone: +1-510-275-4572 FAX: +1-510-284-2420  
[www.lan-power.com](http://www.lan-power.com) support@lan-power.com