



IQ WiFi

Dependable Wi-Fi coverage for home or business

IQ WIFI OVERVIEW

- 4- Whats included in the box
- 5- IQ WIFI overview: exterior
- 6- IQ WIFI overview: labels
- 7- Choose your installation type
- 8- Evaluating network coverage

INSTALLING THE IQ WIFI

- 10- Connecting the wires
- 11- Setting up the network

MANAGING IQ WIFI FROM IQ PANEL

- 13- Connecting additional agents
- 14- Software updates
- 15- Renaming your network name (SSID)
- 16- Creating a guest network
- 17- Testing your speed
- 18- Rebooting IQ WIFI mesh
- 19- Renaming controller or agents
- 20- Viewing connected devices

MANAGING IQ WIFI FROM WEB INTERFACE

- 22- Connecting additional agents from web
- 23- Software updates from web
- 24- Renaming default network name (SSID)
- 25- Creating a guest network from web
- 26- Renaming controller or agents from web
- 27- Viewing connected devices from web
- 28- WAN settings
- 29- Connection type
- 30- LAN settings
- 31- DHCP server
- 32- DHCP reservation
- 33- How to change admin password

CONNECTING TO THE NETWORK

- 35- Connecting to the network


TROUBLESHOOTING

- 37- Sequence to restart your network
- 38- Controller and agents do not sync
- 39- You can't login into the IQ WIFI
- 40- How to troubleshoot network connectivity issues


SPECIFICATIONS

- 43- Specifications


IQ WIFI OVERVIEW

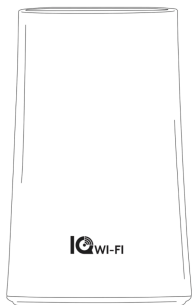

IQ WiFi

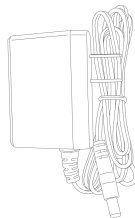

Power Supply

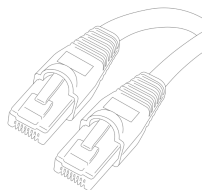

Ethernet Cable



QR code sticker

SUPPORT



QUESTIONS?


Contact us at
855-4QOLSYS
Or email us at

[intrusion-
support@tycoint.com](mailto:intrusion-support@tycoint.com)





ABOUT THIS GUIDE

This document outlines the basic hardware specifications and software directions to install and customize the IQ WiFi. Note that the information presented is not comprehensive, but is specifically dedicated to those menus, features, and systems accessible solely to those with the proper installation code. The information contained is confidential and proprietary, and is solely owned by Johnson Controls. Any reproduction, modification, or distribution without permission is strictly prohibited.

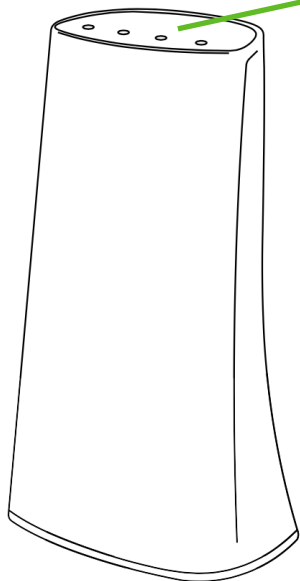
FRONT



LED Status Lights

-  Error
-  Internet connected
-  Broadcasting wirelessly
-  Power on

BACK

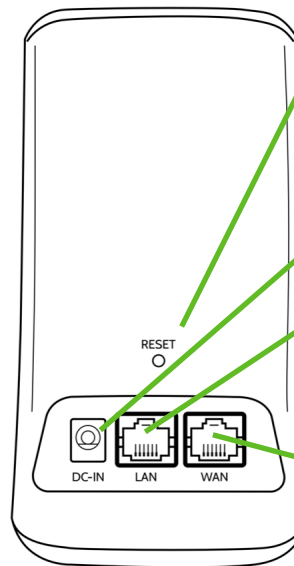

Reset Button

Short press: restart
Press/hold 15 sec:
Factory Default

DC-IN

Power Supply


LAN

Local Area Network
(Network out)

WAN

Wide Area Network
(Internet in)

SIDE

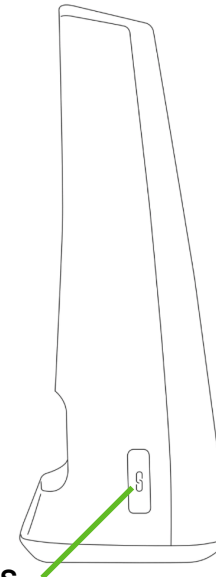


WPS

Once this button has been pushed you have 2 minutes to push the **WPS button** on a corresponding Wi-Fi device to connect it to the network

The label on the bottom of IQ WiFi shows the device's MAC address and serial number.

The packaging also includes a QR code that can be scanned by a smartphone camera for easy setup

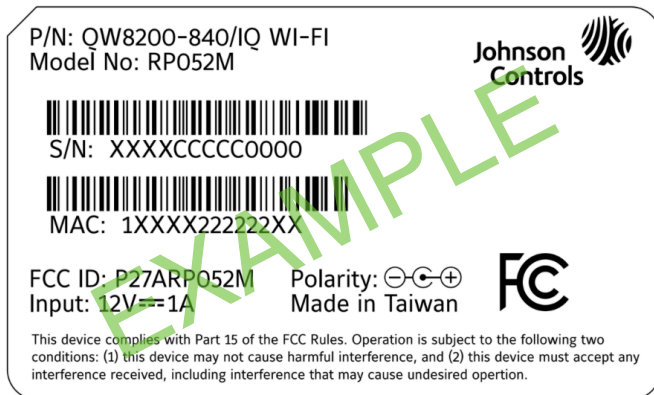

Label on the bottom of each unit



QR code included in the box


You can set up the IQ WiFi in either of these ways:

As the only wireless network on the premises:




- Great for:
- Improving connectivity for ALL Wi-Fi devices on the network
 - Offering support for the entire network

In parallel with an existing wireless network:

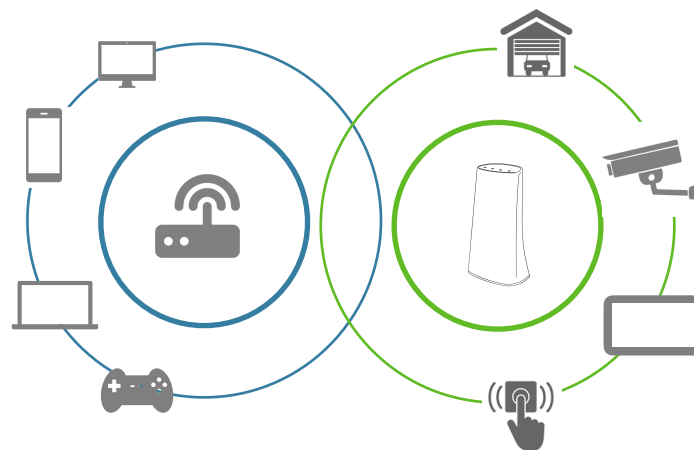

- Great for:
- Keeping the security and smart-home devices private/hidden from the rest of the Wi-Fi connected devices on the network
 - Making online/remote support easier as only known/authorized devices should be connected
 - Ensuring better connectivity for dealer supported devices

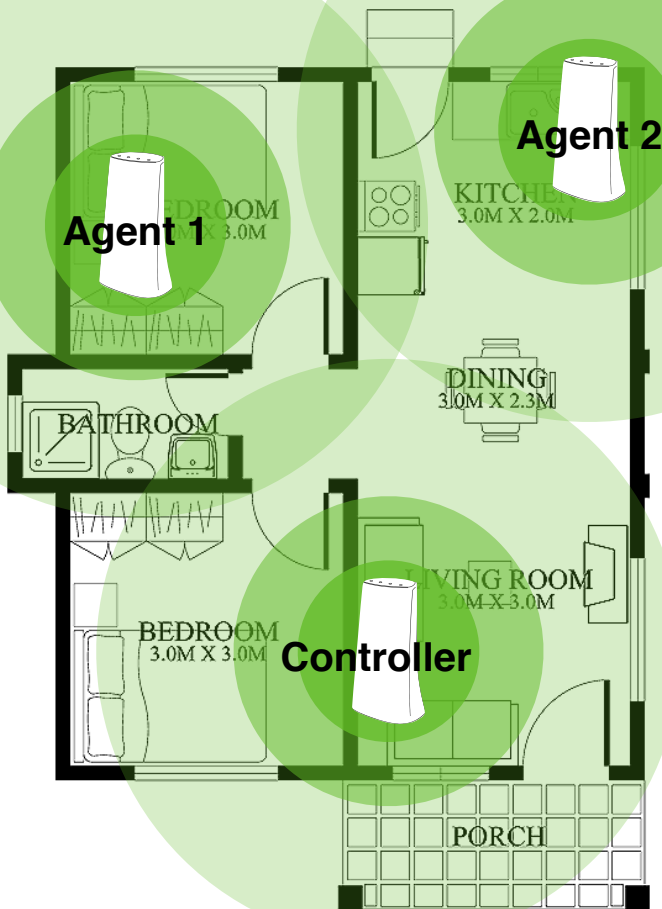




1 unit covers up to
1,500 sq ft

Add up to 8 units

If a single IQ WiFi does not cover the location as desired, you can add up to eight (8) additional nodes to eliminate dead spots and boost overall network performance.*

**IQ WiFi will not increase the speed coming from the customer's ISP (Internet Service Provider) but can ensure the customer is getting the best coverage throughout their location. Please note that not all buildings are the same, and building materials, wireless interface, and other factors can limit Wi-Fi range.*

INSTALLING THE IQ WIFI

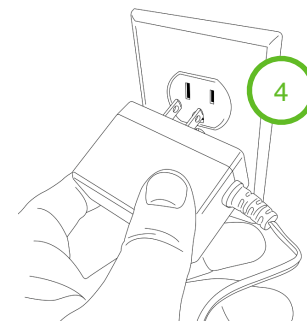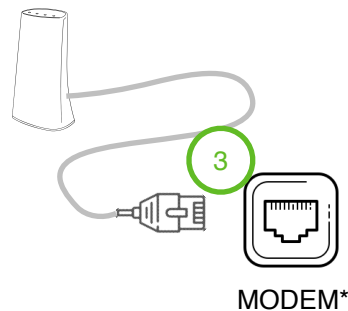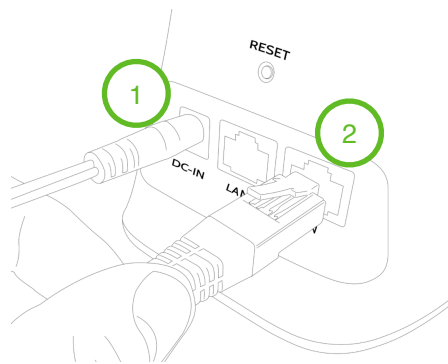


1. Plug the barrel jack end of the power supply into the “DC-IN” port
2. Connect the provided ethernet cable into the “WAN” port

3. Connect the opposite end of the provided ethernet cable into the “ETHERNET” port on the modem*.

4. Plug in your power supply to the wall outlet. System may take up to 3 minutes to power up.


**Please note: If you are installing IQ WiFi to run in parallel to the customer’s primary network, plug the ethernet cable into an available port on the customer’s existing router. When connecting an ethernet cable to the WAN port of IQ WIFI that has internet connectivity IQ WIFI will default to Controller.*

5

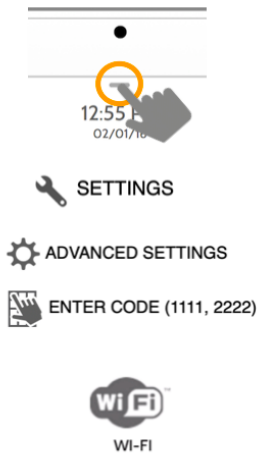


Once the IQ WIFI has powered up completely, the power LED will stop flashing. Activate WPS on IQ Panel. (*Open settings tray, touch settings, advanced settings, type valid code, choose WI-FI.*)

6

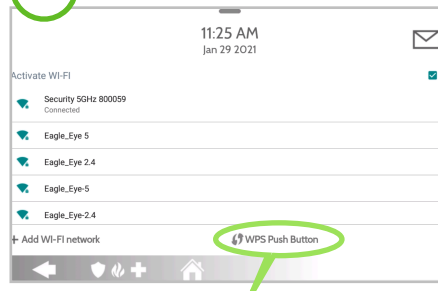


Touch "WPS Push Button"

7



Touch "CONNECT"

8

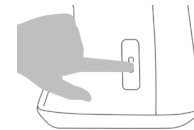

Press the physical WPS button on IQ WIFI

9



IQ Panel will confirm when connection is complete. (If, fails repeat from step 5)


**Please note: Connecting manually from IQ Panel choose Network Name (SSID) IQ WIFI XXXXXX (the "X" represents the MAC address printed on the label located on the bottom of the IQ WIFI). Default password is the serial number printed on the bottom label of the IQ WIFI.*

**Using WPS mode, IQ WIFI will auto connect to 2.4 or 5 GHz based on optimized signal per environment.*

MANAGING IQ WIFI FROM IQ PANEL

You may choose to improve the WIFI network by adding additional “agents” to the network (up to 7). Agents must be within range of IQ WIFI in order to sync wirelessly.


1

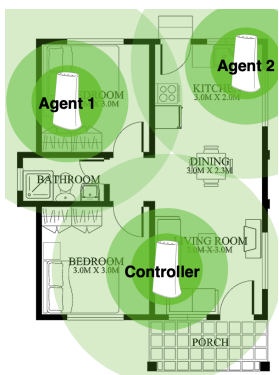

Example of where controllers and agents may be placed for best performance.

Choose your location to maximize your mesh WI-FI network. Ensure desired location has an available power outlet.


2

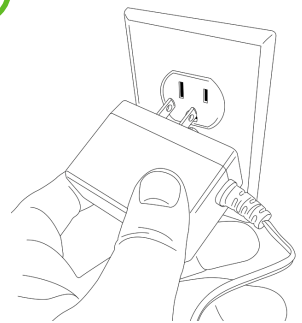

Connect both ends of the power supply to an available outlet.*


**You may choose to connect your agents power close to your controller during the pairing process and move to your desired location once pairing is complete.*

3

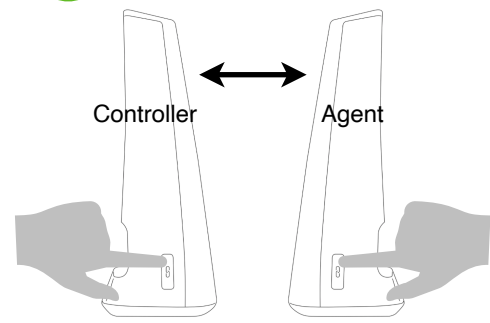


Once the agent has powered up completely, the power LED will stop flashing. Activate WPS on the controller, then activate WPS on the agent

After the initial setup, update you're IQ WIFI to the latest version of firmware and validate that the IQ WIFI mesh is on the same version of firmware

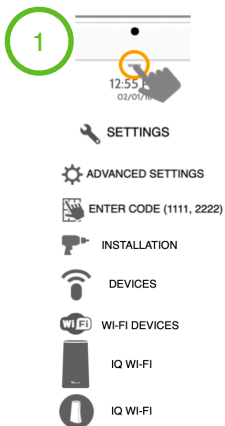


Open settings tray, touch settings, advanced settings, type valid code, touch installation, devices, WI-FI devices, IQ WI-FI, IQ WI-FI

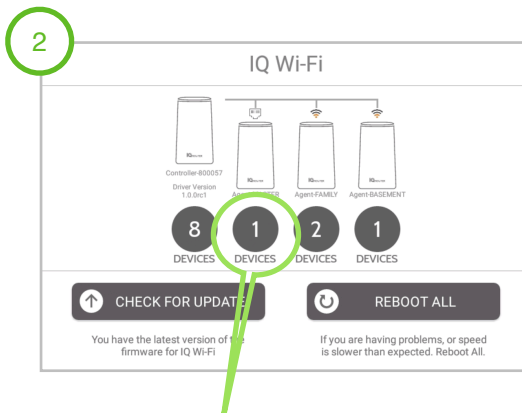


Touch agent **DEVICES** icon to verify the version of firmware on each added agent.

Touch the **CHECK FOR UPDATE** icon to update the entire IQ WIFI mesh.

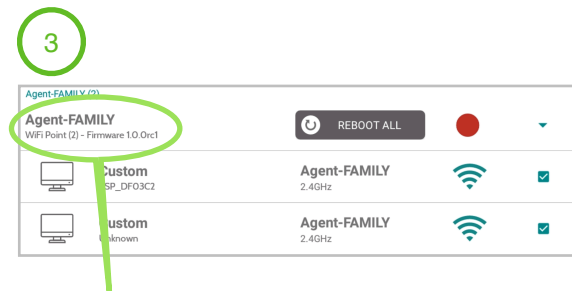


Current agent firmware


**Note: If adding an additional agent to a preexisting IQ WIFI to improve wireless performance validate that the firmware on the IQ WIFI mesh is the same and if it is not, update.*

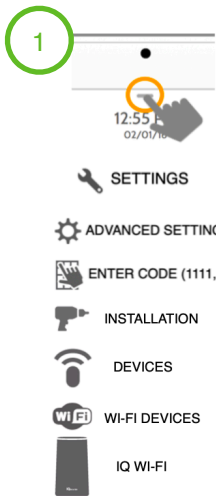

Open settings tray, touch settings, advanced settings, type valid code, touch installation, devices, WI-FI devices, IQ WI-FI

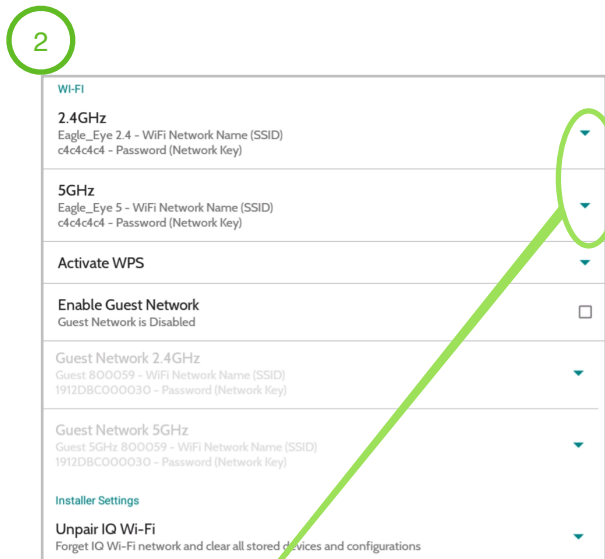

Touch the down arrows to make edits to the Network Names (SSIDs)

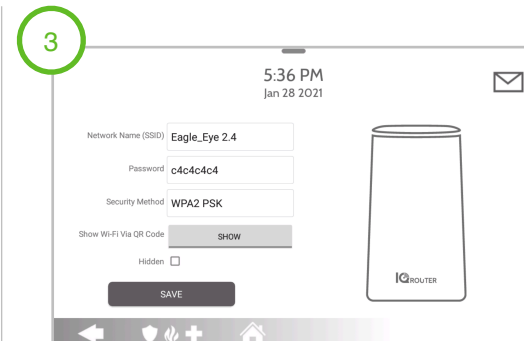

Enter in a unique **Network Name (SSID)** of your choice.


Enter a password that you can remember.

This information will be needed to connect to the IQ WIF from any other wireless device.


A Hidden option is disabled by default. *(Checking this box will hide the Network Name (SSID) but still allow connectivity)*

**Note: By default the IQ WIFI will broadcast two visible Network Names (SSID) for 2.4GHz and 5GHz and two hidden Network Names (SSID) for Security 2.4GHz or 5GHz XXXXXX. With the hidden security SSID feature designed to push IQ Panel and IQ Remote to once SSID has been updated no need to reconnect IQ devices.*


By default the Guest Network is disabled by default. To enable follow these steps

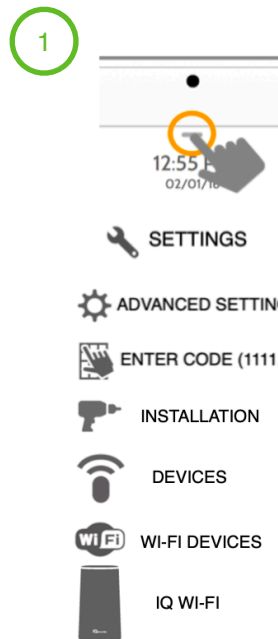


Open settings tray, touch settings, advanced settings, type valid code, touch installation, devices, WI-FI devices, IQ WI-FI

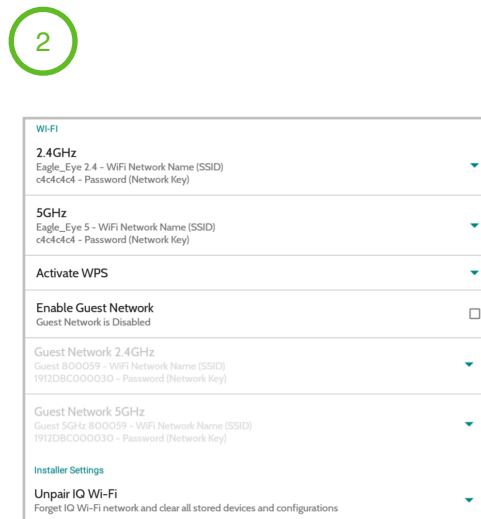

Scroll down to the Enable Guest Network

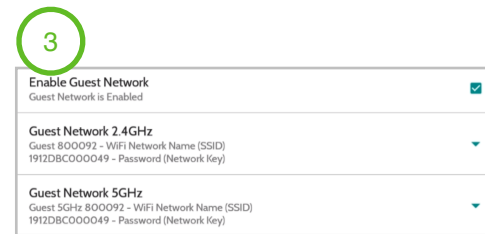


Touch the down arrows to make edits to the 2.4/5GHz Guest Network Name (SSID)

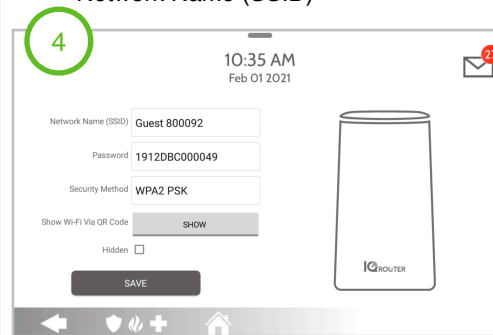

Enter a unique Network Name (SSID)

1

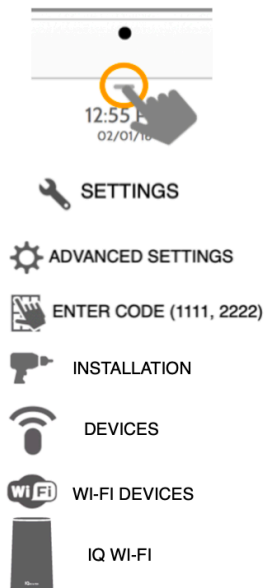

Open settings tray, touch settings, advanced settings, type valid code, touch installation, devices, WI-FI devices, IQ WI-FI


2



Touch the **INTERNET** icon


3

Speed Test

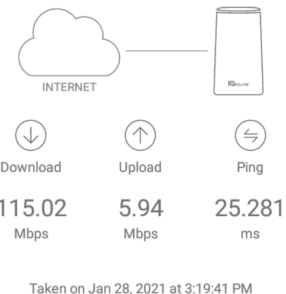

Touch the **TEST MY SPEED** button


If you are having problems, or speed is slower than expected, reboot your IQ WIFI Mesh

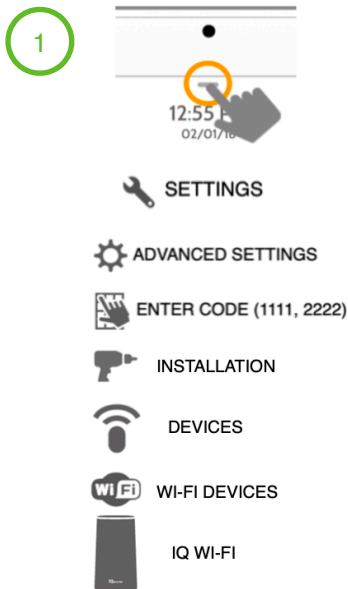

Open settings tray, touch settings, advanced settings, type valid code, touch installation, devices, WI-FI devices, IQ WI-FI




Touch either the **IQ WI-FI** or **WIFI POINTS** icon

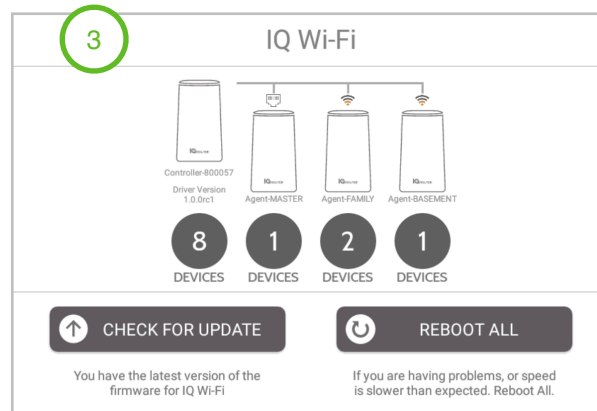


Touch the **REBOOT ALL** button

**IQ WiFi will not increase the speed coming from the customer's ISP (Internet Service Provider) but can ensure the customer is getting the best coverage throughout their location. Please note that not all buildings are the same, and building materials, wireless interface, and other factors can limit Wi-Fi range.*

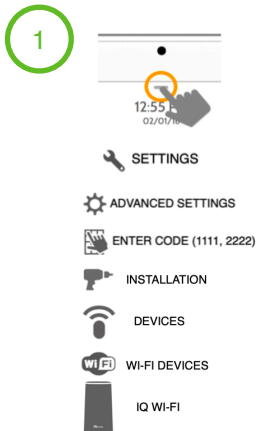


Open settings tray, touch settings, advanced settings, type valid code, touch installation, devices, WI-FI devices, IQ WI-FI, IQ WI-FI

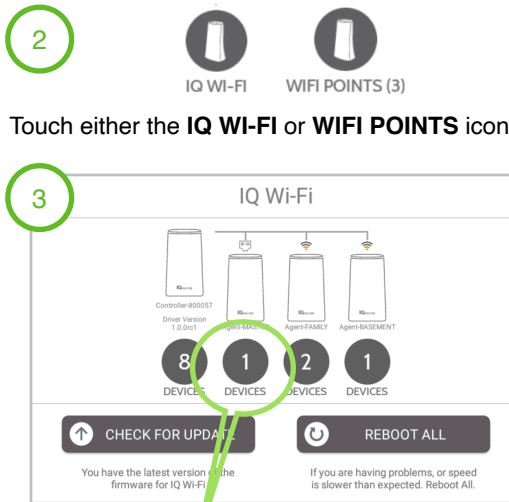


Touch either the **IQ WI-FI** or **WIFI POINTS** icon

Touch agent **DEVICES** icon on the Controller or Agent you wish to rename.

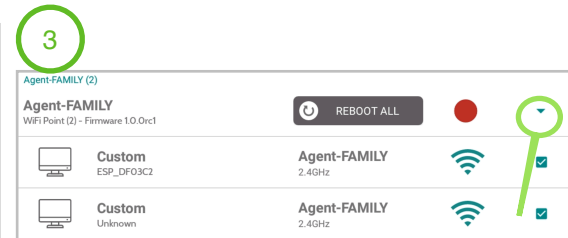


Touch the down arrow

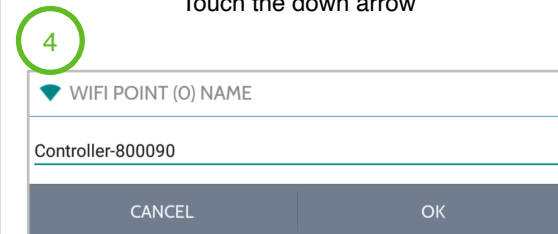

Type in a unique controller or agent name.

**When renaming a controller or agent, please note that the unique name entered can't have any spaces.*

1

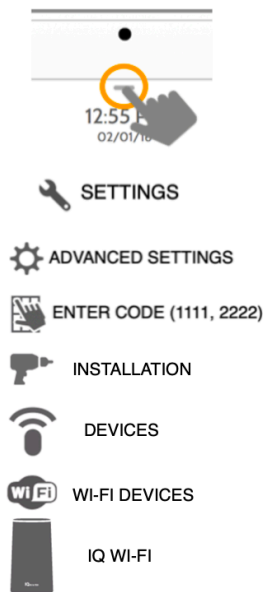


Open settings tray, touch settings, advanced settings, type valid code, touch installation, devices, WI-FI devices, IQ WI-FI

2

4
DEVICES

Touch the **DEVICES** icon

3

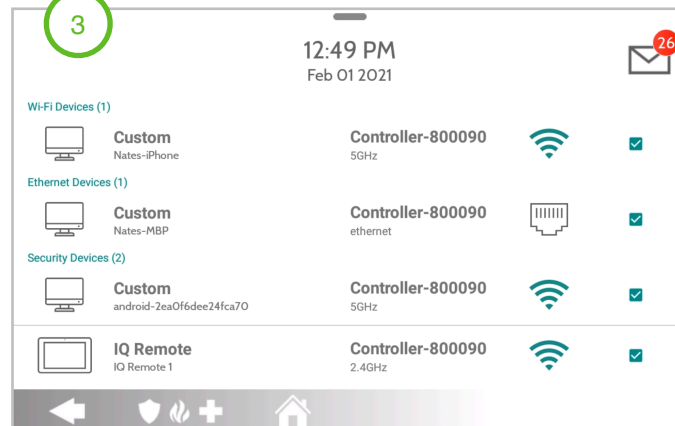

**Note: When viewing connected devices, you can manage internet connectivity by unchecking (not internet) the checkbox of a connected device.*

MANAGING IQ WIFI FROM WEB INTERFACE

After all the physical connections are made (see steps 1-4 on page 10), the back-haul mesh activation can be enabled through the web interface, without accessing the IQ Panel settings.

1

https://192.168.105.1

From Chrome go to 192.168.105.1

2



Authorization Required

Please enter your username and password.

Username

Password



Login with default user name and password:

Username: admin

Password: XXXXDBC0000XX

3

NETWORK

WIFI MESH

ADVANCED

STATIC LEASES

PORT FORWARDING

Navigate to **NETWORK** tab and select **WIFI MESH**

4

Wifi Mesh

Basic

Device Role

Controller

EasyMesh On-board

(Wifi will select the back-haul band automatically)


Optimize Mesh Network

(It will take a few minutes)

Runtime Topology

Touch the **Connect a New Mesh Device** to trigger WiFi back-haul band automatically.

5

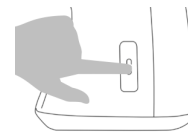

Within 2 minutes press the WPS button on an additional IQ WIFI.

A software update can be done manually after downloading an updated version of firmware from the dealer site.

1

https://192.168.105.1

From Chrome go to 192.168.105.1

2

Authorization Required

Please enter your username and password.

Username:

Password:

Login Clear



Login with default user name and password:
Username: admin
Password: XXXXDBC0000XX

3

SYSTEM

CHANGE PASSWORD

FIRMWARE UPGRADE / BACKUP SETTINGS

REBOOT

Navigate to **SYSTEM** tab, and down to **FIRMWARE UPGRADE / BACKUP SETTINGS**

4

Firmware Upgrade/Backup Settings

Firmware Upgrade | Backup/Restore Settings

Firmware Upgrade: no file selected

Touch the **Choose File** icon find the downloaded file located on your computer.

5

Firmware Upgrade/Backup Settings

Firmware Upgrade | Backup/Restore Settings

Firmware Upgrade: Q0.4.9.bin

Press **Upgrade** icon once the updated file has been selected.

**Note: Once a software update has been kicked off, could take as long as 20 minutes plus the time to reboot. LEDs on the IQ WIFI will flash indicating it is updating.*

1

https://192.168.105.1

From Chrome go to 192.168.105.1

2



Authorization Required

Please enter your username and password.

Username

Password




Login with default user name and password:

Username: admin

Password: XXXXDBC0000XX

3

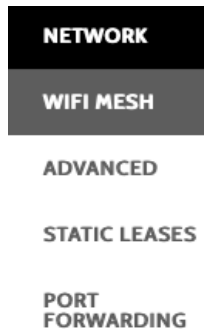

Navigate to **NETWORK** tab and select **WIFI MESH**

4

Name	EAGLE_EYE 2.4	
Security Mode	WPA2 - Personal	<input type="button" value="Edit"/>
Password	c4c4c4c4	
Hidden	Disabled	

Scroll down the page to locate the WiFi SSID Settings. Press the **Edit** button to make changes from the default settings.

5

Edit Primary Network(2.4G Hz)

Name	<input type="text" value="EAGLE_EYE 2.4"/>
Security Mode	WPA2 - Personal
Password (8-64 characters)	<input type="text" value="c4c4c4c4"/>
Hidden	<input type="checkbox"/>

Enter a unique Network Name (SSID) and password.

**Note: Once you have touched the save and apply to the Network Name (SSID) you will need to reconnect to the new unique Network Name (SSID) with the updated password.*

1

https://192.168.105.1

From Chrome go to 192.168.105.1

2



Authorization Required

Please enter your username and password.

Username

Password



Login with default user name and password:

Username: admin

Password: XXXXDBC0000XX

3



Navigate to **NETWORK** tab and select **WIFI MESH**

4

Scroll down to WiFi Settings, and touch the **Enable Guest Network (2.4GHz or 5GHz)**

5

Name	Guest 800092
Security Mode	WPA2 - Personal <input type="button" value="Edit"/>
Password	1912DBC000049
Hidden	Enabled

Touch the **Edit** icon and create a unique Network Name (SSID) and password.

1

https://192.168.105.1

From Chrome go to 192.168.105.1

2



Authorization Required

Please enter your username and password.

Username

Password



Login with default user name and password:

Username: admin

Password: XXXXDBC0000XX

3

Wifi Mesh Device

Warning: There are unsaved changes that will be lost while rebooting!


Name	Role
<input type="text" value="Controller-800057OFFICE"/>	Controller
<input type="text" value="Agent-800048BASEMENT"/>	Agent
<input type="text" value="Agent-80008AMASTER"/>	Agent
<input type="text" value="Agent-80003EFAMILYCOL"/>	Agent

Scroll down on the home page to locate the **WiFi Mesh Device** section and in the **Name** view, enter a unique controller or agent names


4

Touch the Save and Apply

**Note: Controller and agent unique names can't support spaces*

1 

From Chrome go to 192.168.105.1



2 

Authorization Required

Please enter your username and password.


Username

Password


 Login  Clear



Login with default user name and password:
Username: admin
Password: XXXXDDBC0000XX

3 


WIFI MESH




STATIC LEASES

PORT FORWARDING

Navigate to **NETWORK** tab and select **ADVANCED**

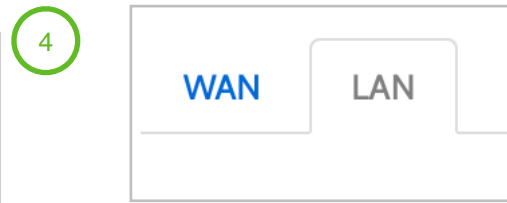


Navigate to LAN (Local Area Network)

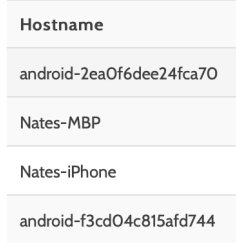
5 

Connected Device
Hostname
android-2ea0f6dee24fca70
Nates-MBP
Nates-iPhone
android-f3cd04c815afd744

Scroll down to **Connected Devices** to view Hostname, IPv4 -Address, Leasetime remaining, Interface, RSSI, Uplink node, and SSID

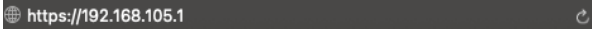1 

From Chrome go to 192.168.105.1

2 

Authorization Required


Please enter your username and password.

Username


Password



Login with default user name and password:
Username: admin
Password: XXXXDBC0000XX

3 


WIFI MESH




STATIC LEASES

PORT FORWARDING

Navigate to **NETWORK** tab and select **ADVANCED**

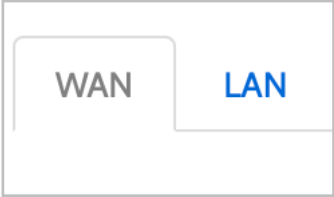4 

Navigate to WAN (Wide Area Network)

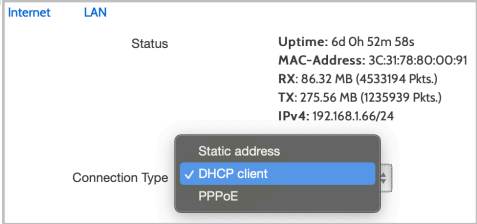
5 

Scroll down and click on **Connection Type** to select the proper ISP


PPPoE is a **connection** protocol (mainly for xDSL **connections**). Using that protocol a PC can **connect** to a network **and** receive an IP. PPPoE is a way to encapsulate network traffic, based on credentialed access (i.e. username and password provided from an ISP).

Static IP means that regardless of the **connection method**/request the same Network Interface Card (NIC) will be issued one, pre-defined IP that will never change.

DHCP is a way for a network to allocate unique IP addresses to the devices (i.e. computers and smartphones, etc.) within it so that traffic can be delivered back-n-forth without confusion.

1  <https://192.168.105.1>

From Chrome go to 192.168.105.1

2 

Authorization Required

Please enter your username and password.

Username

Password



Login with default user name and password:
Username: admin
Password: XXXXDBC0000XX

3

NETWORK

WIFI MESH

ADVANCED

STATIC LEASES

PORT FORWARDING

Navigate to **NETWORK** tab and select **ADVANCED**



Navigate to LAN (Local Area Network)

5

Connection Type

Really switch protocol? Switch protocol

IPv4 address

IPv4 netmask

After changing LAN IP (it may take about 2 - 3 minutes), please reconnect LAN client devices (e.g. NB, mobile phone) and access to Web GUI with new IP.

Scroll down to **IPv4 address** to change the gateway (router) address.

1

https://192.168.105.1

From Chrome go to 192.168.105.1

2



Authorization Required

Please enter your username and password.

Username

Password



Login with default user name and password:

Username: admin

Password: XXXXDBC0000XX

3

NETWORK

WIFI MESH

ADVANCED

STATIC LEASES

PORT
FORWARDING

Navigate to
NETWORK tab and
select **ADVANCED**

4



Navigate to LAN (Local Area Network)

5

DHCP Server

Starting IP Address

Number of IP Address

Scroll down to **DHCP Server** to change the
DHCP settings.

**Note: DHCP server default settings support up to 150 addresses beginning at 192.168.105.100 through 192.168.105.250*

1

https://192.168.105.1

From Chrome go to 192.168.105.1

2



Authorization Required

Please enter your username and password.

Username

Password



Login with default user name and password:

Username: admin

Password: XXXXDBC0000XX

3

NETWORK

WIFI MESH

ADVANCED

STATIC LEASES

PORT FORWARDING

Navigate to **NETWORK** tab & **STATIC LEASES**

4

Hostname

Enter a **Hostname** for the connected device

5

MAC-Address


Use the dropdown to select the **MAC-Address** of the connected device.

6

IPv4-Address

Use the dropdown to select the **IPv4-Address** and touch **Save & Apply**.

Note: **DHCP Servers support something called a “**DHCP Reservation**”, which essentially allows you to provide a pre-set **IP address** to a specific client based on it's physical **MAC address**. This means that the device will always get the same **IP address** and it will never change.*

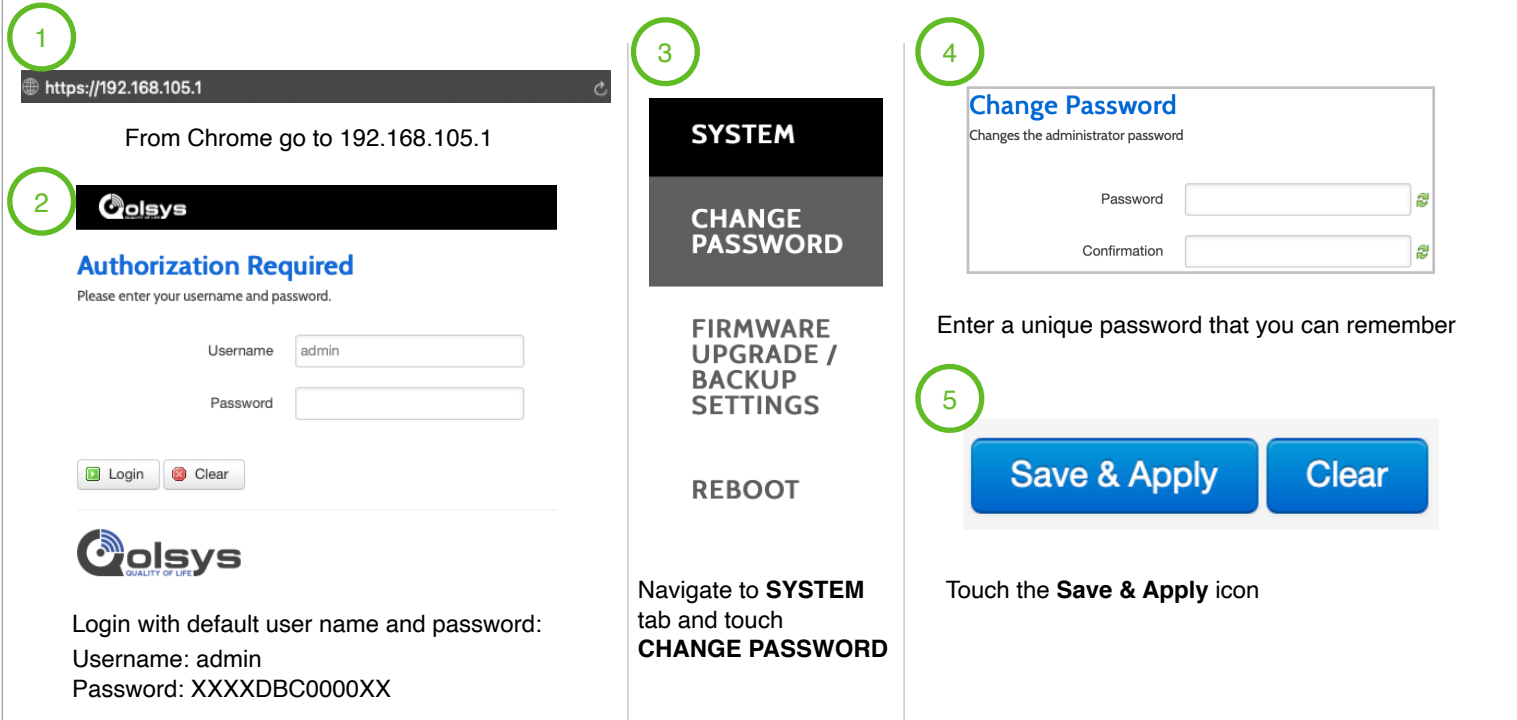

1 From Chrome go to 192.168.105.1

2 Authorization Required
Please enter your username and password.

Username: admin
Password: []

Login Clear

3 SYSTEM
CHANGE PASSWORD
FIRMWARE UPGRADE / BACKUP SETTINGS
REBOOT

Navigate to **SYSTEM** tab and touch **CHANGE PASSWORD**

4 Change Password
Changes the administrator password

Password: []
Confirmation: []

Enter a unique password that you can remember

5 Save & Apply Clear

Touch the **Save & Apply** icon

**Note: Default username is admin and default password is the serial number printed on the bottom of IQ WIFI.*

CONNECTING TO THE NETWORK

Wired Connection:

- Connect your laptop to the IQ WiFi via the LAN port on the back of the controller or agent LAN port.
- Open up a web browser (chrome recommended) and type in the following:
 - \\192.168.105.1 (default gateway address)

Wireless Connection:

- The default SSID is "IQ WIFI XXXXXX" and "IQ WIFI XXXXXX 5G". (XXXXXX is the last 6 digits of the MAC address of the IQ WIFI)
- Using the QR code sticker you can auto connect to the default Network Name (SSID)
- WPS mode is also supported for wireless connection.

Default User Name:

- admin

Default Password:

- The S/N number printed on the bottom of the IQ WiFi is the default password. Note: Passwords are case sensitive

P/N: QW8200-840/IQ WI-FI
Model No: RP052M



S/N: XXXXCCCC0000



MAC: 1XXXX22222XX

FCC ID: P27ARP052M
Input: 12V=1A

Polarity: ⊖ ⊕ ⊕ ⊖
Made in Taiwan



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Scan with IQ Panel


SSID: IQ WIFI 800062

Password: 1234DBC000012

TROUBLESHOOTING

REBOOTING SEQUENCE


1. Unplug modem - power up modem
2. Unplug IQ WIFI - power up IQ WIFI
3. (If applicable) Unplug network switch - power up network switch
4. Unplug agents - power up agents

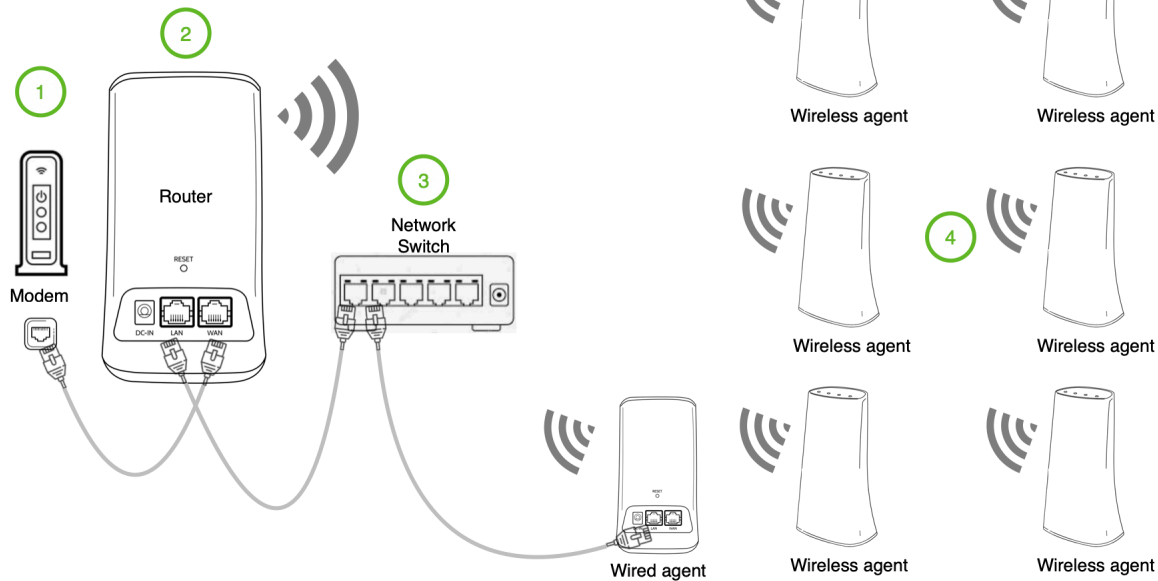

If you are experiencing difficulty syncing the controller and the agent, we recommend that you move the agent into the same room as the controller during the sync. Then move the agent to a different location.


To sync the controller and the agent (see page 14):

1. Place the agent in the same room as the IQ WIFI. Use this agent location only during the sync process.
2. Connect the agent to a power source.
3. Wait for the agent power LED to light solid GREEN.
4. Press the WPS button on the controller and then within two minutes, press the WPS button on the agent.
5. Wait for the agent internet LED to light solid GREEN. The agent WiFi LED will slowly blink GREEN when communicating.
6. Move the agent to a new location and connect the agent to a power source.
7. At the new location, check the agent power LED and make sure it is solid GREEN.
If the agent error LED lights up RED, make sure you are within range and try again.

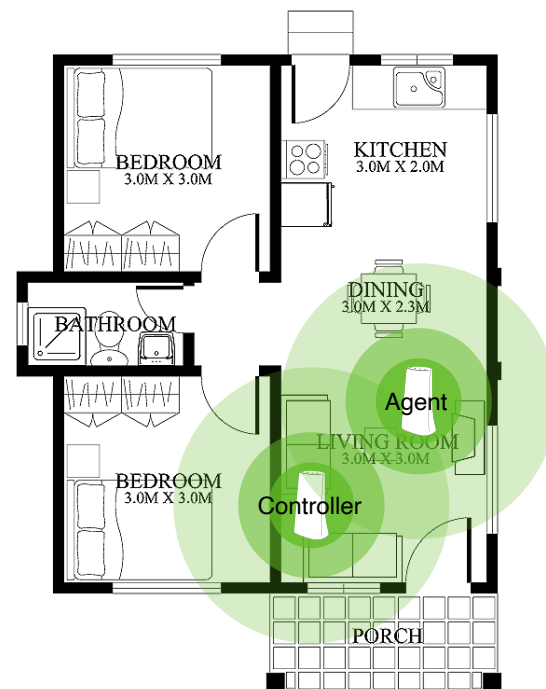

Make sure that your computer or IQ Panel is connected to the IQ WiFi network. If you do not want to use a WiFi connection, you can connect your computer to the IQ WIFI with an Ethernet cable.

If you changed the admin password and you forgot what it is, reset the IQ WIFI back to factory default settings.

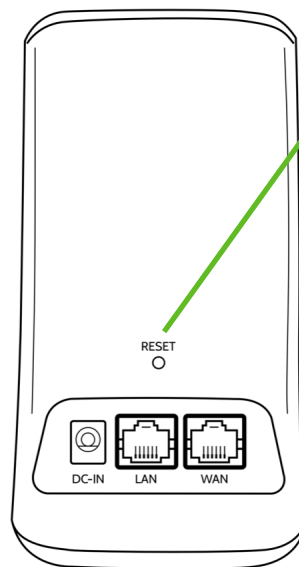

Reset Button

Short press: restart
Press/hold 15 sec:
Factory Default


Check your network and Internet connections:

1. Make sure that your WiFi-enabled computer or IQ Panel is connected to the IQ network.
2. If you are connected to the IQ network but can not access the Internet, check to see if your Internet connection is working.
3. Launch a web browser from a computer or WiFi device that is connected to the network.
4. Enter the DEFAULT GATEWAY ADDRESS 192.168.105.1, A login window opens.
5. Enter the IQ WIFI admin username and password. The user name is **admin**.
6. The default password is the S/N printed on the bottom label of the Controller. The user name and password are case-sensitive.
7. The Home Screen is displayed

4



From Chrome go to 192.168.105.1

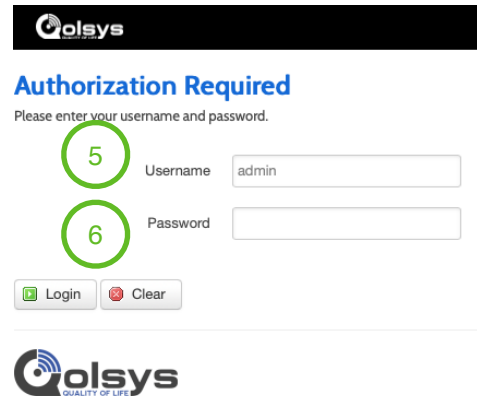

8. From the web interface Click NETWORK > ADVANCED tab.

The ADVANCED Home page displays.



9. Check that an IP address is shown for the WAN Internet IPv4 section.

10. If 0.0.0.0 is shown, your IQ WIFI did not obtain an IP address from your Internet service provider (ISP) or from the customers existing network.

If your IQ WIFI cannot obtain an IP address from the WAN, you can force your cable or DSL modem to recognize your new IQ WIFI by restarting your network. For more information, see Sequence to restart your network on page 41.

If your IQ WIFI is still unable to obtain an IP address from the ISP, the problem might be one of the following:

- Your Internet service provider (ISP) might require a login program. Ask your ISP whether they require PPP over Ethernet (PPPoE) or some other type of login.
- If your ISP requires a login, the login name and password might be set incorrectly.

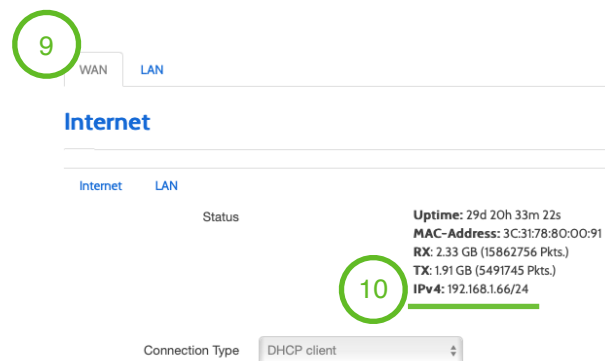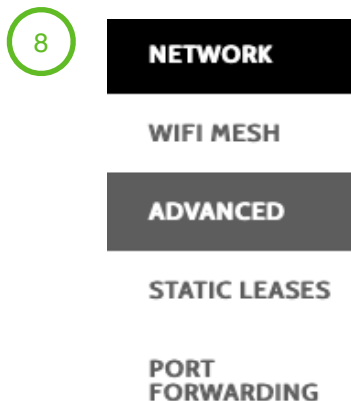

SPECIFICATIONS

Part	Description
Process and Memory	SSoC: MT7621DA (MIPS1004Kc dual-core 880MHz, SPI NOR Flash 64MB) Memory: 128MB DDR3 embedded
Connectors	1 DC Power Jack 2 RJ-45 Connectors
LED and Button	LEDs: 4 Single Color LED Buttons: 1 WPS Button on the side 1 Reset button on the back
Antenna	4 Wi-Fi internal antennas
Power Adapter	Input: 100-240VAC, 50-60Hz, 0.3A Max Output: 12 VDC, 1A
Compliance	FCC
Dimensions (H x W x D)	150mm x 89mm x 57.2mm
Weight	172g
Operating Temperature	0°C - 40°C (32°F - 104°F)
Operating Humidity	10% - 90% RH (non-condensing)
Storage Temperature	-20°C -60°C (-4°F - 140°F)
Storage Humidity	5% - 95% RH (non-condensing)

Network and Software	Notes
Ethernet	LAN and WAN Gigabit Ethernet Ports
Wireless	IEEE 802.11 b/g/n 2.4GHz IEEE 802.11 a/n/ac 5GHz
DHCP	Server, Client
Protocols	IPv4 and IPv6
Guest Network	2.4GHz/5GHz
WiFi EasyMesh Standard	Supported
Ethernet On-Boarding	Supported
Topology Dump	Supported
OTA	Supported
Application	OpenWRT Web GUI Configuration

Johnson Controls



Conforms to UL Std. S985, 1023. & 1610
Certified to ULC Sub C1023 & ULC Std S545
Johnson Controls Inc. proprietary.
Reproduction without permission is not permitted.

Document#: IQP2-IM-8-20
Revision Date: 12-16-2020
Software version: 2.5.0