


IPW-10VC

INSTALLATION GUIDE


The IPW-10VC is an analog-to-IP converter kit that uses 2-conductor copper wire to connect IP intercom stations. The kit includes one IPW-10VR rack-mount receiver module and ten IPW-1VT transmitter modules.

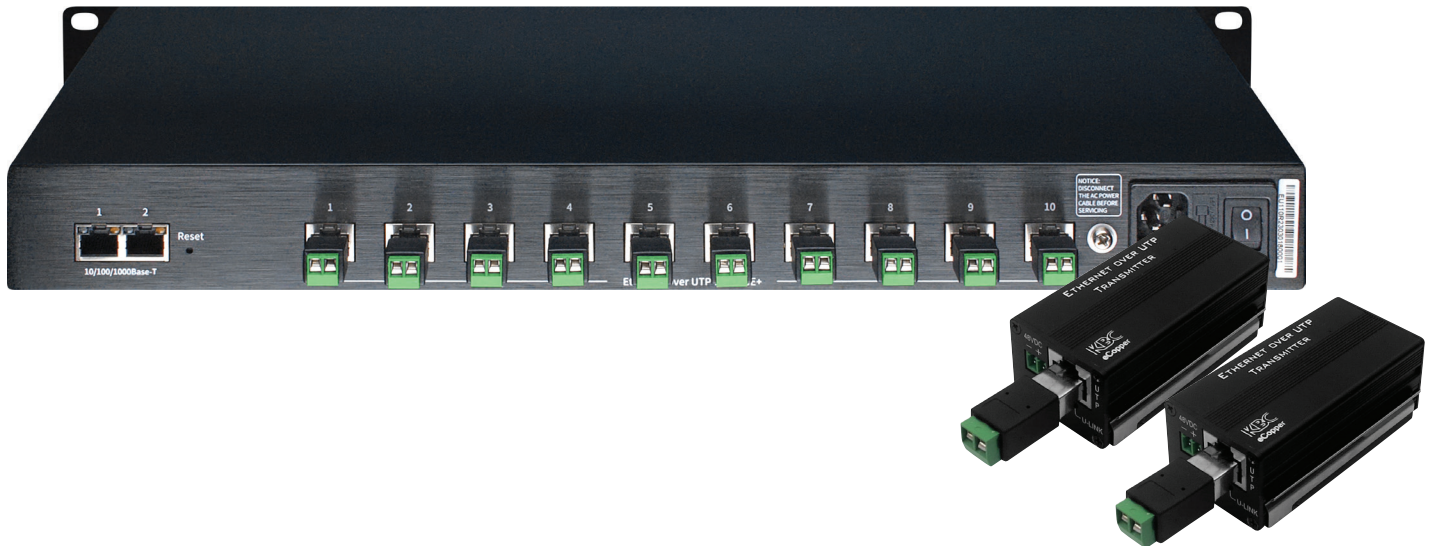

Features

- Works with existing 2-conductor copper wire
- Provide PoE to door stations up to 1000 feet away
- Connects up to ten door stations with a single network port
- Rack mountable
- LED status indicators


Package Contents

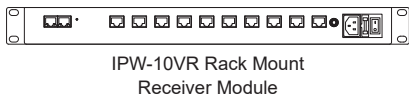


4 M5 Screws



10 IPW-1VT Transmitter Modules

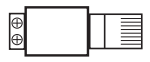

20 2-wire to RJ45 converters

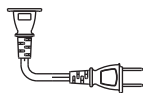

Outlet Plug

Installation and Configuration


The IPW-10VR is configured out of the box to provide power and network connection on all ten of the PoU (Power over UTP wire) ports.

For each station connected to the IPW-10VC, use two of the 2-wire to RJ45 converters. One will plug into a port on the IPW-10VR, and the other will go into the IPW-1VT transmitter module. Use a small Phillips-head screwdriver to loosen and tighten the converters to connect the 2-conductor wires to both sides.

The four provided screws allow the IPW-10VR receiver module to be installed in a 1U server rack space.

The IPW-10VR is powered from a wall outlet, and is connected to the network by one of the two ethernet ports.

Sample Wiring Diagram

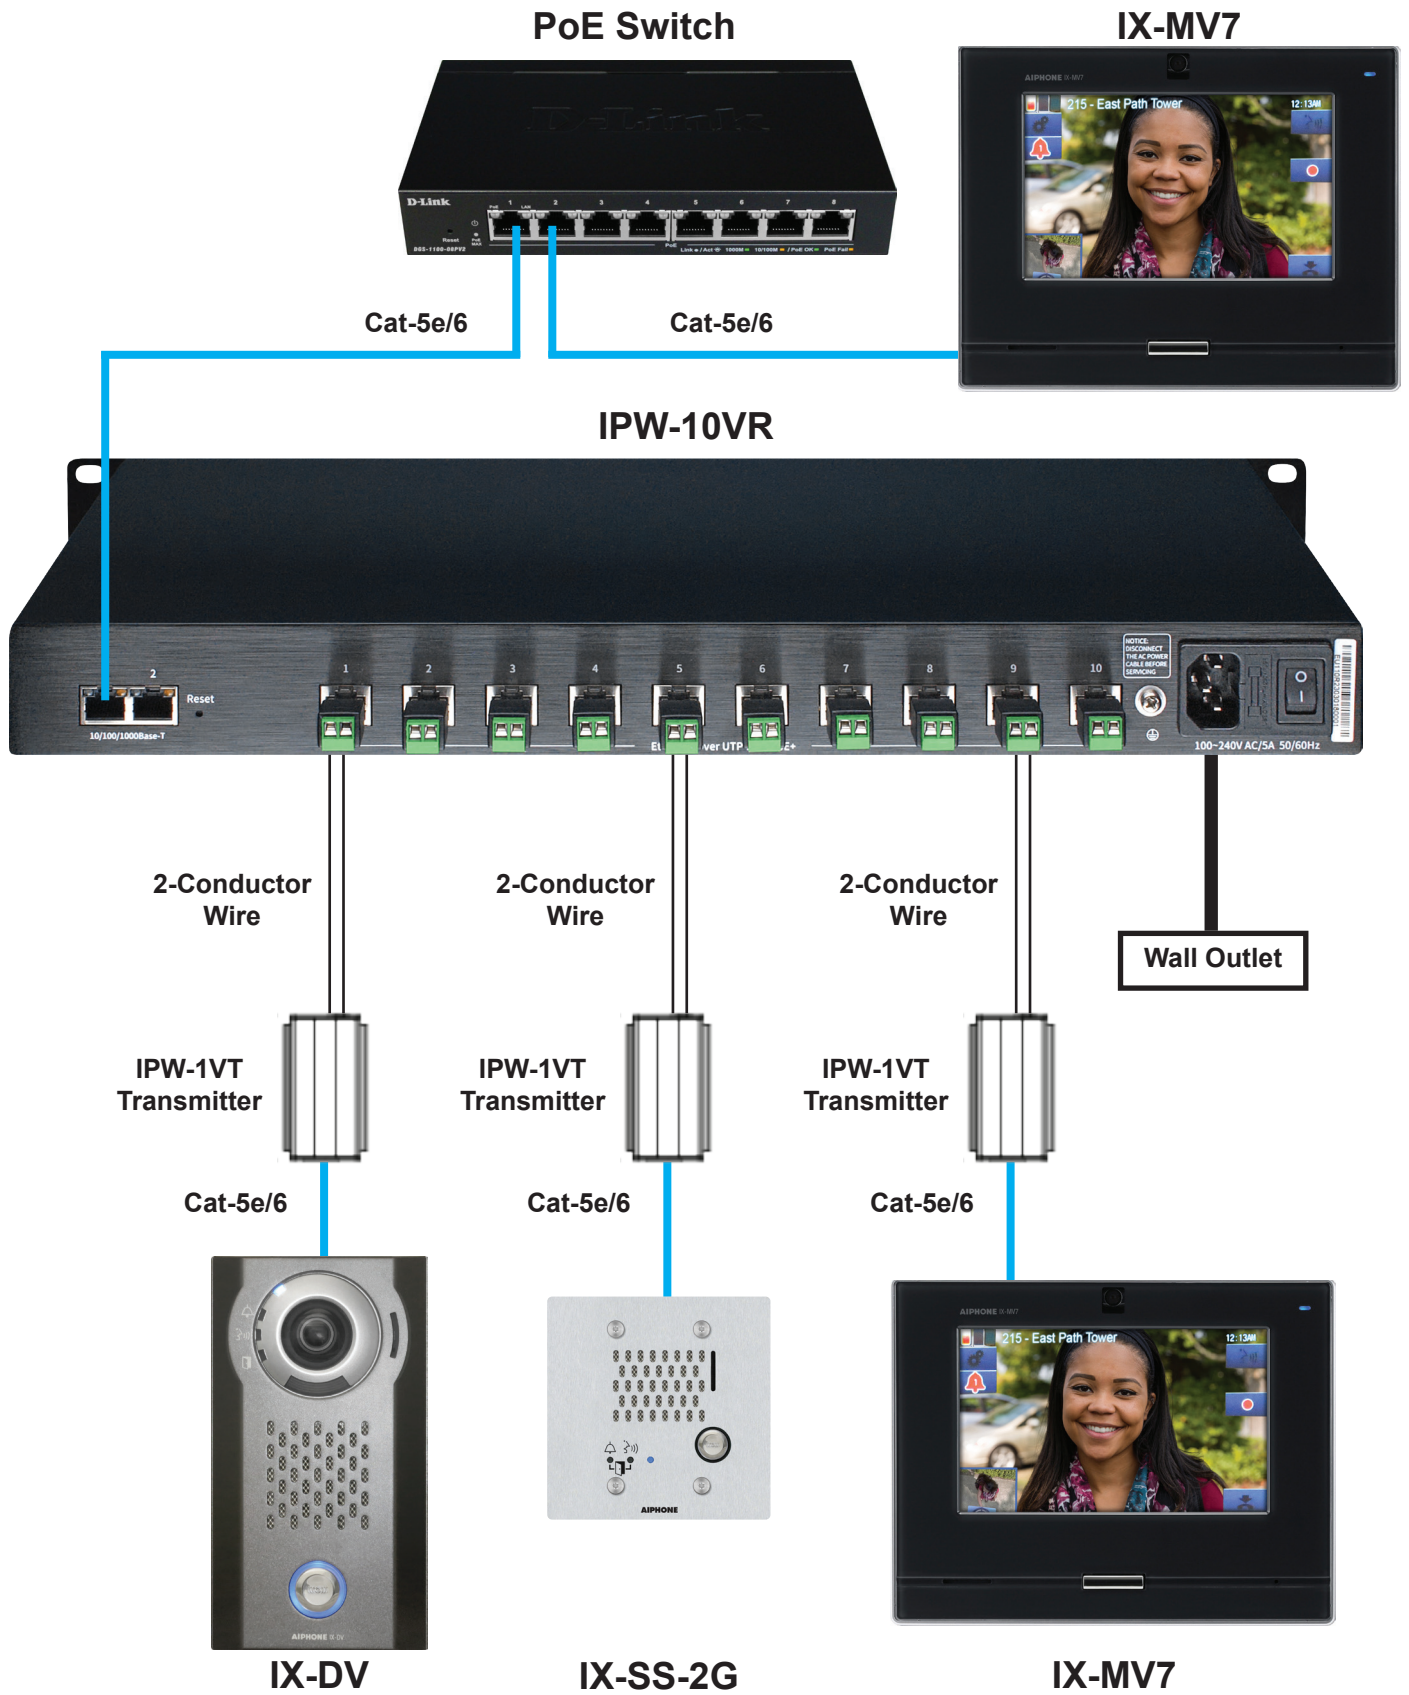

Web Interface Instructions

The IPW-10VR features a web interface that can be used to adjust its network settings, change the log in credentials, restart, or factory reset the station. The network and security settings may not need to be adjusted on all sites, since the IPW-10VC kit can work on an isolated network. Consult on-site IT about networking requirements.

The default settings are already properly configured to power and connect Aiphone stations, so this guide does not cover adjusting the power settings.

Accessing the Web Interface

The IPW-10VR's default IP address is 192.168.1.200. Set the programming PC's IP address to be in the same range and enter 192.168.1.200 in the web browser. A log in page will appear. The default user name and password are **admin**. Once those are entered, the following home screen will be displayed. Navigate to **System Configuration, Network Configuration**.

The screenshot shows the 'System Status' page. On the left is a dark sidebar with menu items: 'System Status', 'System Configuration', and 'Maintenance'. The main content area is titled 'System Status' and contains the following information:

- Power Status: on
- IP-Link Status table:

Port	Status	Port	Status	Port	Status
1	Linked	2	Linked	3	Unlinked
- U-Link Status (UTP link) table:

Ports	Status	Ports	Status	Ports	Status	Ports	Status
1~4	Linked	5~8	Linked	9~12	Linked	13~16	Linked
- Port Status (PoU) table:

Port	Status	Port	Status	Port	Status	Port	Status
1	OK	5	OK	9	NC	13	OK
2	OK	6	OK	10	OK	14	NC
3	OK	7	OK	11	OK	15	OK

Changing Network Settings

Navigate to **System Configuration, Network Configuration**. Configure the network settings and click **Save**.

The screenshot shows the 'Network Configuration' page. The sidebar on the left has 'System Configuration' selected, with sub-items: 'Network Configuration', 'PoU Configuration', and 'User'. The main content area is titled 'Network Configuration' and shows the following settings:

- Fixed IP Address
- IP Address: 192.168.1.200
- Subnet Mask: 255.255.255.0
- Gateway IP: 192.168.1.1
- MAC: 3c:0f:c1:00:1c:38


A 'Save' button is located at the bottom, with an orange hand icon pointing to it.



It is not necessary or advisable to change the power settings under **System Configuration, PoU Configuration**.

Changing the User Name and Password


Navigate to **System Configuration**, User. Enter the desired login credentials and click **Save**.

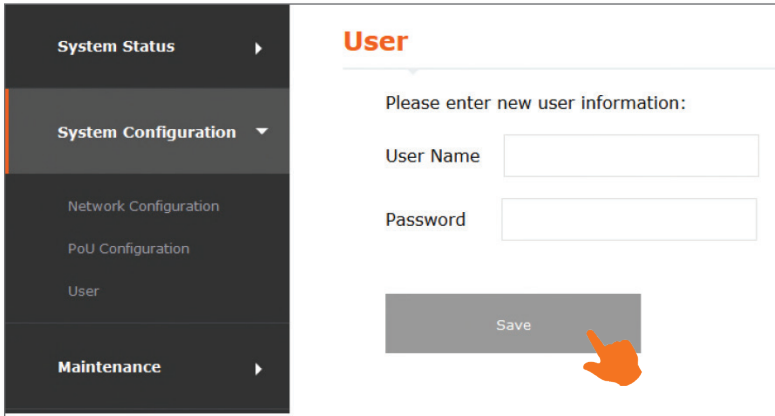

The screenshot shows a web interface with a dark sidebar on the left containing menu items: System Status, System Configuration, Network Configuration, PoU Configuration, User, and Maintenance. The main content area is titled "User" and contains the text "Please enter new user information:". Below this are two input fields labeled "User Name" and "Password". At the bottom of the form is a grey "Save" button, which is being pointed to by an orange hand cursor.

Restarting the Station

Navigate to **Maintenance**, Restart Device. Click **Yes**.

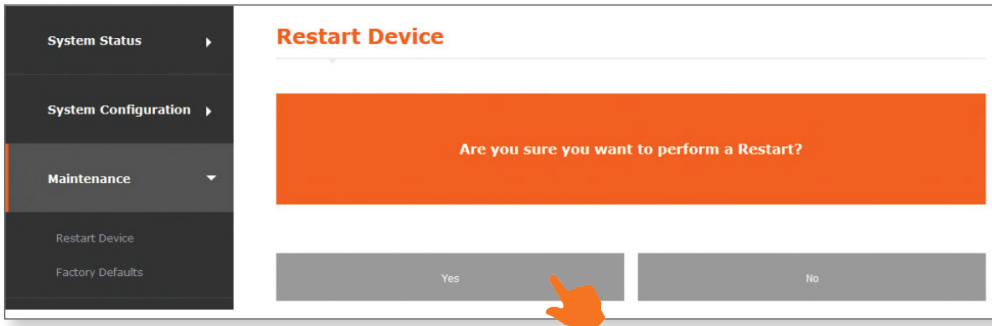

The screenshot shows a web interface with a dark sidebar on the left containing menu items: System Status, System Configuration, Maintenance, Restart Device, and Factory Defaults. The main content area is titled "Restart Device" and features a large orange confirmation box with the text "Are you sure you want to perform a Restart?". Below the box are two grey buttons labeled "Yes" and "No". An orange hand cursor is pointing at the "Yes" button.

Factory Resetting the Station

Navigate to **Maintenance**, Factory Defaults. Enter the desired login credentials and click **Save**.



The screenshot shows a web interface with a dark sidebar on the left containing menu items: System Status, System Configuration, Maintenance, Restart Device, and Factory Defaults. The main content area is titled "Factory Defaults" and features a large orange confirmation box with the text "Are you sure you want to reset the configuration to Factory Defaults?". Below the box are two grey buttons labeled "Yes" and "No". An orange hand cursor is pointing at the "Yes" button.

Specifications

Power Input:	100-240V AC
Power Draw:	260W max
Mounting:	Supplied 1U rack mount
LAN Ports:	2 (RJ45)
UTP Ports:	10 (RJ45 to UTP connector) W
Cat-5e/6 to 2-wire Converter:	15 feet
Calling Capacity:	
w/Video Station	0-500 feet 5 master stations 501-1000 feet 3 master stations
w/Audio Station	0-1000 feet 7 master stations
Operation Temp:	-4°~158°F (-20°~70°C)
Dimensions:	1-3/4" H x 19" W x 11" D

FCC WARNING:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference that may cause undesired operation.

For proper regulatory compliance, the drain wire should be disconnected at the power supply end of the cable.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For more details about the features and information above, please contact Technical Support.

Aiphone Corporation | www.aiphone.com | (800) 692-0200