

# PureLink

## PM Series Matrix Router Owner's Manual



### PM-16X

PM 16 x 16 Cross-Platform Modular Matrix Router

#### PureLink™

535 East Crescent Ave  
Ramsey, NJ 07446  
Tel: 201.488.3232  
Fax: 201.621.6118

Website : [www.purelinkav.com](http://www.purelinkav.com)  
E-mail : [info@purelinkav.com](mailto:info@purelinkav.com)

For Technical Support, contact us at  
: [support@purelinkav.com](mailto:support@purelinkav.com)

# TABLE OF CONTENTS

## Chapter 1. Introduction

1.1 Safety Precautions .....	4
1.2 Product Introduction .....	5
1.3 Front View .....	6
1.4 Rear View .....	7

## Chapter 2. Features and Specifications

2.1 Features .....	9
2.2 Router Frame Specifications .....	14
PM-8X .....	14
PM-16X .....	15
PM-32X .....	16
PM-48X .....	17
PM-64X .....	18
PM-80X .....	20
PM-128X .....	22
PM-180X .....	24
PM-256X .....	26
2.3 Input Boards Specifications .....	29
4K Input Boards	
PM-HIS4-U (4K HDMI Input Board) .....	29
PM-DIS4-U (4K DVI Input Board) .....	30
PM-CIS4-U (4K CATx (HDBaseT) Input Board) .....	31
PM-FIS4-U (4K Fiber Input Board) .....	32
2K Input Boards	
PM-HIS4 (HDMI Input Board) .....	33
PM-DIS4 (DVI Input Board) .....	34
PM-CIS4 (CATx (HDBaseT) Input Board) .....	35
PM-FIS4 (Fiber Input Board) .....	36
PM-SIS4 (3G/HD-SDI Input Board) .....	37
PM-AIS4 (Analog VGA/Component Input Board) .....	38
2.4 Output Board Specifications .....	39
4K Output Boards	
PM-HOS4-U (4K HDMI Output Board) .....	39
PM-HOS4S-U (4K HDMI Output Board w/Scaling) .....	40
PM-DOS4-U (4K DVI Output Board) .....	41
PM-DOS4S-U (4K DVI Output Board w/Scaling) .....	42
PM-COS4-U (4K CATx (HDBaseT) Output Board) .....	43
PM-FOS4-U (4K Fiber Output Board) .....	44
2K Output Boards	

PM-HOS4 (HDMI Output Board) -----	45
PM-HOS4S (HDMI Output Board w/Scaling) -----	46
PM-DOS4 (DVI Output Board) -----	47
PM-DOS4S (DVI Output Board w/Scaling) -----	48
PM-COS4 (CATx (HDBaseT) Output Board) -----	49
PM-FOS4 (Fiber Output Board) -----	50
PM-SOS4 (3G/HD-SDI Output Board) -----	51
PM-DOS4-QV (QuadView DVI Output Board) -----	52
2.5 PM Matrix Boards and PM Extenders Compatibility Chart -----	53

## Chapter 3. Installation

3.1 Package Contents -----	59
3.2 Installation Environments -----	59
3.3 Installation -----	60
a. Installing and Removing Input and Output Board -----	60
b. Installing the Matrix Router in a Rack -----	62
c. Installation and Setup -----	63
3.4 Cable Termination -----	64

## Chapter 4. Operation

4.1 Front Panel LCD Touch Screen Operation .....	67
System Information .....	67
Create .....	70
System Configuration .....	73
Preset .....	77
I/O Configuration .....	79
EDID .....	85
4.2 RS-232/422 Command Line Operation .....	90
General Rules for Command Codes .....	91
Command Acknowledge Value Response .....	95
Connecting Switches .....	96
Disconnecting Switches .....	98
Connection Status Check .....	100
Input Board Function Configuration .....	100
Output Board Function Configuration .....	105
Audio Matrix Volume Configuration .....	112
Router ID Check .....	113
Firmware Version Check .....	113
Baud Rate Setting .....	113
Network Configuration .....	114
Connection Checking .....	114
Front Panel Touch Screen Security Lock/Unlock .....	114
4.3 LAN (TCP/IP) Operation .....	115
Telnet Protocol with LAN (TCP/IP) .....	115
HTTP Protocol with LAN (TCP/IP) .....	116

## Chapter 5. Additional Information

5.1 Firmware Update Instruction .....	118
5.2 Warranty .....	123

## Chapter 1. Introduction

### 1.1 Safety Precautions

When using and installing Dtrovision PureLink product, adhere to the following basic safety precautions.

- Read and understand all instructions before using and installing this product.
- The safety and operating instructions should be retained for future reference.
- Always use the correct external power supply (indicated on the product label) when operating this unit.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Mishandling of this product may lead to a fire or explosion hazard.
- Do not place any heavy objects or equipment on top of the product.
- Keep away from wet, magnetic, and flammable surfaces or substances.
- Air vents should be kept clean and unobstructed at all times.
- Any external impact may cause damage to the operation of this unit.
- Be sure this product is properly grounded (earthed) in order to prevent the risk of electrical shock.
- Turn off and unplug power before adding or removing Input/Output Boards.
- Input/Output Boards may be damaged when they are replaced with power turned on.
- Use surge protectors and/or AC line conditioners when powering this product.
- Only use a fuse(s) with the correct fuse rating in your enclosure.
- Make sure the product is on or attached to a stable surface.

**If you experience any malfunctioning of product or have any question as to operation of the product, please contact our customer service center.**

**Dtrovision LLC (DBA PureLink)**

**Tel: 201.488.3232**

**Email: [support@purelinkav.com](mailto:support@purelinkav.com)**

## 1.2 Product Introduction

The PM series Matrix Router is a Cross-Platform Matrix Router that supports multiple different digital interface types in a single unit. PureLink's unique "Cross-Platform" feature makes the Matrix Router most flexible and simple solution for today's sophisticated digital AV environment.

The PM series Matrix Router supports seven types of digital interface:

- HDMI v1.4 (w/optional scaling)
- DVI 1.0 (w/optional scaling)
- 3G/HD-SDI (standard scaling)
- Analog VGA/Component
- CATx (HDbaseT) (w/optional scaling)
- Fiber Optic (w/optional scaling)
- Displayport

Each Matrix Router is assembled from field installable I/O (Input/Output) Boards. The PM-8X Matrix Router can support up to 2 I/O Boards of any of the above type. The PM-16X Matrix Router can support up to four I/O Boards of any of the above type. The PM-32X Matrix Router can support up to eight I/O Boards of any of the above type. The PM-48X Matrix Router can support up to twelve I/O Boards of any of the above type. The PM-64X Matrix Router can support up to sixteen I/O Boards of any of the above type. The PM-80X Matrix Router can support up to twenty I/O Boards of any of the above type. The PM-128X Matrix Router can support up to thirty two I/O Boards of any of the above type. The PM-180X Matrix Router can support up to forty five I/O Boards of any of the above type. The PM-256X Matrix Router can support up to sixty four I/O Boards of any of the above type.

The Matrix Router can switch any Input signal to any combination of Outputs. For example, HDMI Input signal can be Output to 3G/HD-SDI Output, Fiber Optic Output, and CATx Output. The Matrix Router can route multiple Input/Output configurations simultaneously.

**Note)** 3G/HD-SDI is not a licensed HDCP interface and if the content received from HDMI is protected by HDCP, there should be no Output from the 3G/HD-SDI Board.

PM series CATx I/O Boards are used in conjunction with PM CATx Transmitter and Receiver and PM series Fiber Optic I/O Boards are used in conjunction with PM Fiber Transmitter and Receiver.

**Note)** For I/O Boards and Extenders compatibility information, see [page 32](#)

### 1.3 Front View:

The PM Matrix Router frame is mountable on a 19" standard rack. Touch Screen control Panel and power switch are placed at the front panel as show in Figure 1-1

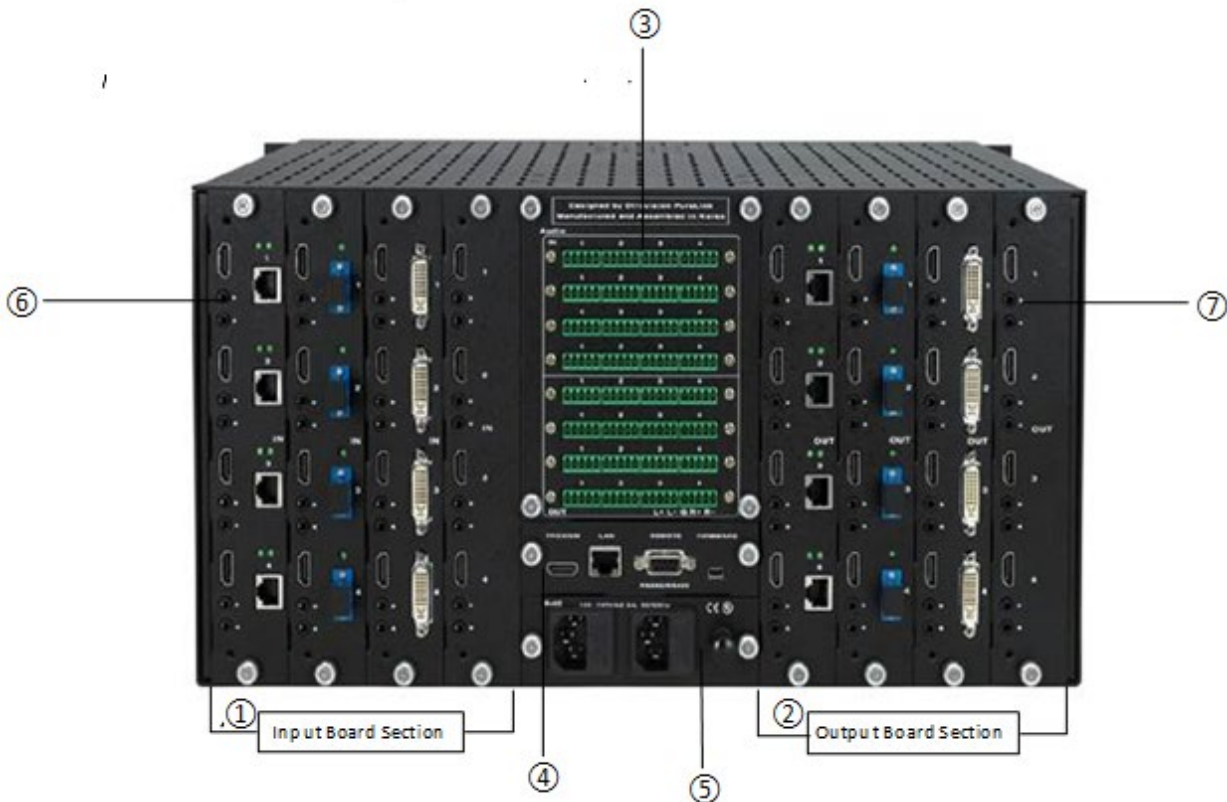


**Figure 1-1** Front view of PM-16X enclosure

- ① 7" LCD Touch screen control panel
- ② Power On/Off switch
- ③ Foldable Handle

### 1.4 Rear View:


Input/Output Board section, Audio Matrix Router, communication ports, and power supplies are placed on the rear panel as show in Figure 1-2. Actual rear view will vary depending on the configuration of Input/Output Board type. The rear view of PM-16X in Figure 1-2 is fully populated each of CATx Input/Output Board, Fiber Input/Output Board, DVI Input/Output Board, and HDMI Input/Output Board in PM-16X main frame.



**Figure 1-2** Rear view of PM-16X Enclosure

- ① Input Board Section
- ② Output Board Section
- ③ Independent Audio Matrix Router (Balanced or Unbalanced), 5-pin Phoenix Connector
- ④ Communication Board
- ⑤ Standard Redundant Power
- ⑥ Audio Insertion/Extraction ports on Input Board
- ⑦ Audio Insertion/Extraction ports on Output Board



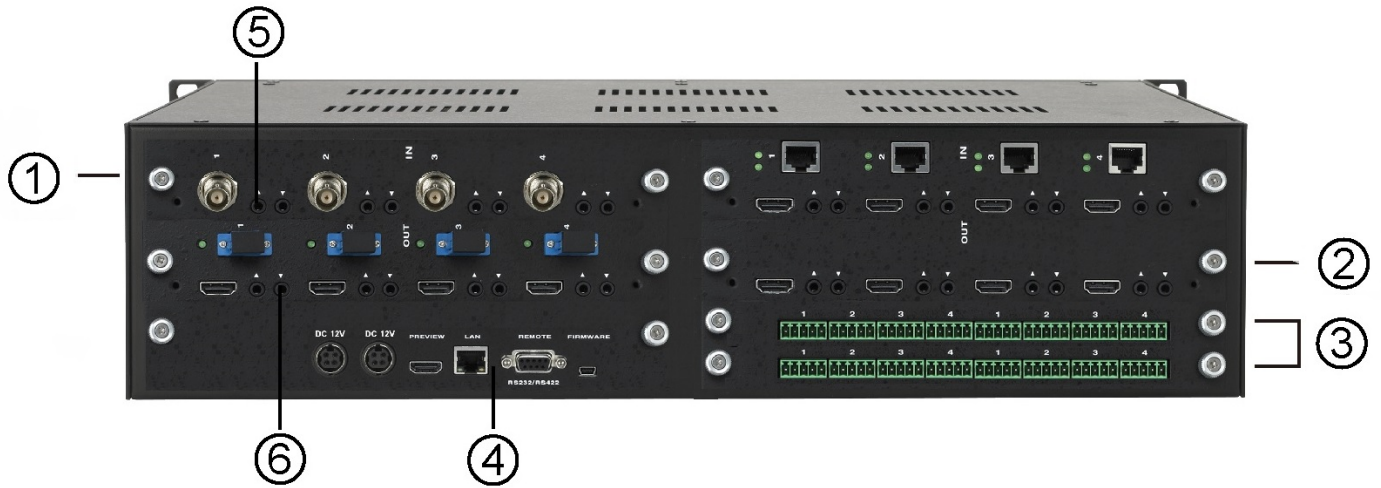

- ① Input Board Section
- ② Output Board Section
- ③ Independent Audio Matrix Router (Balanced or Unbalanced), 5-pin Phoenix Connector
- ④ Communication Board
- ⑤ Audio Insertion/Extraction ports on Input Board
- ⑥ Audio Insertion/Extraction ports on Output Board

## Chapter 2. Features and Specifications

### 2.1 Features

#### ▶ **Ultra HD/4K**

PureMedia offers a complete catalog of distribution and extension solutions for 4K/30 connectivity that can be customized for any application. From 4K matrix switcher frames to 4K extenders, all with TOTALWIRE™ (HDMI, HDBaseT, and Fiber) cabling, PureMedia solutions deliver a more seamless transition to 4K connectivity than any other provider.

#### ▶ **Cross-Platform Switching Technology**

PureLink's advanced Cross-Platform Switching Technology allows interchangeable switching between any Input signal formats to any Output signal formats. PM Matrix Router supports 4K HDMI v1.4, DVI, 3G/HD-SDI, VGA/Component, Fiber Optic & CATx (HDBaseT) signal formats with various Input and Output selection.

#### ▶ **Available in various I/O sizes from 4x4 to 256x256**

PM series Matrix Router offers a wide range of Input/Output configuration to match various sized installations. Total eight size of main frames are available PM-8X (up to 8x8), PM-16X (up to 16x16), PM-32X (up to 32x32), PM-48X (up to 48x48), PM-64X (up to 64x64), PM-80X (up to 80x80), PM-128X (up to 128x128), PM-180X (up to 180x180) and PM-256X (up to 256x256)

#### ▶ **POE**

PM series Matrix Router provides power to the PM CATx Extenders (Transmitter or Receiver) at the remote location over the same CATx cable that transmits Audio, Video, and Control. It eliminates the need of having a power on PM CATx Extenders. Single CATx cable for Audio, Video, Control and Power makes installation simple.

**Note) Scaling Receiver (PM-CR102, PM-CR102-U) does not support POE**

#### ▶ **RS-232 +**

An industry first, the PM series' RS-232 + simplifies the control issues that have traditionally complicated system design, RS-232 + enables a single serial cable connecting the controller to a PM series Matrix Router to also control the system on three separate levels:

- 1) PM series Matrix Router
- 2) PM series CATx and Fiber Extenders (both Tx and Rx)

3) Devices attached to PM series Extenders (both Tx and Rx) RS-232 + simplifies control within most systems, increasing reliability while also lowering costs by removing control design, hardware and cabling.

▶ **Auto-Scaling with Seamless Switching**

The PM series offers auto scaling on both the Router and Extender Receiver sides, virtually eliminating latency while increasing system design flexibility. The PM series' HDMI Output Board (PM-HOS4S, PM-HOS4S-U), DVI Output Board (PM-DOS4S, PM-DOS4S-U), and 3G/HD-SDI Output Board (PM-SOS4) provides auto scaling for every PM series Matrix Router. The CATx (PM-CR102, PM-CR102-U) and Fiber (PM-FR102, PM-FR102-U) Extender Receivers provide auto scaling directly driven by the PM series' Matrix Router CATx and Fiber Output Boards.

▶ **Flexible Input/Output Switching with Auto Distribution (only for 2K I/O Boards)**

Each main port on the PM series DVI, CATx, and Fiber I/O Boards also contains a parallel HDMI port, effectively doubling those Boards' I/O capacity.

**On the Input Side**, the user can select either the main CATx/DVI/Fiber port or the parallel HDMI port via the front panel or control command, providing a 2x1 switch within the Input and thereby double the amount of Inputs.

**On the Output side**, the main DVI, CATx, and Fiber port and the parallel HDMI are driven simultaneously, providing a 1x2 distribution amplifier with a mirrored Output for each main Output.

▶ **Audio Insertion/Extraction**

Every Video port on the PM series Matrix Router I/O Boards also provides a 3.5mm Stereo Audio Input and Output, enabling easy extraction of 2-channel PCM Audio from HDMI or Audio from PM Extender Transmitter, as well as insertion of a separate 2-channel Audio signal onto HDMI, CATx, and Fiber Outputs

▶ **Audio Matrix Router**

PM series Matrix Router frame offers independent built-in Balanced/Unbalanced Audio Matrix Router. Depending on the frame size, it comes as a standard feature and some of them are optional.

PM-8X-AD: Optional Internal 8x8 Audio Matrix Router for PM-8X

PM-16X-AD: Optional Internal 16x16 Audio Matrix Router for PM-16X

PM-32X-AD: Optional Internal 32x32 Audio Matrix Router for PM-32X

PM-80X-AD: Optional Internal customizable up to 80x80 Audio Matrix Router for PM- 80X (16x16 Audio Matrix Router comes as a standard)

PM-128X-AD: Optional customizable up to 128x128 Audio Matrix Router for PM-128X  
(16x16 Audio Matrix Router comes as a standard)

PM-180X-AD: Optional customizable up to 180x180 Audio Matrix Router for PM-180X  
(16x16 Audio Matrix Router comes as a standard)

PM-256X-AD: Optional customizable up to 256x256 Audio Matrix Router for PM-256X  
(32x32 Audio Matrix Router comes as a standard)

PM-48X comes with 48x48 Audio Matrix Router and PM-64X comes with 64x64 Audio Matrix Router as a standard.

▶ **Audio Attenuation and Muting**

Every PM series Matrix Router allows volume attenuation and muting on the Audio Matrix Router's Output.

▶ **Test Pattern Generator**

Every PM series Matrix Router provides a built-in Test Pattern Generator, enabling easy testing from the Matrix Router to the display.

▶ **Signal Analyzer**

Every PM series Matrix Router provides built-in comprehensive signal analysis of both incoming and outgoing signals, via the front panel LCD touch screen or control command. Signal information provided includes EDID, HDCP, transmission status, and resolution.

▶ **Preview Monitoring**

Every PM series Matrix Router provides an HDMI preview monitoring port, which further simplifies system testing by acting like an extra Video Output.

▶ **12.5 Gbps Data-Rate Frame**

Ensures lossless High Definition digital AV signal switching and distribution.

▶ **Input Boards directly compatible with PM Extender Transmitters**

PM CATx/Fiber Input Boards can receive signal directly from PM CATx/Fiber Extender Transmitter, eliminating the need of matching Receiver.

▶ **Output Boards directly compatible with PM Extenders Receivers**

PM CATx/Fiber Output Boards can send signal directly to PM CATx/Fiber Extender Receiver, eliminating the need of matching Transmitter.

▶ **HDMI v1.4, 3D Support**

Adopting latest HDMI version 1.4 enables to support 3D, 48-Bit Deep Color, UHD (4K x 2K) resolution (optional) and 7.1 Channel Dolby TruHD & DTS MasterHD

▶ **Standard Redundant Power**

Every PM series Matrix Router is equipped dual redundant power supply as a standard

▶ **Genlock for 3G/HD-SDI**

PM series Matrix Router's 3G/HD-SDI Board is equipped with Genlock feature to provide steady Video signals for optimum picture quality.

▶ **LCD Touch-Screen Display w/ Security Lock-Out**

Every PM series Matrix Router has front panel LCD Touch Screen for intuitive operation. Security Lock-Out feature prevents unauthorized user to access to the Matrix Router. In lock-out mode, a password entered from the touch screen or special command sent from controller can disable the lock-out mode.

▶ **Auto-EDID (EDID Library, Emulation)**

PureLink's EDID library and emulation features failsafe EDID capture & storage to provide constant and continuous EDID for source devices.

▶ **Various Input/Output Choices**

There are eleven Input Board types and fourteen Output Board types to support every conceivable digital Video format.

▶ **HDCP Compliant**

▶ **Modular, Field-upgradeable**

PM Matrix Router is designed to expand, upgrade, and reconfigure the Matrix Router in the field by simply installing or replacing Input/Output Board .

▶ **Preset**

Multiple preset switching commands can be pre-programmed and saved in the memory. It can be recalled in the future for easy and time-saving switching use.

▶ **Analog Support (VGA and Component)**

PM Matrix Router supports analog VGA and component signal via PM Extender Transmitters

▶ **Fan, Power Supply Monitoring**

PM Matrix Router provides real-time fan, power supply units status on the front panel LCD touch screen

▶ **PM-Universal Input/Output Boards**

PM Input/Output Boards can be used in any size of PM Matrix Router frame.

▶ **USB Firmware Update**

Easy Firmware Update using USB port in the rear panel (no software program required)

▶ **Three Convenient Control Methods:**

Control via front panel touch screen

Control via RS-232/422C

Control via LAN (TCP/IP)

▶ **Maximum Distance up to 32,808ft**

As part of a complete switching system, send Audio, Video, control signal and power up to 330ft over single CATx cable to and from the PM Matrix Router using PM series CATx Extenders and send Audio, Video, and control signal up to 32,808ft over Fiber Optic cable to and from the PM Matrix Router using PM series Fiber Extenders.

▶ **Plug-N-Play**

▶ **Standard 19" Rack-mountable**

- PM-8X (3 RU)
- PM-16X (5 RU)
- PM-32X (10 RU)
- PM-48X (15 RU)
- PM-64X (20 RU)
- PM-80X (26 RU)
- PM-128X (39 RU)
- PM-180X (37 RU)
- PM-256X (2 Rack wide self-standing unit, 39 RU)

▶ **Resolutions up to WUXGA 1920x1200, HD 1080p @ 60Hz, and 4K2K**

- ▶ **Integrated Noise-cancellation and Error-correct Logic for both Input and Output Ports to prevent any damage caused by Electrical Noise.**

## 2.2 Router Frame Specification


### PM-8X



<b>PM-8X Frame General Specifications</b>	
Maximum # of Input Board load	2 of any kind of Input Board
Available Input Board	HDMI, DVI, 3G/HD-SDI, VGA/Component, CATx (HDBaseT), Fiber Optic
Maximum # of Output Board load	2 of any kind of Output Board
Available Output Board	HDMI, HDMI w/scaling, DVI, DVI w/scaling, 3G/HD-SDI, CATx (HDBaseT), Fiber Optic
Power	External Power Supply DC12V, 6.6A
Power Consumption (max)	120W + 120W (Dual) = 240W
Operational Temperature	32° ~ 117° F (0° to 47° C)
Storage Temperature	- 40° ~ 158° F (-40° to 70° C)
Humidity	0 ~ 90% non-condensing
MTBF	50,000 hours
Dimensions (W x D x H)	17.1" x 14.5" x 5.25" (435 x 368 x 133mm)

Shipping Dimensions (with cover box)	20.5" x 16.5" x 7.5" (521 x 419 x 191mm)
Rack mounting	Yes, 19" standard rack, 3RU
Weight (w/o Boards installed)	12 lbs (5.4 kg)
Weight (with HDMI Boards fully installed)	20 lbs (9.1 kg)
Shipping Weight (with Boards fully installed, accessories, hard metal case, and cover box)	26 lbs (11.8 kg)
Shipping Weight of Individual Boards	2 lbs (0.9 kg)

## PM-16X

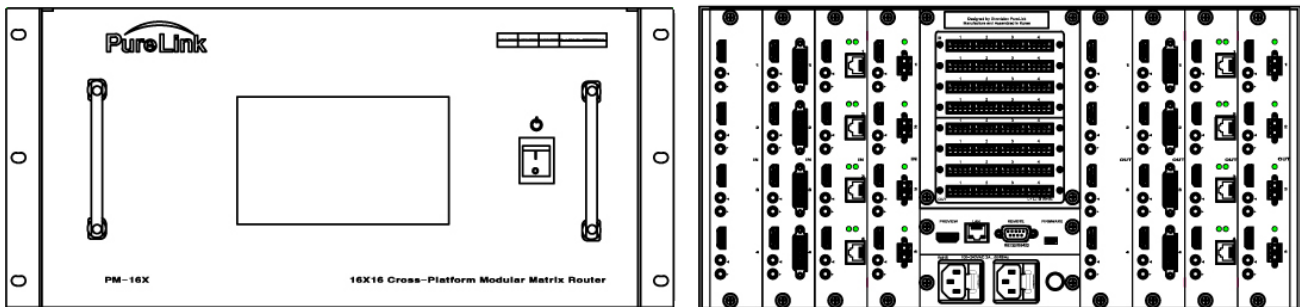


<b>PM-16X Frame General Specifications</b>	
Maximum # of Input Board load	4 of any kind of Input Board
Available Input Board	HDMI, DVI, 3G/HD-SDI, VGA/Component, CATx (HDBaseT), Fiber Optic
Maximum # of Output Board load	4 of any kind of Output Board
Available Output Board	HDMI, HDMI w/scaling, DVI, DVI w/scaling, 3G/HD-SDI, CATx (HDBaseT), Fiber Optic
Power	100-240VAC 50/60Hz Redundant power supply is standard
Power Consumption (max)	300W + 300W (Dual) = 600W
Operational Temperature	32° ~ 117° F (0° to 47° C)
Storage Temperature	- 40° ~ 158° F (-40° to 70° C)
Humidity	0 ~ 90% non-condensing
MTBF	50,000 hours
Cooling	Fan left, right, rear
Dimensions (W x D x H)	17.1" x 14.5" x 8.6" (435 x 368 x 220mm)
Shipping Dimensions (with cover box)	29" x 19" x 13" (737 x 483 x 330mm)
Rack mounting	Yes, 19" standard rack, 5RU
Weight (w/o Boards installed)	20.00 lbs (9.07 kg)
Weight (with HDMI Boards fully installed)	28.20 lbs (12.4 kg)



Shipping Weight (with Boards fully installed, accessories, hard metal case, and cover box)	60 lbs (27.22 kg)
Shipping Weight of Individual Boards	2 lbs (0.9 kg)


## PM-32X

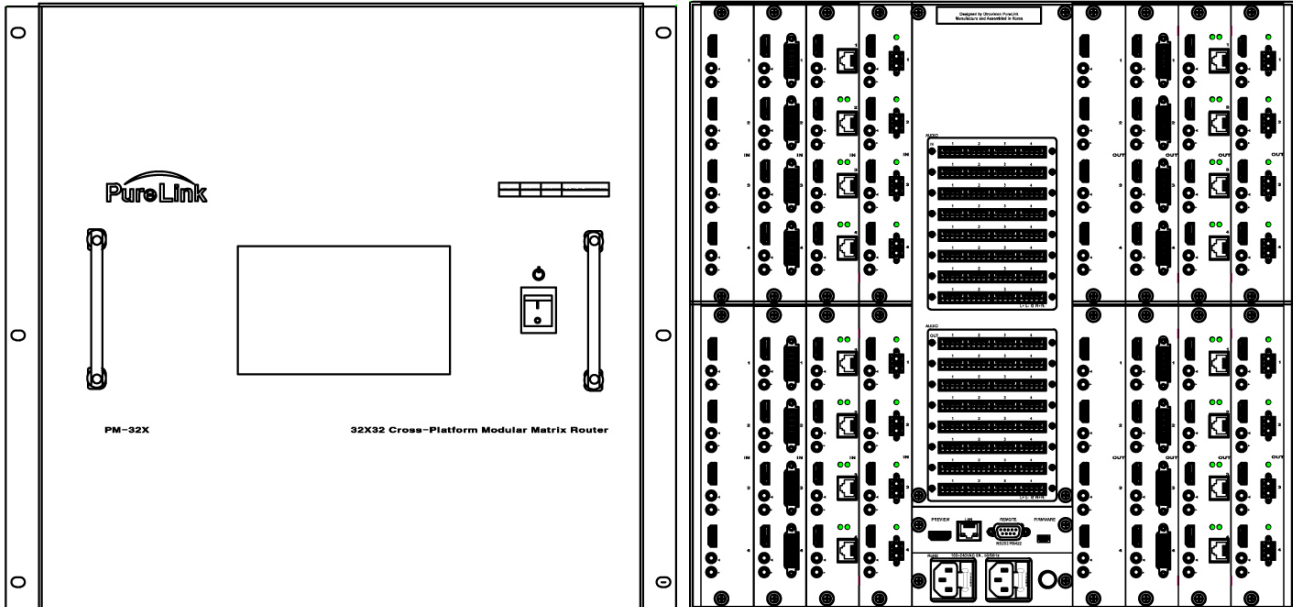

<b>PM-32X Frame General Specifications</b>	
Maximum # of Input Board load	8 of any kind of Input Board
Available Input Board	HDMI, DVI, 3G/HD-SDI, VGA/Component, CATx (HDBaseT), Fiber Optic
Maximum # of Output Board load	8 of any kind of Output Board
Available Output Board	HDMI, HDMI w/scaling, DVI, DVI w/scaling, 3G/HD-SDI, CATx (HDBaseT), Fiber Optic
Power	100-240VAC 50/60Hz Redundant power supply is standard
Power Consumption (max)	600W + 600W (Dual) = 1,200W
Operational Temperature	32° ~ 117° F (0° to 47° C)
Storage Temperature	- 40° ~ 158° F (-40° to 70° C)
Humidity	0 ~ 90% non-condensing
MTBF	50,000 hours
Cooling	Fan left, right, rear
Dimensions (W x D x H)	17.1" x 14.5" x 17.3" (435 x 368 x 440mm)
Shipping Dimensions (with cover box)	29" x 19" x 24" (737 x 483 x 610mm)
Rack mounting	Yes, 19" standard rack, 10RU

Weight (w/o Boards installed)	39.00 lbs (17.70 kg)
Weight (with HDMI Boards fully installed)	53.00 lbs (24.00 kg)
Shipping Weight (with Boards fully installed, accessories, hard metal case, and cover box)	67 lbs (30.40 kg)
Shipping Weight of Individual Boards	2 lbs (0.9 kg)


## PM-48X

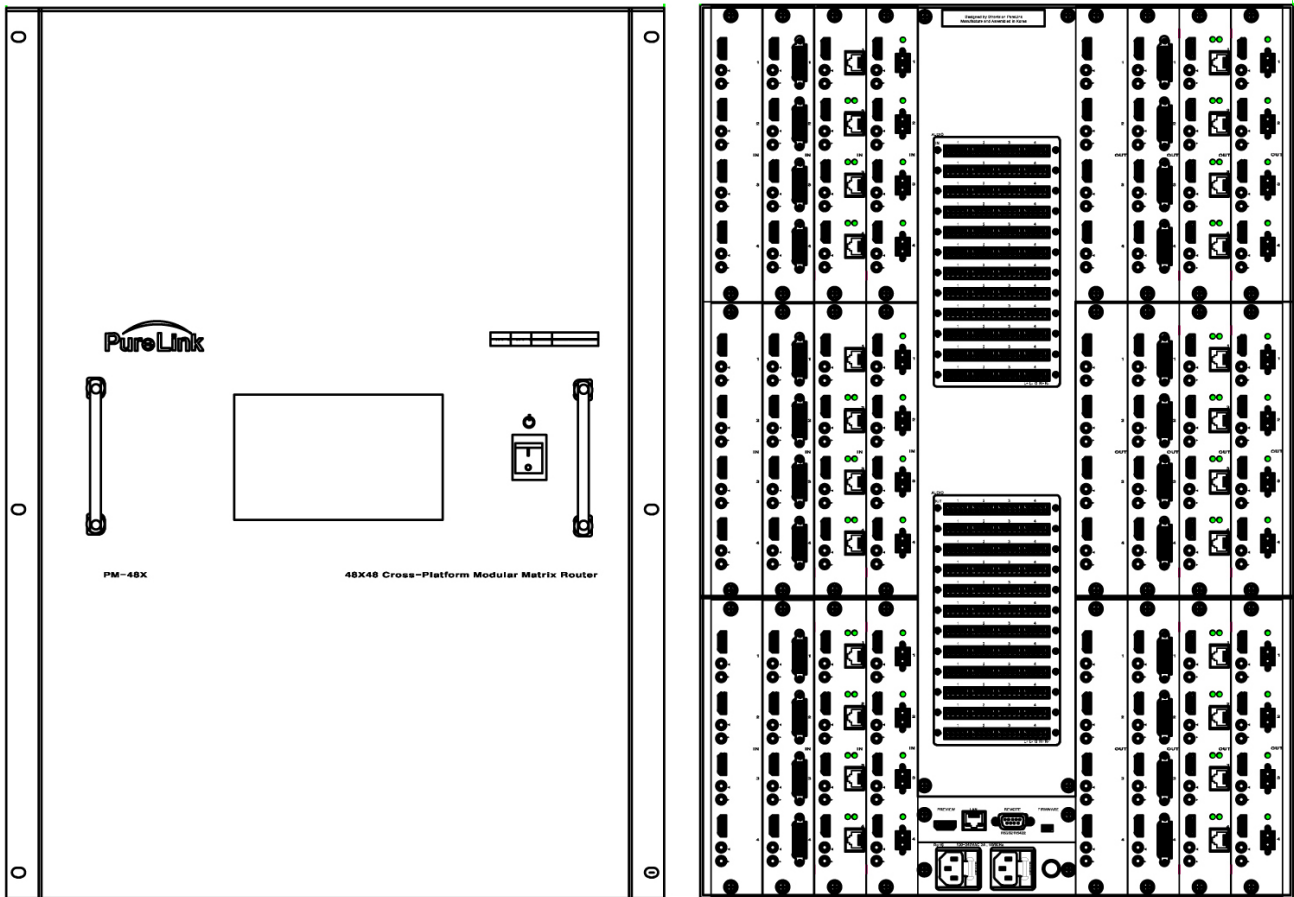

<b>PM-48X Frame General Specifications</b>	
Maximum # of Input Board load	12 of any kind of Input Board
Available Input Board	HDMI, DVI, 3G/HD-SDI, VGA/Component, CATx (HDBaseT), Fiber Optic
Maximum # of Output Board load	12 of any kind of Output Board
Available Output Board	HDMI, HDMI w/scaling, DVI, DVI w/scaling, 3G/HD-SDI, CATx (HDBaseT), Fiber Optic
Power	100-240VAC 50/60Hz Redundant power supply is standard
Power Consumption (max)	600W + 600W + 600W = 1,800W
Operational Temperature	32° ~ 117° F (0° to 47° C)



Storage Temperature	- 40° ~ 158° F (-40° to 70° C)
Humidity	0 ~ 90% non-condensing
MTBF	50,000 hours
Cooling	Fan left, right, rear
Dimensions (W x D x H)	17.1" x 14.5" x 25.9" (435 x 368 x 658mm)
Shipping Dimensions (with cover box)	29" x 19" x 33" (737 x 483 x 832mm)
Rack mounting	Yes, 19" standard rack, 15RU
Weight (w/o Boards installed)	58.00 lbs (26.30 kg)
Weight (with HDMI Boards fully installed)	79.40 lbs (35.83 kg)
Shipping Weight (with Boards fully installed, accessories, hard metal case, and cover box)	93.40 lbs (42.36 kg)
Shipping Weight of Individual Boards	2 lbs (0.9 kg)

### PM-64X

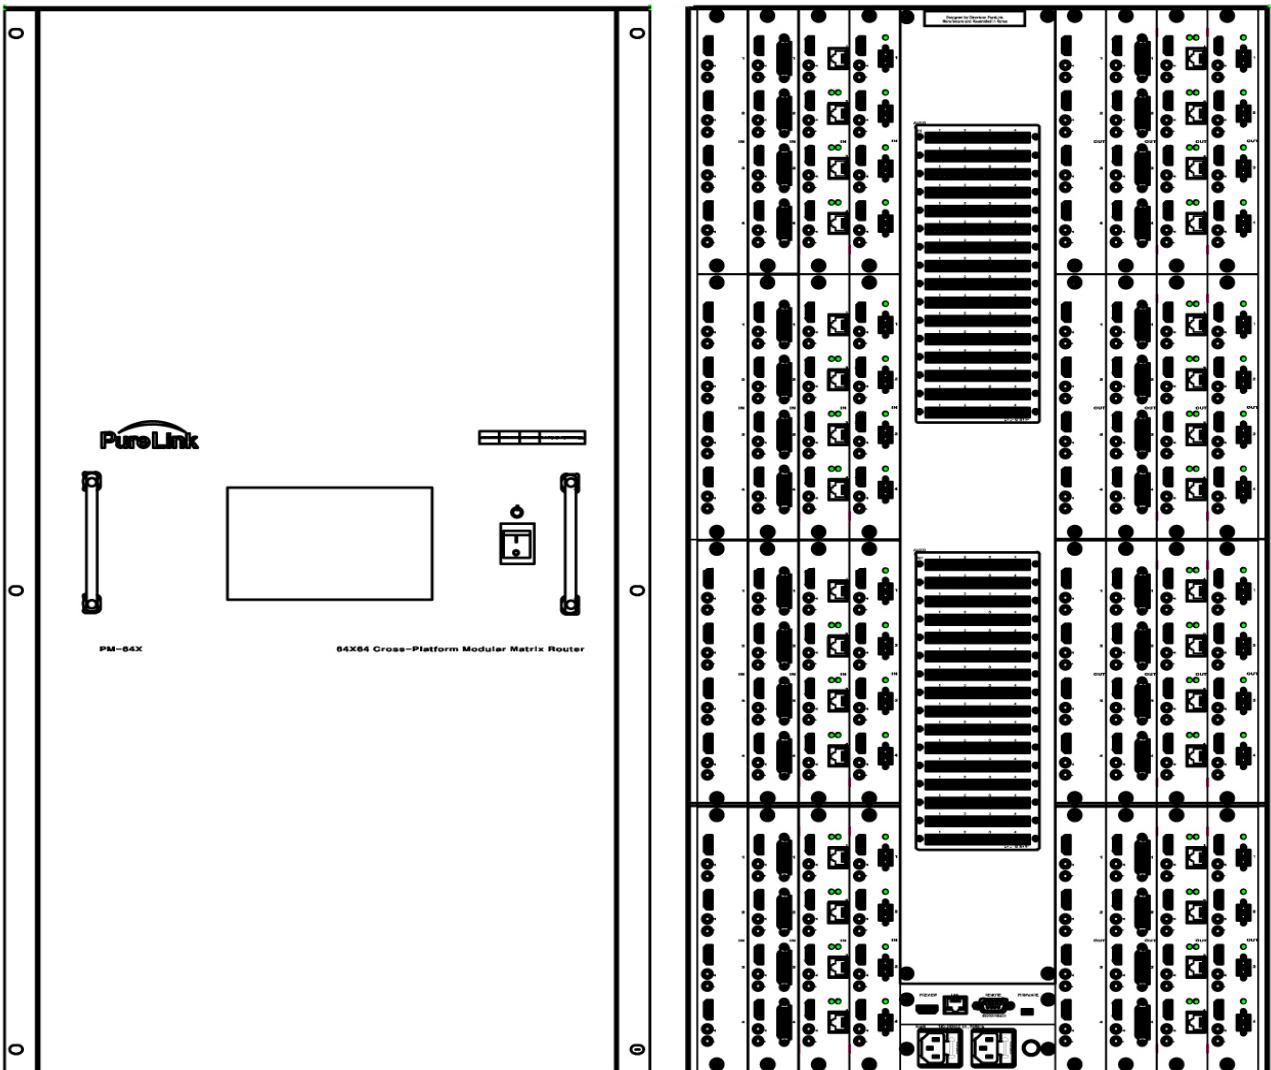

<b>PM-64X Frame General Specifications</b>	
Maximum # of Input Board load	16 of any kind of Input Board
Available Input Board	HDMI, DVI, 3G/HD-SDI, VGA/Component, CATx (HDBaseT), Fiber Optic
Maximum # of Output Board load	16 of any kind of Output Board
Available Output Board	HDMI, HDMI w/scaling, DVI, DVI w/scaling, 3G/HD-SDI, CATx (HDBaseT), Fiber Optic
Power	100-240VAC 50/60Hz Redundant power supply is standard
Power Consumption (max)	600W + 600W + 600W + 600W = 2,400W
Operational Temperature	32° ~ 117° F (0° to 47° C)
Storage Temperature	- 40° ~ 158° F (-40° to 70° C)
Humidity	0 ~ 90% non-condensing
MTBF	50,000 hours
Cooling	Fan left, right, rear
Dimensions (W x D x H)	17.1" x 14.5" x 34.4" (435 x 368 x 874mm)
Shipping Dimensions (with cover box)	29" x 19" x 46.2" (737 x 483 x 1,173mm)
Rack mounting	Yes, 19" standard rack, 20RU
Weight (w/o Boards installed)	73.00 lbs (33.11 kg)
Weight (with HDMI Boards fully installed)	105.80 lbs (48.00 kg)
Shipping Weight (with Boards fully installed, accessories, hard metal case, and cover box)	119.8 lbs (54.34 kg)
Shipping Weight of Individual Boards	2 lbs (0.9 kg)

## PM-80X

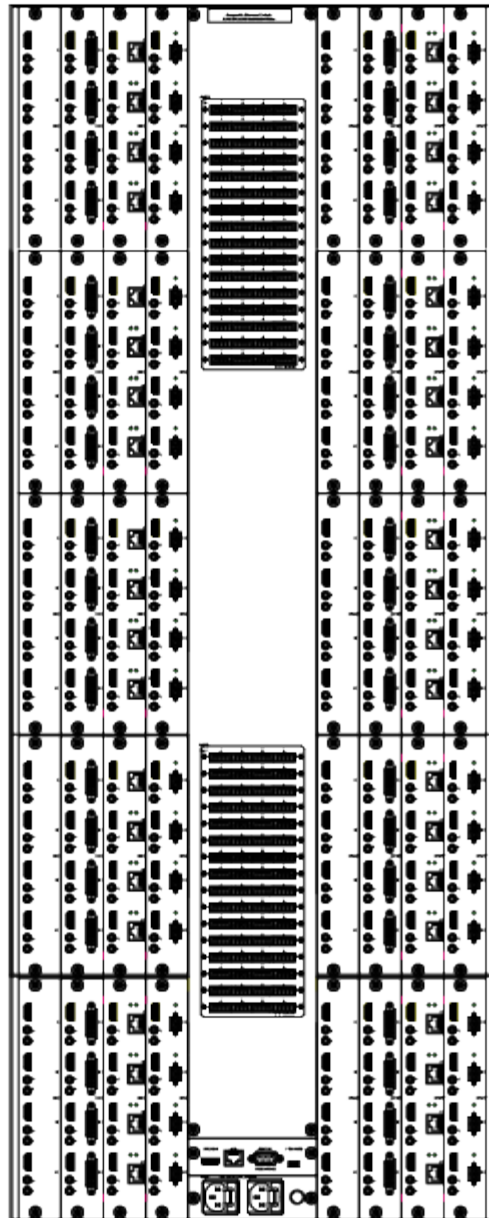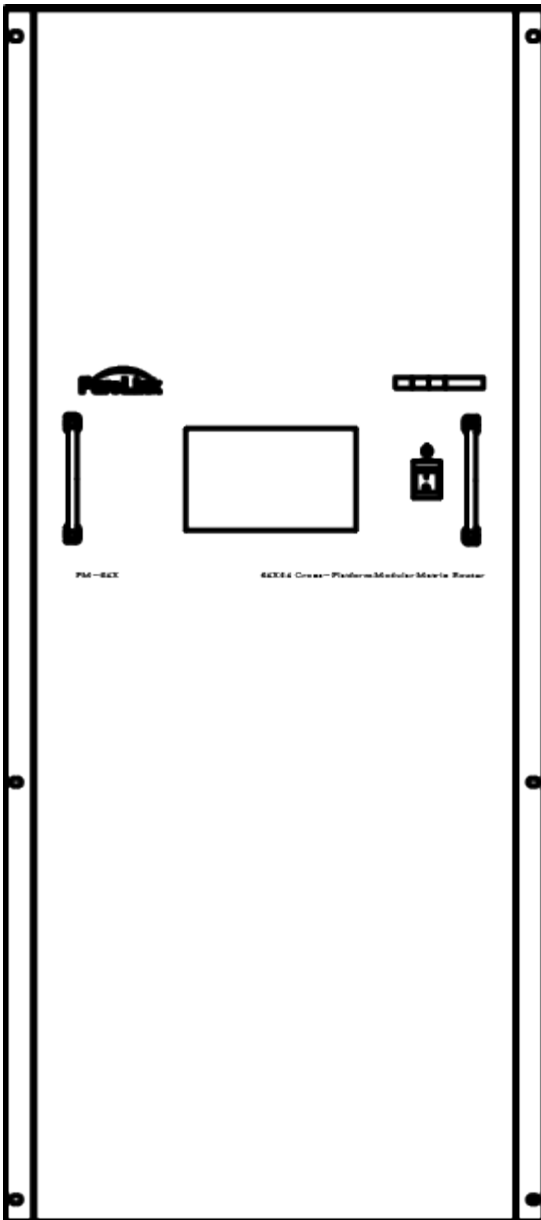


PM-80X Frame General Specifications	
Maximum # of Input Board load	20 of any kind of Input Board
Available Input Board	HDMI, DVI, 3G/HD-SDI, VGA/Component, CATx (HDBaseT), Fiber Optic
Maximum # of Output Board load	20 of any kind of Output Board
Available Output Board	HDMI, HDMI w/scaling, DVI, DVI w/scaling, 3G/HD-SDI, CATx (HDBaseT), Fiber Optic
Power	100-240VAC 50/60Hz Redundant power supply is standard
Power Consumption (max)	600W + 600W + 600W + 600W = 2,400W
Operational Temperature	32° ~ 117° F (0° to 47° C)

---

Storage Temperature	- 40° ~ 158° F (-40° to 70° C)
Humidity	0 ~ 90% non-condensing
MTBF	50,000 hours
Cooling	Fan left, right, rear
Dimensions (W x D x H)	17.1" x 14.5" x 45.5" (435 x 368 x 1155mm)
Shipping Dimensions (with cover box)	29" x 19" x 58.0" (737 x 483 x 1,473mm)
Rack mounting	Yes, 19" standard rack, 26RU
Weight (w/o Boards installed)	143.30 lbs (65.00 kg)
Weight (with HDMI Boards fully installed)	220.00 lbs (99.00 kg)
Shipping Weight (with Boards fully installed, accessories, hard metal case, and cover box)	245.8 lbs (111.13 kg)
Shipping Weight of Individual Boards	2 lbs (0.9 kg)

# PM-128X


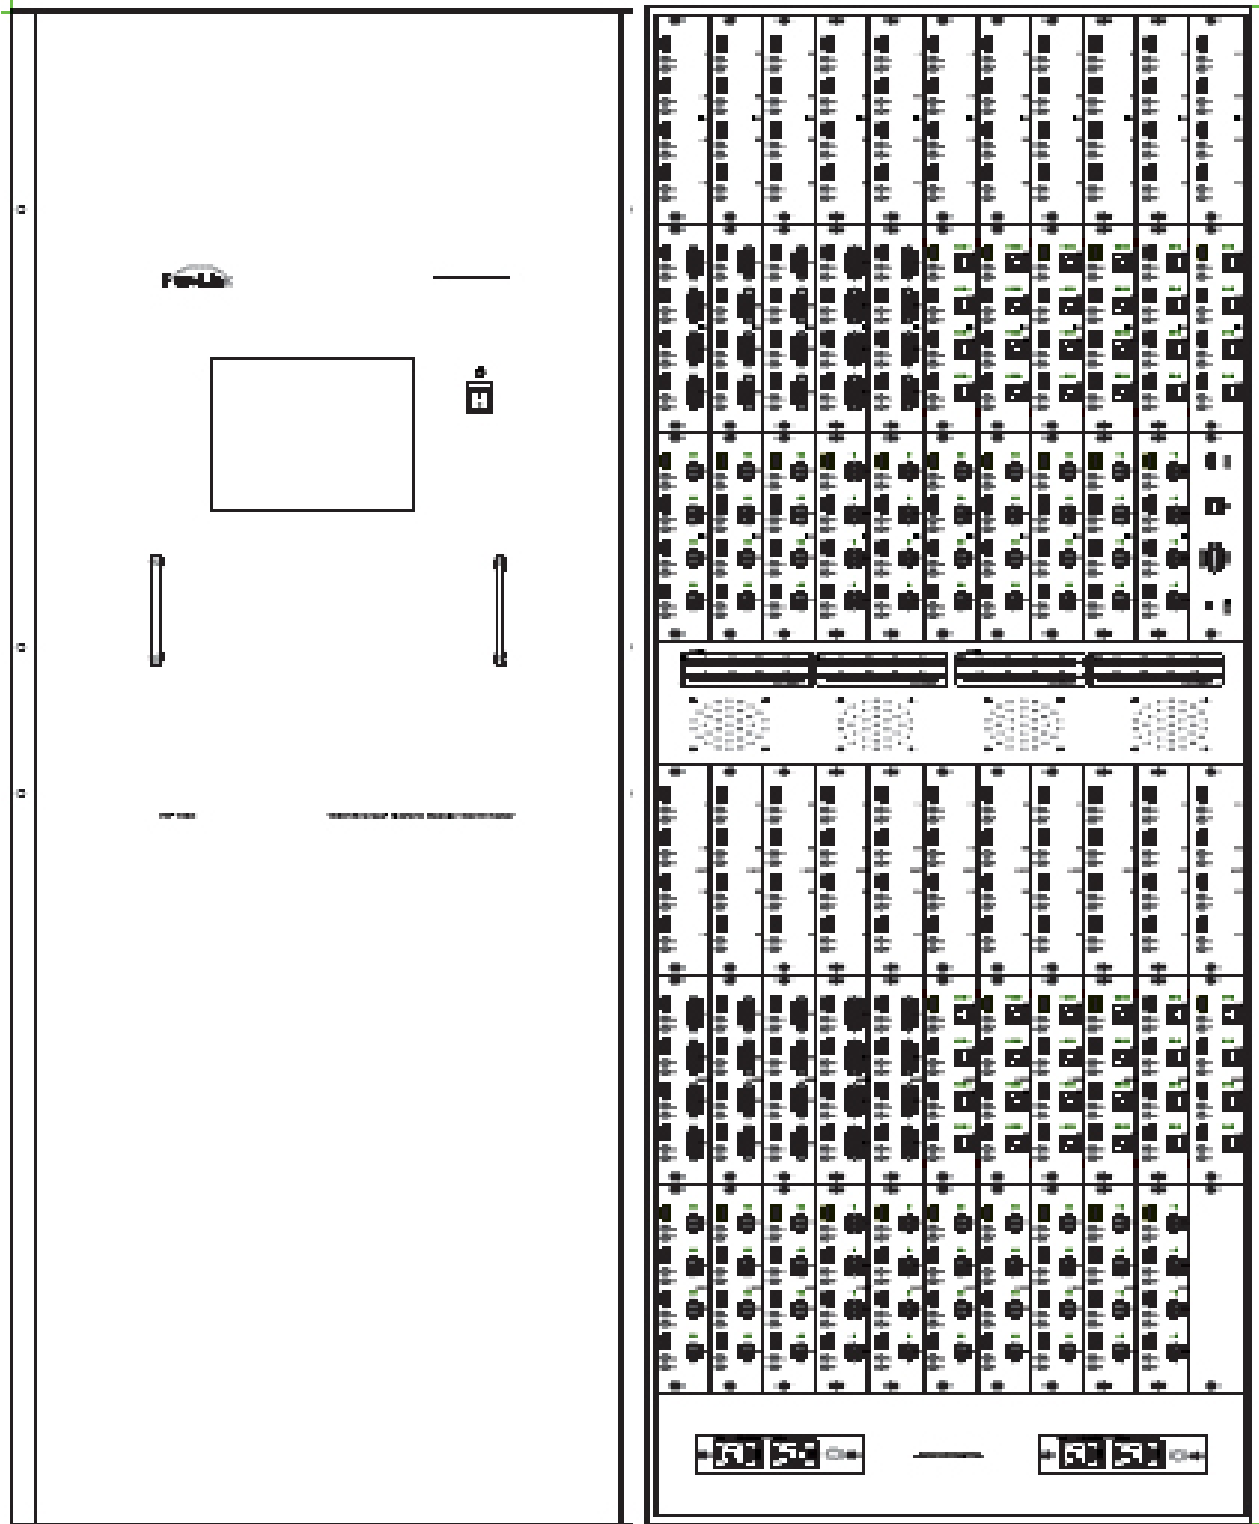


<b>PM-128X Frame General Specifications</b>	
Maximum # of Input Board load	32 of any kind of Input Board
Available Input Board	HDMI, DVI, 3G/HD-SDI, VGA/Component, CATx (HDBaseT), Fiber Optic
Maximum # of Output Board load	32 of any kind of Output Board

Available Output Board	HDMI, HDMI w/scaling, DVI, DVI w/scaling, 3G/HD-SDI, CATx (HDBaseT), Fiber Optic
Power	100-240VAC 50/60Hz Redundant power supply is standard
Power Consumption (max)	600W + 600W + 600W + 600W + 600W + 600W = 3,600W
Operational Temperature	32° ~ 117° F (0° to 47° C)
Storage Temperature	- 40° ~ 158° F (-40° to 70° C)
Humidity	0 ~ 90% non-condensing
MTBF	50,000 hours
Cooling	Fan left, right, rear
Dimensions (W x D x H)	19.0" x 14.5" x 66.9" (483 x 368 x 1700mm)
Shipping Dimensions (with cover box)	29" x 19" x 78.0" (737 x 483 x 1,982mm)
Rack mounting	Yes, 19" standard rack, 39RU
Weight (w/o Boards installed)	227 lbs (103 kg)
Weight (with HDMI Boards fully installed)	355 lbs (161 kg)
Shipping Weight (with Boards fully installed, accessories, hard metal case, and cover box)	400 lbs (181 kg)
Shipping Weight of Individual Boards	2 lbs (0.9 kg)




## PM-180X

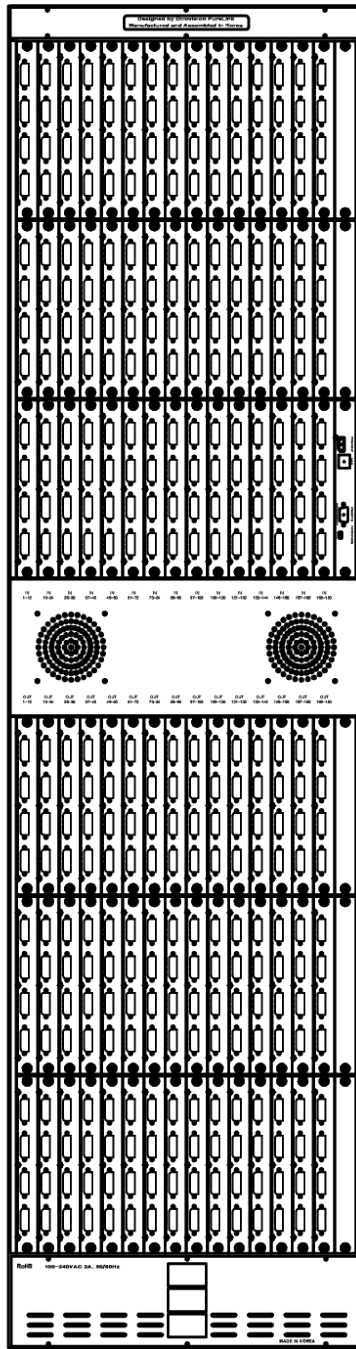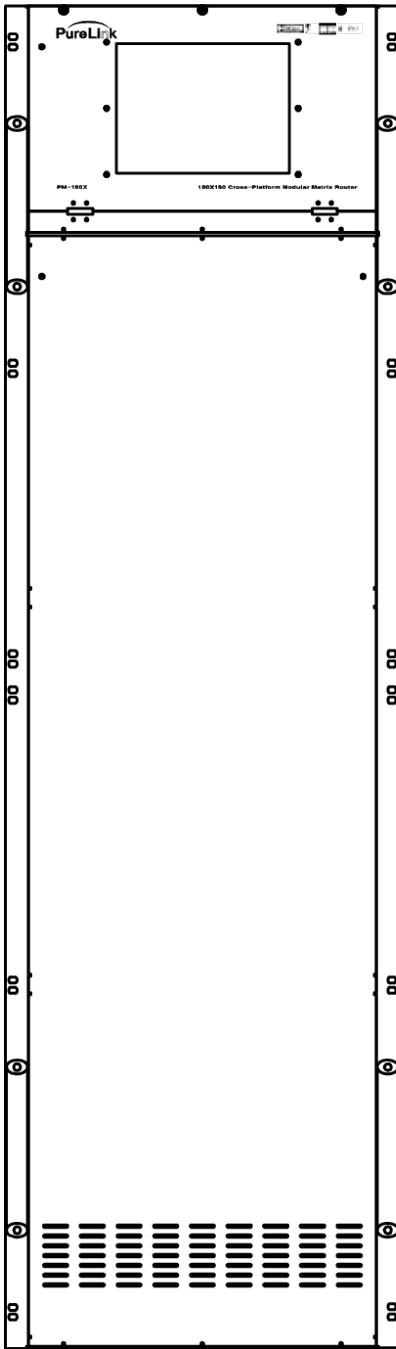

PM-180X Frame General Specifications	
Maximum # of Input Board load	45 of any kind of Input Board
Available Input Board	HDMI, DVI, 3G/HD-SDI, VGA/Component, CATx (HDBaseT), Fiber Optic
Maximum # of Output Board load	45 of any kind of Output Board
Available Output Board	HDMI, HDMI w/scaling, DVI, DVI w/scaling, 3G/HD-SDI, CATx (HDBaseT), Fiber Optic
Power	100-240VAC 50/60Hz

	Redundant power supply is standard
Power Consumption (max)	600W + 600W + 600W + 600W + 600W + 600W = 3,600W
Operational Temperature	32° ~ 117° F (0° to 47° C)
Storage Temperature	- 40° ~ 158° F (-40° to 70° C)
Humidity	0 ~ 90% non-condensing
MTBF	50,000 hours
Cooling	Fan left, right, rear
Dimensions (W x D x H)	19.0" x 14.5" x 64.7" (483 x 368 x 1644mm)
Shipping Dimensions (with cover box)	29" x 19" x 78.0" (737 x 483 x 1,982mm)
Rack mounting	Yes, 19" standard rack, 37RU
Weight (w/o Boards installed)	210 lbs (95 kg)
Weight (with HDMI Boards fully installed)	390 lbs (177 kg)
Shipping Weight (with Boards fully installed, accessories, hard metal case, and cover box)	450 lbs (204 kg)
Shipping Weight of Individual Boards	2 lbs (0.9 kg)

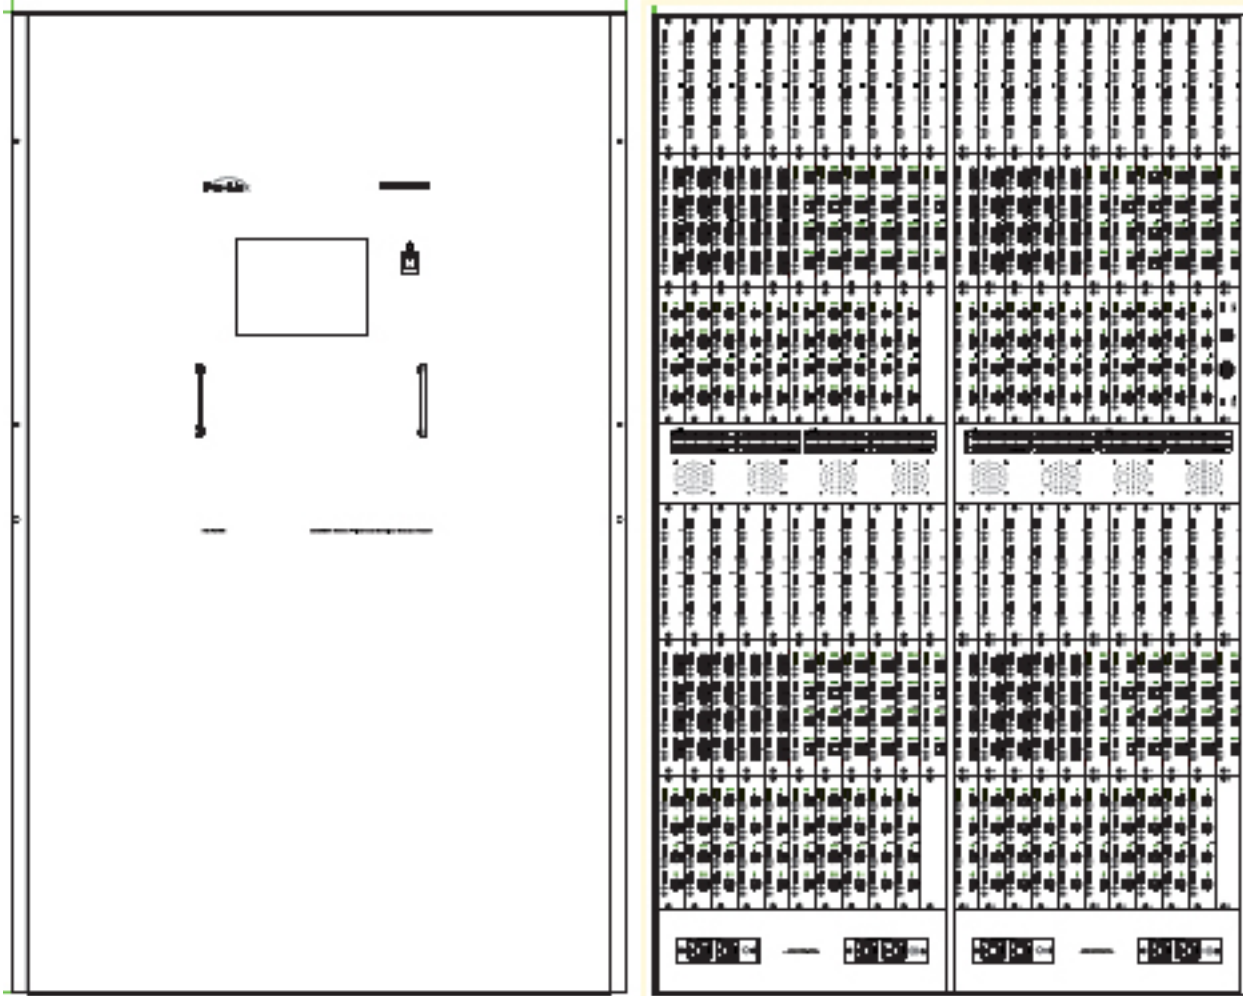**PM-256X**

<b>PM-256X Frame General Specifications</b>	
Maximum # of Input Board load	64 of any kind of Input Board
Available Input Board	HDMI, DVI, 3G/HD-SDI, VGA/Component, CATx (HDBaseT), Fiber Optic
Maximum # of Output Board load	64 of any kind of Output Board
Available Output Board	HDMI, HDMI w/scaling, DVI, DVI w/scaling, 3G/HD-SDI, CATx (HDBaseT), Fiber Optic
Power	100-240VAC 50/60Hz Redundant power supply is standard
Power Consumption (max)	850W + 850W + 850W + 850W + 850W + 850W = 4,250W
Operational Temperature	32° ~ 117° F (0° to 47° C)
Storage Temperature	- 40° ~ 158° F (-40° to 70° C)
Humidity	0 ~ 90% non-condensing

---

MTBF	50,000 hours
Cooling	Fan left, right, rear
Dimensions (W x D x H)	38.0" x 14.5" x 66.9" (966 x 368 x 1700mm)
Shipping Dimensions (with cover box)	TBD
Rack mounting	2 Rack wide self-standing unit, 39RU
Weight (w/o Boards installed)	TBD
Weight (with HDMI Boards fully installed)	TBD
Shipping Weight (with Boards fully installed, accessories, hard metal case, and cover box)	TBD
Shipping Weight of Individual Boards	2 lbs (0.9 kg)


## 2.3 Input Boards Specification

### 4K HDMI Input Board (PM-HIS4-U)




HDMI Input Board (PM-HIS4-U) Specifications	
Number of Port	4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female HDMI connector, Female 3.5mm stereo jack
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Dolby Digital® Plus, Dolby® TrueHD, DTS-HD High Res, DTS-HD Master Audio™, up to 8ch PCM
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	300 MHz
Standard	DVI 1.0 , HDMI 1.4b
Switching Speed	Max 200ns
Output Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Input Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color, Ultra HD 4K
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	0.5 lbs (0.23 kg)

## 4K DVI Input Board (PM-DIS4-U)

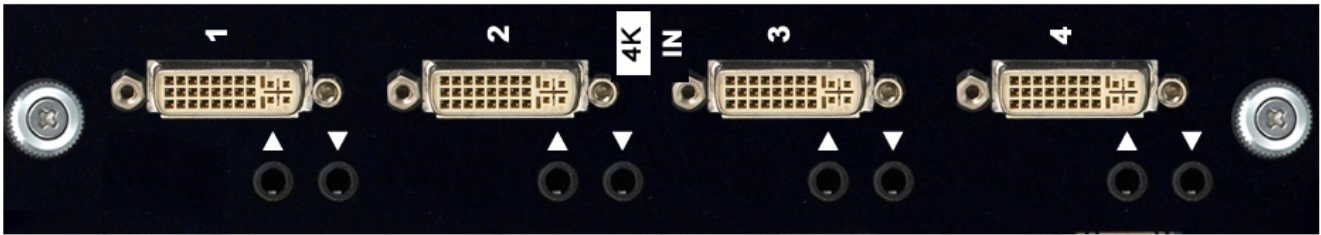

<b>DVI Input Board (PM-DIS4-U) Specifications</b>	
Number of Port	4 DVI ports, 4 Stereo In/out ports
Connector Type	Female DVI connector, Female 3.5mm stereo jack
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Maximum Data Rrate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	300 MHz
Standard	DVI 1.0 , HDMI 1.4b
Switching Speed	Max 200ns
Output Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Input Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color, Ultra HD 4K
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	0.5 lbs (0.23 kg)

### 4K CATx (HDBaseT) Input Board (PM-CIS4-U)

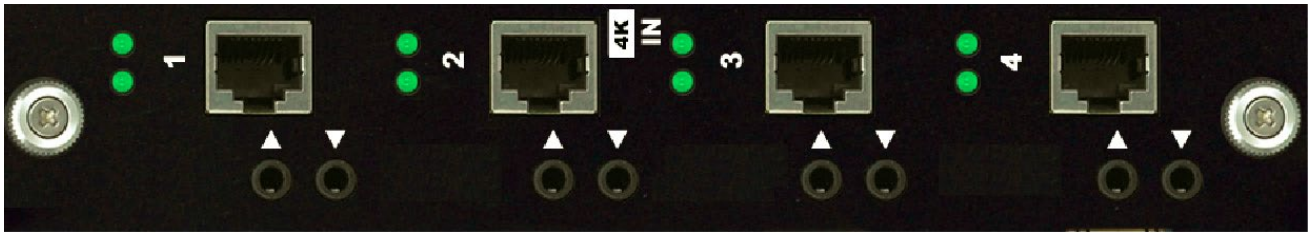

<b>CATx (HDBaseT) Input Board (PM-CIS4-U) Specifications</b>	
Number of Port	4 CATx ports, 4 Stereo In/out ports
Connector Type	Female RJ45 connector, Female 3.5mm stereo jack
Supported Twisted Cable Type	CAT5/5e, CAT6/6e, CAT6a, CAT7
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Supported Twisted Pair Cable Length	330 ft (100m) ; 1080p, 1920x1200 @50/60Hz, Ultra HD 4K
P.O.E Maximum Output Watt	Max 9.6Watt per channel
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Switching Speed	Max 200ns
HDCP Compatible	HDCP version 2.0
Compatible Extenders	PM-CT101-U, PM-CT102-U, PM-CT103-U PM-CT104-U
Single Board Weight	1 lbs (0.45 kg)

### 4K Fiber Optical Input Board (PM-FIS4-U)




<b>Fiber Optical Input Board (PM-FIS4-U) Specifications</b>	
Number of Port	4 Optical ports, 4 Stereo In/out ports
Connector Type	Female 1 LC connector, Female 3.5mm stereo jack
Mode Type	Supports both single mode & multi mode
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Operating Distance	Up to 32,808 ft when used single mode, Up to 1,650 ft when used multi mode
Nominal Peak Wavelength	1310 and 1490, 1550 nm
Transmission Power	> -5 dBm, typical
Maximum Receiver Sensitivity	< -20 dBm, typical
Optical Loss Budget	10 dB, Maximum
Maximum Channel Data Rate	3.4 Gbps each channel
Pixel Data Bit Depth	12 bits per channel, 3 channel ( R, G, B)
Rise and Fall Times (20%-80%)	75psec ≤ Rise time / fall time
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
Switching Speed	Max 200ns
HDCP Compatible	HDCP version 2.0
Compatible Extenders	PM-FT101-U, PM-FT102-U, PM-FT103-U
Single Board Weight	1.5 lbs (0.68 kg)



**HDMI Input Board (PM-HIS4)**

<b>HDMI Input Board (PM-HIS4) Specifications</b>	
Number of Port	4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female HDMI connector, Female 3.5mm stereo jack
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Dolby Digital® Plus, Dolby® TrueHD, DTS-HD High Res, DTS-HD Master Audio™, up to 8ch PCM
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	165 MHz
Standard	DVI 1.0 , HDMI 1.4
Switching Speed	Max 200ns
Output DVI Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Input Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	0.5 lbs (0.23 kg)

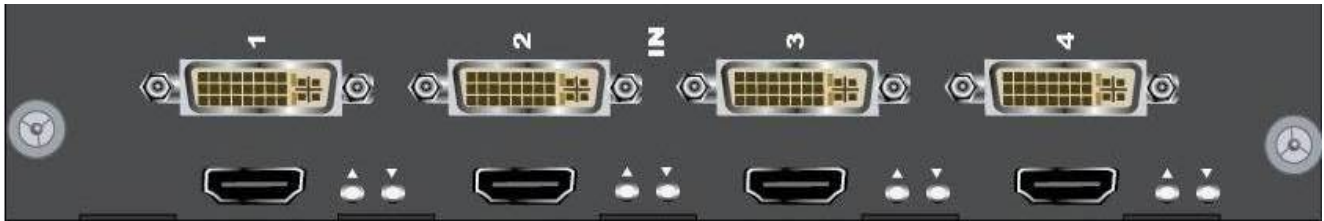
**DVI Input Board (PM-DIS4)**

<b>DVI Input Board (PM-DIS4) Specifications</b>	
Number of Port	4 DVI ports, 4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female DVI connector, Female HDMI connector, Female 3.5mm stereo jack
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	165 MHz
Standard	DVI 1.0 , HDMI 1.4
Switching Speed	Max 200ns
Output DVI Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Input Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	1 lbs (0.45 kg)

**CATx (HDBaseT) Input Board (PM-CIS4)****CATx (HDBaseT) Input Board (PM-CIS4) Specifications**

Number of Port	4 CATx ports, 4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female RJ45 connector, Female HDMI connector, Female 3.5mm stereo jack
Supported Twisted Cable Type	CAT5/5e, CAT6/6e, CAT6a, CAT7
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Supported Twisted Pair Cable Length	330 ft (100m) ; 1080p, 1920x1200 @50/60Hz
P.O.E Maximum Output Watt	Max 9.6Watt per channel
Resolution Range	1080p, 1920x 1200 @50/60Hz
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Switching Speed	Max 200ns
HDCP Compatible	HDCP version 2.0
Compatible Extenders	PM-CT101, PM-CT102, PM-CT103 PM-CT101-D, PM-CT102-D, PM-CT103-D, PM-CT101-RF6, PM-CT102-RF6, PM-CT101-RF6-D, PM-CT102-RF6-D
Single Board Weight	1 lbs (0.45 kg)


## Fiber Optical Input Board (PM-FIS4)

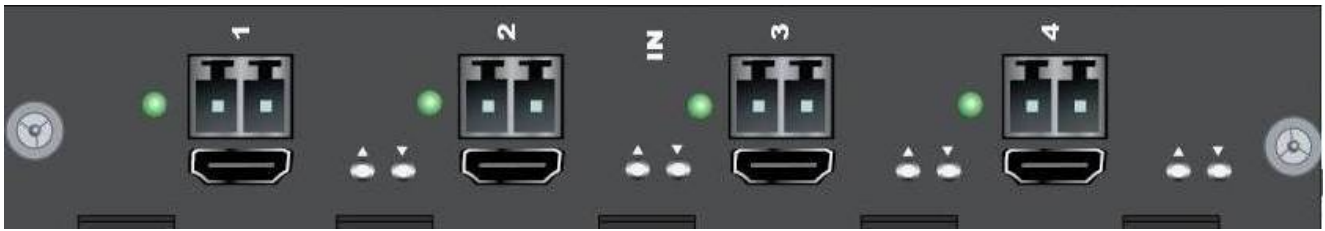

<b>Fiber Optical Input Board (PM-FIS4) Specifications</b>	
Number of Port	4 Optical ports, 4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female 2 LC connector, Female HDMI connector, Female 3.5mm stereo jack
Mode Type	Supports both single mode & multi mode
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Operating Distance	Up to 6,600 ft when used single mode, Up to 1,650 ft when used multi mode
Nominal Peak Wavelength	1310 and 1490, 1550 nm
Transmission Power	> -5 dBm, typical
Maximum Receiver Sensitivity	< -20 dBm, typical
Optical Loss Budget	10 dB, Maximum
Maximum Channel Data Rate	3.4 Gbps each channel
Pixel Data Bit Depth	12 bits per channel, 3 channel ( R, G, B)
Rise and Fall Times (20%-80%)	75psec ≤ Rise time / fall time
Resolution Range	1080p, 1920x 1200 @50/60Hz
Switching Speed	Max 200ns
HDCP Compatible	HDCP version 2.0
Compatible Extenders	PM-FT101, PM-FT102, PM-FT103 PM-FT101-D, PM-FT102-D, PM-FT101-RF6, PM-FT102-RF6, PM-FT101-RF6-D, PM-FT102-RF6-D
Single Board Weight	1.5 lbs (0.68 kg)

**3G/HD-SDI Input Board (PM-SIS4)****3G/HD-SDI Input Board (PM-SIS4) Specifications**

Number of Port	4 3G/HD-SDI ports, 4 Stereo In/out ports
Connector Type	Female BNC connector, Female 3.5mm stereo jack
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Nominal Level	0.8 Vp-p $\pm$ 10 %
Impedance	75 ohm
Return Loss	< -15 dB @ 1 MHz to 1.5 GHz
Equalization	Automatic or manual
Input Cable Equalization Distance	SDI: 150m / HD-SDI: 100m / 3G-HD-SDI: 50m
DC Offset	$\pm$ 0.5 mV with Input at 0 offset
Re-clocking	Automatic
Jitter	<0.3 UI
Rise and Fall Times(20%-80)	135psec $\leq$ Rise time / fall time @2970Mbps
Maximum Data Rate	2.97 Gbps
Auto Data Rate Lock	Yes
Data Types	8 bits or 10 bits
Operation Standard	SMPTE 292M, SMPTE 259M, SMPTE 424M, ITU-RBT.601, ITU-RBT.1120
Single Board Weight	1.5 lbs (0.68 kg)

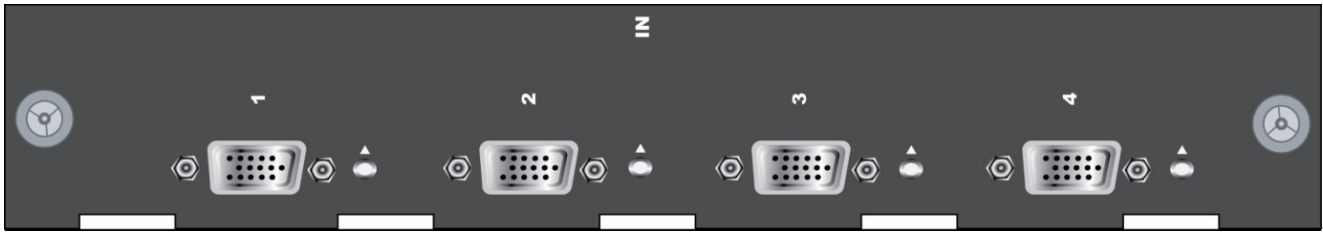**VGA/Component Input Board (PM-AIS4)**


<b>VGA Input Board (PM-AIS4) Specifications</b>	
Number of Port	4 VGA ports, 4 Stereo Input ports
Connector Type	Female 15-pin D-Sub connector, Female 3.5mm stereo jack
Signal Type	RGBHV or YPbPr component Video
Bandwidth	170MHz(-3dB)
Impedance	75 ohm
Norminal level	0.7Vp-p for RGB 1.0Vp-p for YPbPr
Maximum level	1.5Vp-p
Horizontal frequency	15KHz ~ 100KHz
Vertical frequency	30Hz ~ 100Hz
Sync Input level	3 ~ 5.5Vp-p
Audio Insertion	Via 3.5mm stereo Audio in ports
Single Board Weight	0.5 lbs (0.23 kg)

## 2.4 Output Boards Specification

### 4K HDMI Output Board (PM-HOS4-U)




HDMI Output Board (PM-HOS4-U) Specifications	
Number of Port	4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female HDMI connector, Female 3.5mm stereo jack
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Dolby Digital® Plus, Dolby® TrueHD, DTS-HD High Res, DTS-HD Master Audio™, up to 8ch PCM
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	300 MHz
Standard	DVI 1.0 , HDMI 1.4b
Switching Speed	Max 200ns
Output Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Output Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color, Ultra HD 4K
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	0.5 lbs (0.23 kg)

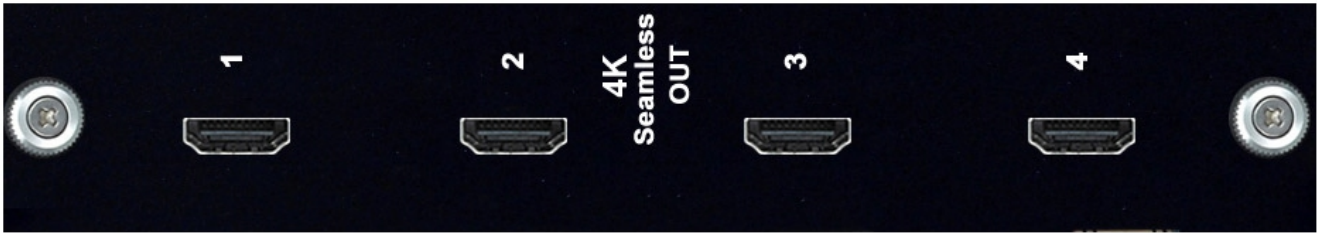**4K HDMI Output Board with Scaling (PM-HOS4S-U)**

<b>HDMI Output Board with Scaling (PM-HOS4S-U) Specifications</b>	
Number of Port	4 HDMI ports
Connector Type	Female HDMI connector,
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Supported when HDMI signal source used
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	300 MHz
Standard	DVI 1.0 , HDMI 1.4b
Switching Speed	Max 200ns
Output Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Output Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color, Ultra HD 4K
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	1 lbs (0.45 kg)


**4K DVI Output Board (PM-DOS4-U)**



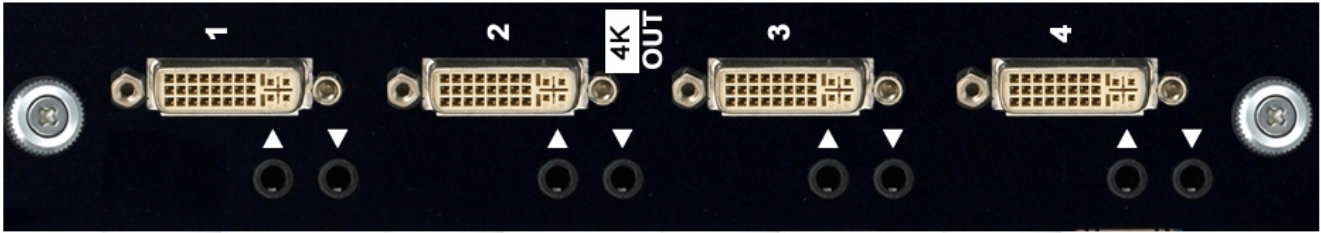

<b>DVI Output Board (PM-DOS4-U) Specifications</b>	
Number of Port	4 DVI ports, 4 Stereo In/out ports
Connector Type	Female DVI connector, Female 3.5mm stereo jack
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	300 MHz
Standard	DVI 1.0 , HDMI 1.4b
Switching Speed	Max 200ns
Output Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Output Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color, Ultra HD 4K
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	1 lbs (0.45 kg)

#### **4K DVI Output Board with Scaling (PM-DOS4S-U)**

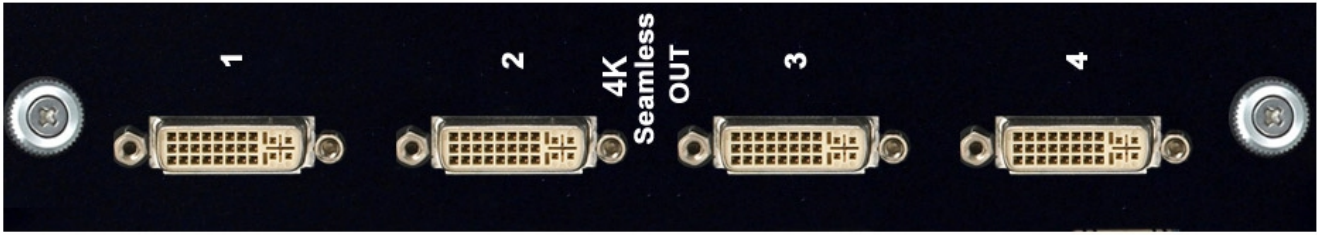

<b>DVI Output Board with Scaling (PM-DOS4S-U) Specifications</b>	
Number of Port	4 DVI ports
Connector Type	Female DVI connector,
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Supported when HDMI signal source used
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	300 MHz
Standard	DVI 1.0 , HDMI 1.4b
Switching Speed	Max 200ns
Output Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Output Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color, Ultra HD 4K
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	1 lbs (0.45 kg)

**4K CATx (HDBaseT) Output Board (PM-COS4-U)**

<b>CATx (HDBaseT) Output Board (PM-COS4-U) Specifications</b>	
Number of Port	4 CATx ports, 4 Stereo In/out ports
Connector Type	Female RJ45 connector, Female 3.5mm stereo jack
Supported Twisted Cable Type	CAT5/5e, CAT6/6e, CAT6a, CAT7
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Supported Twisted Pair Cable Length	330 ft (100m) ; 1080p, 1920x1200 @50/60Hz, Ultra HD 4K
P.O.E Maximum Output Watt	Max 9.6Watt per channel
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Switching Speed	Max 200ns
HDCP Compatible	HDCP version 2.0
Compatible Extenders	PM-CR101-U, PM-CR102-U, PM-CR103-U, PM-CR104-U
Single Board Weight	1 lbs (0.45 kg)

**Note) Scaling Receiver (PM-CR102-U) does not support POE**

## 4K Fiber Optical Output Board (PM-FOS4-U)




<b>Fiber Optical Output Board (PM-FOS4-U) Specifications</b>	
Number of Port	4 Optical ports, 4 Stereo In/out ports
Connector Type	Female 1 LC connector, Female 3.5mm stereo jack
Mode Type	Supports both single mode & multi mode
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Operating Distance	Up to 32,808 ft when used single mode, Up to 1,650 ft when used multi mode
Nominal Peak Wavelength	1310 and 1490, 1550 nm
Transmission Power	> -5 dBm, typical
Maximum Receiver Sensitivity	< -20 dBm, typical
Optical Loss Budget	10 dB, Maximum
Maximum Channel Data Rate	3.4 Gbps each channel
Pixel Data Bit Depth	12 bits per channel, 3 channel ( R, G, B)
Rise and Fall Times (20%-80%)	75psec ≤ Rise time / fall time
Resolution	Up to Ultra HD 4K 4096 x 2160 @24/25/30Hz (RGB/YCbCr 4:4:4 8 bits, YCbCr 4:2:2 8/10/12 bits)
Switching Speed	Max 200ns
HDCP Compatible	HDCP version 2.0
Compatible Extenders	PM-FR101-U, PM-FR102-U, PM-FR103-U
Single Board Weight	1.5 lbs (0.68 kg)

## HDMI Output Board (PM-HOS4)




<b>HDMI Output Board (PM-HOS4) Specifications</b>	
Number of Port	4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female HDMI connector, Female 3.5mm stereo jack
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Dolby Digital® Plus, Dolby® TrueHD, DTS-HD High Res, DTS-HD Master Audio™, up to 8ch PCM
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	165 MHz
Standard	DVI 1.0 , HDMI 1.4
Switching Speed	Max 200ns
Output DVI Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Output Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	0.5 lbs (0.23 kg)

## HDMI Output Board with Scaling (PM-HOS4S)

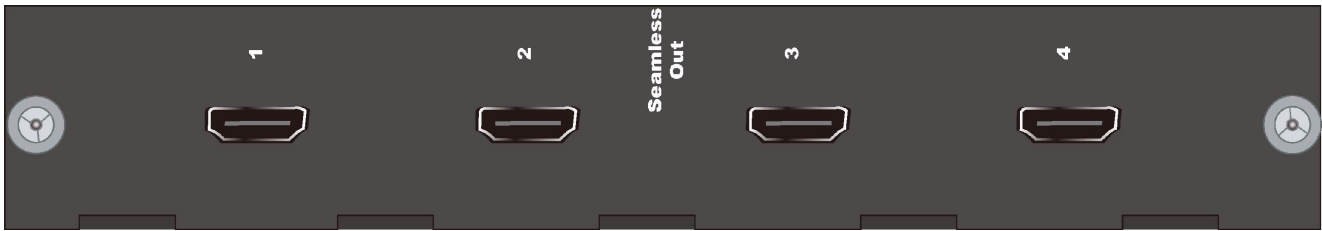


HDMI Output Board with Scaling (PM-HOS4S) Specifications	
Number of Port	4 HDMI ports
Connector Type	Female HDMI connector,
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Supported when HDMI signal source used
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	165 MHz
Standard	DVI 1.0 , HDMI 1.3
Switching Speed	Max 200ns
Output DVI Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Output Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	1 lbs (0.45 kg)

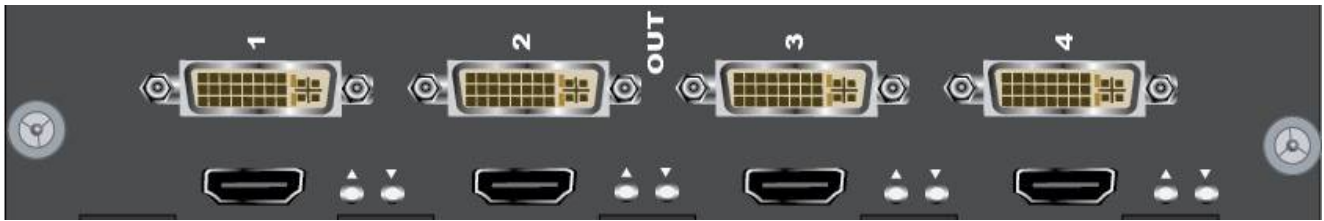**DVI Output Board (PM-DOS4)**

<b>DVI Output Board (PM-DOS4) Specifications</b>	
Number of Port	4 DVI ports, 4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female DVI connector, Female HDMI connector, Female 3.5mm stereo jack
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	165 MHz
Standard	DVI 1.0 , HDMI 1.4
Switching Speed	Max 200ns
Output DVI Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Output Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	1 lbs (0.45 kg)

## DVI Output Board with Scaling (PM-DOS4S)

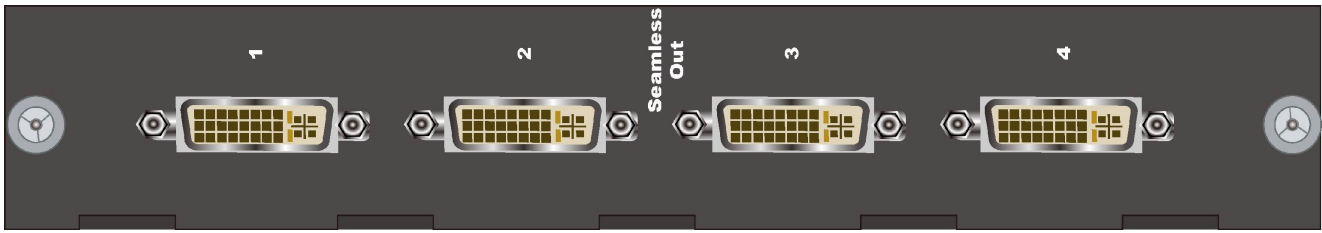


<b>DVI Output Board with Scaling (PM-DOS4S) Specifications</b>	
Number of Port	4 DVI ports
Connector Type	Female DVI connector
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Digital Audio	Supported when HDMI signal source used
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Maximum Pixel Clock	165 MHz
Standard	DVI 1.0 , HDMI 1.3
Switching Speed	Max 200ns
Output DVI Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Output Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	1 lbs (0.45 kg)




**CATx (HDBaseT) Output Board (PM-COS4)**

<b>CATx (HDBaseT) Output Board (PM-COS4) Specifications</b>	
Number of Port	4 CATx ports, 4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female RJ45 connector, Female HDMI connector, Female 3.5mm stereo jack
Supported Twisted Cable Type	CAT5/5e, CAT6/6e, CAT6a, CAT7
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Supported Twisted Pair Cable Length	330 ft (100m) ; 1080p, 1920x1200 @50/60Hz
P.O.E Maximum Output Watt	Max 9.6Watt per channel
Resolution Range	1080p, 1920x 1200 @50/60Hz
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Switching Speed	Max 200ns
HDCP Compatible	HDCP version 2.0
Compatible Extenders	PM-CR101, PM-CR102, PM-CR103, PM-CR101-D, PM-CR102-D, PM-CR101-RF6, PM-CR102-RF6, PM-CR101-RF6-D, PM-CR102-RF6-D
Single Board Weight	1 lbs (0.45 kg)

**Note) Scaling Receiver (PM-CR102) does not support POE**

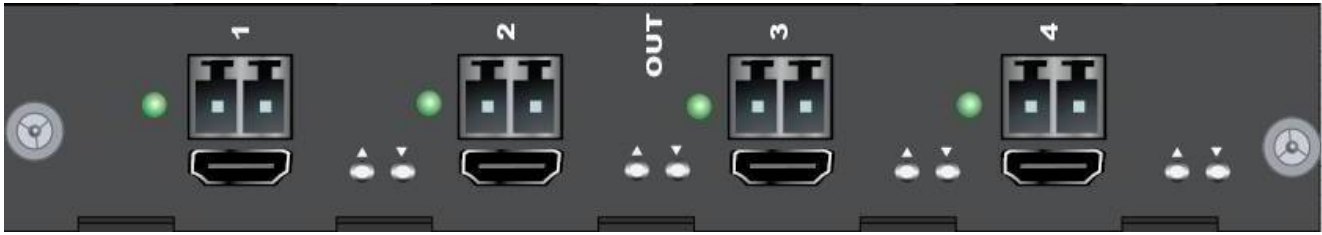**Fiber Optical Output Board (PM-FOS4)**

<b>Fiber Optical Output Board (PM-FOS4) Specifications</b>	
Number of Port	4 Optical ports, 4 HDMI ports, 4 Stereo In/out ports
Connector Type	Female 2 LC connector, Female HDMI connector, Female 3.5mm stereo jack
Mode Type	Supports both single mode & multi mode
Digital Audio	Supported when HDMI signal source used
Audio Extraction	Via 3.5mm stereo Audio out ports
Audio Insertion	Via 3.5mm stereo Audio in ports
Operating Distance	Up to 6,600 ft when used single mode, Up to 1,650 ft when used multi mode
Nominal Peak Wavelength	1310 and 1490, 1550 nm
Transmission Power	> -5 dBm, typical
Maximum Receiver Sensitivity	< -20 dBm, typical
Optical Loss Budget	10 dB, Maximum
Maximum Channel Data Rate	3.4 Gbps each channel
Pixel Data Bit Depth	12 bits per channel, 3 channel ( R, G, B)
Rise and Fall Times (20%-80%)	75psec ≤ Rise time / fall time
Resolution Range	1080p, 1920x 1200 @50/60Hz
Switching Speed	Max 200ns
HDCP Compatible	HDCP version 2.0
Compatible Extenders	PM-FR101, PM-FR102, PM-FR103, PM-FR101-D, PM-FR102-D, PM-FR101-RF6, PM-FR102-RF6, PM-FR101-RF6-D, PM-FR102-RF6-D
Single Board Weight	1.5 lbs (0.68 kg)

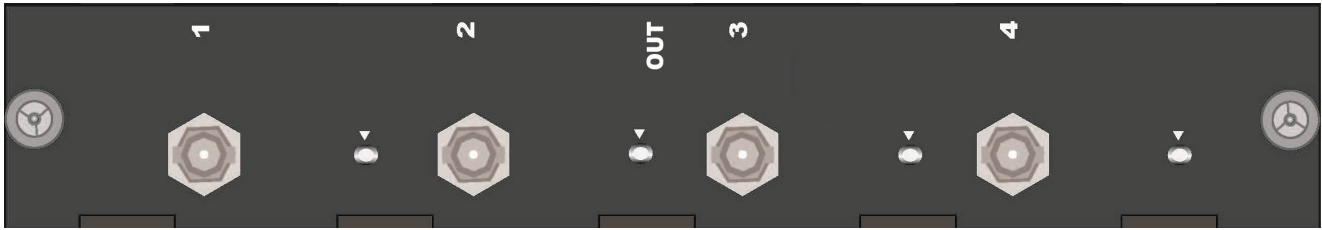**3G/HD-SDI Output Board (PM-SOS4)**

<b>3G/HD-SDI Output Board (PM-SOS4) Specifications</b>	
Number of Port	4 3G/HD-SDI ports, 4 Stereo In/out ports
Connector Type	Female BNC connector, Female 3.5mm stereo jack
Audio Insertion	Via 3.5mm stereo Audio in ports
Nominal Level	0.8 Vp-p $\pm$ 10 %
Impedance	75 ohm
Return Loss	< -15 dB @ 1 MHz to 1.5 GHz
Equalization	Automatic or manual
Output Cable Equalization Distance	SDI: 150m / HD-SDI: 100m / 3G-HD-SDI: 50m
DC Offset	$\pm$ 0.5 mV with Input at 0 offset
Re-clocking	Automatic
Jitter	<0.3 UI
Rise and fall times(20%-80)	135psec $\leq$ Rise time / fall time @2970Mbps
Maximum data rate	2.97 Gbps
Auto Data Rate Lock	Yes
Data Types	8 bits or 10 bits
Operation Standard	SMPTE 292M, SMPTE 259M, SMPTE 424M, ITU-RBT.601, ITU-RBT.1120
Single Board Weight	1.5 lbs (0.68 kg)

## QuadView DVI Output Board (PM-DOS4-QV)



QuadView DVI Output Board (PM-DOS4-QV) Specifications	
Number of Port	1 x DVI port
Connector Type	Female DVI connector
Signal Type	RGB digital Video (DVI and HDMI standards) or YCbCr digital component Video (HDMI)
Maximum Data Rate	3.4 Gbps per color (R,G,B)
Input signal	Any of 4 inputs from PureMedia matrix switch
Resolution	Up to 1920x1080p@60Hz
Maximum Pixel Clock	165 MHz
Standard	DVI 1.0 , HDMI 1.3
Switching Speed	Max 200ns
Output DVI Re-clocking	Automatic
Output Peripheral Device Power	600 mA per Output
Output Equalization	Automatic, Max 30m 1920 x1200 @50/60Hz or 1080p; 8 bit color
HDCP Compatible	HDCP version 2.0
Support Hot Plug Detection	Yes
Single Board Weight	1 lbs (0.45 kg)

## 2.5 PM Matrix Boards and PM Extenders Compatibility Chart

### 4K ( -U ) Parts

Boards Extenders	PM-CIS4-U	PM-FIS4-U	PM-COS4-U	PM-FOS4-U
PM-CT101-U	•			
PM-CT102-U	•			
PM-CT103-U	•			
PM-CT104-U	•			
PM-FT101-U		•		
PM-FT102-U		•		
PM-FT103-U		•		
PM-CR101-U			•	
PM-CR102-U			•	
PM-CR103-U			•	
PM-CR104-U			•	
PM-FR101-U				•
PM-FR102-U				•
PM-FR103-U				•

### 2K Parts

Boards Extenders	PM-CIS4	PM-FIS4	PM-COS4	PM-FOS4
PM-CT101	•			
PM-CT102	•			
PM-CT103	•			
PM-CT101-D	•			
PM-CT102-D	•			
PM-CT101-RF6	•			
PM-CT102-RF6	•			
PM-CT101-RF6-D	•			
PM-CT102-RF6-D	•			
PM-FT101		•		
PM-FT102		•		
PM-FT103		•		
PM-FT101-D		•		
PM-FT102-D		•		
PM-FT101-RF6		•		

PM-FT102-RF6		•		
PM-FT101-RF6-D		•		
PM-FT102-RF6-D		•		
PM-CR101			•	
PM-CR102			•	
PM-CR103			•	
PM-CR101-D			•	
PM-CR102-D			•	
PM-CR101-RF6			•	
PM-CR102-RF6			•	
PM-CR101-RF6-D			•	
PM-CR102-RF6-D			•	
PM-FR101				•
PM-FR102				•
PM-FR103				•
PM-FR101-D				•
PM-FR102-D				•
PM-FR101-RF6				•
PM-FR102-RF6				•
PM-FR101-RF6-D				•
PM-FR102-RF6-D				•

**4K (-U) parts**

- PM-CT101-U : PM series 4K HDMI over CATx (HDBaseT) Extender Transmitter, Stand alone type, single 3.5mm Audio in, POE+, RS-232+, 330 ft
- PM-CT102-U : PM series 4K HDMI over CATx (HDBaseT) Extender Transmitter, Stand alone type, HDMI and VGA selectable Input, single 3.5mm Audio in, POE+, RS-232+, 330 ft
- PM-CT103-U : PM series 4K HDMI over CATx (HDBaseT) Extender Transmitter, Wall Plate type, HDMI and VGA selectable Input, single 3.5mm Audio in, POE+, RS-232+, 330 ft
- PM-CT104-U : PM series 4K HDMI over CATx (HDBaseT) Extender Transmitter, Stand alone type, POE+, RS-232+, 330 ft
- PM-FT101-U : PM series 4K HDMI over Fiber Optic Extender Transmitter, Stand alone type, single 3.5mm Audio in, RS-232+, 32,808 ft SM fiber, 1,650 ft MM fiber
- PM-FT102-U : PM series 4K HDMI over Fiber Optic Extender Transmitter, Stand alone type, HDMI and VGA selectable Input, single 3.5mm Audio in,

RS-232+, 32,808 ft SM fiber, 1,650 ft MM fiber

- PM-FT103-U : PM series 4K HDMI over Fiber Optic Extender Transmitter, Wall Plate type, HDMI and VGA selectable Input, single 3.5mm Audio in, RS-232+, 32,808 ft SM fiber, 1,650 ft MM fiber
- PM-CR101-U : PM series 4K HDMI over CATx (HDBaseT) Extender Receiver, Stand alone type, Single 3.5mm Audio out, POE+, RS-232+, 330 ft
- PM-CR102-U : PM series 4K HDMI over CATx (HDBaseT) Extender Receiver, Stand alone type, Built-in Scaler, single 3.5mm Audio out, POE+, RS-232+, 330ft
- Note) Scaling Receiver (PM-CR102-U) does not support POE**
- PM-CR103-U : PM series 4K HDMI over CATx (HDBaseT) Extender Receiver, Wall Plate type, POE+, RS-232+, 330 ft
- PM-CR104-U : PM series 4K HDMI over CATx (HDBaseT) Extender Receiver, Stand Alone type, POE+, RS-232+, 330 ft
- PM-FR101-U : PM series 4K HDMI over Fiber Optic Extender Receiver, Stand alone type, Single 3.5mm Audio out, RS-232+, 32,808 ft SM fiber, 1,650 ft MM fiber
- PM-FR102-U : PM series 4K HDMI over Fiber Optic Extender Receiver, Stand alone type, Built-in Scaler, single 3.5mm Audio out, RS-232+, 32,808 ft SM fiber, 1,650 ft MM fiber
- PM-FR103-U : PM series 4K HDMI over Fiber Optic Extender Receiver, Wall Plate type, RS-232+, 32,808 ft SM fiber, 1,650 ft MM fiber

**2K parts**

- PM-CT101 : PM series HDMI over CATx (HDBaseT) Extender Transmitter, Stand alone type, HDMI Loop-Through, single 3.5mm Audio in, POE+, RS-232+, 330 ft
- PM-CT102 : PM series HDMI over CATx (HDBaseT) Extender Transmitter, Stand alone type, HDMI and VGA selectable Input, dual 3.5mm Audio in, POE+, RS-232+, 330 ft
- PM-CT103 : PM series HDMI over CATx (HDBaseT) Extender Transmitter, Wall Plate type, HDMI and VGA selectable Input, dual 3.5mm Audio in, POE+, RS-232+, 330 ft
- PM-CT101-D : PM series DVI over CATx (HDBaseT) Extender Transmitter, Stand alone type, DVI Loop-Through, single 3.5mm Audio in, POE+, RS-232+, 330 ft

---

PM-CT102-D	: PM series DVI over CATx (HDBaseT) Extender Transmitter, Stand alone type, DVI and VGA selectable Input, dual 3.5mm Audio in, POE+, RS-232+, 330 ft
PM-CT101-RF6	: PM series HDMI over CATx (HDBaseT) Extender Transmitter, RF6 Rack mountable type, HDMI Loop-Through, single 3.5mm Audio in, POE+, RS-232+, 330 ft
PM-CT102-RF6	: PM series HDMI over CATx (HDBaseT) Extender Transmitter, RF6 Rack mountable type, HDMI and VGA selectable Input, dual 3.5mm Audio in, POE+, RS-232+, 330 ft
PM-CT101-RF6-D	: PM series DVI over CATx (HDBaseT) Extender Transmitter, RF6 Rack mountable type, DVI Loop-Through, single 3.5mm Audio in, POE+, RS-232+, 330 ft
PM-CT102-RF6-D	: PM series DVI over CATx (HDBaseT) Extender Transmitter, RF6 Rack mountable type, DVI and VGA selectable Input, dual 3.5mm Audio in, POE+, RS-232+, 330 ft
PM-FT101	: PM series HDMI over Fiber Optic Extender Transmitter, Stand alone type, HDMI Loop-Through, single 3.5mm Audio in, RS-232+, 6,600 ft
PM-FT102	: PM series HDMI over Fiber Optic Extender Transmitter, Stand alone type, HDMI and VGA selectable Input, dual 3.5mm Audio in, RS-232+, 6,600 ft
PM-FT103	: PM series HDMI over Fiber Optic Extender Transmitter, Wall Plate type, HDMI and VGA selectable Input, dual 3.5mm Audio in, RS-232+, 6,600 ft
PM-FT101-D	: PM series DVI over Fiber Optic Extender Transmitter, Stand alone type, HDMI Loop-Through, single 3.5mm Audio in, RS-232+, 6,600 ft
PM-FT102-D	: PM series DVI over Fiber Optic Extender Transmitter, Stand alone type, HDMI and VGA selectable Input, dual 3.5mm Audio in, RS-232+, 6,600 ft
PM-FT101-RF6	: PM series HDMI over Fiber Optic Extender Transmitter, RF6 Rack mountable type, HDMI Loop-Through, single 3.5mm Audio in, RS-232+, 6,600 ft
PM-FT102-RF6	: PM series HDMI over Fiber Optic Extender Transmitter, RF6 Rack mountable type, HDMI and VGA selectable Input, dual 3.5mm Audio in, RS-232+, 6,600 ft
PM-FT101-RF6-D	: PM series DVI over Fiber Optic Extender Transmitter, RF6 Rack mountable type, DVI Loop-Through, single 3.5mm Audio in, RS-232+, 6,600 ft

---



- PM-FT102-RF6-D : PM series DVI over Fiber Optic Extender Transmitter, RF6 Rack mountable type, DVI and VGA selectable Input, dual 3.5mm Audio in, RS-232+, 6,600 ft
- PM-CR101 : PM series HDMI over CATx (HDBaseT) Extender Receiver, Stand alone type, Single 3.5mm Audio out, POE+, RS-232+, 330 ft
- PM-CR102 : PM series HDMI over CATx (HDBaseT) Extender Receiver, Stand alone type, Built-in Scaler, single 3.5mm Audio out, POE+, RS-232+, 330ft
- Note) Scaling Receiver (PM-CR102) does not support POE**
- PM-CR103 : PM series HDMI over CATx (HDBaseT) Extender Receiver, Wall Plate type, Single 3.5mm Audio out, POE+, RS-232+, 330 ft
- PM-CR101-D : PM series DVI over CATx (HDBaseT) Extender Receiver, Stand alone type, Single 3.5mm Audio out, POE+, RS-232+, 330 ft
- PM-CR102-D : PM series DVI over CATx (HDBaseT) Extender Receiver, Stand alone type, Built-in Scaler, single 3.5mm Audio out, POE+, RS-232+, 330ft
- Note) Scaling Receiver (PM-CR102-D) does not support POE**
- PM-CR101-RF6 : PM series HDMI over CATx (HDBaseT) Extender Receiver, RF6 Rack mountable type, Single 3.5mm Audio out, POE+, RS-232+, 330 ft
- PM-CR102-RF6 : PM series HDMI over CATx (HDBaseT) Extender Receiver, RF6 Rack mountable type, Built-in Scaler, single 3.5mm Audio out, POE+, RS-232+, 330ft
- Note) Scaling Receiver (PM-CR102-RF6) does not support POE**
- PM-CR101-RF6-D: PM series DVI over CATx (HDBaseT) Extender Receiver, RF6 Rack mountable type, Single 3.5mm Audio out, POE+, RS-232+, 330 ft
- PM-CR102-RF6-D: PM series DVI over CATx (HDBaseT) Extender Receiver, RF6 Rack mountable type, Built-in Scaler, single 3.5mm Audio out, POE+, RS-232+, 330ft
- Note) Scaling Receiver (PM-CR102-RF6-D) does not support POE**
- PM-FR101 : PM series HDMI over Fiber Optic Extender Receiver, Stand alone type, Single 3.5mm Audio out, RS-232+, 6,600 ft
- PM-FR102 : PM series HDMI over Fiber Optic Extender Receiver, Stand alone type, Built-in Scaler, single 3.5mm Audio out, RS-232+, 6,600ft
- PM-FR103 : PM series HDMI over Fiber Optic Extender Receiver, Wall Plate type, Single 3.5mm Audio out, RS-232+, 6,600ft
- PM-FR101-D : PM series DVI over Fiber Optic Extender Receiver, Stand alone type, Single 3.5mm Audio out, RS-232+, 6,600 ft
- PM-FR102-D : PM series DVI over Fiber Optic Extender Receiver, Stand alone type Built-in Scaler, single 3.5mm Audio out, RS-232+, 6,600ft
- PM-FR101-RF6 : PM series HDMI over Fiber Optic Extender Receiver, RF6

- PM-FR102-RF6 : Rack mountable type, Single 3.5mm Audio out, RS-232+, 6,600 ft  
PM series HDMI over Fiber Optic Extender Receiver, RF6  
Rack mountable type, Built-in Scaler, single 3.5mm Audio out,  
RS-232+, 6,600ft
- PM-FR101-RF6-D : PM series DVI over Fiber Optic Extender Receiver, RF6  
Rack mountable type, Single 3.5mm Audio out, RS-232+, 6,600 ft
- PM-FR102-RF6-D : PM series DVI over Fiber Optic Extender Receiver, RF6  
Rack mountable type, Built-in Scaler, single 3.5mm Audio out,  
RS-232+, 6,600ft

## Chapter 3. Installation

### 3.1 Package Contents

The shipping group consists of the followings:



- ▶ 1 x PM series Matrix Router Main Frame
- ▶ Input / Output Boards (purchased separately)
- ▶ AC Power Cords
- ▶ 1 x RS-232C Cable (crossed type)
- ▶ 1 x RJ-45 UTP Cable (crossed type)
- ▶ 1 x USB Cable for Firmware Update
- ▶ User's Manual

### 3.2 Installation Environments


For installation environments, we recommend the following environments;

- ▶ Below 30°C of ambient temperature
- ▶ Install and operate in the environment below 60% of ambient humidity (Best condition)
- ▶ Use it in the environment of free of vibrations and dusts and in good ventilation condition
- ▶ Avoid areas with direct sunlight, heat sources, or high levels of EMI
  - \* EMI: Electro-Magnetic Interference
- ▶ Recommend stabilized AC Input power (Recommend to use AVR)
  - \* AVR: Automatic Voltage Regulator
- ▶ All physical connections to the product use industry-standard connectors.
- ▶ Be careful when you contact the product because some parts can be somewhat hot

### 3.3 Installation

**Note)** Before installing PM Matrix Router, inspect the physical condition of the unit if there is any signs of damage. If you find damage, stop installing and contact your PureLink representative immediately. When the unit has been inspected and found to be in good condition, the installation process can begin.


#### Installing and Removing Input and Output Board

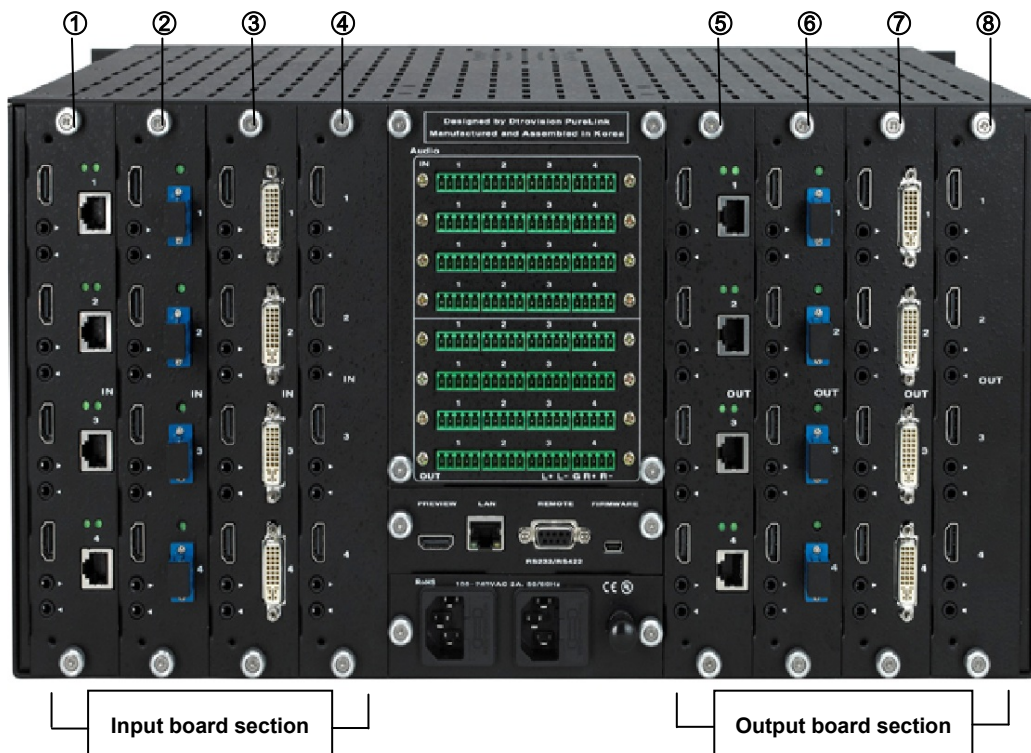

PM-16X has total 8 vertical Board slots; 4 Input Board slots section on the left side and 4 Output Board slots section on the right side, to configure maximum of 16 Inputs and 16 Outputs.

- |                     |                      |
|---------------------|----------------------|
| ① Input 1,2,3,4     | ⑤ Output 1,2,3,4     |
| ② Input 5,6,7,8     | ⑥ Output 5,6,7,8     |
| ③ Input 9,10,11,12  | ⑦ Output 9,10,11,12  |
| ④ Input 13,14,15,16 | ⑧ Output 13,14,15,16 |

**Note)** PM-32X and larger frame takes board from left top to right bottom. For example of PM-48X is ;

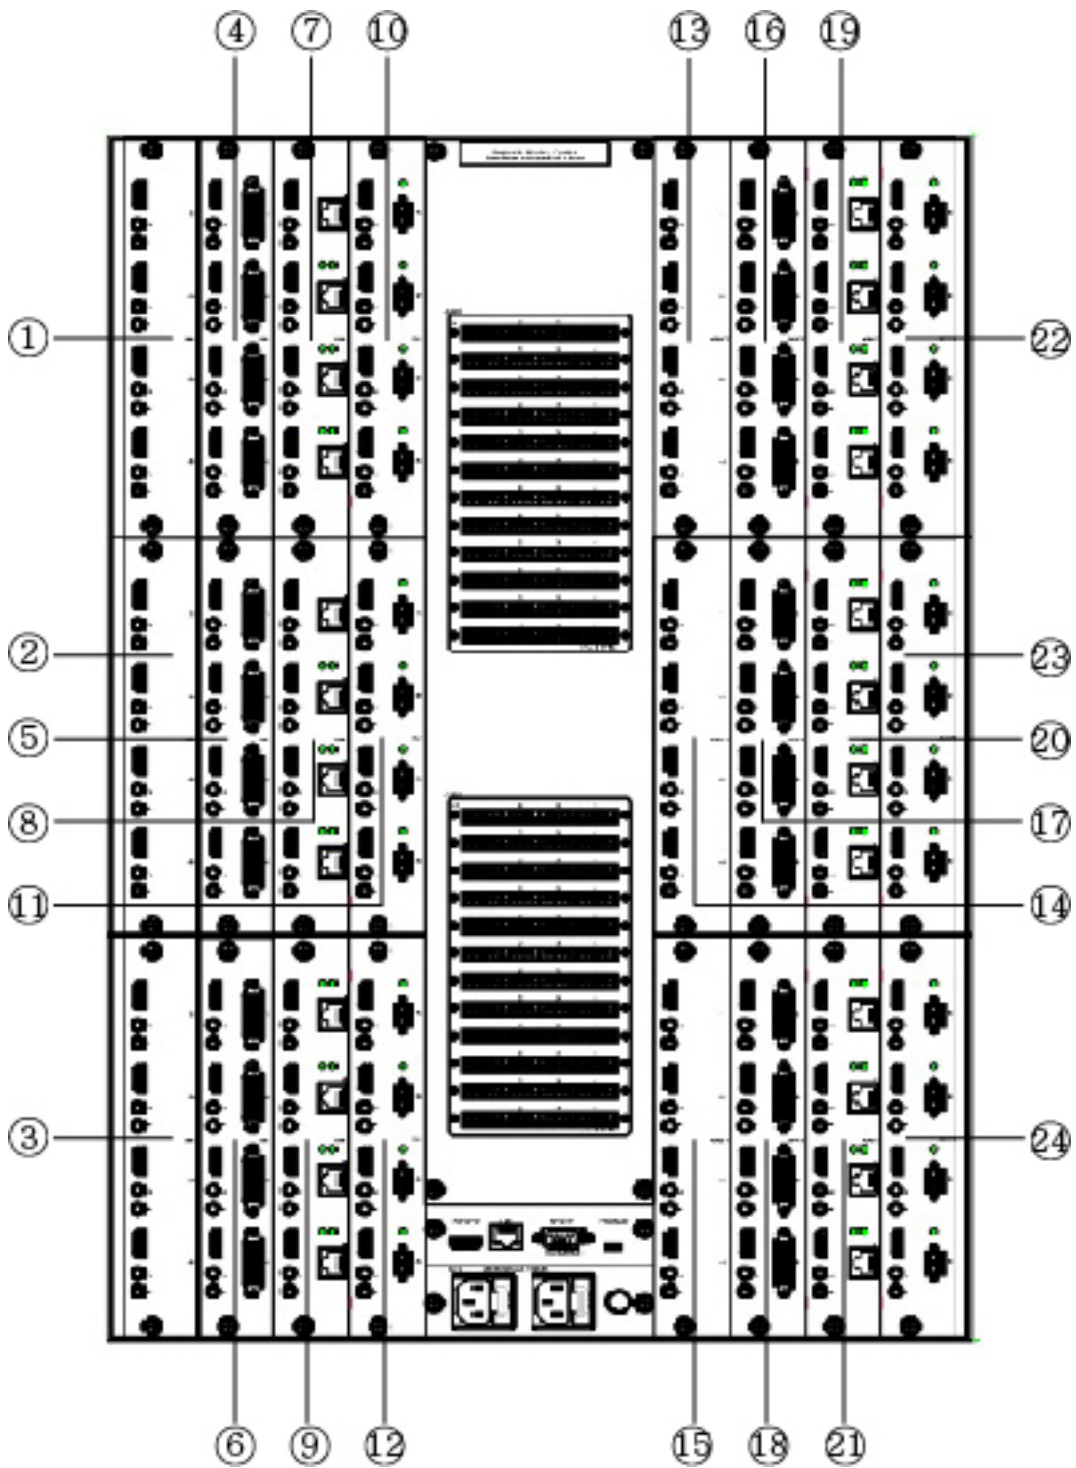

① Input 1,2,3,4

② Input 5,6,7,8

③ Input 9,10,11,12

⑬ Output 1,2,3,4

⑭ Output 5,6,7,8

⑮ Output 9,10,11,12

④ Input 13,14,15,16	⑯ Output 13,14,15,16
⑤ Input 17,18,19,20	⑰ Output 17,18,19,20
⑥ Input 21,22,23,24	⑱ Output 21,22,23,24
⑦ Input 25,26,27,28	⑲ Output 25,26,27,28
⑧ Input 29,30,31,32	⑳ Output 29,30,31,32
⑨ Input 33,34,35,36	㉑ Output 33,34,35,36
⑩ Input 37,38,39,40	㉒ Output 37,38,39,40
⑪ Input 41,42,43,44	㉓ Output 41,42,43,44
⑫ Input 45,46,47,48	㉔ Output 45,46,47,48

Install Board as follows;

1. Align the Board with metal guide rail
2. Gently slide the Board into the frame until it connects to the main frame
3. Tighten the top and bottom screw knobs (clockwise) to lock the Board to the main frame

Removing Board as follows;

1. Disconnect any connected cables
2. Loosen and pull the top and bottom screw knobs (counterclockwise) to unlock the Board from the main frame
3. Gently slide Board out of the main frame

## Installing the Matrix Router in a Rack

**Note) When mount the Matrix Router in a rack, ensure that none of the fans have restricted air flow**

PM-16X is designed to be mounted in a standard 19" (48.26 cm) AV rack. It takes 5 RU rack space and it is recommended to have at least one empty rack unit space above and below of the Matrix Router to prevent overheating.

### Rack Installation Tips

- Write down the serial number (usually located on the bottom of the unit) in an easily accessible location prior to installing the unit in a rack
  - It is recommended to test unit to ensure the unit is working properly prior to installing the unit in a rack
  - It is recommended to use two or more people installing the unit in a rack
-

- \* PM-16X weighs approximately 28.20 pounds (12.4 kg) fully populated
- For HDMI or DVI Input and/or Output Boards, we recommend using copper cable no longer than 33 ft (10meters) for HD Video quality assurance. Above 33 ft (10meters), we recommend to use CATx or Fiber Optic extension system. This will assure future with higher resolution Video transmission.
- For CATx Input and/or Output Boards, PM CATx Extenders are required. PM CATx Transmitters pair with PM CATx Input Board and PM CATx Receivers pair with PM CATx Output Board. See [pg. 35](#) for detail information.
- For Fiber Input and/or Output Boards, PM Fiber Extenders are required. PM Fiber Extender Transmitters pair with PM Fiber Input Board and PM Fiber Receivers pair with PM Fiber Output Board. See [pg. 35](#) for detail information.
- Use crossed RS-232/422 cable for serial control
- Use crossed RJ-45 cable for LAN control

## Installation and Setup

- Place the Matrix Router into a desired position and screw in the rack ear holes.
  - \* Recommended to screw all 6 holes for secure installation
- Plug power cord into power supply unit on the Matrix Router. For redundancy power use, plug power cords into both power supply unit
- Connect source devices to the Matrix Router's Input Board using appropriate cables
- Connect display devices to the Matrix Router's Output Board using appropriate cables. Connect control devices to the Matrix Router's communication ports.
  - \* Command Protocols are communicated through RS-232/422, LAN, or front panel touch screen. USB connection is only for firmware update.
- Make sure any connected Extenders' power are on.
  - \* CATx Extenders may not need power if they will be powered via POE+
- Turn on the power of display devices
- Turn on the power of Matrix Router
- Turn on the power of source devices


**Note)** For most of cases, PureLink's Auto EDID factory default setting will result in a satisfactory image on the display. It's almost plug-n-play system. There may be cases where additional adjustment is required, please refer to Auto-EDID management system section [pg. 63](#) or contact PureLink technical support team for the assistance.

### 3.4 Cable Termination

- CATx (HDBaseT) cable
- RS-232/422 cable (PM Matrix)
- LAN cable
- Audio cable
- RS-232/422 cable (PM Extenders)

#### CATx Cable Termination (for CATx Input/Output Boards)

PM series Matrix Router and Extenders are designed TIA/EIA-566-B Standard. Please ensure that each PIN layout of the cable is corresponding with the picture below before connecting the cable. Please note that CATx or above level cable enables to deliver better quality and longer distance.

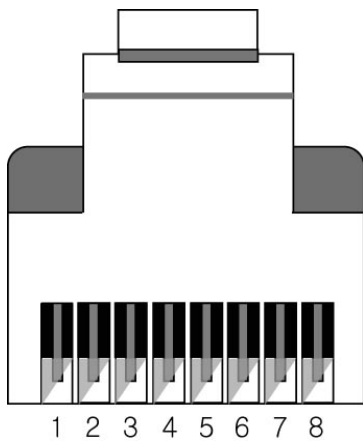

Pin	TIA/EIA-568B	Signal
	Wire color	Digital RGB
1	Orange/ White	TMDS Data2+
2	Orange	TMDS Data2-
3	Green/ White	TMDS Data1+
4	Blue	TMDS Data0+
5	Blue/ White	TMDS Data0-
6	Green	TMDS Data1-
7	Brown/ White	TMDS Clock+
8	Brown	TMDS Clock-


#### RS-232/422 Cable Termination (for Control)

**Note) Crossover (Null modem) cable must be used for the communication with PM series Matrix Router**

The following table shows the pinout of the RS-232/422 connector. Note that in the pinout table, some transmit/receive functions (abbreviated as Tx/Rx) are different for RS-232 versus RS-422. DB9 cables are available with male-to-male, female-to-female, and male-to-female connectors. PM series Matrix Router's RS-232/422 port uses a male DB9 connector and therefore requires a cable with a female connector.

Pin	RS-232	RS-422
1	Not used	Not used



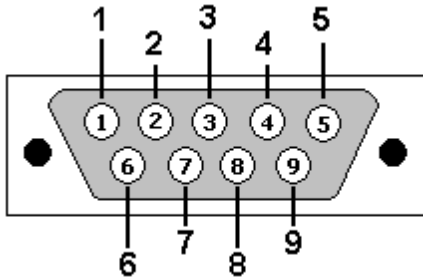


2	Rx: Receive	Rx-: Receive (-)
3	Tx: Transmit	Tx-: Transmit (-)
4	Not used	Not used
5	Ground	Ground
6	Not used	Not used
7	Not used	Tx+: Transmit (+)
8	Not used	Rx+: Receive (+)
9	Not used	Not used

### LAN Cable Termination (for Control)

The following table shows the pinout of the LAN connector. Note that in the pinout table, some transmit/receive functions (abbreviated as Tx/Rx) are different for straight-through cable and crossover LAN cable.

**Straight-through Cable:** for connection of PM series Matrix Router to an Ethernet network

**Crossover Cable** : for direct connection between the PC or controller and the PM series Matrix Router.

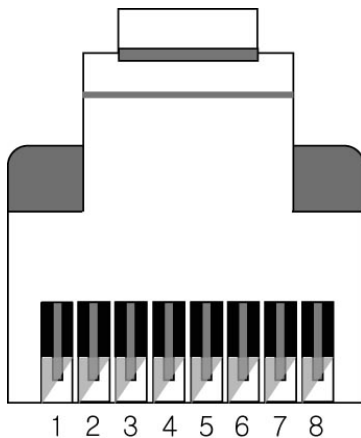


Pin	Crossover Cable	
	End 1 Wire Color	End 2 Wire Color
1	Orange/ White	Orange/ White
2	<b>Orange</b>	<b>Green</b>
3	Green/ White	Green/ White
4	Blue	Blue
5	Blue/ White	Blue/ White
6	<b>Green</b>	<b>Orange</b>
7	Brown/ White	Brown/ White
8	Brown	Brown

Pin	Straight-through Cable	
	End 1 Wire Color	End 2 Wire Color
1	Orange/ White	Orange/ White
2	Green	Green
3	Green/ White	Green/ White
4	Blue	Blue
5	Blue/ White	Blue/ White
6	Orange	Orange
7	Brown/ White	Brown/ White
8	Brown	Brown

### Audio Cable Termination (for Audio Matrix Router)

5-pin Phoenix connector is used for Audio Matrix Router's Input/Output. Please ensure to follow the picture below for Audio cable termination before connecting the cable.

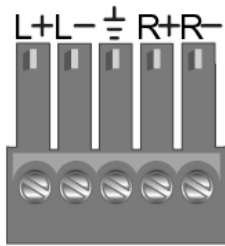


Pin	Audio Phoenix Connector
1	L + (Stereo Audio)
2	L -
3	Ground
4	R + (Stereo Audio)
5	R -

\* Pinout from the left

### RS-232/422 Cable Termination (for PM Extender Tx/Rx)

5-pin Phoenix connector is used for RS-232/422 communication between PM Extender Tx/Rx to the devices that are attached.

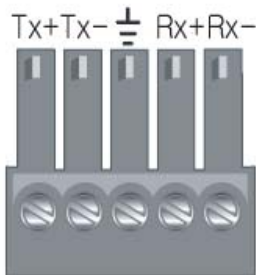

Pin	RS-232	RS-422
1	Tx	Tx +
2	Not used	Tx -
3	Ground	Ground
4	Rx	Rx +
5	Not used	Rx -

\* Pinout from the left

## Chapter 4. Operation

PM series Matrix Router can be operated via three convenient methods;

- 1) Front panel LCD touch screen
- 2) RS-232/422C
- 3) LAN (TCP/IP)

### 4.1 Front Panel LCD Touch Screen Operation

Front panel LCD touch screen of PM series Matrix Router is designed for user to operate and configure settings through six main menus;

1. **System Information** - Check current system's status
2. **Create** - Configuring Input - Output switching connections
3. **System Configuration** - Configure communication settings and resetting the system
4. **Preset** - Create, save and recall the presets
5. **I/O Configuration** - Configure I/O options
6. **EDID** - Configure EDID settings

### System Information



## 1) Summary

It displays the overview of current system's status

### 1.1) System Information

- It displays frame's maximum capacity of I/O ports
- It displays current system's communication setting status (RS-232 Baud rate, IP address, product ID, and firmware version)
- It displays touch screen's lock/un-lock status
  - ✓ In security-lock mode, user only has access to "System info" menu, other menus will be locked.
- It displays cooling fan's status
  - ✓ If the status shows as Cool Fan Error, please turn off the system and contact your PureLink representative immediately.
- It displays power supply units' status

### 1.2) Channel info

- It displays Matrix Router's current Video and Audio switching status
    - ✓ 1st row in white color represents Output numbers
    - ✓ 2nd row in green color represents Video Input numbers
    - ✓ yellow color represents Test Pattern mode
    - ✓ orange color represents Fixed Video Input numbers<sup>\*1</sup>
    - ✓ 3rd row in blue color represents Audio Input numbers
- <sup>\*1</sup> *When Video is in fixed mode, it will not switch to other Inputs*


## 2) Input



PM Matrix Router has built-in signal analyzing function which enables user to check the detail information of incoming and outgoing signals.

- It displays Input port number, Board type, EDID information, firmware version, incoming signal's resolution, Video format, and transmission status.


### 3) Output

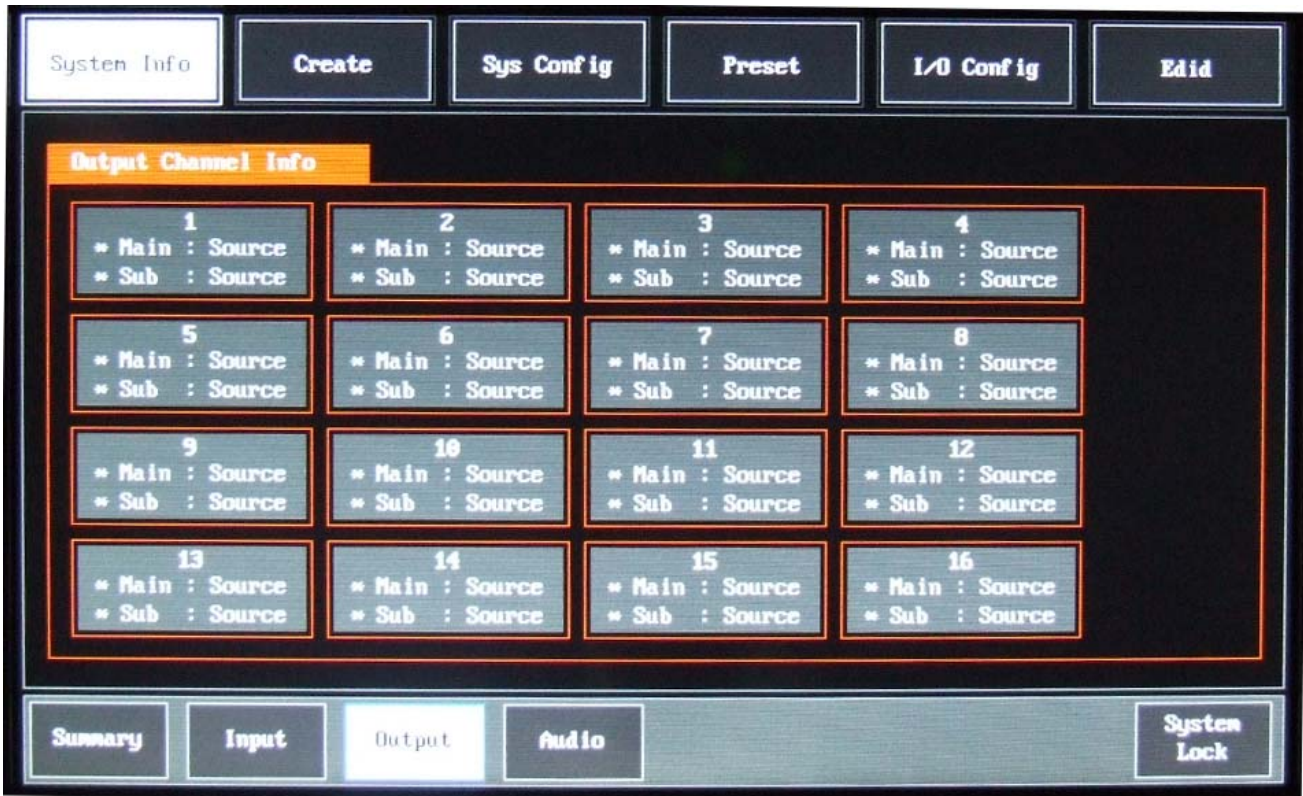

PM Matrix Router has built-in signal analyzing function which enables user to check the detail information of incoming and outgoing signals.

- It displays Output port number, Board type, selected Input channel number, connected monitor's EDID information, firmware version, incoming signal's resolution, Video format, and transmission status.

## 4) Audio

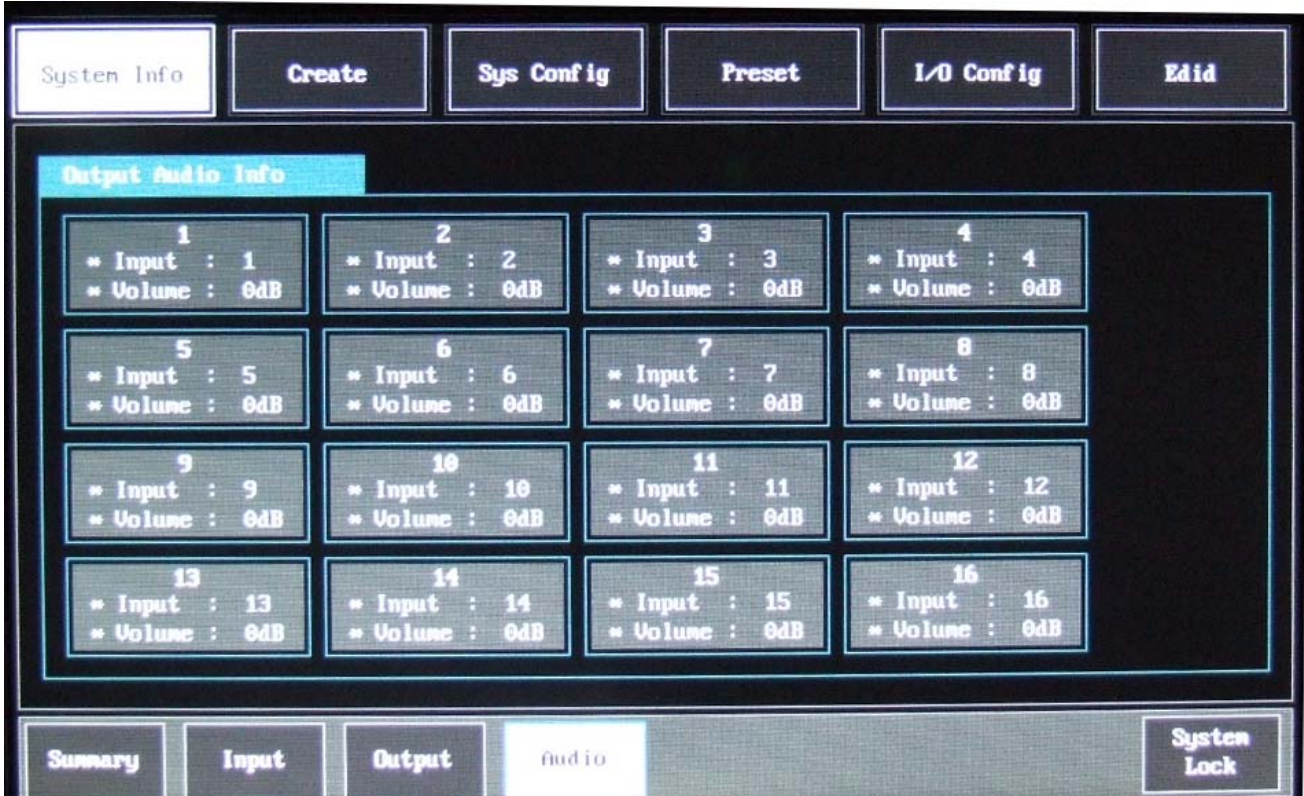

It displays Audio Matrix Router's switching status and Output volume.

- 0 db represents no attenuation
- -1db represents -1db attenuation
- Mute represents Output volume mute

## 5) System Lock (Password required)

Touch screen security lock/unlock setting

Touch Lock: User has an access to only "System info" menu, other menus will be locked.

Touch Unlock: User has access to any menus


Output Fix Mode: Set Output number to show selected certain Input. (Video only)

**Note) Password : 2001**

## Create


PM series Matrix Router is designed to create an independent Video/Audio switching or switching Video/Audio together. This section will guide user how to create/disconnect switching Video and Audio connection.

## 1) Video

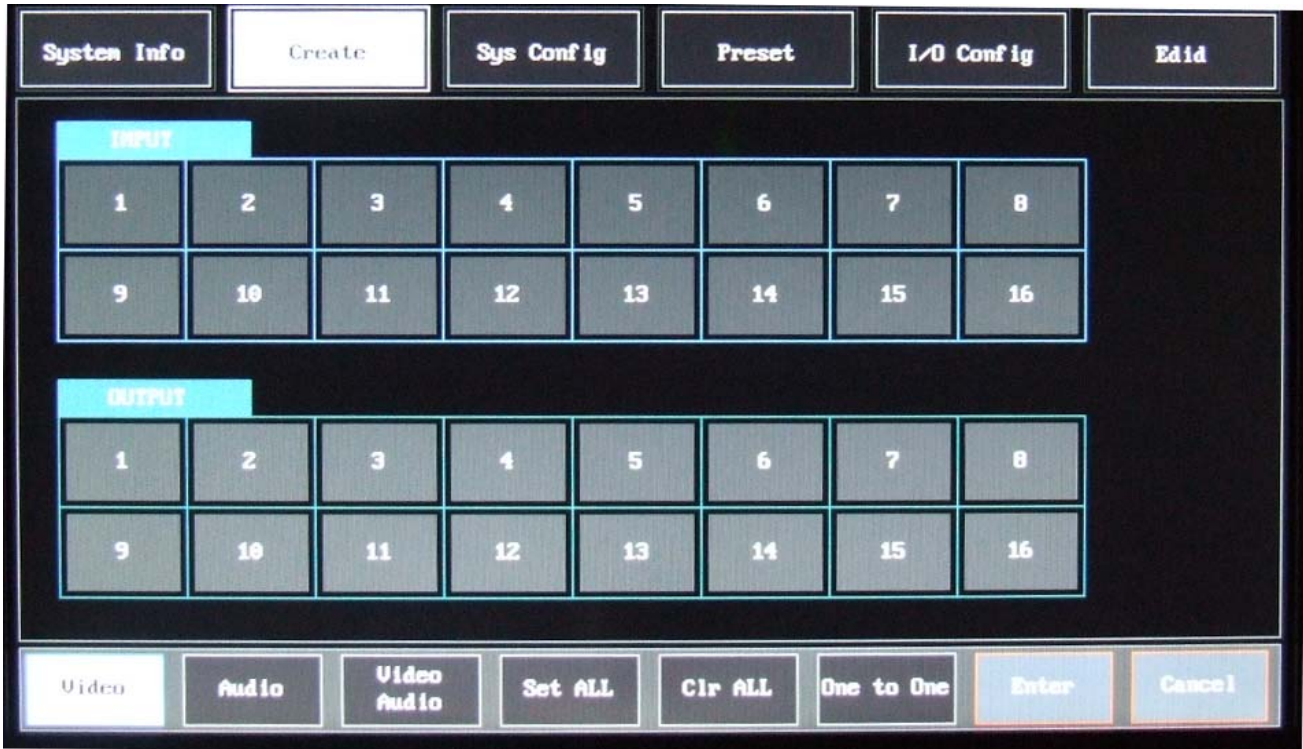


This section is to switch Video connection only. Select Input and Output numbers to route source signal to destination devices and push "Enter" button on the bottom right to execute. User can send select multiple Outputs for the Input.

## 2) Audio

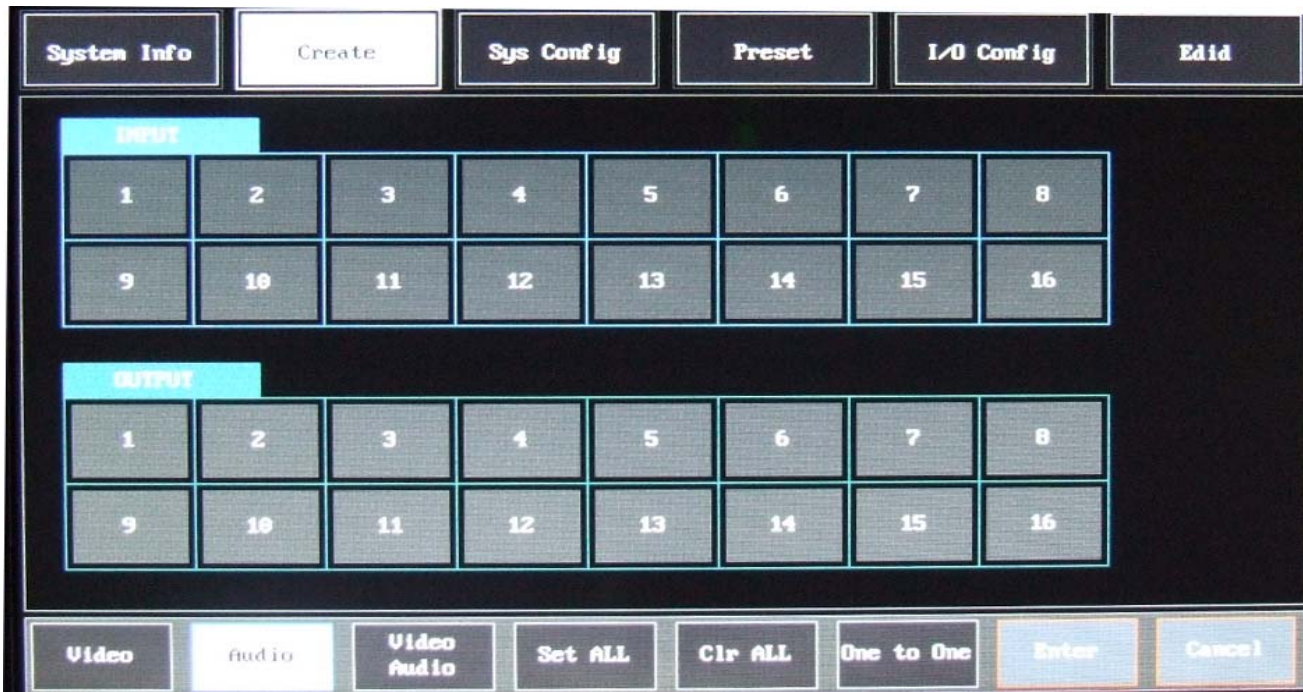

This section is to switch Audio connection only. Select Input and Output numbers to route source signal to destination devices and push "Enter" button on the bottom right to execute. User can send select multiple Outputs for the Input

### 3) Video & Audio

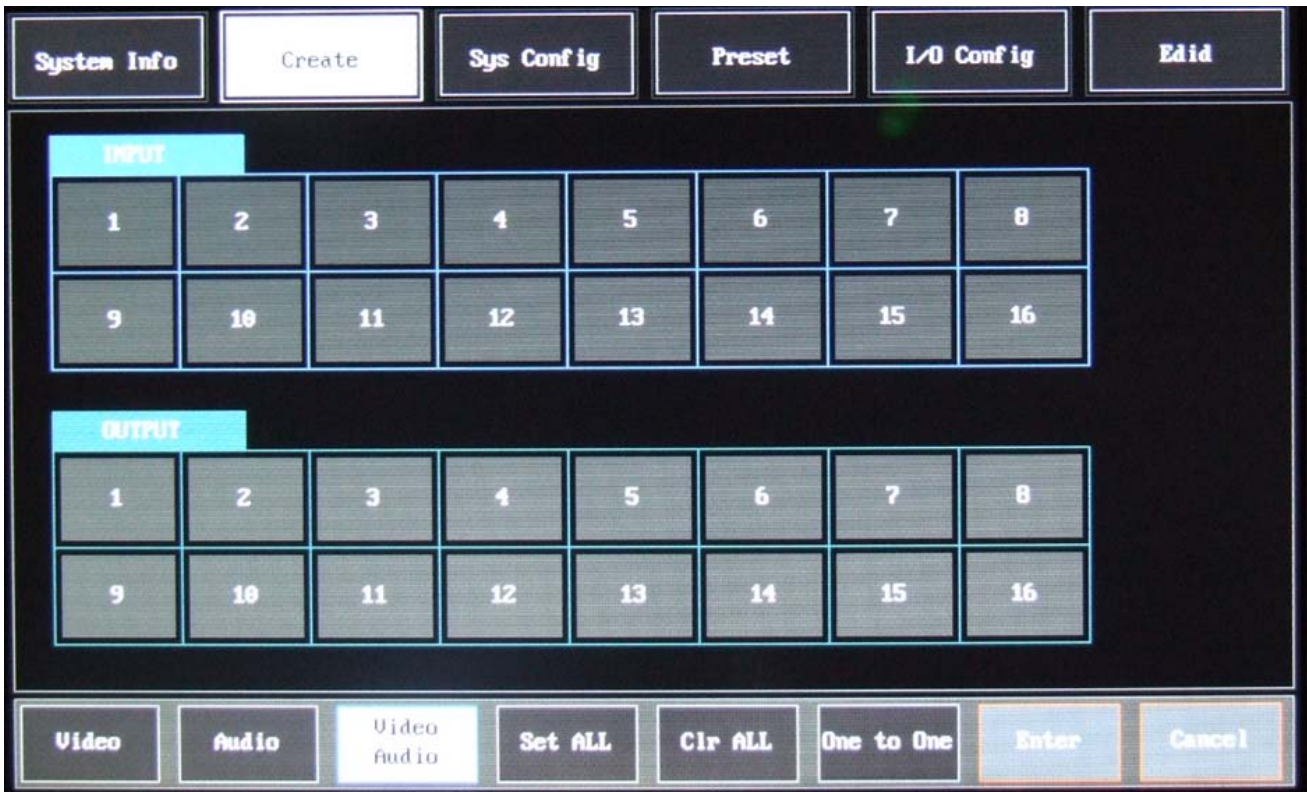

This section is to switch Video and Audio connection together. Select Input and Output numbers to route source signal to destination devices and push "Enter" button on the bottom right to execute. User can send select multiple Outputs for the Input

#### 4) Set All

"Set All" button is to select all the Output w/o pushing them individually.

#### 5) Clear CH

"Clear CH" button is to clear all the Output that was selected w/o pushing them individually.

#### 6) One to One

"One to One" button is to create an one to one connection between Input and Output; for example, connect Input #1 to Output #1, Input #2 to Output #2, ~ Input #15 to Output #15, Input #16 to Output #16.



## 7) Enter

"Enter" button is to execute the changes made.


## 8) Cancel

"Cancel" button is to cancel the changes made.

## System Configuration

PM series Matrix Router's communication setting can be configured using a front panel touch screen LCD not needing an external PC or device. This section will demonstrate how to set RS-232, LAN, and Product ID information.

### 1) RS232

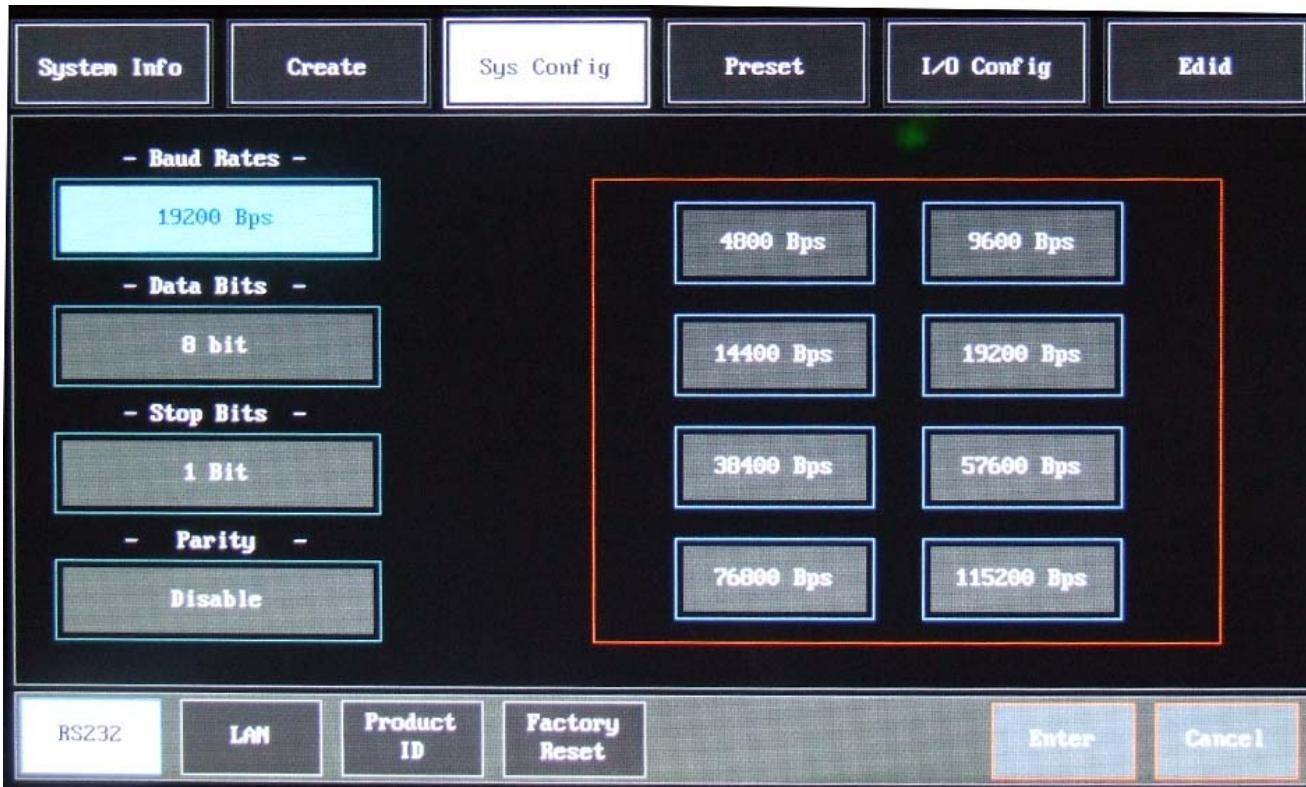

There are four values those need to be set for serial communication; baud rate, data bits, stop bits, and parity. Click and select each value using touch screen and push enter button to save.

Factory default (recommended) settings for serial communication are:

Baud rate - 19200

Data bits - 8

Parity - none

Stop bits - 1

Flow control - none

and supported settings are:

Supported Baud Rate: 4800 Bps, 9600 Bps, 14400 Bps, 19200 Bps, 38400 Bps,  
57600Bps, 76800 Bps, 115200 Bps


Supported Data bit: 5 bit, 6 bit, 7 bit, 8 bit

Supported Parity: Non, Even, Odd

Supported Stop bit: 1 bit, 2 bit

See pg. 46 for RS-232/422 cable termination

## 2) LAN

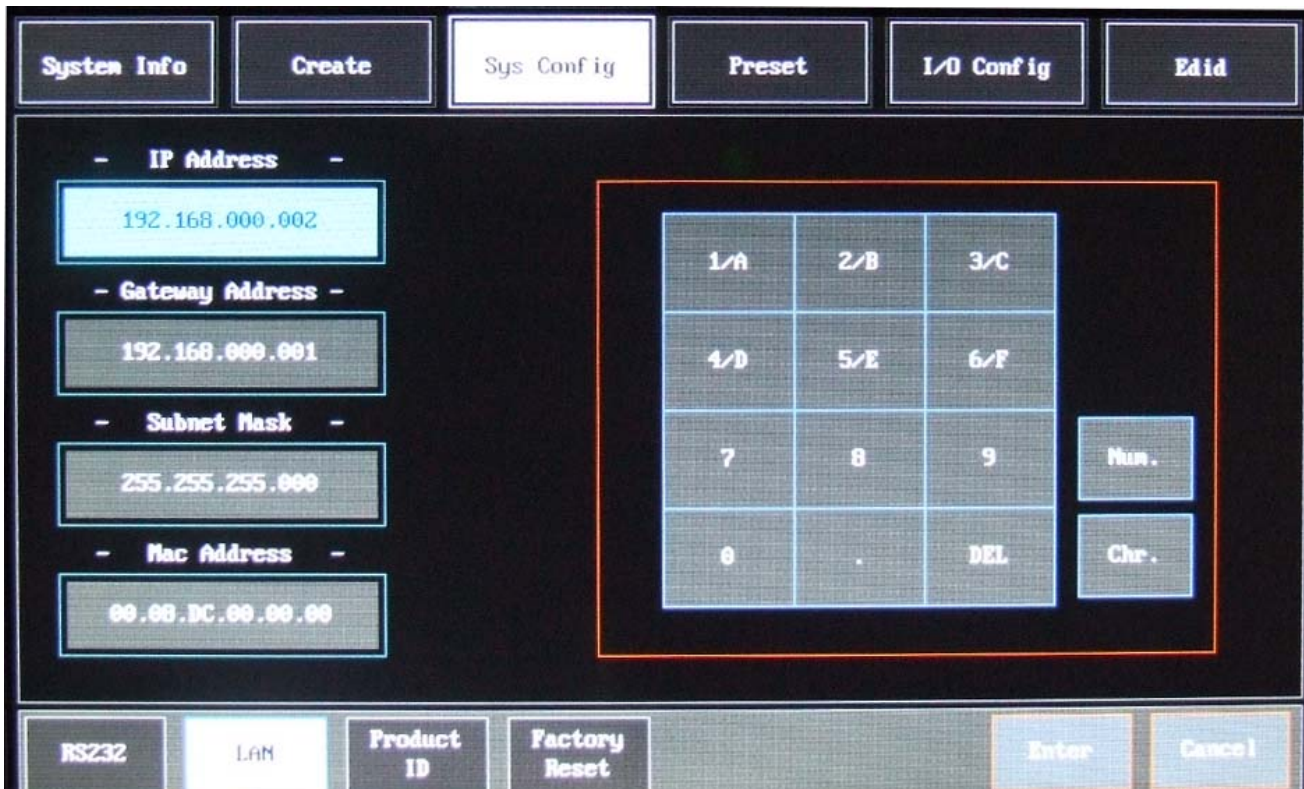

PM series Matrix Router can be controlled through the 10/100 base Ethernet port using either GUI (graphic user interfaces) or a command line interface. The graphic user interfaces use a standard web browser such as Microsoft Internet Explorer.

There are four values that need to be set for LAN communication; IP address, Gateway address, Subnet mast, and Mac address. Click and select each value using touch screen and push enter button to save. See pg. 45 for LAN cable termination

**Note) Please contact your Network Administrator for network information to avoid any IP conflict.**

Factory default settings for LAN communication are:

IP Address: 192.168.000.002

Gateway Address: 192.168.000.001


Subnet Mask: 255.255.255.000

Mac Address: Matrix Router has its own MAC address and that MAC address allows user to communicate with PC network solutions without any communication conflict.

Use number key pad to set network information.

Use "." to move to the next section.

### 3) Router ID

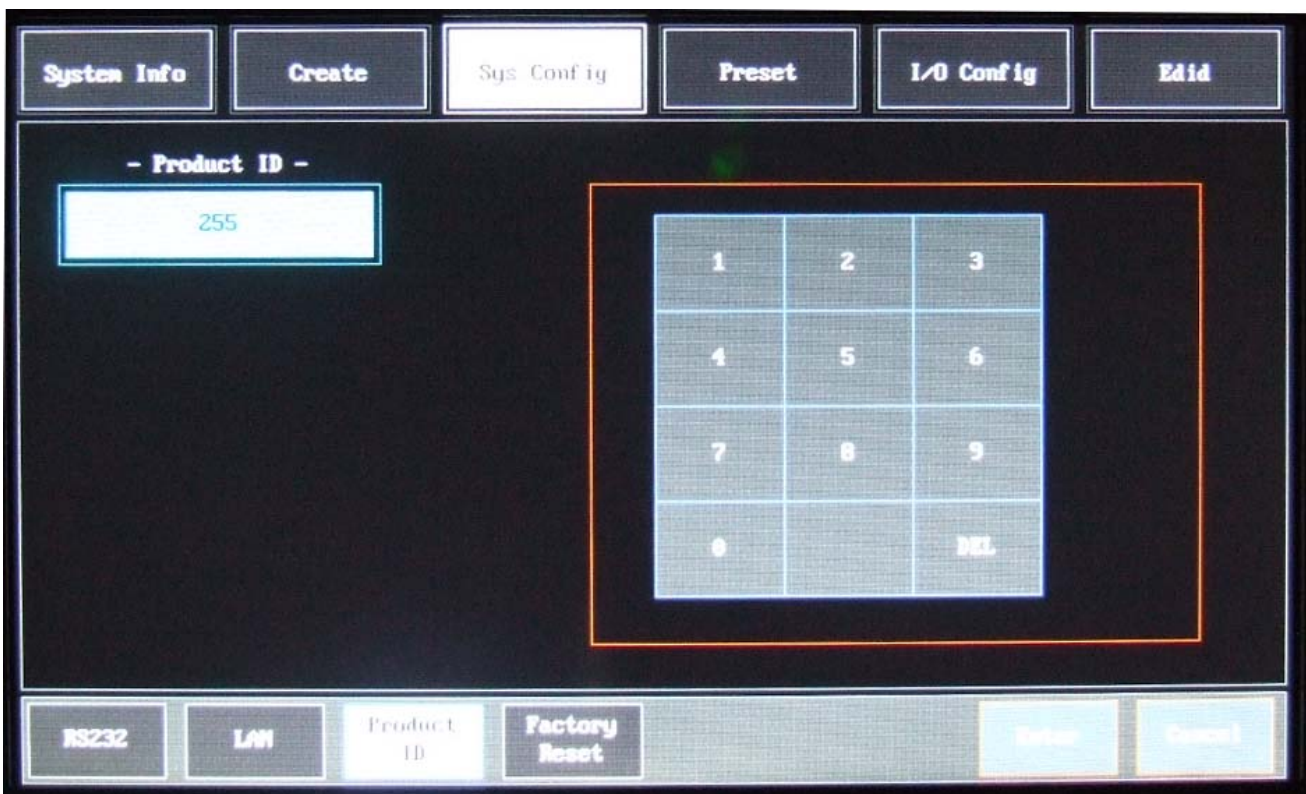


By setting different ID to the Matrix Router, up to 255 units of PM series Matrix Router can be connected and operated in the same network either via serial or LAN communication.

Router ID can be set between 001 ~ 255.

Factory default setting is 001.

**Note) Router ID is associated with commend control Protocol; therefore, it is important to remember Matrix Router's current Router ID.**

#### 4) Factory Reset

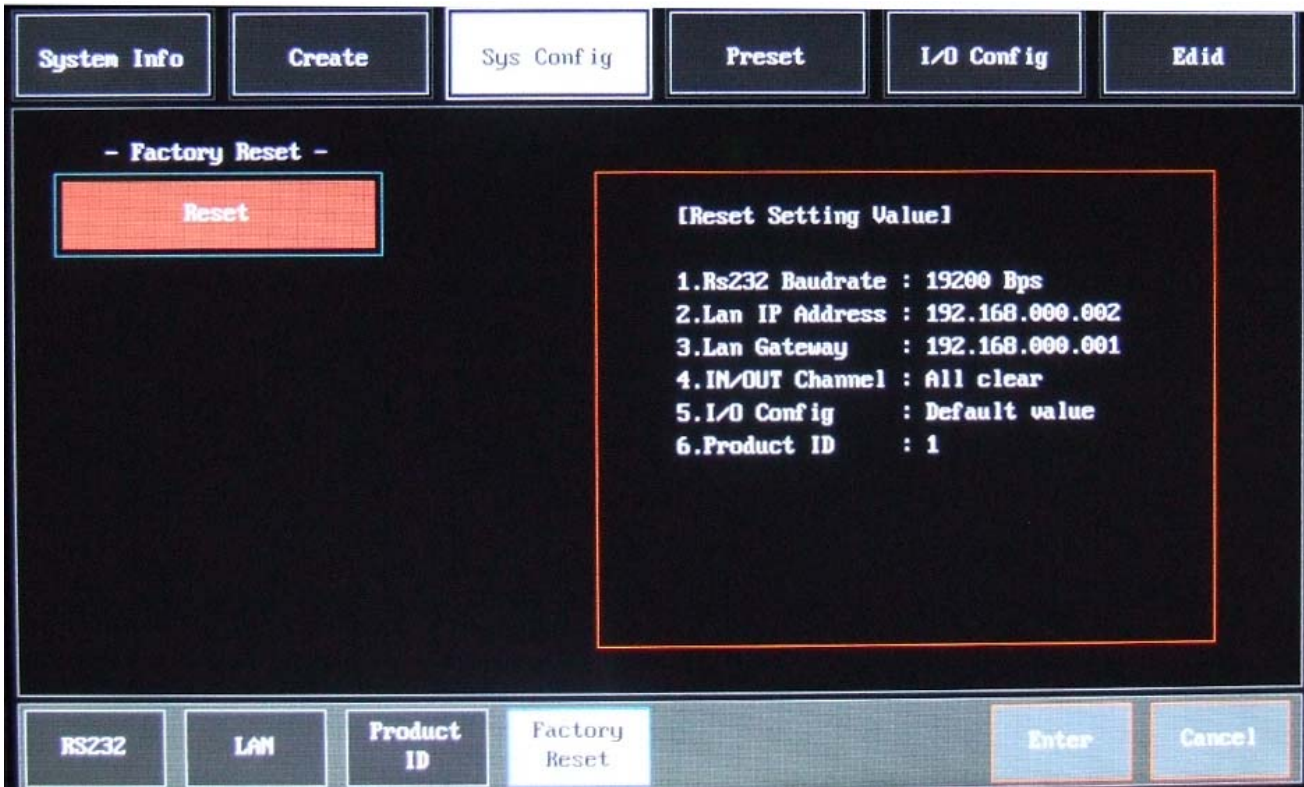

Factory reset will put the general setting back to the factory default mode.

Factory default setting value:

RS-232 Baud rate:	19200 Bps
IP Address:	192.168.000.002
Gateway:	192.168.001
Input/Output Connection:	No Connection
Product ID:	255


- All Video/Audio switching connection becomes clear
- Serial communication setting will be restored back to the factory default  
Baud Rate: 19200, Data Bits: 8, Parity: None, Stop Bits: 1
- LAN Communication setting will be restored back to the factory default  
IP Address: 192.168.000.002  
Gateway Address: 192.168.000.001  
Subnet Mask: 255.255.255.000
- All Audio Output volume will be set to 0db  
Input Board's Video will be set to SM: HDMI/SDI and Audio will be set to AS: Embedded
- Output Board's Audio will be set to 1S: Embedded, 2S: Embedded

## Preset

PM series Matrix Router provides Preset function for user to execute predefined multiple switching at once. Presets can be saved and recalled from the front panel touch screen. Preset only works for Video switching.


- All presets remain stored when power is lost and restored unless user sets the Matrix Router to the factory reset.
- When a preset is recalled, it replaces the current configuration. The recalled preset overwrites all of the current configuration.
- Preset only applies to Video switching only.

### 1) Preset Select

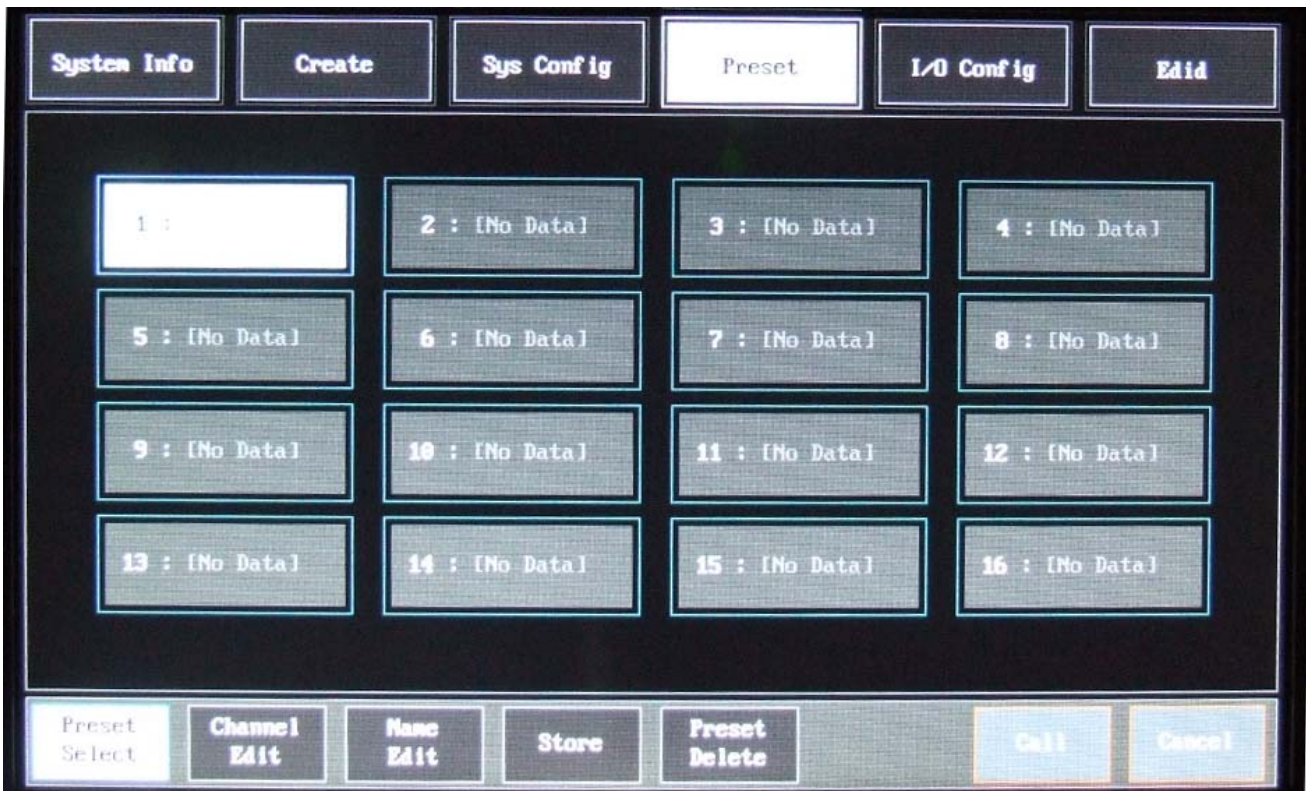


Select preset # where you want to create, edit channel, edit name, delete, or recall preset. Total sixteen presets can be programmed.

## 2) Channel Edit

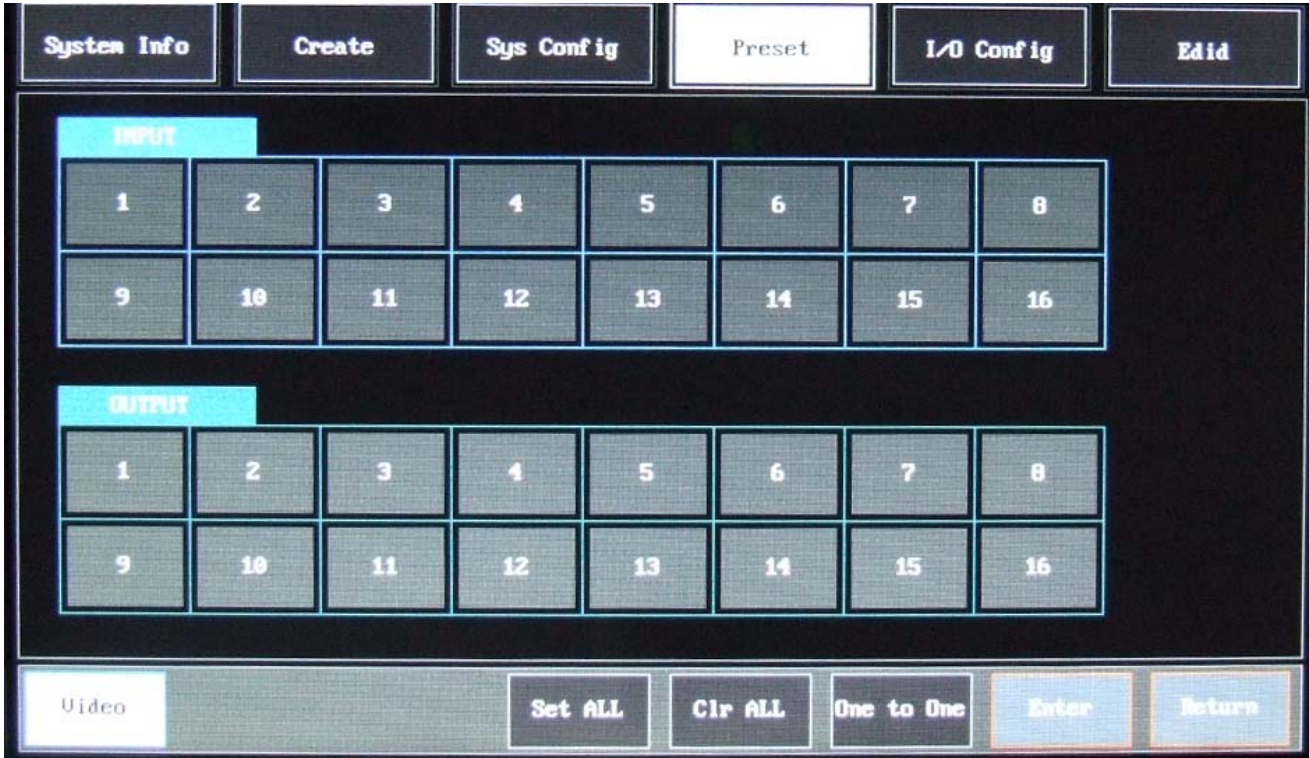

Create or edit Input/Output switching connection and push enter button to save current Input/Output switching connection. Push return button to go back to the Preset main menu to configure other settings.

## 3) Name Edit

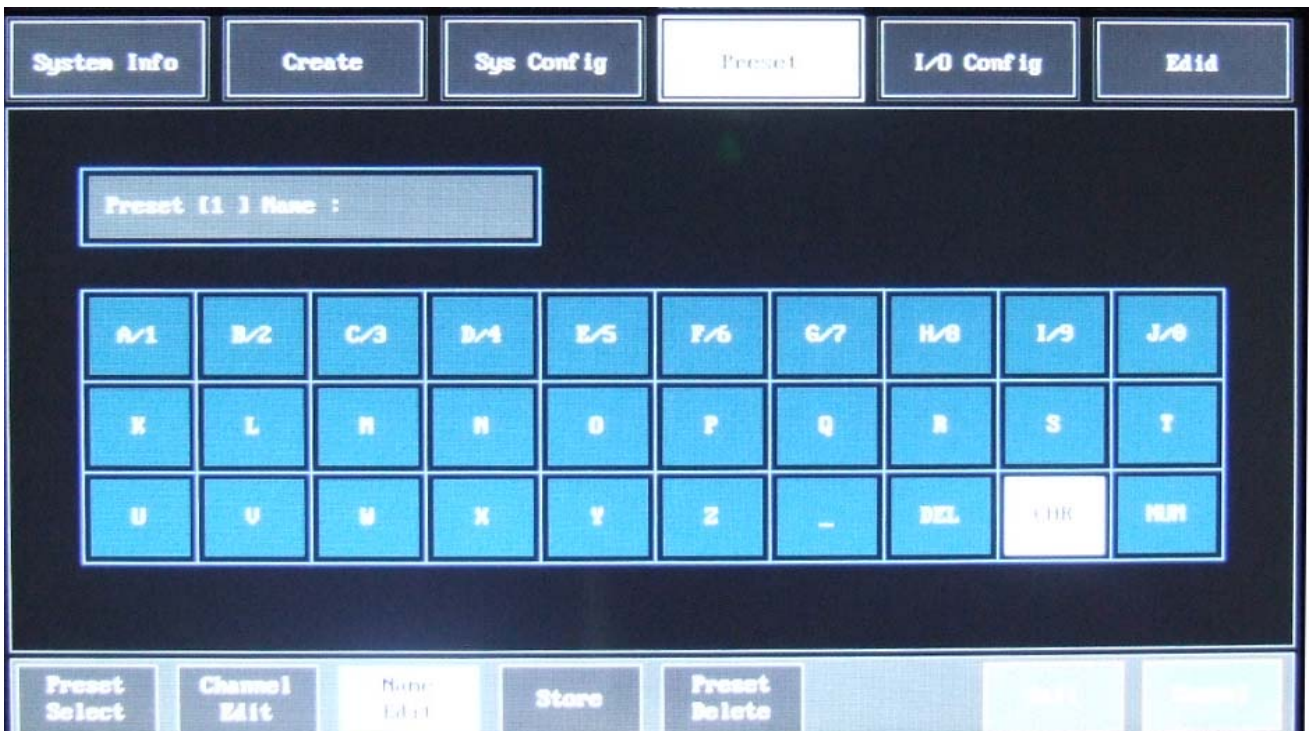

On the Preset main menu, select preset # that you wish to name and then push name edit button. User can name preset in combination of alphabet and number using key pad shown on the LCD. Push enter button to save name and push return button to go back to the Preset main menu to configure other settings. Up to ten characters can be used to name preset.

#### 4) Save

Press save button to save current Input/Output switching connection and name to be saved

#### 5) Preset Delete

Press preset delete button to delete current Input/Output switching connection and name to be cleared.


#### 6) Call

Select preset # and then press call button to recall pre-programmed preset settings.

### I/O Configuration

On this I/O configuration menu, user can configure Input and Output Video setting, test pattern, and preview monitoring Output.

#### 1) Input Configuration

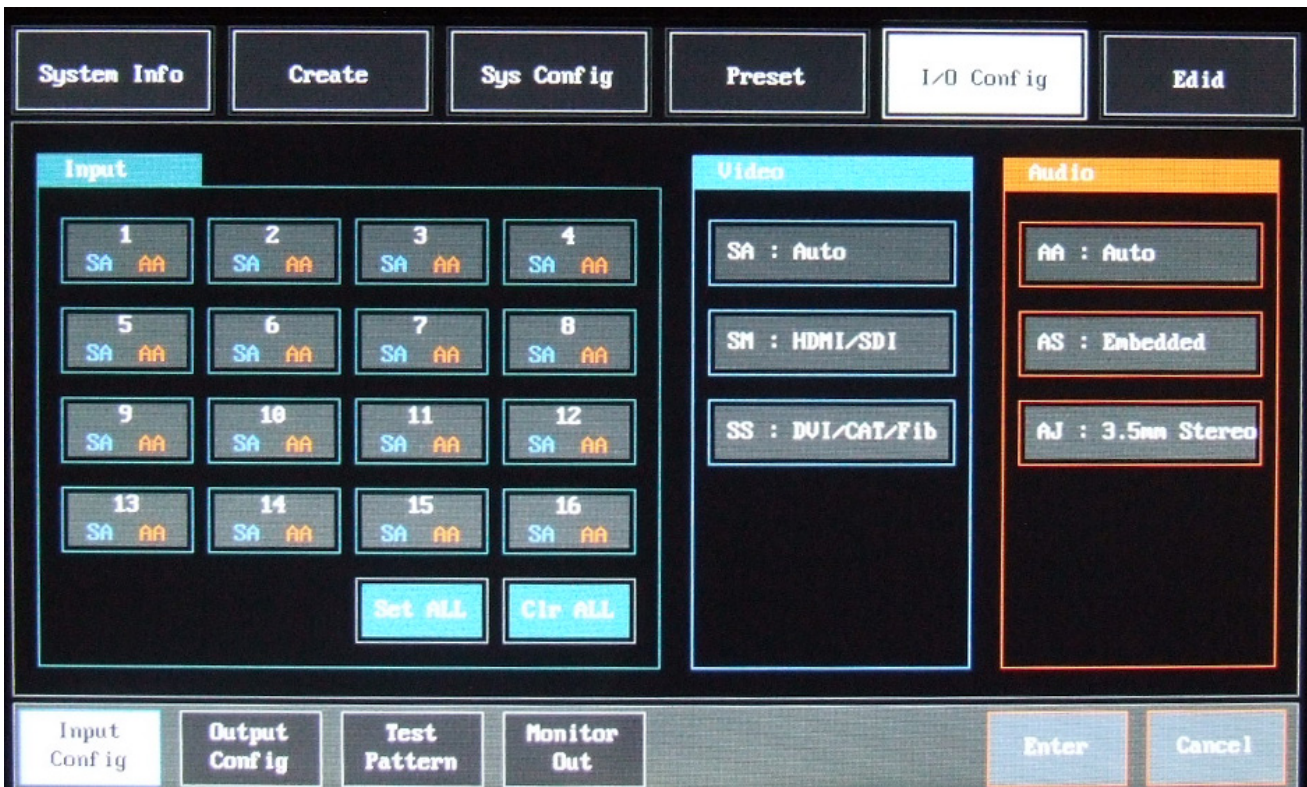

Some of the configuration applies to certain Input Board type only. For example, HDMI Input Board does not need to configure Video because there are no choices to make. First select Input # that wishes to make a change on Input section and then use Video and Audio section for configuration. Multiple Input #s can be selected at once.

**Input:** It displays current Input Boards' Video and Audio configuration. Video configuration in blue, and Audio configuration in red.

**Video:** There are three options to configure Input Board's Video.

- ✓ SA: Set Input Video into Auto mode  
PM series Matrix Router will detect signals between SM (HDMI/SDI) and SS (DVI/CATx/Fiber) and Output whichever is active. If both SM and SS are active, it will Output SM. Factory default is set to SM.
- ✓ SM: Set Input Video to HDMI (on HDMI, CATx, Fiber Boards) or SDI (on SDI Board)
- ✓ SS: Set Input Video to DVI (on DVI Board), CATx (on CATx Board), Fiber (on Fiber Board)


**Audio:** There are three options to configure Input Board's Audio

- ✓ AA: Set Input Audio into Auto mode  
PM series Matrix Router will detect signals between AS (Embedded Audio from HDMI source or PM Extender Transmitters) or AJ (inserted Audio from Input Board via 3.5mm stereo Audio jack) and Output whichever is active. If both AS and AJ are active, it will Output AJ. Factory default is set to AS.
- ✓ AS: Set Input Audio into Embedded Audio  
In here, embedded represents either embedded Audio from Input Boards' HDMI port or Audio from PM Extender Transmitters
- ✓ AJ: Set Input Audio into 3.5mm stereo Audio  
In here, 3.5mm stereo Audio represents inserted Audio from Input Board via 3.5mm stereo Audio jack

## 2) Output Configuration

**Output:** It displays current Output Board's Audio configuration. Only Audio option can be configured on Output Boards. First select Output # that wishes to make a change on Output section and then use HDMI/SDI Audio and CATx/Fiber Audio section for configuration. Multiple Input #s can be selected at once.



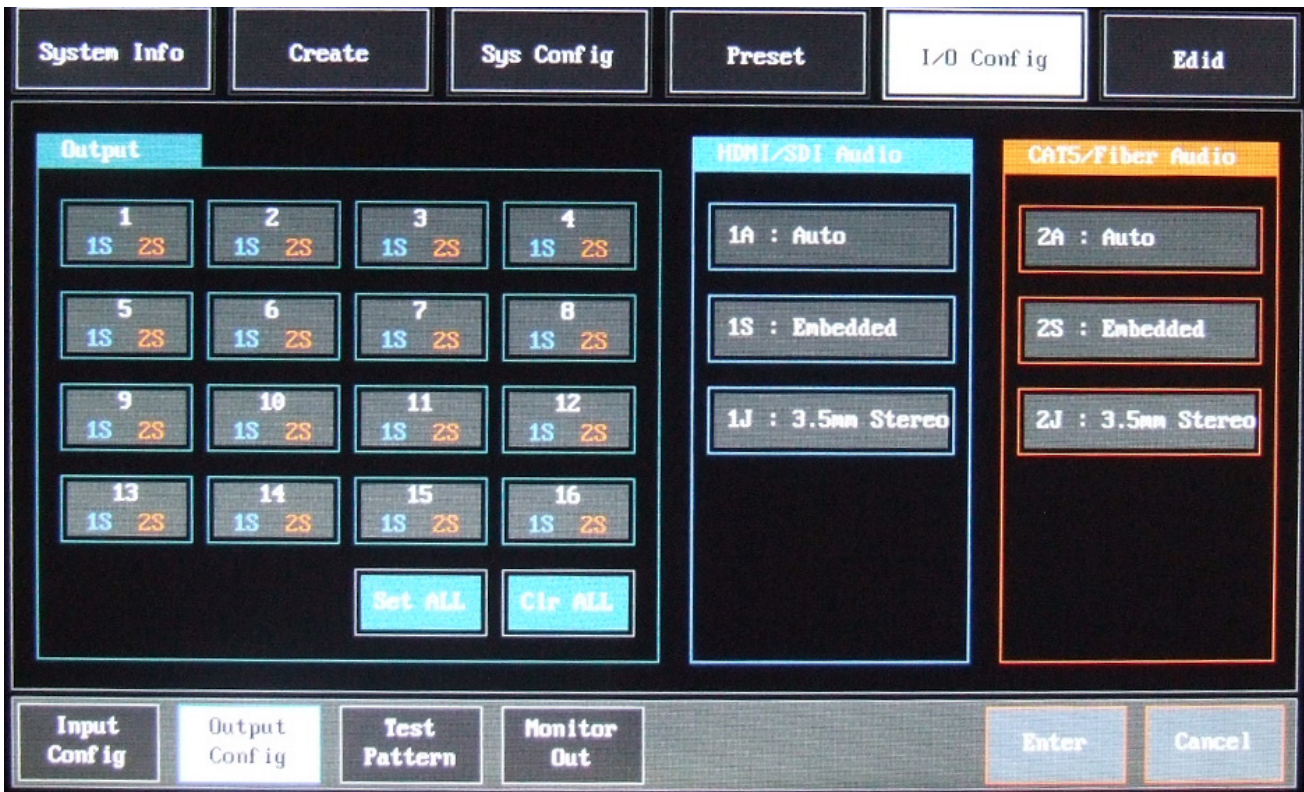

**HDMI/SDI Audio:** There are three options to configure Output Board's HDMI and SDI Output port.

- 1A:** Set Output Audio into Auto mode  
PM series Matrix Router will detect signals between 1S (Embedded Audio from Router's Input) and 1J (inserted Audio from Output Boards' 3.5mm stereo Audio jack) and Output whichever is active. If both 1S and 1J are active, it will Output 1S. Factory default is set to 1S.
- 1S:** Set Output Audio into Embedded Audio  
In here, embedded Audio represents Audio from selected Input's Audio
- 1J:** Set Output Audio into 3.5mm stereo Audio  
In here, 3.5mm stereo Audio represents inserted Audio from Output Boards' 3.5mm stereo Audio jack.

**CATx/Fiber Audio:** There are three options to configure Output Board's CATx/Fiber Output port.

- 2A:** Set Output Audio into Auto mode  
PM series Matrix Router will detect signals between 2S (Embedded Audio from Router's Input) and 2J (inserted Audio from Output Boards' 3.5mm stereo Audio jack) and Output whichever is active. If

both 2S and 2J are active, it will Output 2S. Factory default is set to 1S.

**2S:** Set Output Audio into Embedded Audio

In here, embedded Audio represents Audio from selected Input's Audio

**2J:** Set Output Audio into 3.5mm stereo Audio


In here, 3.5mm stereo Audio represents inserted Audio from Output Boards' 3.5mm stereo Audio jack.

### 3) Test Pattern

PM series Matrix Router provides a built-in Test Pattern Generator, enabling easy testing from the Matrix Router to the display.

Select timing -> pattern -> Output -> Enter

Multiple Outputs can be selected at once.

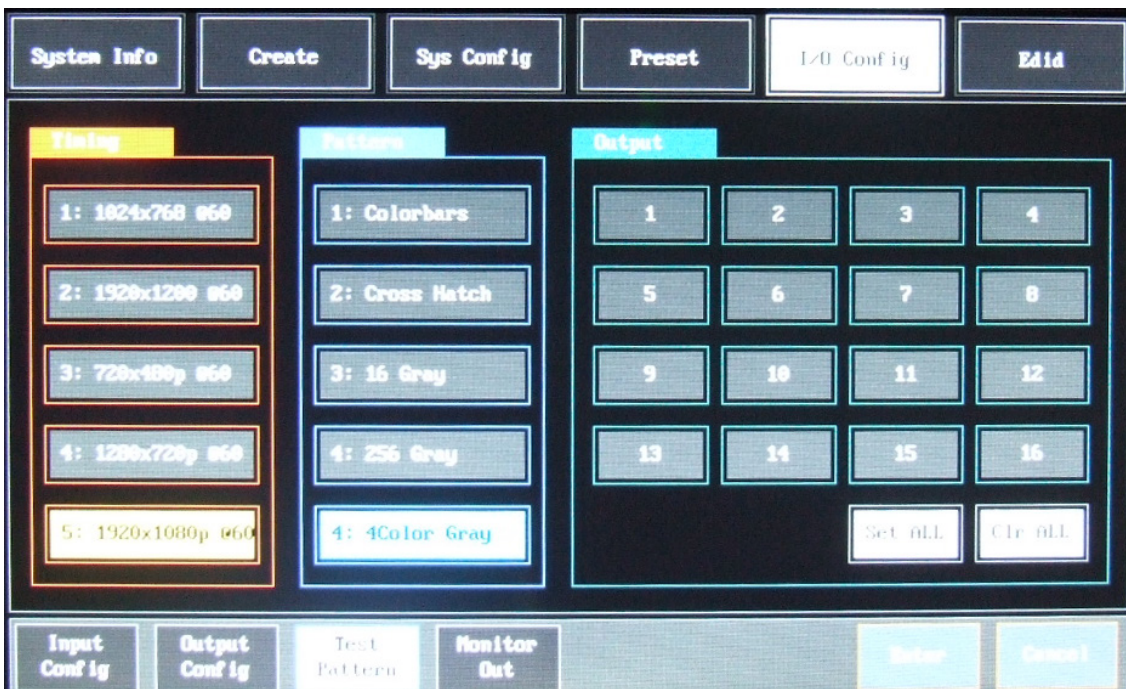

Available timing options are:

1024 x 768 @ 60Hz

1920 x 1200 @ 60Hz

720 x 480p @ 60Hz

1280 x 720p @ 60Hz

1920 x 1080p @ 60Hz

Available pattern options are:

Color bars

Cross Hatch

16 Gray

256 Gray


4 color Gray

#### 4) Monitoring Out

PM Matrix Router provides an HDMI preview monitoring port, which further simplifies system testing by acting like an extra Video Output.

Select Input # that needs to be checked and push enter button.

Selected Input # will be Output to preview monitoring port.

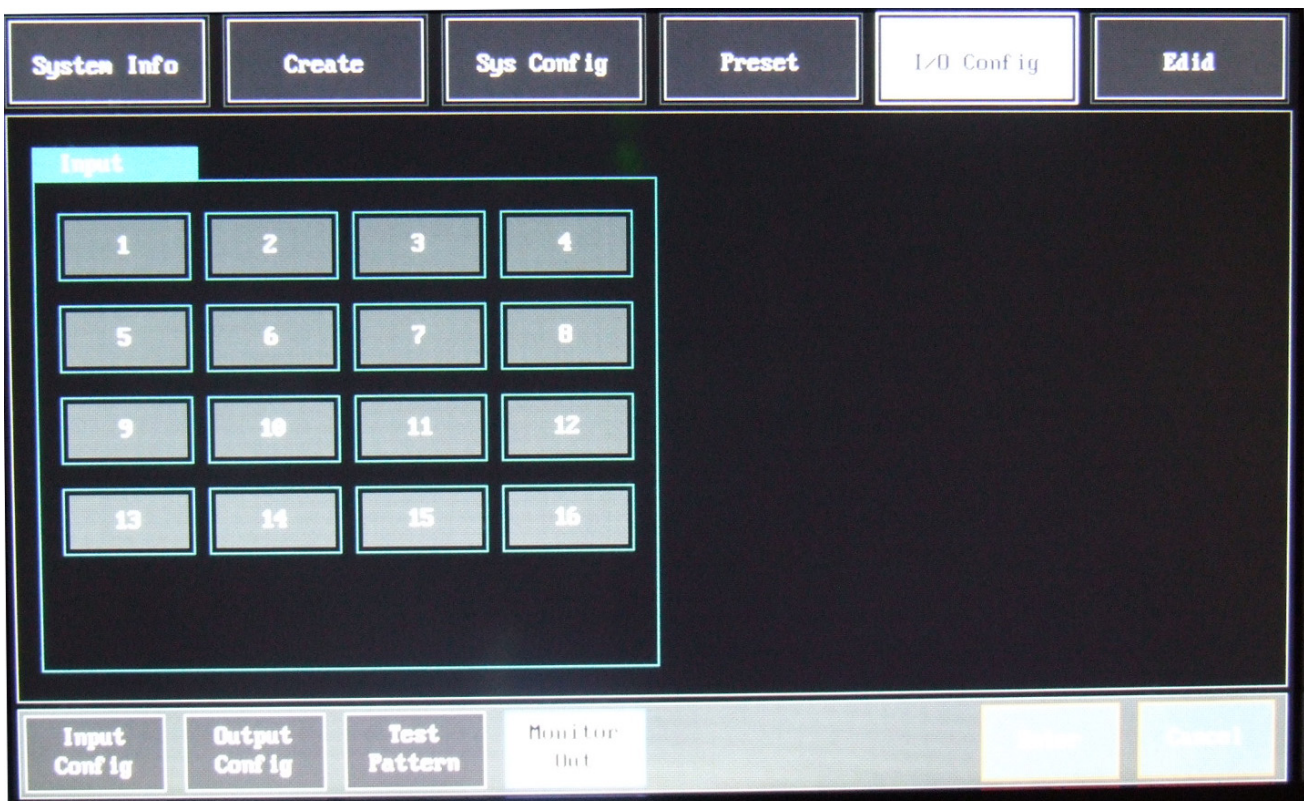

#### 5) Scaling

For HDMI and DVI scaling output, you can set output resolution independently per output channel.

Select output # -> Output timing -> Enter

Multiple Outputs can be selected at once.




## 6) SDI

For SDI output, you can set output resolution independently per output channel.

Select output # -> Output timing -> Enter

Multiple Outputs can be selected at once.

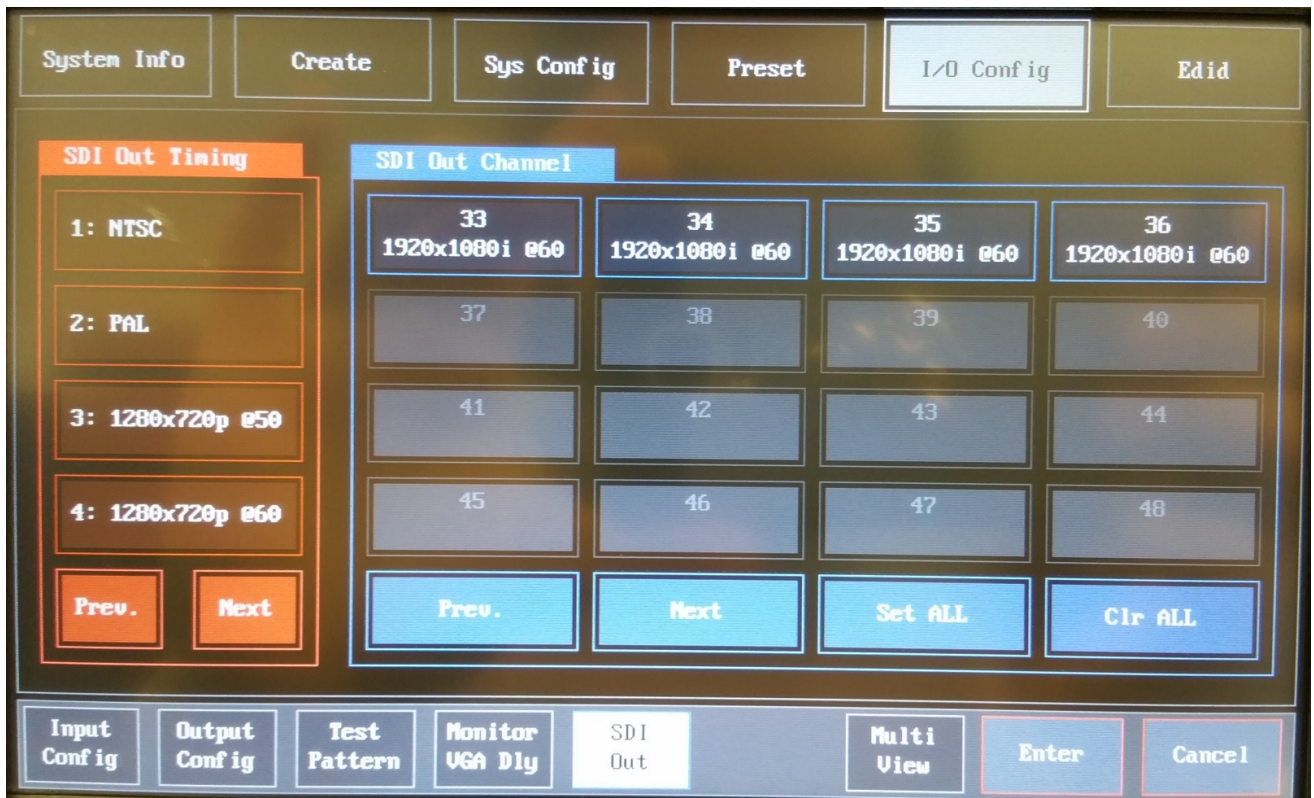

## 7) Multiview

For Multiview output, you can select output resolution and display layout.

Select output# -> Output timing -> Layout format -> Enter



## EDID

PM Matrix Router provides Auto EDID management system; easy and fail safe way to handle EDID, via EDID library system and EDID emulation.

### What's EDID?

**Extended Display Identification Data (EDID)** is an information set that digital display provides to describe its capabilities to a Video source. Video source will know what kinds of displays are connected and it will determine which resolution to Output according to the EDID information received from the display.

The EDID normally includes manufacturer name and serial number, sets of capable resolution including native resolution, supported timing, pixel mapping data (for digital displays only) and etc.

In a digital connectivity environment; in order to support the maximum resolution of connected monitor, EDID handshake is a critical because improper EDID handshake between sources to the display will result in no image on the display.

EDID handshake may sound simple; however, with multiple peripheral devices within the chain, display's EDID information easily get lost or blocked while it is traveling to the source device.

PM series Matrix Router provides Auto EDID management system to meet today's sophisticated digital connectivity integration environment.

Auto EDID management system

EDID library

14 most widely used EDID data is pre-programmed internal EEPROM chipset which user can take and save onto the any of the Matrix Router's Input EEPROM.

EDID library list

800 x 600 @ 60Hz	1024 x 768 @ 60Hz	1280 x 768 @ 60Hz
1280 x 1024 @ 60Hz	1360 x 768 @ 60Hz	1366 x 768 @ 60Hz
1400 x 1050 @ 60Hz	1600 x 900 @ 60Hz	1600 x 1200 @ 60Hz
1680 x 1050 @ 60Hz	1920 x 1200 @ 60Hz	HD 1080i @ 60Hz
HD 1080p (2CH)	HD 1080p (Multi)	

Factory default EDID is set to 1920 x 1080p@60Hz

By optimizing factory default EDID and EDID library feature, in most cases, PM Matrix Router will work out of the box without any additional configuration.

Emulation

The user can easily save an EDID data from any display devices directly onto the Matrix Router's Input port or EDID library's empty spot. By saving display device's EDID information on the Matrix Router Input port, Input port will act as a display to the Video source.

**Note) There may be display devices that are not allowing other device to emulate its EDID data.**

**Note) Certain EDID data may not be compatible with some devices, in this case, it is recommended to use scaling option (see pg. 9)**

## 1) External EDID (Emulation)

This menu is to emulate EDID data from any display devices that are connected to the Matrix Router's Output via copper cables and save it on to Matrix Router's Input EEPROM.

- ✓ For CATx and Fiber Output Boards, EDID emulation is not possible. In this case, try EDID library feature.

The screenshot shows the 'Edid' configuration menu. At the top, there are navigation buttons: 'System Info', 'Create', 'Sys Config', 'Preset', 'I/O Config', and 'Edid'. The 'Edid' button is highlighted. Below the navigation bar, the main area is titled 'OUTPUT # Edid Info :'. It features a 2x8 grid of buttons numbered 1 through 16. Below this grid, there are two sub-tabs: 'INPUT(Data)' and 'INPUT(Sub)'. Underneath these sub-tabs is another 2x8 grid of buttons numbered 1 through 16. At the bottom of the screen, there is a row of control buttons: 'External Edid', 'Internal Edid', 'Edid Store', 'Set ALL', 'Clear CH', 'Enter', and 'Cancel'.

- Select Output #
- Selected Output's display device's EDID information will be displayed
- Select Input# where selected EDID data will be saved on to. Multiple Input can be selected at once.
- Push enter button to save.

## 2) Internal EDID (EDID library)

On this menu, select an EDID from the library and save it on to the Input EEPROM. PM series Matrix Router has 14 selectable most widely used EDID data pre-programmed and 6 empty slots that can be used to upload and save EDID data from any external display device.

System Info Create Sys Config Preset I/O Config Edid

**Internal Edid**

1 [800x600 060]	2 [1024x768 060]	3 [1280x768 060]	4 [1280x1024 060]
5 [1360x768 060]	6 [1366x768 060]	7 [1400x1050 060]	8 [1600x900 060]

UP  
DOWN

**INPUT(Main)** **INPUT(Sub)**

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

External Edid Internal Edid Edid Store Set ALL Clear CH Enter Cancel

- Select EDID using ↑ ↓ arrow
- Select Input# where selected EDID data will be saved on to. Multiple Input can be selected at once.
- Push enter button to save



### 3) EDID Store

On this menu, user can emulate EDID data from any display devices that are connected to Matrix Router's Output via copper cables and save it on to the EDID library for future use.

The screenshot shows the 'Edid' menu interface. At the top, there are navigation buttons: System Info, Create, Sys Config, Preset, I/O Config, and Edid. The main content area is titled 'OUTPUT # Edid Info :'. It features a grid of 16 buttons numbered 1 through 16, arranged in two rows of eight. Below this grid is a section titled 'Basic Number' with four slots labeled S1, S2, S3, and S4, each containing the text '[No Data]'. At the bottom of the interface, there is a control bar with buttons for External Edid, Internal Edid, Edid Store (which is highlighted), Set ALL, Clear CH, Enter, and Cancel.

- Select Output #
- Selected Output's display device's EDID information will be displayed
- Select empty slot on EDID library where selected EDID data will be saved on to.
- Push enter button to save.

EDID status display:

- Write OK : EDID save process was successfully completed
- N.C : Not connected, when Output Board or monitor are not installed, or detected.
- Write Err : Write error, when EDID save process was not successfully completed.

## 4.2 Command Line Operation

### Control Programmer's Guide (Code Structure and Examples)

This section is designed for programmers who wish to create their own control programs using the command code. All PureLink digital Matrix Routers provide a simple character stream control used by external control devices attached to a PureLink device. Command codes are used primarily for control, during system installation and setup, and for diagnostic purposes.

Command code is a set of alphanumeric characters that combine to form control commands. Command code strings are entered into a terminal emulation program (such as windows HyperTerminal) running on an external control device. The control device (PC, third-party controller) sends the commands to the system. Control devices must be able to send and receive ASCII or HEXA code via an RS-232 or Ethernet port.

### Command Code Formats

A command code is a series of command characters and numbers used to send commands to the system. Commands include basic formulas for creating and disconnecting switches, as well as for verifying the status of switches and other functions.

In a command code, each character is either general command (e.g, C for connect) or an identifier that indicates what the following number designates (e.g, "O" and the number following it designate an "Output number"). The command code \*255CI01O01! Can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (C) Create connection on (I01) Input 01 to (O01) Output 01 (!) take the command. For a complete list of command characters and their functions, see page 67.

**Note) For PM-128X and PM-256X, input and output # uses three digit format, instead of two digits. For example;**

**Input 01 (I001), Input 05 (I005), Output 01 (O001) and Output 100 (O100)**

Ack value (Acknowledge value: Response from Pure Link device) will be echoed back to the terminal screen as the unit accepts them. When a command is successfully executed, all of the characters appear containing the character "s" which stands for status. For example;

Ex 1) Command (Connect Input 1 to Output 1)

\*255CI01O01!↵

Ack value

\*255sC I01O01!

Ex 2) Command (Check Input connection status on Output 3)

\*255?O03!↵

Ack Value

\*255s? I03O03!

### General Rules for Command Codes

The commands are coded in ASCII and HEXA. Please refer to Table 5.1 on pg.68 for detailed descriptions of keys and functions. A basic command code setup is shown below;

Ex) \*255CI01O01!↵

Start + Router ID + Command + Input number + Output number + End + Enter

( \* ) ( 255 ) ( C ) ( I01 ) ( O01 ) ( ! ) ( ↵ )

- ▶ A command line allows execution of only one command. Multiple commands require execution of multiple strings; one command per string.
- ▶ All commands begin with \* (Start) byte.
- ▶ All commands end with ! (End) byte.
- ▶ All commands will be executed when ↵ (Enter) is entered.
- ▶ The correct Router ID must be entered in a command code. Systems will not react to the command if a wrong Router ID is entered. The factory default Router ID is set to 255 and the universal Router ID is 999. Systems will react to the command whenever universal Router ID is entered in command code.
- ▶ Command codes typically are not case-sensitive.
- ▶ To specify multiple Inputs and Outputs, enter a “,” (Comma) between numbers. (Ex., \*255CI01O01,02,03!↵ : Connects Input 01 to Output 01, 02, and 03)
- ▶ Use - (Hyphen) for range connection. (EX., \*255CI01O01-04!↵ : Connects Input 01 to Output 01,02,03, and 04)

Table 5.1 Command Codes Characters Table

The table below shows command code characters (keys), which are used to generate control commands, their functions, and short function descriptions.

Key		Function	Description and Example	Byte
HEX	ASCII			
0x2A	*	Start the command	Header Code	1
0x21	!	End the command	Tail Code	1
0D0A	↵	Execute the command	Execute the command	1
0x43 0x63	C c	Connect* (Video and Audio)	Initiates a Connect (switch) command for both Video and Audio; this must precede Input # and Output # specification	1
0x56,0x43 0x76,0x63	VC vc	Connect (Video only)	Initiates a Connect (switch) command for Video only; this must precede Input # and Output # specification	2
0x41,0x43 0x61,0x63	AC ac	Connect* (Audio only)	Initiates a Connect (switch) command for Audio only; this must precede Input # or Output # specification	2
0x44 0x64	D d	Disconnect*	Disconnect command for both Video and Audio; this must precede Input # and Output # specification	1
0x56,0x44 0x76,0x64	VD vd	Disconnect (Video only)	Disconnect command for Video only; this must precede Input # and Output # specification	2
0x41,0x44 0x61,0x64	AD ad	Disconnect* (Audio only)	Disconnect command for Audio only; this must precede Input # and Output # specification	2
0x3F	?	Connection status	Video connection status check command; this must precede Input # or Output # specification	1
	A?	Audio connection status*	Audio connection status check command; this must precede Input # or Output # specification	2
	,	Space	Separates the numbers within entries that contain multiple numbers	1
	-	Range	Specifies a range of numbers in entries containing multiple	1

			numbers	
	IV	Input Video select (M: HDMI/SDI, S: DVI/CATx, Fiber, A: Auto mode)	Input Video select command; this must precede Input # and Video selection specification	2
	IA	Input Audio select (M: Embedded Audio, S: 3.5mm Stereo, A: Auto mode)	Input Audio select command; this must precede Input # and Audio selection specification	2
	IM	Input monitoring select	Input Video preview monitoring select command : this must precede Input #	2
	IF	Input channel information	Input channel information request command : this must precede Input #	2
	IE	Input Extender Video select (SP: VGA. SH: HDMI)	Input connected Extender's Video select (CATx, Fiber only) command : this must precede Input # and Video selection	2
	IP	Input Extender command Transmission	Send command to the device that is connected to the Input Extender (CATx, Fiber only): this must precede Input #, baud rate, timing	2
	OM	Output HDMI/SDI port Audio select (M: Embedded Audio, S: 3.5mm Stereo, A: Auto mode)	Output HDMI/SDI port's Audio select command; this must precede Output # and Audio selection	2
	OS	Output CATx/Fiber port Audio select (M: Embedded Audio, S: 3.5mm Stereo, A: Auto mode)	Output CATx/Fiber port's Audio select command; this must precede Output # and Audio selection	2
	OT	Output Test Pattern Select (T01: 1024 x 768 T02: 1920 x 1200 T03: 720 x 480p)	Output test pattern select command: this must precede Output #, resolution, and pattern type	2

		T04: 1280 x 720p T05: 1920 x 1080p P01: Color bars P02: Cross Hatch P03: 16 Gray P04: 256 Gray P05: 4 Color Gray		
	OF	Output channel information	Output channel information request command : this must precede Output #	2
	OE	Output Extender Scaler timing select	Output Extender (CATx, Fiber only) Scaler timing select command: this must precede Output # and Video timing	2
	OP	Output Extender command transmission	Send command to the device that is connected to the Output Extender (CATx, Fiber only) : this must precede Output #, baud rate, timing	2
	AV	Audio Matrix Router's Output Audio volume set (1.0db step attenuation)*	Output Audio volume control command: this must precede Output # and volume specification	2
	AF	Audio Matrix Router's Output Audio volume Information*	Audio Matrix Router's Output Audio volume information request command : this must precede Output #	2
0x49 0x69	l i	Router ID check	Router ID check command; check Router's current ID number	1
	?version	Firmware version check	Firmware version check command; *255?version! ↵	
0x40	@	Baud rate setting	Baud rate sting command; *255@001! ↵ → <b>19200</b> *255@002! ↵ → <b>38400</b> *255@003! ↵ → <b>57600</b> *255@004! ↵ → <b>115200</b>	
0x4E	N	Networking setting	Network configuration setting	1

0x6E	n		command: <b>- IP Setting</b> *255NIP125.135.199.004! ↵ <b>- Subnet Mask Setting</b> *255NSM255.255.255.000! ↵ <b>- Gate Way Setting</b> *255NGW192.168.000.001! ↵ <b>- MAC Address Setting</b> *255NMA00.50.C2.B0.20.05! ↵ <b>- Port Number Setting</b> *255NPN3000! ↵ <b>- Network Information</b> *255NNI000! ↵	
<b>0x48</b> <b>0x68</b>	H h	Connection check	Router communication connection check command: *255H000! ↵	1

\* Audio commands are for the independent green blocks Audio Matrix Router

### Command Ack (Acknowledge) Value Response

When command codes are entered into a terminal emulation program (such as HyperTerminal) and are accepted by the system, they respond back to the terminal screen one at a time, as noted below in the table. The complete command has executed successfully when all of the entered characters including “s” which stands for status, appear. If a command character is not accepted, a different character than the one entered appears and all or part of the command has not been executed.

#### Ack (Acknowledge) Value Response Table

The following table shows ack value response characters along with their descriptions and meanings, which may appear instead of the initially entered character or number. If these characters appear, all or part of the command has not been executed.

Table 5.2 Descriptions of Acknowledge (ACK) Signals

Ack value	Description
Input 1 is not connected	No information in channel 1
Command Code Error	Indicates that system has rejected all or part of the command
Router ID Error	Indicates that the wrong ID number was entered

#### Command Code Ack Value Examples

Command Code Entered	Ack Value as appears in the control program	Explanation of Result
*255CI01O01! ←	*255sC I01O01!	The command was successfully Executed
*255CO01! ←	Command Code Error	The command was not executed because the Input number was not included
*255CI01O01 ←	Command Code Error	The command was not executed because “!” (End) was not included
*300CI01O01! ←	Router ID Error	The command was not executed because the actual Router ID and entered Router ID did not match

### Connecting Switches

A switch is an active connection between an Input (source) signal and one or more Output (display) devices. The signals connected in a switch command are either individual signals or groups of signals coming through the connectors on the rear of the unit.

\* Audio commands are for the independent green blocks Audio Matrix Router

The “C” key initiates a Connect command for routing a switch. The characters and numbers that follow the “C” command tell the system, which Inputs and Outputs to connect. The last character “!” is found at the end of a command code which tells the system to execute the command.

For example, the command code

\*255CI01O01! ←

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (C) Create connection on (I01) Input 01 to (O01) Output 01 (!) take the command. For a complete list of command characters and their functions, see examples below.

To connect a switch:

Enter the Connect command below. Replace the “#”s with the Input and Output number(s).

\*255CI#O#! ←

**Note) For PM-128X and PM-256X, input and output # uses three digit format, instead of two digits. For example;**



## Input 01 (I001), Input 05 (I005), Output 01 (O001) and Output 100 (O100)

Examples (Connect Video and Audio):

Command Codes	Action
*255CI01O01!↵	Connect both Video and Audio Input 1 to Output 1
*255CI01O08,I08O02!↵	Connect both Video and Audio Input 1 to Output 8 and Input 8 to Output 2
*255CI01O01,I02O02,I03O03!↵	Connect both Video and Audio Input 1 to Output 1, Input 2 to Output 2, and Input 3 to Output 3
*255CI01O01,02,03!↵	Connect both Video and Audio Input 1 to Output 1, 2, and 3
*255CI01O01-07!↵	Connect both Video and Audio Input 1 to Output 1, 2, 3, 4, 5, 6, and 7

Examples for PM-128X and PM-256X (Connect Video and Audio):

Command Codes	Action
*255CI001O001!↵	Connect both Video and Audio Input 1 to Output 1
*255CI001O008,I008O002!↵	Connect both Video and Audio Input 1 to Output 8 and Input 8 to Output 2
*255CI001O001,I002O002,I003O003!↵	Connect both Video and Audio Input 1 to Output 1, Input 2 to Output 2, and Input 3 to Output 3
*255CI001O001,002,003!↵	Connect both Video and Audio Input 1 to Output 1, 2, and 3
*255CI001O001-007!↵	Connect both Video and Audio Input 1 to Output 1, 2, 3, 4, 5, 6, and 7

Examples (Connect Video only):

Command Codes	Action
*255VCI01O01!↵	Connect Video Input 1 to Output 1
*255VCI01O08,I08O02!↵	Connect Video Input 1 to Output 8 and Input 8 to Output 2
*255VCI01O01,I02O02,I03O03!↵	Connect Video Input 1 to Output 1, Input 2 to Output 2, and Input 3 to Output 3
*255VCI01O01,02,03!↵	Connect Video Input 1 to Output 1, 2, and 3
*255VCI01O01-07!↵	Connect Video Input 1 to Output 1, 2, 3, 4, 5, 6, and 7

Examples for PM-128X and PM-256X (Connect Video only):

Command Codes	Action
*255VCI001O001!↵	Connect Video Input 1 to Output 1
*255VCI001O008,I008O002!↵	Connect Video Input 1 to Output 8 and Input 8 to Output 2
*255VCI001O001,I002O002,I0	Connect Video Input 1 to Output 1, Input 2 to Output 2, and

03O003! ←	Input 3 to Output 3
*255VCI001O001,002,003! ←	Connect Video Input 1 to Output 1, 2, and 3
*255VCI001O001-007! ←	Connect Video Input 1 to Output 1, 2, 3, 4, 5, 6, and 7

Examples (Connect Audio only):

Command Codes	Action
*255ACI01O01! ←	Connect Audio Input 1 to Output 1
*255ACI01O08,I08O02! ←	Connect Audio Input 1 to Output 8 and Input 8 to Output 2
*255ACI01O01,I02O02,I03O03! ←	Connect Audio Input 1 to Output 1, Input 2 to Output 2, and Input 3 to Output 3
*255ACI01O01,02,03! ←	Connect Audio Input 1 to Output 1, 2, and 3
*255ACI01O01-07! ←	Connect Audio Input 1 to Output 1, 2, 3, 4, 5, 6, and 7

Examples for PM-128X and PM-256X (Connect Audio only):

Command Codes	Action
*255ACI001O001! ←	Connect Audio Input 1 to Output 1
*255ACI001O008,I008O002! ←	Connect Audio Input 1 to Output 8 and Input 8 to Output 2
*255ACI001O001,I002O002,I0 03O003! ←	Connect Audio Input 1 to Output 1, Input 2 to Output 2, and Input 3 to Output 3
*255ACI001O001,002,003! ←	Connect Audio Input 1 to Output 1, 2, and 3
*255ACI001O001-007! ←	Connect Audio Input 1 to Output 1, 2, 3, 4, 5, 6, and 7

### Disconnecting Switches

The characters and numbers in a Disconnect command tell the system which Input or Output to disconnect. The “D” key initiates a Disconnect command for routing a switch. The characters and numbers that follow the “D” command tell the system that Inputs and Outputs to disconnect. The last character “!” is found at the end of the Command code, which tells the system to execute the command.

For example, the command code

\*255DI01O00! ←

It can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (D) Disconnect on (I01) Input 01 to (O00) Output 00 (!) take the command. For a complete list of command characters and their functions, see the command list below

To disconnect a switch:

Enter the Disconnect command below. Replace the “#”s with the Input and Output number(s).

\*255DI#O#! ↵

**Note) For PM-128X and PM-256X, input and output # uses three digit format, instead of two digits. For example;**

**Input 01 (I001), Input 05 (I005), Output 01 (O001) and Output 100 (O100)**

Examples (Disconnect Video and Audio):

Command Codes	Action
*255DI01O00! ↵	Disconnect both Video and Audio Input 1 to no Output (00)
*255DI00O03,04,05! ↵	Disconnects both Video and Audio Outputs 3, 4, and 5
*255DI00O03-06! ↵	Disconnects both Video and Audio Output 3, 4, 5, and 6
*255DALLIO! ↵	Disconnects both Video and Audio all Inputs and Outputs

Examples (Disconnect Video only):

Command Codes	Action
*255VDI01O00! ↵	Disconnect Video Input 1 to no Output (00)
*255VDI00O03,04,05! ↵	Disconnects Video Outputs 3, 4, and 5
*255VDI00O03-06! ↵	Disconnects Video Output 3, 4, 5, and 6
*255VDALLIO! ↵	Disconnects Video all Inputs and Outputs

Examples (Disconnect Audio only):

Command Codes	Action
*255ADI01O00! ↵	Disconnect Audio Input 1 to no Output (00)
*255ADI00O03,04,05! ↵	Disconnects Audio Outputs 3, 4, and 5
*255ADI00O03-06! ↵	Disconnects Audio Output 3, 4, 5, and 6
*255ADALLIO! ↵	Disconnects Audio all Inputs and Outputs

### Connection Status Check

A connection status can be checked to confirm that the switch has been correctly executed or to confirm correct routing to multiple Outputs. The characters and numbers in a status command tell the system which Input or Output to check.

To check connection status:

Enter the Connection status check command below. Replace the “#”s with the Input and Output number(s).

\*255?I#!↵ or \*255?O#!↵

**Note) For PM-128X and PM-256X, input and output # uses three digit format, instead of two digits. For example;**

**Input 01 (I001), Input 05 (I005), Output 01 (O001) and Output 100 (O100)**

Examples (Video status):

Command Codes	Action
*255?I01!↵	Check Video Output connection status on Input 1
*255?O07!↵	Check Video Input connection status on Output 7
*255?ALLIO!↵	Check Video all Input and Output connection status

Examples (Audio status):

Command Codes	Action
*255A?I01!↵	Check Audio Output connection status on Audio Input 1
*255A?O07!↵	Check Audio Input connection status on Audio Output 7
*255A?ALLIO!↵	Check Audio all Input and Output connection status

### Input Board Function Configuration

Input Board's Video and/or Audio function can be configured via command control. Configuration command can be sent to individual port or multiple ports at once.

IV: Input Video source select command

IA: Input Audio source select command

IM: Input Video preview monitoring select command

IF: Input channel information request command

IE: Input Extender source select command

IP: Input Extender command transmission (pass through) command

IR: Input extender reset command

IV: Input Video Source Select

The "IV" is an initiation command for Input Video selection. The characters and numbers that follow the "IV" command tell the system, which Input # will be set to which Video source. The last character "!" is found at the end of a command code which tells the system to execute the command.

**Note) For PM-128X and PM-256X, input and output # uses three digit format, instead of two digits. For example;**

**Input 01 (I001), Input 05 (I005), Output 01 (O001) and Output 100 (O100)**

For example, the command code

\*255IVI01A,I02M,I03S! ←

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (IV) Input Video selection on (I01) Input 01 to (A) auto mode, (I02) Input 02 to (M) HDMI/SDI, (I03) Input 03 to (S) DVI/CATx/Fiber (!) take the command. For a complete list of command characters and their functions, see examples below.

Input Video Source Select

A: Auto, M: HDMI/SDI, S: DVI/CATx/Fiber

- \* For HDMI Input Board, only M (HDMI) can be selected
- \* For SDI Input Board, only M (SDI) can be selected
- \* For DVI Input Board, M (HDMI) or S (DVI) can be selected
- \* For CATx Input Board, M (HDMI) or S (CATx) can be selected
- \* For Fiber Input Board, M (HDMI) or S (Fiber) can be selected

Example:

Command Codes	Action
*255IVALLM! ←	Set all Input source to HDMI/SDI
*255IVI01A,I02M,I03S! ←	Set Input 1(Auto), Input 2(HDMI/SDI), Input3 (DVI/CATx/Fiber)
*255IVI01-09M! ←	Set Input1 ~ 9 to HDMI/SDI

IA: Input Audio Source Select

The "IA" is an initiation command for Input Audio selection. The characters and numbers that follow the "IA" command tell the system, which Input # will be set to which Audio source. The last character "!" is found at the end of a command code which tells the system to execute the command.

For example, the command code

\*255IAI01A,I02M,I03S! ←

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (IA) Input Audio selection on (I01) Input 01 to (A) auto mode, (I02) Input 02 to (M) Embedded Audio, (I03) Input 03 to (S) 3.5mm stereo Audio (!) take the command. For a complete list of command characters and their functions, see examples below.

#### Input Audio Source Select

A: Auto, M: Embedded Audio, S: 3.5mm Stereo Audio

(M) Embedded Audio refers to embedded Audio from the HDMI source or inserted Audio from Extender Transmitter for CATx and Fiber Input Boards

(S) 3.5mm stereo Audio refers to inserted Audio from Input Board's 3.5mm stereo jack

#### Example:

Command Codes	Action
*255IAALLS! ↵	Set all Input Audio to 3.5mm stereo Audio
*255IAI01A,I02M,I03S! ↵	Set Input 1(auto), Input 2(embedded), and Input 3 (3.5mm stereo Audio)
*255IAI01-09M! ↵	Set Input1 ~ 9 to embedded

#### IM: Input Video Preview Monitoring Select

The "IM" is an initiation command for Input monitoring selection. The characters and numbers that follow the "IM" command tell the system, which Input Video to be Output to preview monitoring port. The last character "!" is found at the end of a command code which tells the system to execute the command.

For example, the command code

\*255IMI02! ↵

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (IM) Input monitoring selection on (I02) Input 02 (!) take the command. For a complete list of command characters and their functions, see examples below.

#### Example:

Command Codes	Action
*255IMI02! ↵	Set Input 2 to monitoring out
*255IMI00! ↵	No monitoring out

#### IF: Input Channel Information Request

The "IF" is an initiation command for Input channel general information selection. The characters and numbers that follow the "IF" command tell the system, which Inputs' channel information will be requested. The last character "!" is found at the end of a command code which tells the system to execute the command.

For example, the command code

```
*255IFI01! ↵
```

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (IF) Input channel general information request on (I01) Input 01 (!) take the command. For a complete list of command characters and their functions, see examples below.

Example:

Command Codes	Action
*255IFI01! ↵	Check Input Channel 1 Information

IE: Input Extender Source Select

The "IE" is an initiation command for Input Extender source selection. The characters and numbers that follow the "IE" command tell the system, which Inputs' Extender source selection will be made. The last character "!" is found at the end of a command code which tells the system to execute the command.

✓ IE command only applies to the CATx/Fiber Input Board with PM-CT102,103 (CATx) and PM-FT102,103 (Fiber) Extender Transmitter.

For example, the command code

```
*255IEI01SP! ↵
```

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (IE) Input Extender source selection on (I01) Input 01 Extender (SP) source to select VGA (!) take the command. For a complete list of command characters and their functions, see examples below.

Input Extender Source Select

SP: VGA (PC), SH: HDMI

Example:

Command Codes	Action
*255IEI01SP! ↵	Set Input1 Extender source to VGA

*255IEI02SP,I14SH! ↵	Set Input2 Extender source to VGA, Input14 to HDMI
*255IEI01-09SH!	Set Input1-9 Extender source to HDMI

**IP: Input Extender Command Transmission (Pass Through Mode)**

The "IP" is an initiation command for sending command to the device that is connected to the Input Extender's rs-232/422 port. The characters and numbers that follow the "IP" command tell the system, send a command to the device through Input Extender. The last character "!" is found at the end of a command code which tells the system to execute the command.

In order to send control command to the AV devices that are connected to the PM Extender, it needs to open the communication port and then send a command;

Port open command:                   \*255IPI01@001! ↵  
 Command to the AV devices:        I01"PWR ON\x0d" ↵  
 Port close command:                 \*255IPC!

RS-232 Baud rate(bps) :

@001:4800	@002:9600	@003:14400
@004:19200	@005:38400	@006:57600
@007:76800	@008:115200	

For example, the command code

```
*255IPI01@001! ↵
I01"PWR ON\x0d"↵
*255IPC!
```

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (IP) Input Extender command transmission on (I01) Input 01 Extender, (@001) at baud rate 4800 (!) take the command. Once communication port is open, command " PWR ON\x0d " can be sent. After receiving feedbacks from AV devices, close the port \*255IPC!

For a complete list of command characters and their functions, see examples below.

Example:

Command Codes	Action
*255IPI01@001! ↵	Open communication port with a device that is connected to Input #1 Extender at 9400 bps baud rate



I01"PWR ON\x0d" ←	Send command PWR ON\x0d to Input #1
*255IPC!	Close communication port
*255IPI02-06@004! ←	Open communication port with devices that are connected to Input #2 ~ 6 Extender at 19200 bps baud rate
*255IPI05@004,I07@008! ←	Open communication port with devices that are connected to Input #5 at 19200 bps baud rate and Input #7 at 115200 bps baud rate
IALL"PWR ON\x0d" ←	Send command PWR ON\x0d to all open ports
I02"PWR OFF\x0d" ←	Send command PWR OFF\x0d to Input #2
I01-04"MUTE ON\x0d" ←	Send command MUTE ON\x0d to Input #1 ~ 4

### Output Board Function Configuration

Output Board's Video and/or Audio function can be configured via command control. Configuration command can be sent to individual port or multiple ports at once.

- OM: Output Audio select on HDMI/SDI command
- OS: Output Audio select on CATx/Fiber port command
- OT: Output Audio test pattern select command
- OF: Output channel information request command
- OE: Output Extender Scaler timing select command
- OP: Output Extender command transmission (pass through) command
- OH: 3G/HD-SDI Output Scaler timing select command
- OX: Output scaler timing select command
- OC: Output extender control command
- OQ: Quadview output control command
- OZ: Output reset command (for DVI and HDMI output cards)

#### OM: Output Audio Select on HDMI/SDI port

The "OM" is an initiation command for Output Audio selection on HDMI/SDI port. The characters and numbers that follow the "OM" command tell the system, which Output #'s HDMI/SDI Audio will be set to which Audio source. The last character "!" is found at the end of a command code which tells the system to execute the command.

For example, the command code

```
*255OMO01A,O02M,O03S! ←
```

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (OM) Output Audio selection on HDMI/SDI ports on (O01) Output 01 to (A) auto mode, (O02) Output 02 to (M) Embedded Audio, (O03) Output 03 to (S) 3.5mm Audio (!) take the command. For a complete list of command characters and their functions, see examples below.

Output HDMI/SDI Ports Audio Select

A: Auto, M: Embedded Audio, S: 3.5mm Stereo Audio

(M) Embedded Audio refers to embedded Audio from Input source side

(S) 3.5mm stereo Audio refers to inserted Audio from Output Board's 3.5mm stereo jack

**Note) For PM-128X and PM-256X, input and output # uses three digit format, instead of two digits. For example;**

**Input 01 (I001), Input 05 (I005), Output 01 (O001) and Output 100 (O100)**

Example:

Command Codes	Action
*255OMALLM! ↵	Set all HDMI/SDI Output Audio selection to embedded
*255OMO01A,O02M,O03S! ↵	Set HDMI/SDI Output Audio on Output 1 (Auto), Output 2 (embedded), and Output 3 (3.5mm stereo Audio)
*255OMO01-09M! ↵	Set HDMI/SDI Output Audio on Output 1~9 to embedded

OS: Output Audio Select on CATx/Fiber port

The "OS" is an initiation command for Input Audio selection on CATx/Fiber port. The characters and numbers that follow the "OS" command tell the system, which Output #'s CATx/Fiber Audio will be set to which Audio source. The last character "!" is found at the end of a command code which tells the system to execute the command.

For example, the command code

\*255OSO01A,O02M,O03S! ↵

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (OS) Output Audio selection on CATx/Fiber ports on (O01) Output 01 to (A) Auto mode, (O02) Output 02 to (M) embedded Audio, (O03) Output 03 to (S) 3.5mm Audio

(!) take the command. For a complete list of command characters and their functions, see examples below.

#### Output CATx/Fiber Ports Audio Select

A: Auto, M: Embedded Audio, S: 3.5mm Stereo Audio

(M) Embedded Audio refers to embedded Audio from Input source side

(S) 3.5mm stereo Audio refers to inserted Audio from Output Board's 3.5mm stereo jack

Example:

Command Codes	Action
*255OSALLM! ←	Set all CATx/Fiber Output Audio selection to embedded
*255OSO01A,O02M,O03S! ←	Set CATx/Fiber Output Audio on Output 1 (Auto), Output 2 (embedded), and Output 3 (3.5mm stereo Audio)
*255OSO01-09M! ←	Set CATx/Fiber Output Audio on Output 1~9 embedded

#### OT: Output Test Pattern Select

The "OT" is an initiation command for Output test pattern selection. The characters and numbers that follow the "OT" command tell the system, send test pattern to which Output. The last character "!" is found at the end of a command code which tells the system to execute the command.

- ✓ For test pattern command, Output #(s), resolution, and pattern type selection are required

For example, the command code

\*255OTO01T02P04! ←

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (OT) Output test pattern on (O01) Output 01 at (T02) resolution 1920 x 1200 and (P04) 256 Gray pattern (!) take the command. For a complete list of command characters and their functions, see examples below.

#### Resolution Table

- T00: Test pattern disable
- T01: 1024 x 768
- T02: 1920 x 1200
- T03: 720 x 480P
- T04: 1280 x 720P

#### Pattern Type Table

- P00: Test pattern disable
- P01: Color bars
- P02: Cross Hatch
- P03: 16 Gray
- P04: 256 Gray

- T05: 1920 x 1080P

- P05: 4Color Gray

Example:

Command Codes	Action
*255OTALLT01P01! ←	Set all Output to 1024x768 and color bars test pattern
*255OTO01,O02,O03T02P04! ←	Set Output 1,2 and 3 to 720x480p and 256 gray test Pattern
*255OTO01-09T05P05! ←	Set Output1~9 to 1920x1080p and 4 color gray test Pattern
*255OTALLT00P00! ←	Disable test pattern to all outputs

#### OF: Output Channel Information Request

The "OF" is an initiation command for Output channel general information request. The characters and numbers that follow the "OF" command tell the system, to request Output channel information of selected Output. The last character "!" is found at the end of a command code which tells the system to execute the command.

For example, the command code

\*255OFO01! ←

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (OF) Output channel general information request on (O01) Output 01 (!) take the command. For a complete list of command characters and their functions, see examples below.

Example:

Command Codes	Action
*255OFO02! ←	Request Output 2 information

#### OE: Output Extender Scaler Timing Select

The "OE" is an initiation command for Output Extender Scaler timing selection. The characters and numbers that follow the "OE" command tell the system, set scaling timing on selected Output. The last character "!" is found at the end of a command code which tells the system to execute the command. For a complete list of command characters and their functions, see examples below.

- ✓ OE command only applies to the HDMI with scaling Board and CATx/Fiber Output Board with PM-CR102 (CATx) and PM-FR102 (Fiber) Extender Receiver.

T00	Auto	T09	1080p (50Hz)	T18	SXGA (1280x1024@75Hz)
T01	480p (60Hz)	T10	1080p (59Hz)	T19	SXGA (1280x1024@85Hz)

T02	576p (50Hz)	T11	1080p (60Hz)	T20	UXGA (1600x1200@60Hz)
T03	720p (50Hz)	T12	SVGA (800x600@60Hz)	T21	1360x768@60Hz
T04	720p (59Hz)	T13	SVGA (800x600@75Hz)	T22	1366x768@60Hz
T05	720p (60Hz)	T14	XGA (1024x768@60Hz)	T23	1440x900@60Hz
T06	1080i (50Hz)	T15	XGA (1024x768@75Hz)	T24	1920x1200@60Hz
T07	1080i (59Hz)	T16	XGA (1024x768@85Hz)		
T08	1080i (60Hz)	T17	SXGA (1280x1024@60Hz)		

Example:

Command Codes	Action
*255OEO01T00! ↵	Set Output 1 Extender Scaler timing to Auto
*255OEO02T11!	Set Output 2 Extender Scaler timing to 1080p

#### OP: Output Extender Command Transmission (Pass Through Mode)

The "OP" is an initiation command for send command to the device that is connected to the Output Extender's rs-232/422 port. The characters and numbers that follow the "OP" command tell the system, send a command to the device through Output Extender. The last character "!" is found at the end of a command code which tells the system to execute the command.

In order to send control command to the AV devices that are connected to the PM Extender, it needs to open the communication port and then send a command;

Port open command:                   \*255OPO01@001! ↵  
 Command to the AV devices:        O01"PWR ON\x0d" ↵  
 Port close command:                 \*255OPC!

RS-232 Baud rate(bps) :

@001:4800                    @002:9600                    @003:14400  
 @004:19200                  @005:38400                  @006:57600  
 @007:76800                  @008:115200

For example, the command code

```
*255OPI01@001! ↵
O01"PWR ON\x0d" ↵
*255OPC!
```

Above example can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (OP) Output Extender command transmission on (O01) Output 01 Extender, (@001) at baud rate 4800 (!) take the command. Once communication port is open, command "PWR ON\x0d" can be sent. After receiving feedbacks from AV devices, close the port \*255OPC!

For a complete list of command characters and their functions, see examples below.

Example:

Command Codes	Action
*255OPO01@001! ↵	Open communication port with a device that is connected to Output #2 Extender at 4800 bps baud rate
O01"PWR ON\x0d" ↵	Send command PWR ON\x0d to output #1
*255OPC!	Close communication port
*255OPO02-06@004! ↵	Open communication port with a device that are connected to Output #2 ~ 6 Extender at 19200 bps baud rate
*255OPO05@004,O07@008! ↵	Open communication port with a device that is connected to Output #5 at 19200 bps baud rate and Output #7 at 115200 baud rate
OALL"PWR ON\x0d" ↵	Send command PWR ON\x0d to all open ports
O02"PWR OFF\x0d" ↵	Send command PWR OFF\x0d to output #2
O01-04"MUTE ON\x0d" ↵	Send command MUTE ON\x0d to output #1 ~ 4

OH: 3G/HD-SDI Output Scaler timing select command

The "OH" is an initiation command for 3G/HD-SDI Output Scaler timing selection. The characters and numbers that follow the "OH" command tell the system, set scaling timing on selected Output. The last character "!" is found at the end of a command code which tells the system to execute the command. For a complete list of command characters and their functions, see examples below.

✓ OH command only applies 3G/HD-SDI Output boards

T01	NTSC	T05	1920x1080i @50	T09	1920x1080p @30
T02	PAL	T06	1920x1080i @50	T10	1920x1080p @50
T03	1280x720p @50	T07	1920x1080p @24	T11	1920x1080p @60
T04	1280x720p @60	T08	1920x1080p @25		

## OQ: Quadview Output Control Command

The "OQ" is an initiation command for Multiview output timing selection. The characters and numbers that follow the "OQ" command tell the system, set scaling timing on selected output. The last character "!" is found at the end of a command code which tells the system to execute the command.

\* OQ command only applies to the quadview output board.

T00	Auto	T09	1080p (50Hz)	T18	SXGA (1280x1024@75Hz)
T01	480p (60Hz)	T10	1080p (59Hz)	T19	SXGA (1280x1024@85Hz)
T02	576p (50Hz)	T11	1080p (60Hz)	T20	UXGA (1600x1200@60Hz)
T03	720p (50Hz)	T12	SVGA (800x600@60Hz)	T21	1360x768@60Hz
T04	720p (59Hz)	T13	SVGA (800x600@75Hz)	T22	1366x768@60Hz
T05	720p (60Hz)	T14	XGA (1024x768@60Hz)	T23	1440x900@60Hz
T06	1080i (50Hz)	T15	XGA (1024x768@75Hz)	T24	1920x1200@60Hz
T07	1080i (59Hz)	T16	XGA (1024x768@85Hz)		
T08	1080i (60Hz)	T17	SXGA (1280x1024@60Hz)		

### Example:

Command Codes	Action
*255OQO01T00! ←	Set quadview output slot1 scaler timing to AUTO
*255OQO05T17! ←	Set quadview output slot2 scaler timing to 1280x1024

OQxxLxx : Quadview Output Layout Set

L01 : Channel 1 view ,L02 : Channel 2 view, L03 : Channel 3 view , L04 : Channel 4 view

L05 : Quad view

L06 : One input on the left and three inputs all on the right

L07 : Side by side

L08 : One input on the top and three inputs all on the bottom

### Example:

Command Codes	Action
*255OQO01L05! ←	Set quadview output slot1 quadview display
*255OQO05L07! ←	Set quadview output slot2 side by side display

OZ: Output reset command (only works for DVI and HDMI output)

Example:

Command Codes	Action
*255OZall! ↵	Reset signals for all output
*255OZO01,O02! ↵	Reset signals for output 1 and 2

### Audio Matrix Volume Configuration

Audio Matrix volume configuration commands are for the green block Audio Matrix Router

AV: Output Audio Volume Setting (1.0dB Step Attenuation)

The "AV" is an initiation command for Audio Matrix Router's Output Audio volume setting.

The characters and numbers that follow the "AV" command tell the system, set Audio volume on desired Audio Matrix Router's Output. The last character "!" is found at the end of a command code which tells the system to execute the command.

For example, the command code

\*255AVO01V01, O03V02! ↵

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (AV) set Audio volume on Audio Matrix Router's Output on (O01) Output 01 to (V01) -1.0dB (O03) Output 03 to (V02) -2.0dB (!) take the command. For a complete list of command characters and their functions, see examples below.

V00: 0 dB Attenuation

V01: -1.0dB Attenuation

V02: -2.0dB Attenuation

-

-

-

V98: -98.0dB Attenuation

V99: Mute

Example:

Command Codes	Action
*255AVALLV00! ↵	Set all Output volume to 0dB attenuation
*255AVO01V01,O03V02! ↵	Set Output1(-1.0dB), and Output3(-2.0dB) attenuation
*255AVO01-09V99! ↵	Set Output1 ~ 9 to mute

AF: Output Audio Volume Status Request



The "AF" is an initiation command for Audio Matrix Router's Output Audio volume information request. The characters and numbers that follow the "AF" command tell the system, to request Audio volume information of selected Output. The last character "!" is found at the end of a command code which tells the system to execute the command.

For example, the command code

\*255AFO01! ↵

can be interpreted as follows: (\*) Starting the command code (255) Router ID is 255 (AF) request Audio volume information on (O01) Output 01(!) take the command. For a complete list of command characters and their functions, see examples below.

Examples:

Command Codes	Action
*255AFO01! ↵	Check Audio Matrix Router Output 1 Audio volume information
*255AFALLIO! ↵	Check Audio Matrix Router's all Output volume information

### Router ID Check

User can confirm the Router's Current ID setting.

✓ Universal Router ID is 999

Example:

Command Codes	Action
*999I000! ↵	Check Router's ID

### Firmware Version Check

User can confirm Router's current firmware version.

Example:

Command Codes	Action
*999?version! ↵	Check Router's Firmware version

### Baud Rate Setting

User can set baud rate for RS-232 command control.

Enter the Baud rate setting command below. Replace the “#”s with the Input and Output number(s).

\*255@#!↵

@001: Baud rate at 19200

@002: Baud rate at 38400

@003: Baud rate at 57600

@004: Baud rate at 115200

Example:

Command Codes	Action
*255@001! ↵	Set baud rate at 19200
*255@002! ↵	Set baud rate at 38400
*255@003! ↵	Set baud rate at 57600
*255@004! ↵	Set baud rate at 115200

### Network Configuration:

User can check and set network configuration for LAN control.

Examples:

Command Codes	Action
*255NNI000! ↵	Check current Network Information
*255NIP192.168.000.004! ↵	Set IP address at 125.135.199.004
*255NSM255.255.255.000! ↵	Set Subnet Mask at 255.255.255.000
*255NGW192.168.000.001! ↵	Set Gate Way at 192.168.000.001
*255NMA00.00.C2.B0.20.05! ↵	Set Mac Address at 00.00.C2.B0.20.05
*255NPN3000! ↵	Set Port Number at 3000

### Connection Checking:

User can check the connection status.

Example:

Command Codes	Action
*255H000! ↵	Check connection status

### Front Panel Touch Screen Security Lock/Unlock

User can enable or disable the front panel touch screen.


Example:

Command Codes	Action
*255KST! ↵	Touch Lock Status Return
*255KON! ↵	Touch Lock On
*255KOFF! ↵	Touch Lock Off

### 4.3 LAN (TCP/IP) Operation


#### TELNET Protocol with LAN(TCP/IP)

The PM series Matrix Router can be controlled from remote locations through the LAN port using WINDOWS XP DOS prompts, hyper-terminal, or TELNET program ([the control code is fully compliant with RS-232C](#)).

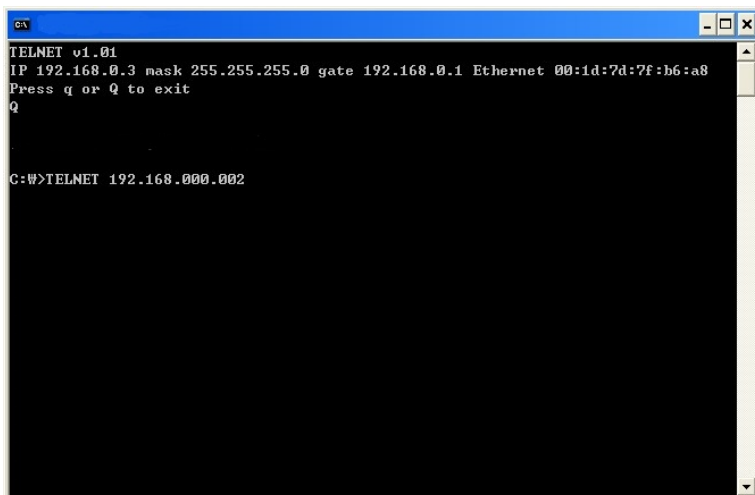

```
TELNET v1.01
IP 192.168.0.3 mask 255.255.255.0 gate 192.168.0.1 Ethernet 00:1d:7d:7f:b6:a8
Press q or Q to exit
q
C:\W>TELNET 192.168.000.002
```

Enter TELNET <Router IP  
Address> in the DOS  
prompt

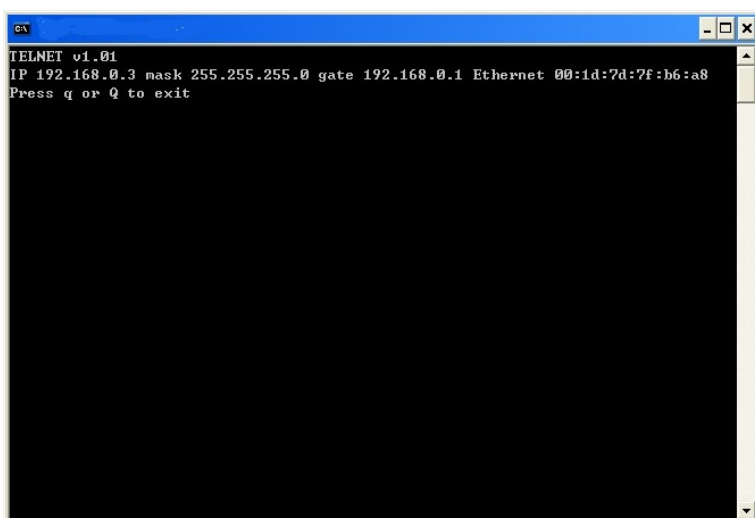

```
TELNET v1.01
IP 192.168.0.3 mask 255.255.255.0 gate 192.168.0.1 Ethernet 00:1d:7d:7f:b6:a8
Press q or Q to exit
```

Message indicating TELNET  
connection will appear

```

TELNET v1.01
IP 192.168.0.3 mask 255.255.255.0 gate 192.168.0.1 Ethernet 00:1d:7d:7f:b6:a8
Press q or Q to exit

*999I000! *255sI Router ID 255*

```

Router ID verification command code

Send “ \*999I000! ”

Router will send response:

“ \*255sI Router ID 255”

## HTTP Protocol with LAN(TCP/IP)

### Control PC Search

Searching data for channel configuration

Character train should begin with “LCD.CGI” to “O01=I08” to Output 01 = Input 8. The sequence and size of the character train must be the same.

To RESET the Protocol, a new connection to the server (Switcher) must be established.

### Switching Channels


http://192.168.0.2/LCD.CGI?O01=I01&O02=I02&O03=I03&O04=I04&O05=I05&O06=I06  
&O07=I07&O08=I08&Submit\_=SEND

### RESET

http://192.168.0.2/LCD.CGI?O01=I01&O02=I02&O03=I03&O04=I04&O05=I05&O06=I06  
&O07=I07&O08=I08&Submit\_=RESET

### Control PC Transmission

Information from each channel that needs to be sent must be extracted to prevent the entire Explore html data from being transmitted.

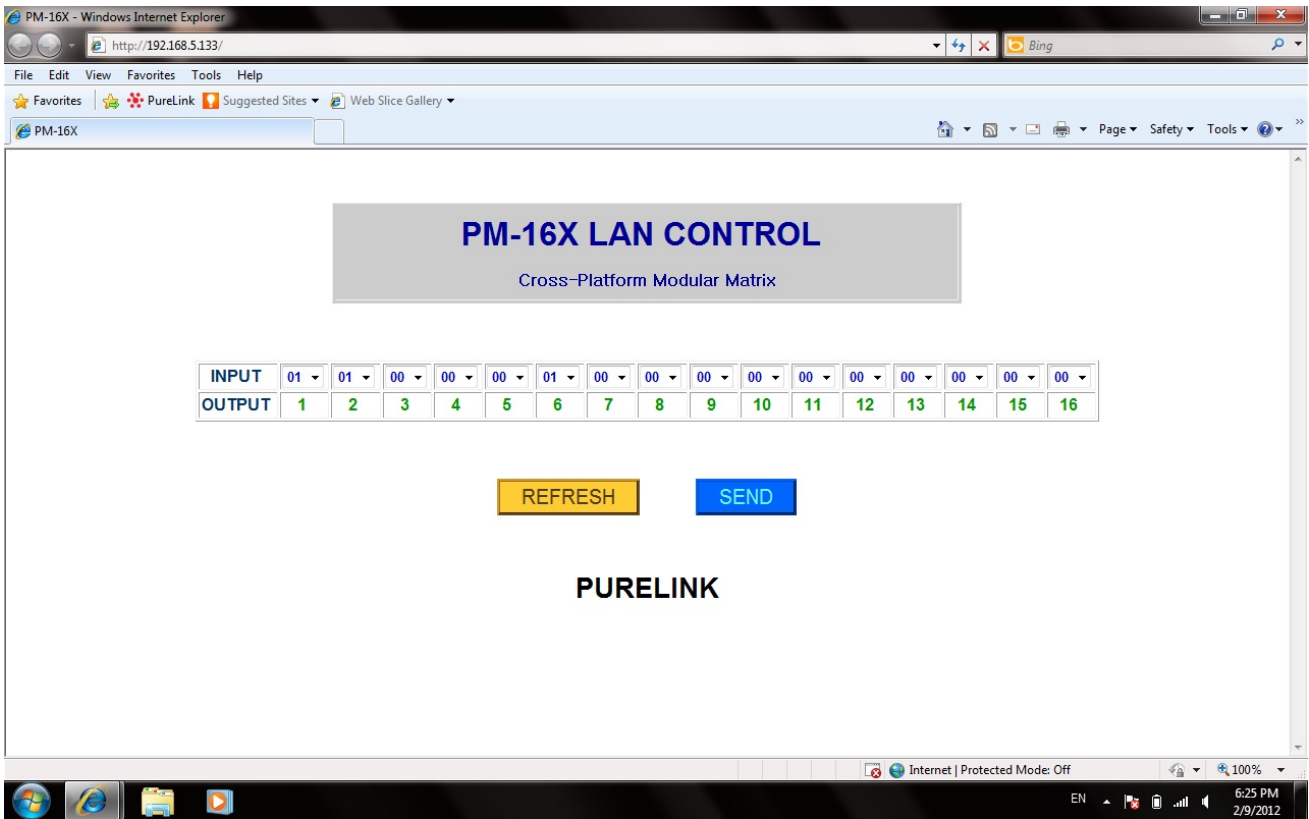

Run Explorer and enter the newly configured IP address to open the channel configuration window above.


Select desired channel and click **SEND** to change the channel.

## Chapter 5. Additional Information


### 5.1 Firmware Update Instruction

1. Set PM series Matrix Router's baud rate to 115200bps using front panel LCD touch screen or control command. (Data bits : 8bit, Stop bits : 1bit, Parity : disable)
2. Connect PC to PM series Matrix Router using USB cable (update cable is included in an original box)
  - ✓ Please disconnect RS-232 cable from the Matrix Router during firmware update.

Confirm if PM series Matrix Router (USB serial port) is properly connected to the PC on PC's device manager section.

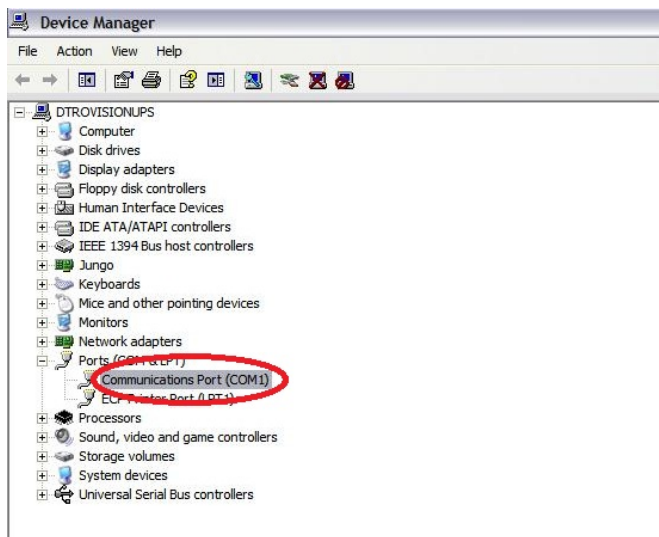


3. Create a hyper terminal connection (connect it using same com port number; COM1)
  - Create a name (ex, PureLink)
  - Bits per second: 115200bps
  - Data bits: 8
  - Parity: None
  - Stop bits: 1
  - Flow control: None

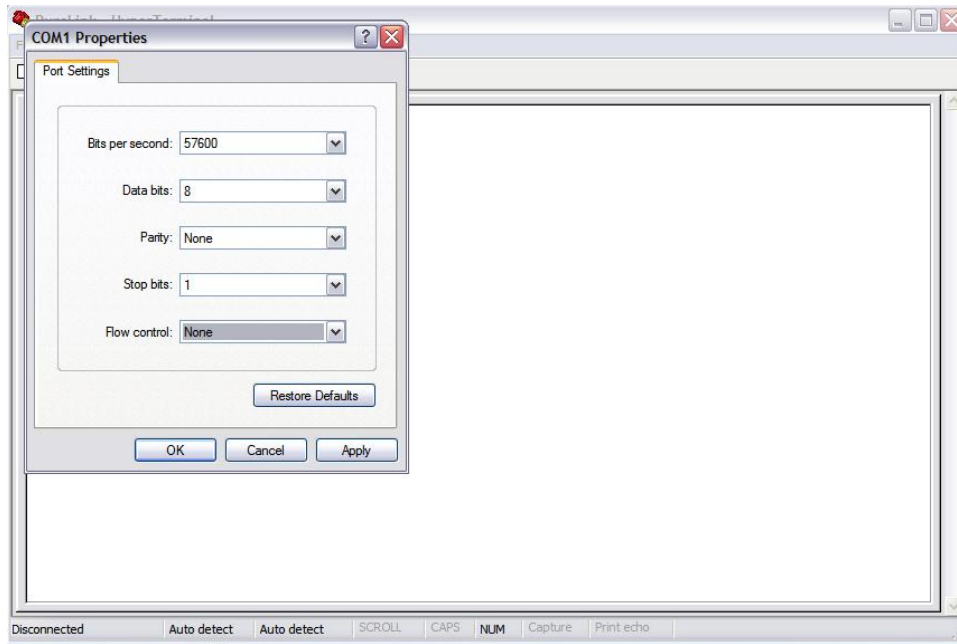


#### 4. Hyper terminal setting


Go to file --> Properties setting --> ASCII setup

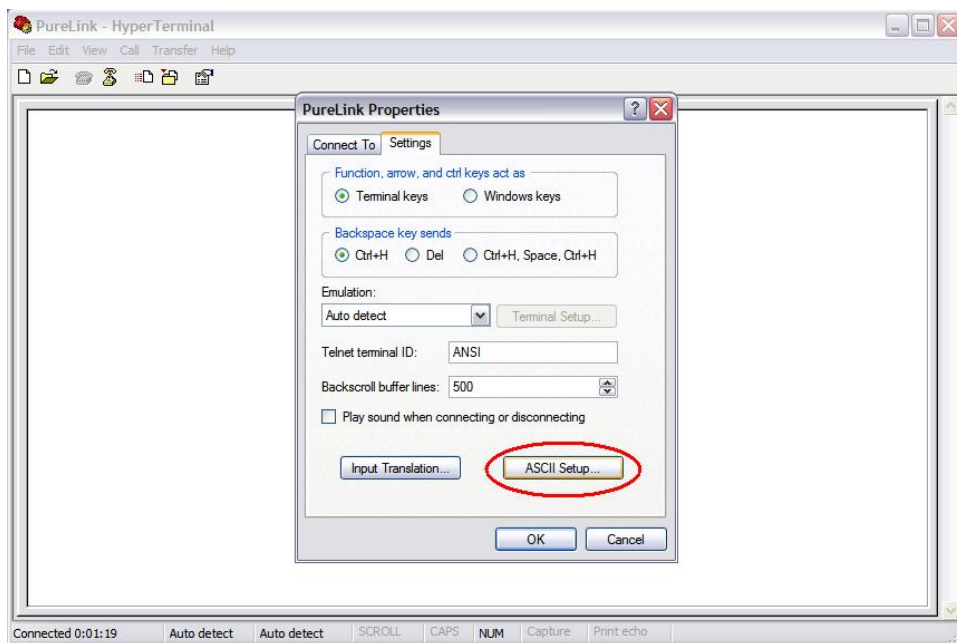

Check on "Echo typed characters locally" and then ok.

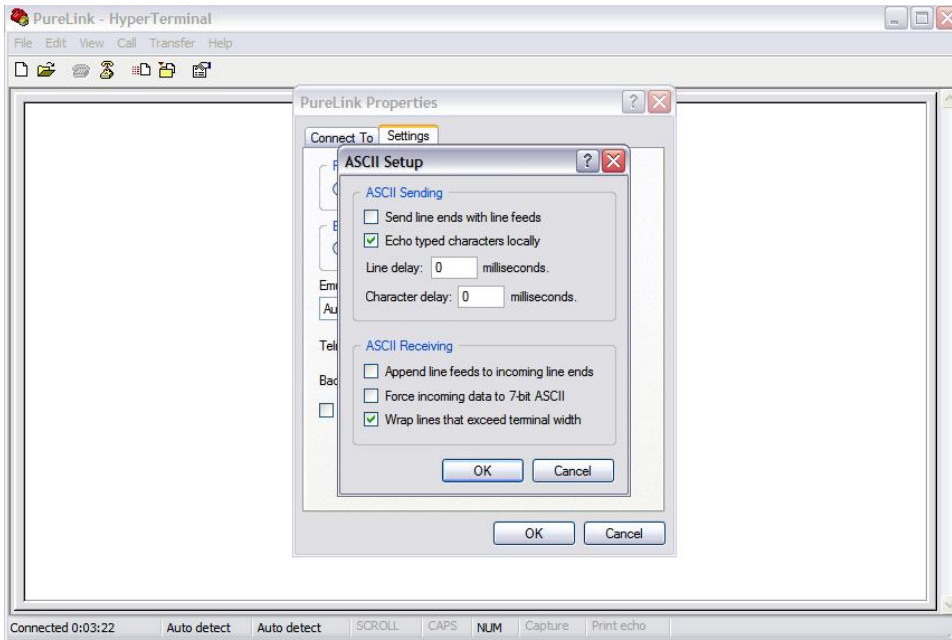


5. Type "program" and enter

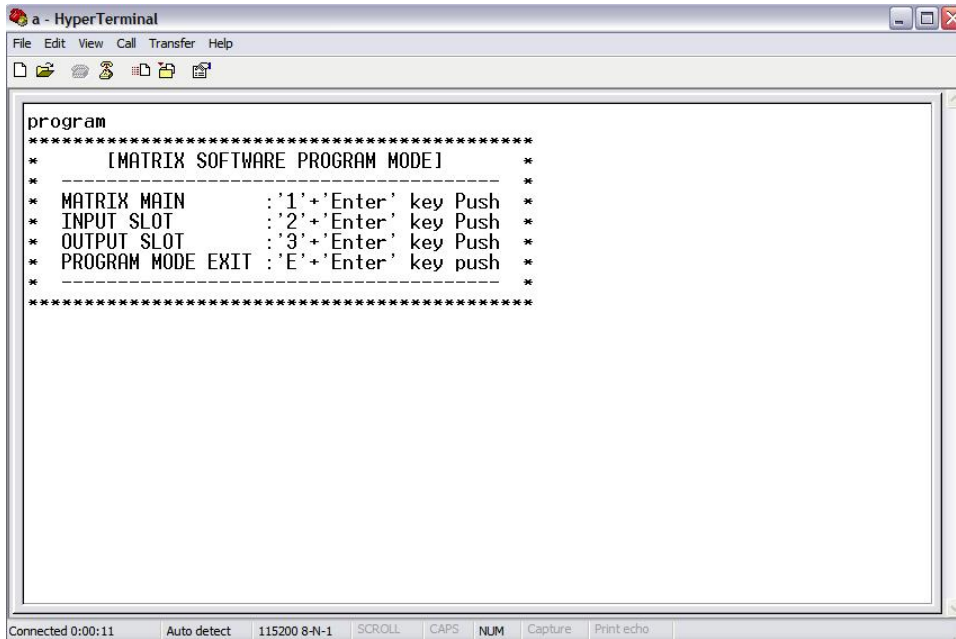


6. Type "1" and enter




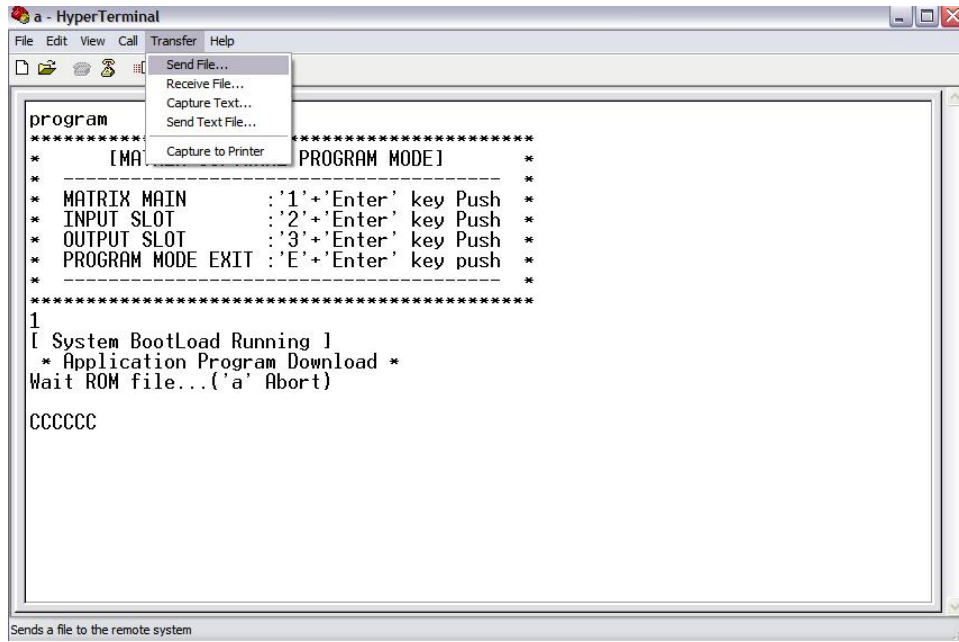


- 7. Go to send (T) menu and then => send file  
Select Ymodem Protocol

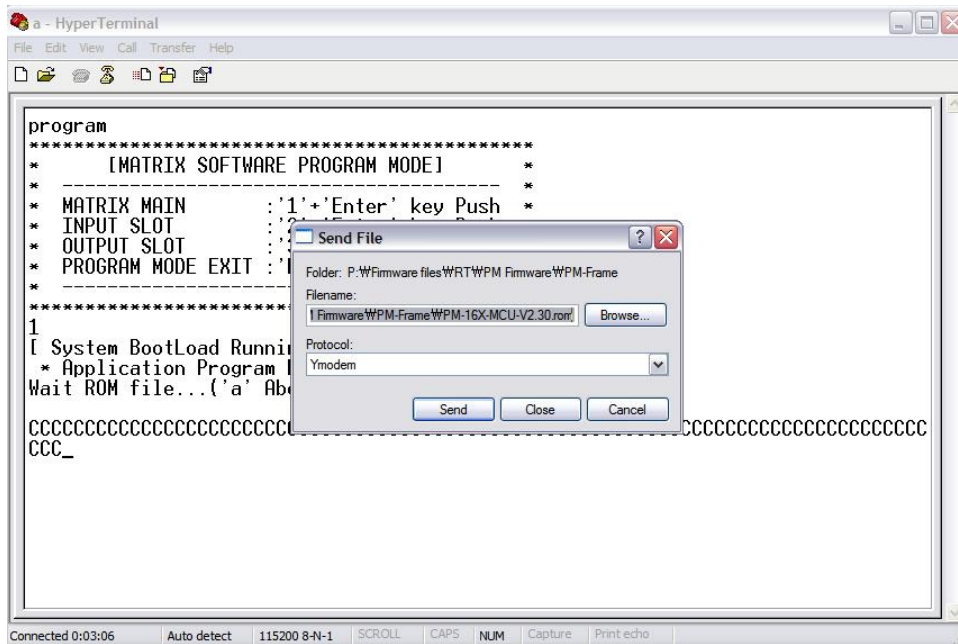

- 8. Select firmware file (.rom) and then, => Send (S)

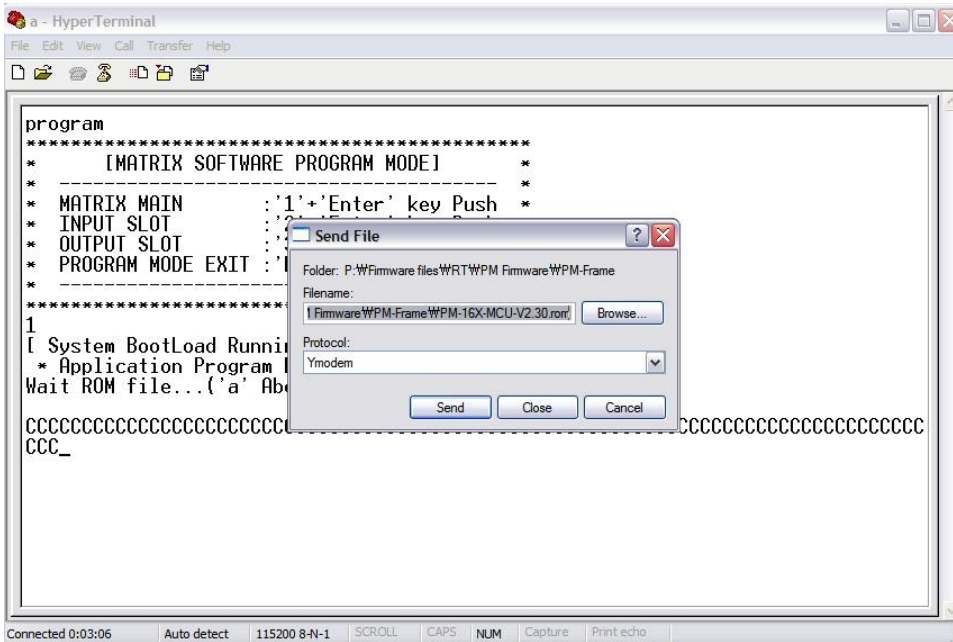

### 9. Firmware update progress window

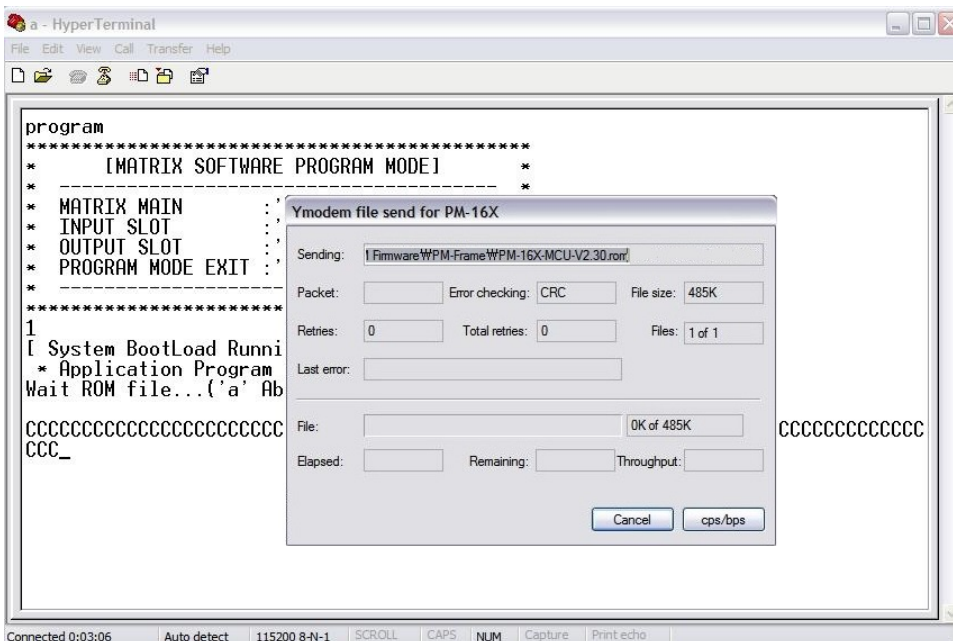

Firmware update completion window => Once firmware update is completed, disconnect USB cable and power cycle the unit (OFF/ON)  
Set baud rate back to 19200

## **5.2 Manufacturer's Warranty (5-Year)**

Dtrovision warrants this PureMedia series Matrix Router to be free from defects in workmanship and materials, under normal use and service, for a period of five (5) years parts for PM series Matrix Routers and its I/O Boards, and three (3) years on labor from the date of purchase from Dtrovision or its authorized resellers.

If the product does not operate as warranted during the applicable warranty period, Dtrovision shall, at its option and expense, execute one of the following as necessary:

1. Repair the defective product or part
2. Deliver to customer and equivalent product or part to replace the defective item
3. Refund to customer the purchase price paid for the defective product

All products that are replaced become the property of Dtrovision, LLC. Replacement products may be new or reconditioned. Repaired or replacement products or parts come with a 90-day warranty or the remainder of the warranty period. Dtrovision shall not be responsible for any software, firmware, information, or memory data loss of contained in, stored on, or integrated with any products returned to Dtrovision for repair under warranty.

### **Customer Service**

Any customer service inquiries can be submitted electronically through the Q&A form on our website at [www.purelinkav.com](http://www.purelinkav.com). For immediate assistance please contact us at (201) 488-3232 to reach our customer care or tech support team.