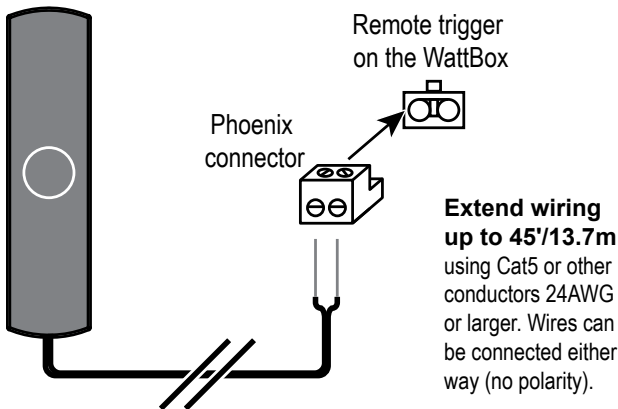# WATT BOX

WB-ACC-TRIGGER

The WattBox Trigger provides users with an easy way to cycle power on any or all of the outlets on a WB-IP device.

Package Contents

- WattBox Trigger (normally open, momentary closed) switch with adhesive backing

Installation

Position the switch in the desired location, then connect to the "REMOTE TRIGGER" port on the WattBox using the phoenix connector included with the IP device. Then log into the WB-IP interface to enable the trigger port and select which outlets to power cycle.

Remote trigger on the WattBox

Phoenix connector

Extend wiring up to 45'/13.7m using Cat5 or other conductors 24AWG or larger. Wires can be connected either way (no polarity).

Warranty & Regulatory

Find details of this product's 2-Year Limited Warranty at snapav.com/warranty, or request a paper copy from Customer Service at (866) 424-4489. Find other legal resources, such as regulatory notices and patent information, at **snapav.com/legal**.

Technical Support

Phone: 866.838.5052

Email: TechSupport@SnapAV.com

WATT BOX