Glass Door Lock Instruction Manual



Panel Diagram

1.Keypad


2.Card swiping area


3. Fingerprint sensor

4.Emergency power interface

5.Manual knob


6.Battery compartment cover

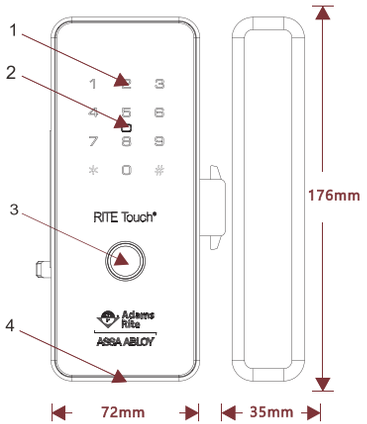

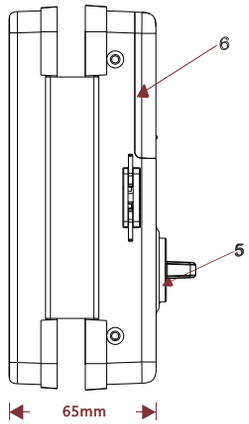


Frameless Glass Door Installation

1

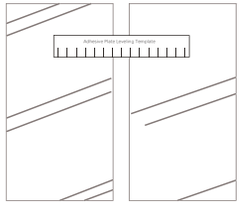


Clean the glass surface and apply a leveling guide to the interior side of the door panel. Use the level to locate and apply the mounting template.

2

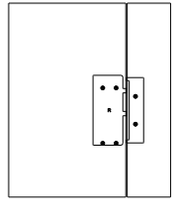


Peel off the adhesive backing from the mounting plate, attach it to the glass according to the template's position, ensuring that the clamp engages the side edge of the glass door.

3

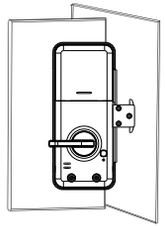


Install the main lock as per step 2, close the door, and mark the position for the latch.

4

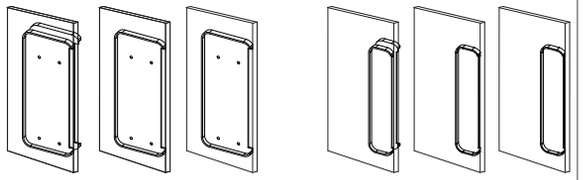

Spacer usage:
Door thickness 3/8in: Use 2 interior spacers + 2 exterior spacers + 2 adhesive pads, clamped with screws. Apply pads to front and rear lock units.
Door thickness 1/2in: Use 2 interior spacers + 2 exterior spacers, clamped with screws. Apply pad to rear lock unit.
Door thickness 5/8in: Use 2 exterior spacers, clamped with screws. Apply pad to rear lock unit.

5

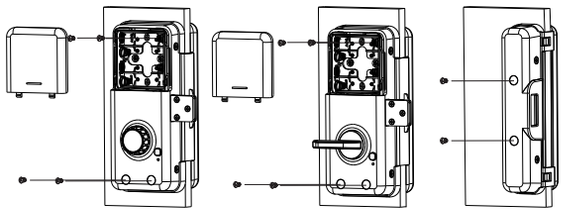


- Remove the battery cover from the lock.
- Secure the lock to the door bracket with 4 phillips screws.
- Reattach the main lock's rear cover.
- Secure the strike to the strike bracket with 2 phillips screws.

Installation of a Single-Leaf DoorSingle Glass Door

Operating Instructions


- To access the menu: Touch the keypad panel to wake, press * # then enter administrator credentials when prompted, press '#' to confirm entry.
- During inital setup, pressing * # will directly access the menu.
- Refer to the diagram for programming steps.

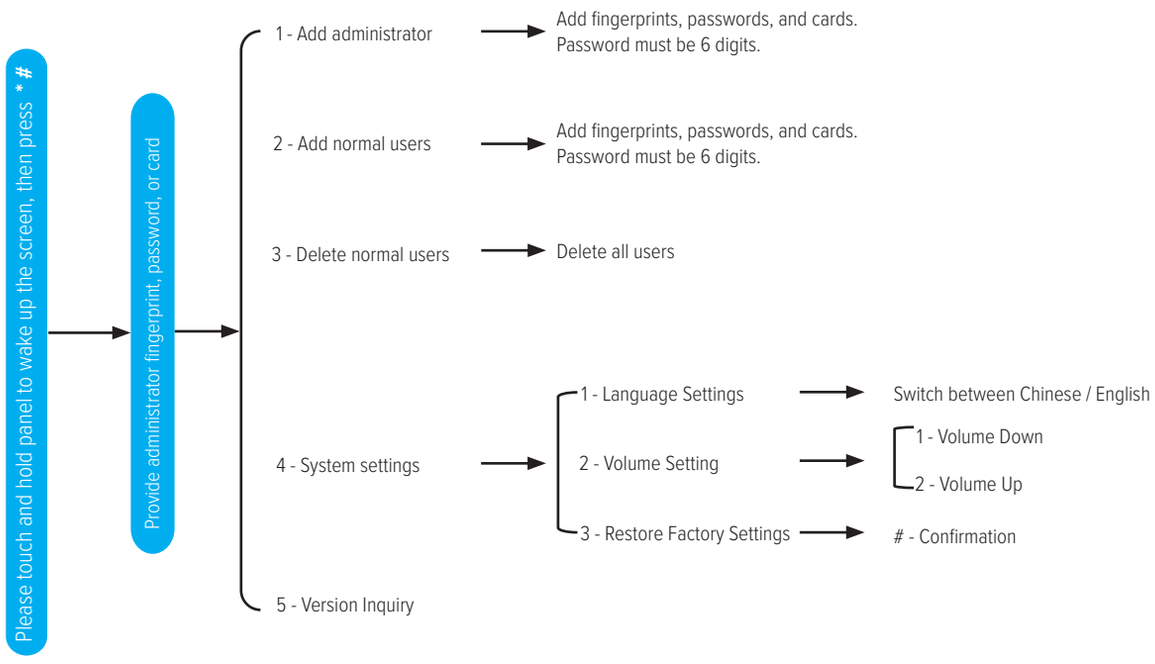

Programming Mode Commands:

Press * to go back
Press # to confirm
Press 0 to listen again

Shortcut Key	Function Description
* #	Enter Menu
9#	When the lock is unlocked, it will enter passage mode
#0	Switch off / cancel passage mode

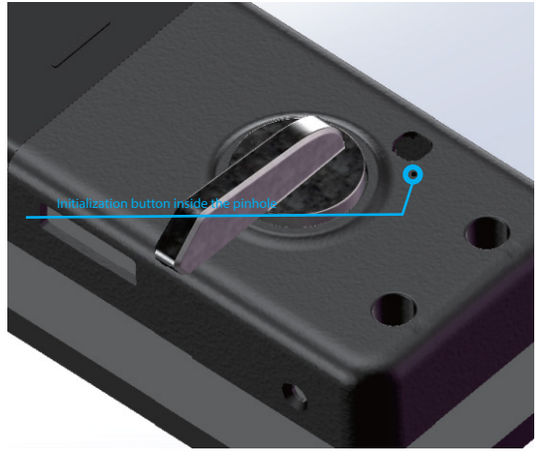

First-Time setup or Lost Administrator Credentials:

1. Ensure the device has battery power.
2. Insert a paperclip into the pinhole near the thumbturn, then press and hold the initialization button.
3. Continue to hold the initialzation button; the device will announce "Restore factory settings", followed by 4 beeps, and then the confirmation "Operation successful".
4. Release once "Operation successful" is heard.

IMPORTANT: In initialization mode, the lock can be opened by any fingerprint or password. To prevent others from setting unauthorized access codes, please ensure you add an administrator password and fingerprints promptly.