JascoPro Z-Wave Smart LED Bulb

Specifications

Bulb: A19 **Lumens:** 800

Voltage: 120 **Hertz:** 60 **CCT:** 2700K

CRI: 92 **Wattage:** 8 **Efficacy (lm/W):** 100.0

Signal Frequency: 908.4/916MHz

Range: Up to 150ft. line of sight between the wireless controller and the closest Z-Wave receiver module

Operating Temperature: 32-104° F (0-40° C)

Z-Wave Module: 800 series

Warranty: 5-year limited product warranty

For indoor use only.

Design Features

· E26 standard bulb base

· 800 lumens – equivalent to 60W incadescent bulb

· Remotely monitor with any mobile device*

· Full-range dimming – adjust brightness level from 0-100% in 1% increments

· Can be included in multiple groups and scenes

· Omnidirectional light source with no hot spots

· Reduces energy use by up to 85% – save $140 over life of bulb**

· Uses the Z-Wave firmware update meta data command class for standardized firmware updates over the air

· ETL certified

Z-Wave Plus Features

· Backward compatible with all generations of Z-Wave devices

· 50% more wireless range

· 250% faster processor

· 400% more memory

· 50% more energy efficient

· Supports wireless upgrades to future-proof your home

Installation Recommendations:

· Indoor use only

· Trilingual instruction manual – English, French, Spanish

** Time and cost estimates as compared to a 60W incandescent bulb over the life of the product (25,000 hrs) at .11¢/kWh. Results will vary based on rates and use.

Lighting Facts These estimates based on 3 hrs/day and 11¢/kWh. Your cost depends on your use and rates.

Brightness	Energy Cost	Life	Energy Used
800 lumens	$1.08 per year	22 years	8W

Light Appearance Warm 2700K Cool

Remarque sur l'éclairage Ces estimations sont basées sur une utilisation de 3 heures/jour à 11 ¢/kWh. Votre coût dépend de votre utilisation et des tarifs.

Luminosité	Coût énergétique	Durée de vie	Énergie utilisée
800 lumens	1,08 $ par année	22 ans	8W

Apparence de l'éclairage Chaud 2700K Froid

Device Configuration

Z-Wave SmartStart Inclusion

When initially powered, the bulb is in SmartStart inclusion mode. If your hub supports SmartStart, scan the QR code.

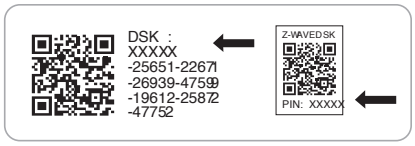

Figure 1

Z-Wave Classic Inclusion

1. To change to classic inclusion mode, turn bulb OFF, then ON three times. The bulb rapidly flashes four times to indicate classic mode.
2. To change back to SmartStart inclusion mode, turn the bulb OFF, then ON three times. The bulb rapidly flashes six times to indicate SmartStart mode.

OFF → 1st ON (0-3 sec.) → OFF → 2nd ON (0-3 sec.) → OFF → 3rd ON (0-3 sec.)

NOTE: The bulb attempts to connect in either inclusion mode for 10 seconds. If not found after 10 seconds, cycle the bulb OFF/ON to restart the inclusion mode.

3. In either method, the bulb flashes twice to indicate it was added to the network.
   NOTE: The bulb remains in the last known inclusion mode when cycled OFF/ON once.

You have complete control to turn your fixture ON/OFF according to groups, scenes, schedules and interactive automations programmed by your controller.

If your Z-Wave certified controller features remote access, you can control your fixture from your mobile devices.

If prompted by the controller to enter the S2 security code, refer to the QR code/security number on the side of the box or the QR code label on the product (see Figure 1). Enter the 5-digit code.

To Remove and Reset the Device

1. Follow the instructions for your Z-Wave certified controller to remove a device from the Z-Wave network.
2. Once the controller is ready to remove your device, turn bulb OFF, then ON three times. The smart bulb flashes twice when removed from the network.

OFF → 1st ON (0-3 sec.) → OFF → 2nd ON (0-3 sec.) → OFF → 3rd ON (0-3 sec.)

To Restore Factory Defaults

1. Turn the switch off, pause one second, then turn back ON.
2. Repeat three times (four times total).
3. The smart bulb flashes twice when reset.

OFF → 1st ON (1-3 sec.) → OFF → 2nd ON (1-3 sec.) → OFF → 3rd ON (1-3 sec.) → OFF → 4th ON (1-3 sec)

NOTE: This should only be used if your network's primary controller is missing or otherwise inoperable.

Certifications & Compliances

Intertek 5008098

Compliances, specifications and availability are subject to change without notice.

Distributed by Jasco Products Company LLC
10 E. Memorial Rd., Oklahoma City, OK 73114.

Questions? Contact our U.S.-based dedicated support at 1-833-981-0170, M-F.

©Jasco 2024

Scan to see full line of products or visit jascopro.com