



CX-ED1079L/DL 'Universal' Electric Strike

Installation Instructions

This Package Includes:

1- 4 PIN power connector

2- #10 x 1 1/4" wood screws

1- 3 PIN door status connector

2- #10-32 x 1/2" screws

connector

2- Mounting brackets

1- ESP1B, ESP3B and ESP4B faceplates

2- Spacers

4- Wire nuts

1- Varistor

5- M5 x 12 mm screws

1. Description

Camden CX-ED1079L/DL Grade 1 ANSI strikes for cylindrical locksets offer the very best strike quality and performance, with three stainless steel faceplates provided. The 'Universal' strike design delivers unparalleled application flexibility, with field selectable voltage, fail safe/fail secure operation and mechanical adjustment of the strike body.

2. Specifications

Voltage	12/24V AC/DC
Current Draw	260mA@12V DC 150mA@24V DC
Static Strength	1,500 Lbs.
Dynamic Strength	70 Ft-Lbs.
Endurance	1,000,000 Cycles (Factory Tested) 250,000 Cycles (UL Verified)
Mode	Field Selectable Fail Safe/Fail Secure
Mech. Adjustment	Strike Body/Faceplate
Operation	AC-Buzz, DC-Silent
Duty	Continuous
Latch Bolt Monitor	SPDT, 100mA @ 24V DC
Dimensions (Body)	CX-ED1079L: 3 3/8" H x 1 3/4" W x 1 7/32" D (86mm x 44mm x 31mm) CX-ED1079DL: 3 3/8" H x 1 3/4" W x 1 3/8" D (86mm x 44mm x 35mm)






UL 294 Performance Levels


- Line Security = Level I
- Attack Level = Level I
- Endurance Level = Level IV
- Standby Power = Level I

3. Dimensions

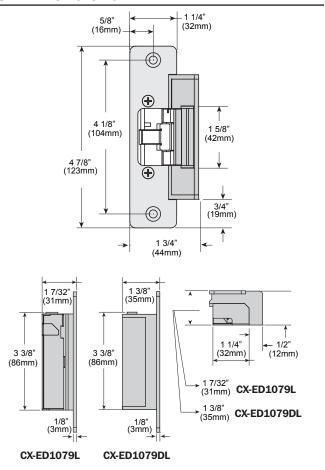

4. Installation


- 1. Prepare the door jamb as per the appropriate drawing.
- 2. Install mounting brackets to jamb using M5x12 screws and pressed metal nuts. Do not tighten.
- 3. Spacers are used to assure flush final assembly of faceplate into jamb. Add one or more spacers between jamb and mounting bracket when face plate extends beyond the jamb. When the faceplate sits inside the jamb, spacers must be added between the mounting
- bracket & the lip bracket. Make sure the clearance hole in the spacer aligns with the hole in mounting bracket.
- 4. Connect wires coming from the low voltage side of the transformer to wires (black) from strike.
- 5. Install electric strike jamb by attaching with # 10-32 screws and lockwashers.
- 6. Tighten secure M5x12 screws holding mounting brackets to jamb.

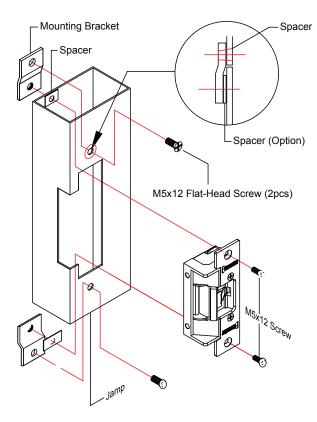



Vertical Centerline

Note: The products are intended to be installed in accordance with the installation wiring diagram, mechanical assembly drawings provided with each product, the local authority having jurisdiction (AHJ) and the National Electric Code, NFPA 70. When installed in fail secure mode, the local authority shall be consulted with regard to the use of possible panic hardware to allow emergency exit from the secure area.

The electric door strike shall be installed in such a way and in such a location so as to not impair the operation of an emergency exit device or panic hardware mounted on the door.

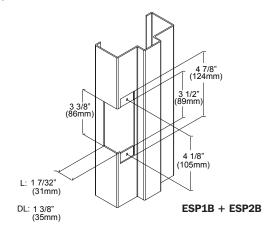

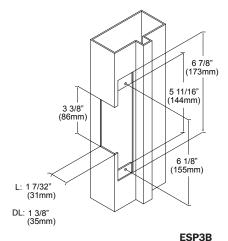

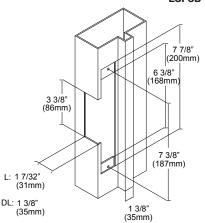

ESP4B

5. Connections

POWER

12V AC/DC Red/Black:


24V AC/DC

+24V +12V Red: Blue/Green: Black/Blue: Ground

> Green: Ground

A varistor is provided to protect/prevent strike from spikes. Connect varistor between input wires.


Note: For UL 294 / UL 1034 compliance the door strikes are to be powered via a UL 294/ UL 603 class 2 power limited output from a control panel and or power supply. Furthermore, when powered by AC/DC the units shall use a UL regulated UL 294/ UL 603 power limited class 2 output rated 12/24V with AC on indicator.

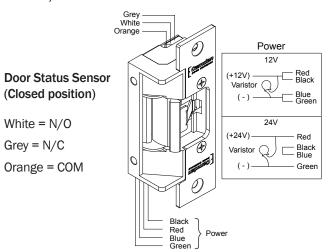


6. Operation

How to modify fail-safe to fail-secure or vice versa.


- (1). Loosen the screw as per the product diagram below.
- (2). Rotate the set plate 180° and slide the plate until it is properly seated.
- (3). Tighten the screw.

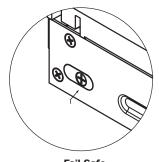

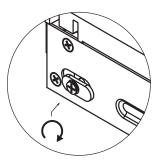


Fail Safe

Changing

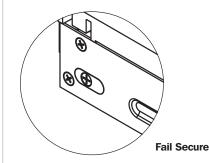


7. Faceplates


INCLUDED IN PACKAGE

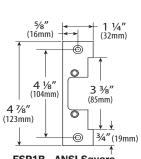

ESP1B - ANSI Square

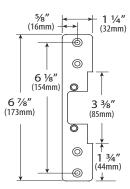

ESP3B - Hollow Metal Door

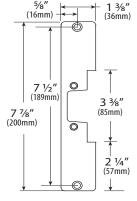

ESP4B - Wood Door

ADDITIONAL FACEPLATE 1 1/4" (16mm)

4 1/8" 3 %" (104mm (85mm) 4 1/8" (123mm) 3/4" (19mm) ESP2B - Ansi Round



Keypads











Relays & Timers





5502 Timberlea Blvd., Mississauga, ON Canada L4W 2T7

www.camdencontrols.com Toll Free: 1.877.226.3369



File: CX-ED1079L/DL Designer Installation Instructions.indd R4 Revision: 04/11/2018 Part No.: 40-82B192