

1. Strip approximately 1.50" of cable jacket and separate wires.



2. Choose between USOC or UTP wiring configuration.

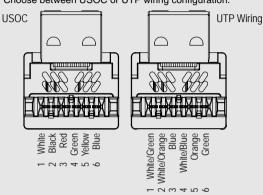

3. Sort wires and place into the IDC.

4. Terminate wires using the cap or Punch-Down Tool.

