





## Junction box for vandal dome, vandal ball and vandal fisheye cameras

<b>DWC-VAJUNC</b>	<b>DWC-VFJUNCW</b>	<b>DWC-VFZJUNC</b>
-------------------	--------------------	--------------------



### WHAT'S IN THE BOX

Camera Mounting Screws	 Mount Screw 23mm Mount Screw 20mm	2 sets	Quick Setup Guide		1
Screws and Plastic Anchors		4	Mounting Template		1

**NOTE:** Download all your support materials and tools in one place.

1. Go to: <http://www.digital-watchdog.com/resources>
2. Search your product by entering the part number in the **'Search by Product'** search bar. Results for applicable part numbers will populate automatically based on the part number you enter.
3. Click **'Search'**. All supported materials, including manuals and quick start guide (QSGs) will appear in the results.



## INSTALLATION

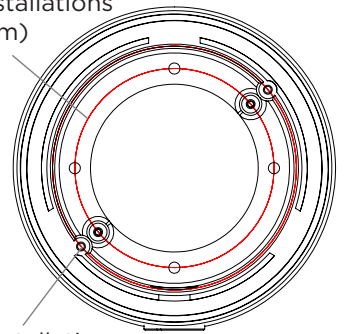
- 1 Using the mounting template or the junction box itself, mark and drill the necessary holes on the mounting surface.
- 2 Secure the junction box to the mounting surface using the screws and anchors included.
- 3 To mount the camera to the mounting accessory, remove the dome from the camera base using the wrench included with the camera.

**NOTE:** Do not touch the lenses when handling the camera modules.

- 4 Pass wires through and make all necessary connections.
- 5 Secure the camera to the mounting bracket using the included screws. The junction box has two (2) camera mounting screw sets and two mounting options. See the table below for the length of the screws and compatible cameras and which mounting holes to use.

Screw size	Compatible camera	Installation Option
23mm screws	DWC-VA models DWC-MVA models DWC-MPVA models	Installation option A
20mm screws	DWC-MV8 and DWC-MPV8 models DWC-MVC and DWC-MPVC models DWC-PVF and DWC-PPVF models DWC-MF and DWC-MPF models	Installation option A
35mm screws	DWC-MVD and DWC-MPVD models, <b>screws are included with the camera.</b>	Installation option B

For type B installations  
Ø3.5" (Ø89mm)



For type A installations  
Ø4.29" (Ø109mm)

- 6 Adjust the camera's lens position and angle and place the cover dome on the camera base to complete the installation.

