

# SBPMJ Parapet Mount Bracket Installation Instructions

## **Box contents:**

1 Parapet Mount and base with PTZ collar

1 PC x Hex Wrench for Setting Screws

6 Sets x Mounting bolts with expansion anchors 63mm±0.5mm (Total Length)

9 PCS x Set Screws  $\varnothing$  6mm±0.2mm

**Note:** The mount should be installed on a flat and sturdy surface. The installation surface must be capable of withstanding heavy winds and at least 3 times the total weight of the camera being installed.

1. Start by marking off holes in which you want to position the mount.
2. Drill a hole in the base material with a hammer drill and a correctly sized carbide drill bit for the anchor. See figure A
3. Using the proper diameter and use bit, drill holes for the expansion bolts. The depth of the hole should accommodate the length of the bolt up to the shim.
4. Clean out the hole of all debris.
5. Insert the Expansion Anchor Sleeve with bolt into the hole and ensure the sleeve is flush with the surface. See figure B
6. Set the mount base over the single expansion anchor, insert flat washer, locking washer then tighten the nut of the expansion bolt. The anchor of the bolt will expand inside the hole and lock into place. See figure C. Do this for all 6 expansion bolts.
7. Make the camera connections through the hollow arm and mount the camera to the arm using the mounting collar and set screws.
8. Insert the arm to the base and use the included locking screws to lock it in place.

① mounting holes for SPECO or Specific Metal Plate

② setting holes to fix Metal Plate and Tube

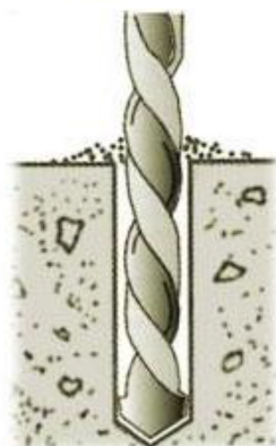
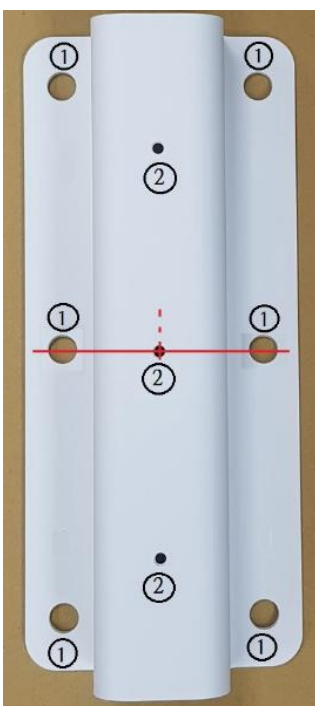


Figure A

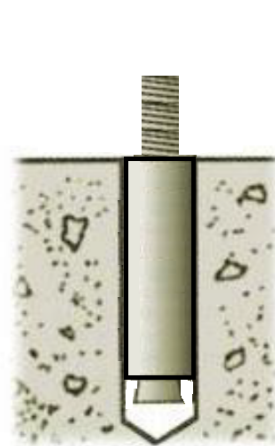


Figure B



Figure C