





RCI

dormakaba Group

TEMPLATE for 0162, F0162, 0162LM and F0162LM SURFACE MOUNTED RIM STRIKES

INSTRUCTIONS

1. Determine the horizontal centerline of the exit device latch and transfer centerline to the frame stop.
2. Position the template onto the frame aligning with centerline and against the closed door. Center-punch the two mounting holes and the wire access hole(s) as shown.
3. Drill and tap the two mounting holes and drill the wire access hole(s).
4. Refer to the installation instructions for wiring and final installation.

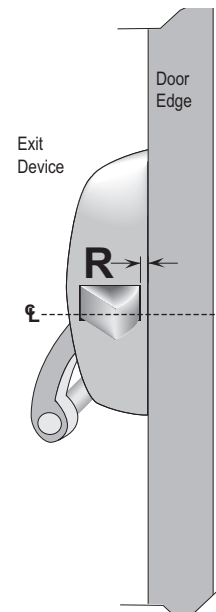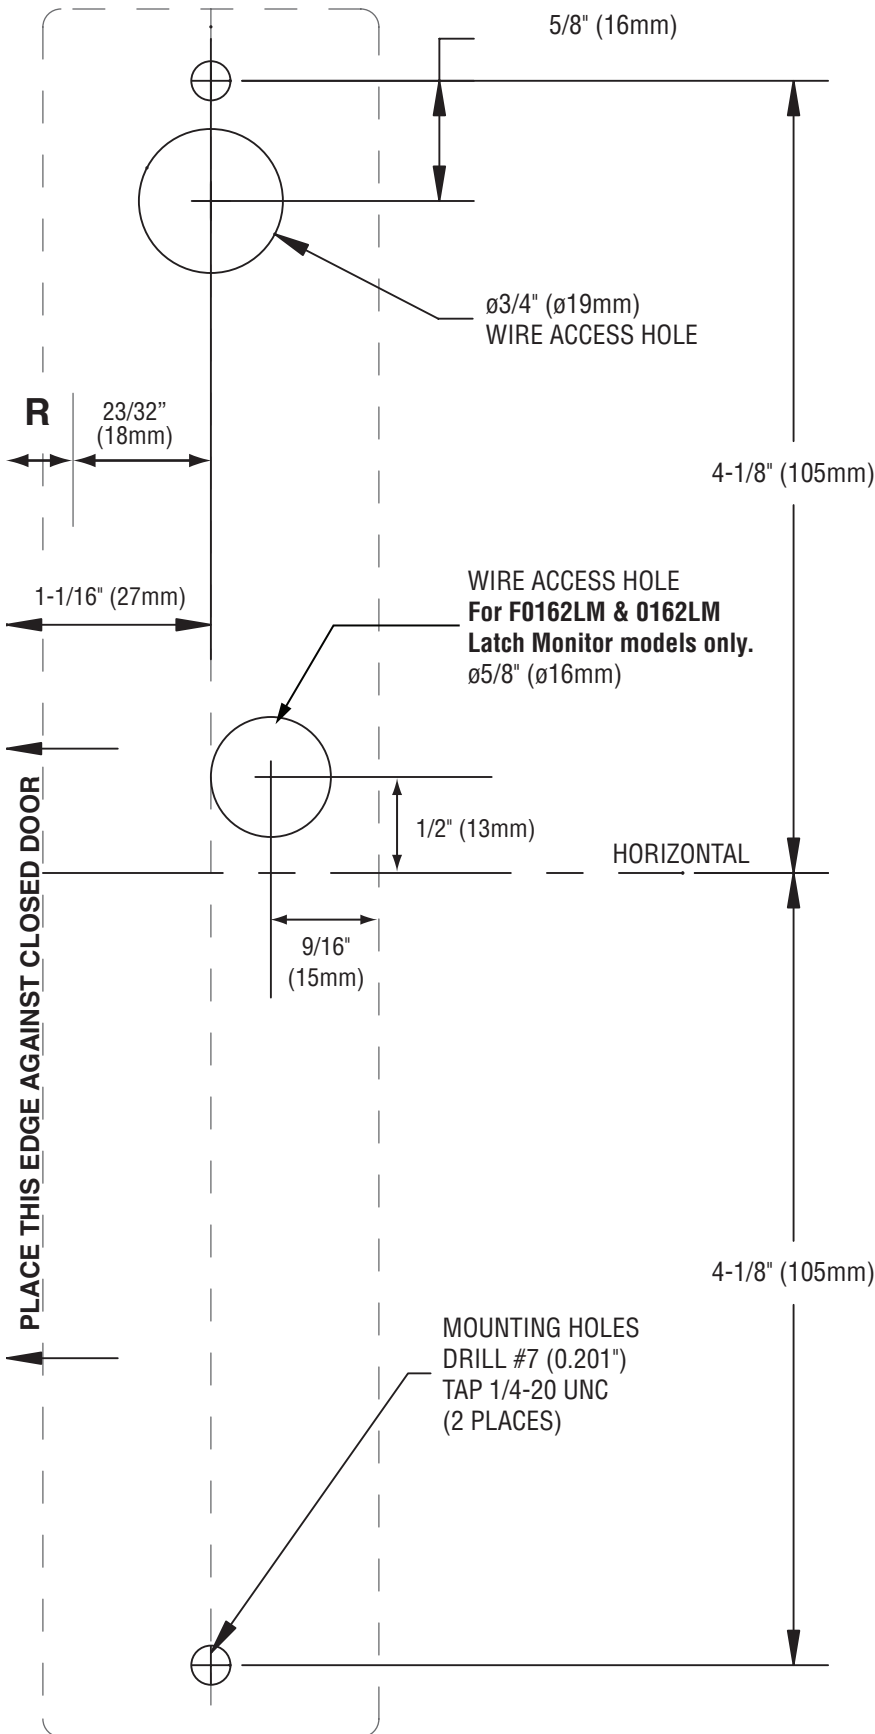

For those exit devices where **R**
≠ 11/32" (9mm)
shift template accordingly.

T0162LM

© 2021 dormakaba Canada Inc.
www.dormakaba.us • Phone: 1.800.265.6630 • Fax: 1.800.482.9795
Email: sales_RCI@dormakaba.com

PCN2026
R02-21GR