
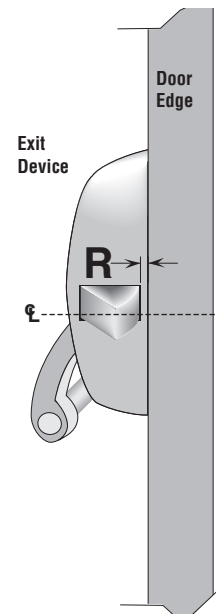


TEMPLATE for RCI 0163 and RCI 0163LM RCI 0 SERIES SURFACE MOUNTED RIM STRIKE

INSTRUCTIONS

1. Determine the horizontal centerline of the exit device latch and transfer centerline to the frame stop.
2. Position the template onto the frame aligning with centerline and against the closed door. Center-punch the two mounting holes and the wire access hole(s) as shown.
3. Drill and tap the two mounting holes and drill the wire access hole(s).
4. Refer to the installation instructions IS0163 for wiring and final installation.

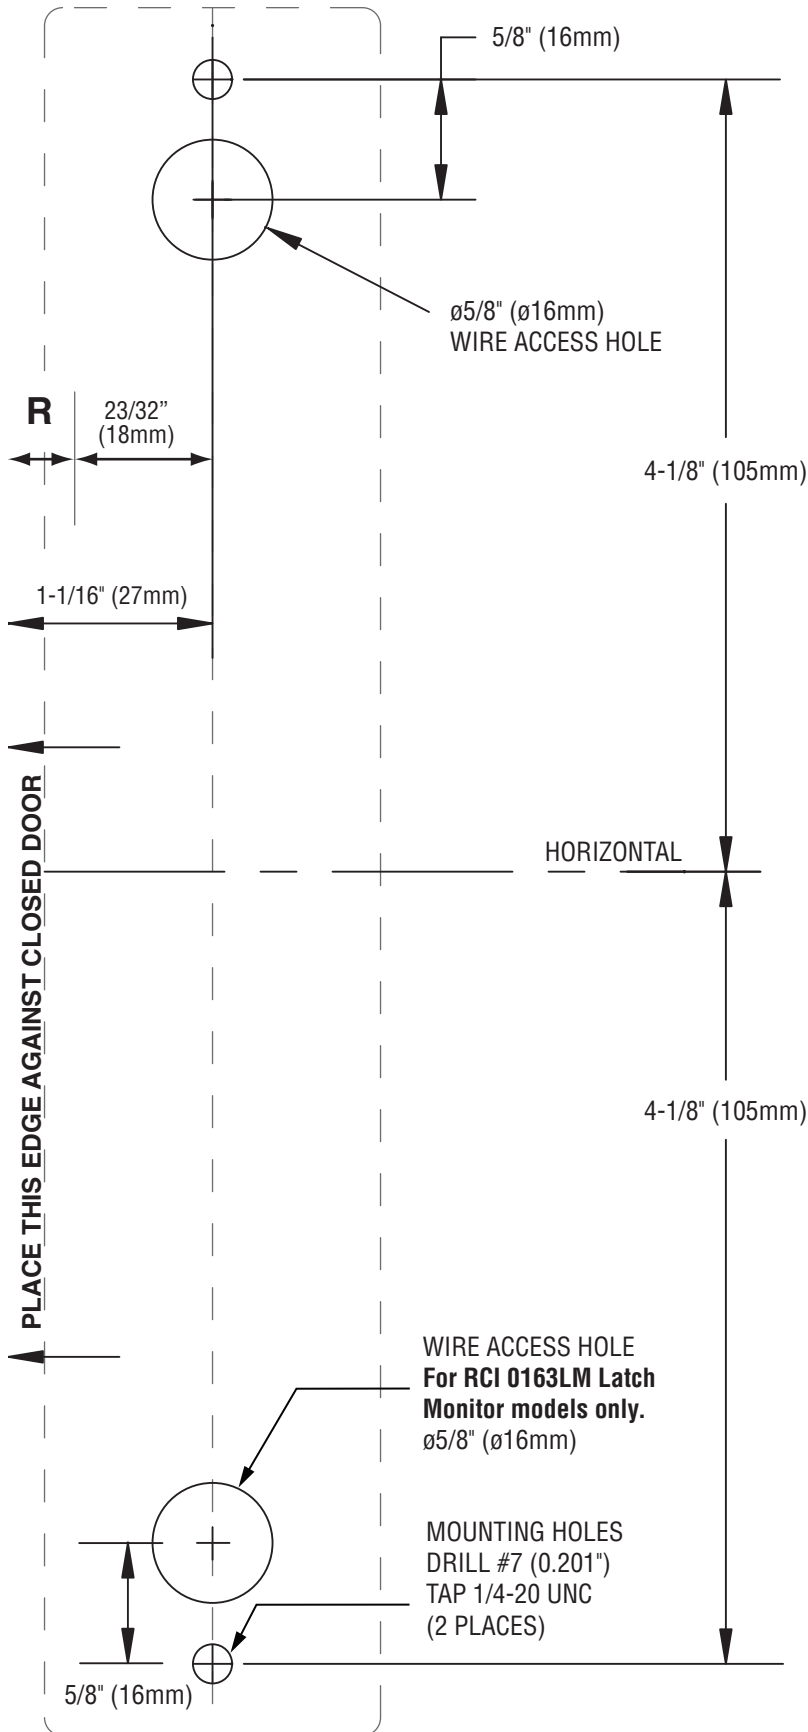

For those exit devices where
R ≠ 11/32" (9mm)
shift template accordingly.

© 2018 dormakaba Canada Inc.

www.dormakaba.us • Phone: 1.800.265.6630 • Fax: 1.800.482.9795 • Email: sales_RCI@dormakaba.com
T0163

PCN18041
R09-18GR-1