

Sleeve Anchors



Installation Instructions


SA14138 • SA14214 • SA516112 • SA516212 • SA38178 • SA38300
• SA12214 • SA12300 • SA12400

*Not Recommended for use in overhead applications


Installation Guidelines

Using the proper diameter bit, drill a hole into the base material to a depth of at least 1/2" or one anchor diameter deeper than the embedment required. The tolerances of the drill bit used should meet the requirements of ANSI Standard B212.15.

Blow the hole clean of dust and other material. Do not expand the anchor prior to installation.

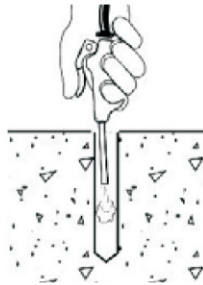

Drive the anchor through the fixture into the anchor hole until the head is firmly seated against the fixture. Be sure the anchor is driven to the required embedment depth.

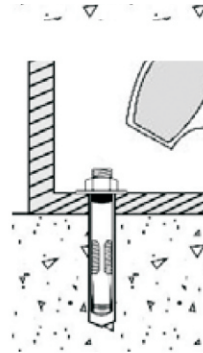

Tighten the anchor by turning the nut of head 3 to 5 turns past finger tight or by applying the guide installation torque from the finger tight position.

