

# Zamac Anchors




## Installation Instructions

ZA78•ZA75•ZA100•ZA125•ZA150•ZA200

\*Not Recommended for use in overhead applications

### Installation Guidelines

Using the proper diameter bit, drill a hole into the base material to a depth of at least 1/4" deeper than the required embedment. The tolerances of the drill bit used should meet the requirements of ANSI Standard B212.15. Blow the hole clean of dust and other material.

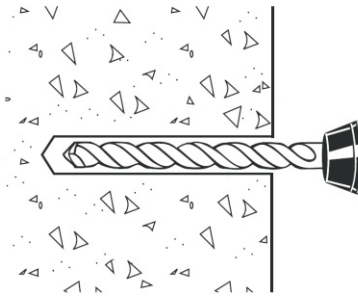

Insert the anchor through the fixture. Drive the nail into the anchor body to expand it. Be sure the head is seated firmly against the fixture and that the anchor

is at the proper embedment. Take care not to overdrive. This anchor is not recommended for use overhead.

