




If you are installing a bullet camera directly to the bracket, use the M6 screws in the center. A hex crescent wrench is required.

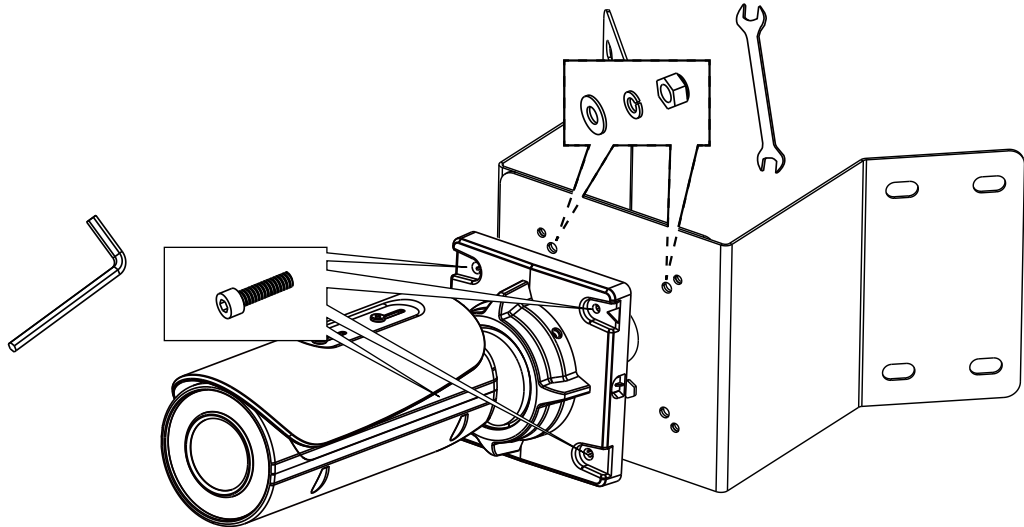

The installation of IB8367A, IB8369A, IB8377, IB8379, and IB9389 is similar to the above, except using different mounting holes and screws.

For IB9367-EHT-v2, IB9387-V3, IB9365-V2, IB-9391-V2, secure the adapter plate to the bracket using M6 x 20 socket screws. Tighten the hex nuts to secure from the other side.

Below are the corresponding mount holes for the MS9390-HV.

