


Illustra universal mounts: Large corner mount Quick Start Guide (A163875P3K-B)

Description	Part number
Corner mount, large	IUCM-LE

This Quick Start Guide gives information about how to install the mount. Read this QSG before installing the mount, and keep it for future use.

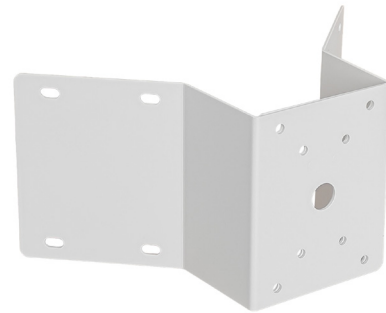

Necessary tools

- TR20 'security' wrench
- TR10 'security' tamper-resistant wrench
- Drill and bit suitable for the mounting surface
- Adjustable wrench, or ratchet with ½ in. and 13 mm sockets
- 13 mm spanner

Necessary consumables

- PTFE-based thread lubricant or thread tape

Warning

- Obey correct Working at Height safety procedures.
- Wear correct Personal Protective Equipment.


Accessories

Description	Quantity
Sleeve anchor, ⅝ in. × 2 ¼ in.	8
Nut, ⅝ in.	8
Washer, ⅝ in.	8
Bolt, hexagonal head, M8 × 25 mm	4
Bolt, hexagonal head, M8 × 30 mm	4
Nut, M8	6
Spring washer, M8	6
Washer, M8	6
Quick Start Guide	1

Installation


1. Assemble the corner adapter:
 - a. The corner adapter consists of two parts. Put them together so that the studs of one go through the holes of the other.
 - b. Install one M8 washer, one M8 spring washer and M8 nut to one stud and use your hand to tighten the nut.
 - c. Do step **b** again.
 - d. Use a ratchet/wrench to tighten the two nuts.

Figure 1: Assemble the corner adapter

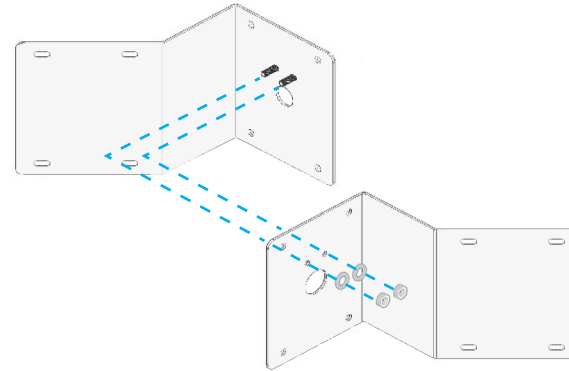


2. Install the sleeve anchors in the mounting surface:
 - a. Use the assembled corner adapter as a template to mark eight holes on the mounting surface.
 - b. Drill one hole in the mounting surface at each mark.
 - c. Put a sleeve anchor into one hole.
 - d. Tighten a ⅝ in. nut onto the sleeve anchor to expand it then remove the nut.
 - e. Do step **c** and step **d** again for all holes.

Figure 2: Install a sleeve anchor

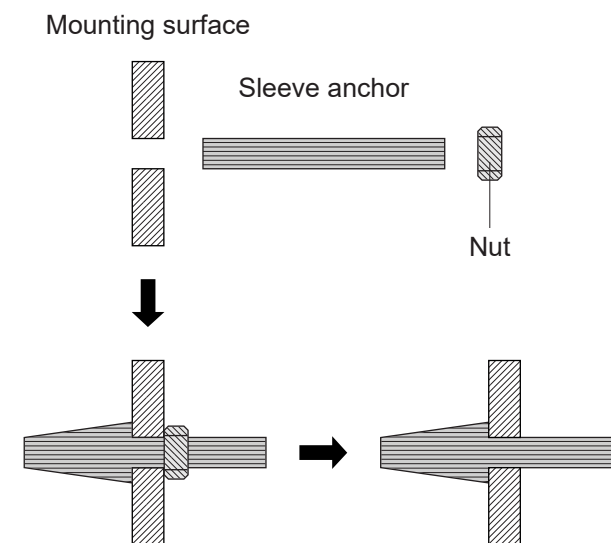

3. Attach the corner adapter to the mounting surface:
 - a. Align the mount with the sleeve anchors and push it on.
 - b. Put a ⅝ in. washer onto each sleeve anchor.
 - c. Use your hand to tighten a ⅝ in. nut onto each sleeve anchor.
 - d. Use a ratchet/wrench to tighten each nut to hold the mount securely in position.

Figure 3: Attach the corner adapter to the mounting surface

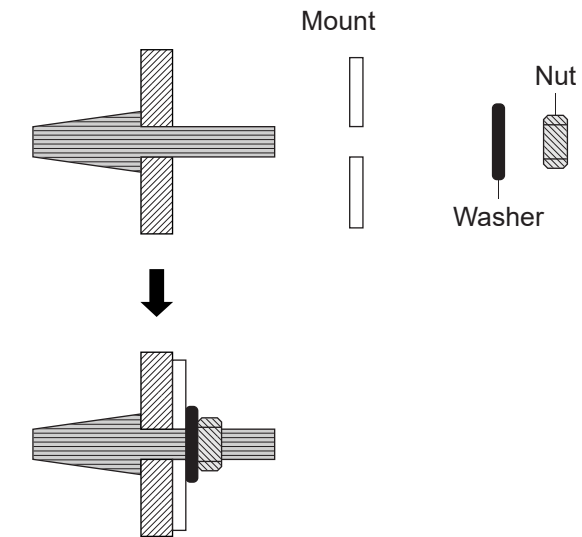


4. Attach the wall mount bracket to the corner adapter:
 - a. Remove the lanyard from the camera or pendant cap and install it to the bar on the wall mount bracket.
 - b. Install the rubber bung to the wall mount bracket.

Note: In the step that follows make sure that you select a 30 mm bolt. Discard the included 25 mm bolts.

- c. Put a 30 mm M8 bolt through one M8 spring washer.
- d. Hold the wall mount bracket up to the corner adapter and put the bolt through a top hole.
- e. Use your hand to tighten one M8 nut onto the bolt.
- f. Do step **c** through step **e** again for three more holes.
- g. Use a ratchet/wrench and spanner to tighten the four bolts in an 'X' pattern.

Figure 4: Attach the wall mount bracket to the corner adapter

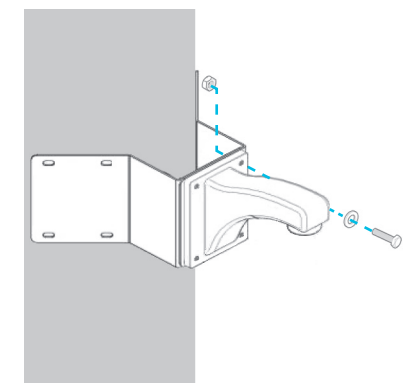

5. Install an adapter:
 - a. Apply a small amount of thread lubricant or thread tape to the threads of the adapter.
 - b. Tighten the adapter into the end of the bracket.
 - c. Tighten the security screw.
6. Install the camera:
 - a. Obey the camera's installation instructions to connect the cables.
 - b. Obey the camera's installation instructions to attach the camera to the adapter.
 - c. Attach the camera lanyard to the camera or pendant cap.