

INSTALLATION INSTRUCTIONS
WHEELLOCK ELUXA TRIM PLATES
ELTP-SG, ELTP-4S, ELTP-UNI

Use this product according to this instruction manual. Please keep this instruction manual for future reference.

GENERAL:

The Wheellock Eluxa Trim Plates (ELTP-SG, ELTP-4S, and ELTP-UNI) are UL and ULC listed accessories designed for mounting Wheellock Eluxa appliances to recessed electrical back boxes. The ELTP-SG trim plate is compatible with Eluxa ELHS, ELST, and ELHN appliances and supports installation on single gang, double gang, and 4" square back boxes. The ELTP-4S trim plate is intended for use with Eluxa wall-mount appliances (excluding single gang models) and is specifically designed for 4" square back boxes. The ELTP-UNI trim plate is designed for Eluxa ceiling mount appliances. All Eluxa Trim Plates are ideal for retrofit applications, providing greater wall coverage, and are available in Red or White to match the Eluxa appliance.

Eluxa Trim Plates are UL and ULC Listed for indoor use only, with the matching Eluxa appliances.

NOTE: All **CAUTIONS** and **WARNINGS** are identified by the symbol . All warnings are printed in bold capital letters.

⚠ WARNING: PLEASE READ THESE INSTRUCTIONS CAREFULLY. FAILURE TO COMPLY WITH ANY OF THE FOLLOWING INSTRUCTIONS, CAUTIONS AND WARNINGS COULD RESULT IN IMPROPER APPLICATION, INSTALLATION AND/OR OPERATION OF THESE PRODUCTS IN AN EMERGENCY SITUATION, WHICH COULD RESULT IN PROPERTY DAMAGE AND SERIOUS INJURY OR DEATH TO YOU AND/OR OTHERS.


⚠ CAUTION: Do not change factory applied finishes. "DO NOT PAINT".

⚠ ATTENTION: Ne pas modifier les finitions appliquées en usine. "NE PAS PEINTURER"

SPECIFICATIONS:

Table 1: Specifications	
Models	Single Gang/Wall: ELTP-SG-W-R (Red), ELTP-SG-W-W (White) 4-Square/Wall: ELTP-4S-W-R (Red), ELTP-4S-W-W (White) Universal/Ceiling: ELTP-UNI-C-R (Red), ELTP-UNI-C-W (White)
Environmental	Indoor Use Only. 0° C to 50° C (32° F to 122° F) 93% R.H.

Figure 1: Eluxa ELTP-4S Trim Plate on 4" Square Back Box (ELSPST Shown)

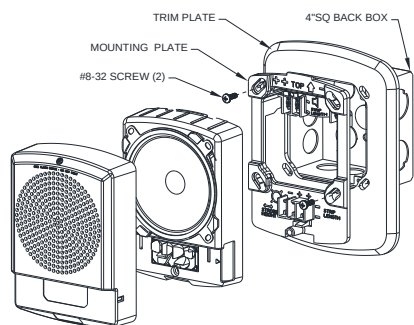

ELUXA ELTP-4S TRIM PLATE MOUNTING PROCEDURE:

1. Read the installation instructions provided with Eluxa notification appliance before proceeding with the installation.
2. **Mounting on 4" Square Back Box (See Figure 1):**
 - a) Place the Eluxa Trim Plate over 4" square back box and pull wires through the wire opening.
 - b) Place Eluxa mounting plate over the Trim Plate and pull wires through the wire opening. Secure with 8-32 screws (supplied).
 - c) Connect field wiring and install appliance per the Eluxa appliance instruction sheet.

Figure 2A: Eluxa ELTP-SG Trim Plate on 4" Square back box (ELHS Shown)

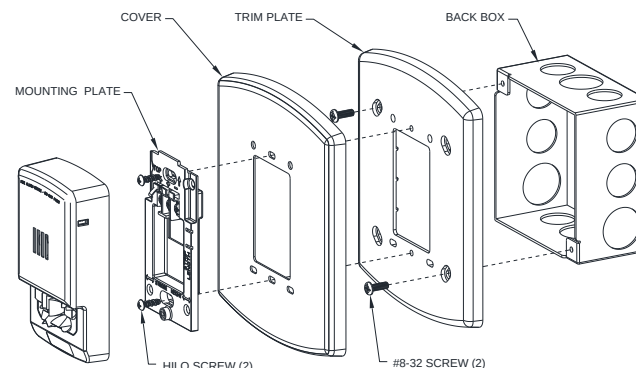


Figure 2B: Eluxa ELTP-SG on Double Gang Back Box


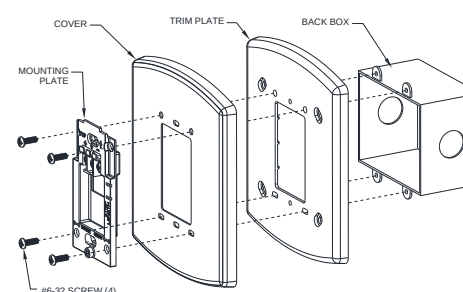


Figure 2C: Eluxa ELTP-SG on Single Gang Back Box

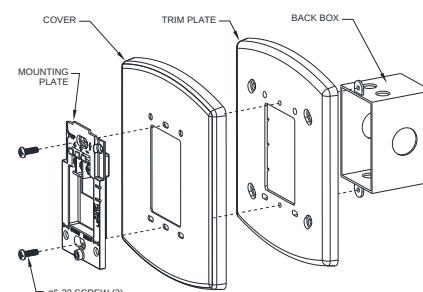

ELUXA ELTP-SG TRIM PLATE MOUNTING PROCEDURE:

1. Read the installation instructions provided with Eluxa notification appliance before proceeding with the installation.
2. **Mounting on 4" Square Back Box (See Figure 2A):**
 - a) Mount the Eluxa Trim Plate to 4" square back box using two 8-32 screws (supplied). Pull wires through the wire opening.
 - b) Place the Cover over the Trim Plate and pull the wires through the wire opening.
 - c) Place Eluxa mounting plate over the Cover and pull wires through the wire opening. Secure with HILO screws (supplied).
 - d) Connect field wiring and install appliance per the Eluxa appliance instruction sheet.
3. **Mounting on Single Gang Back Box (See Figure 2C):**
 - a) Place the Eluxa Trim Plate and Cover over single gang box and pull the wires through wire opening.
 - b) Place Eluxa mounting plate over Cover and pull wires through the wire opening. Secure with 6-32 screws (supplied).
 - c) Connect field wiring and install appliance per the Eluxa appliance instruction sheet.
4. **Mounting on Double Gang Back Box (See Figure 2B):**
 - a) Place the Eluxa Trim Plate and Cover over double gang box and pull wires through the wire opening.
 - b) Place Eluxa mounting plate over Cover and pull wires through the wire opening. Secure with countersink 6-32 screws (supplied).
 - c) Connect field wiring and install appliance per the Eluxa appliance instruction sheet.

⚠ CAUTION: Do not over tighten mounting screws. When using power tools to screw down the mounting plate and trim plate to the electrical backbox, ensure the torque is set to the lowest setting available.

Figure 3A: Eluxa ELTP-UNI Trim Plate on 4" Square Back Box (ELHSC Shown)

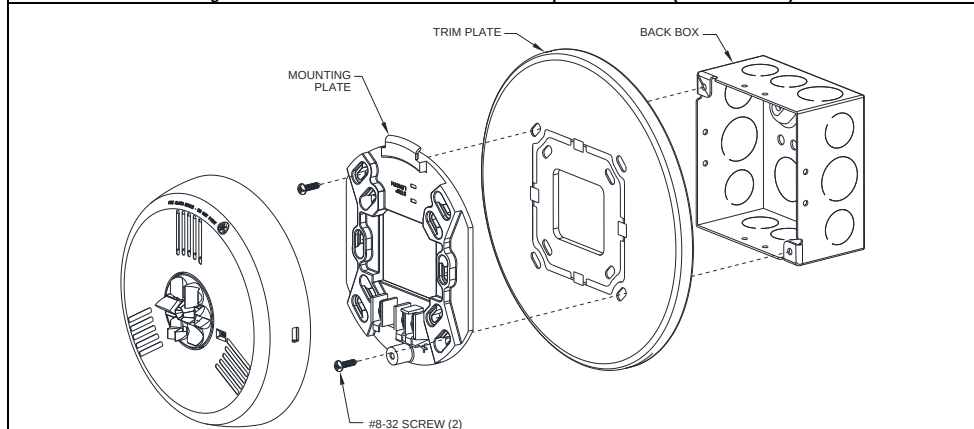


Figure 4A: Eluxa ELTP-UNI (Converted) Trim Plate on 4" Square back Box (ELSPSTC Shown)

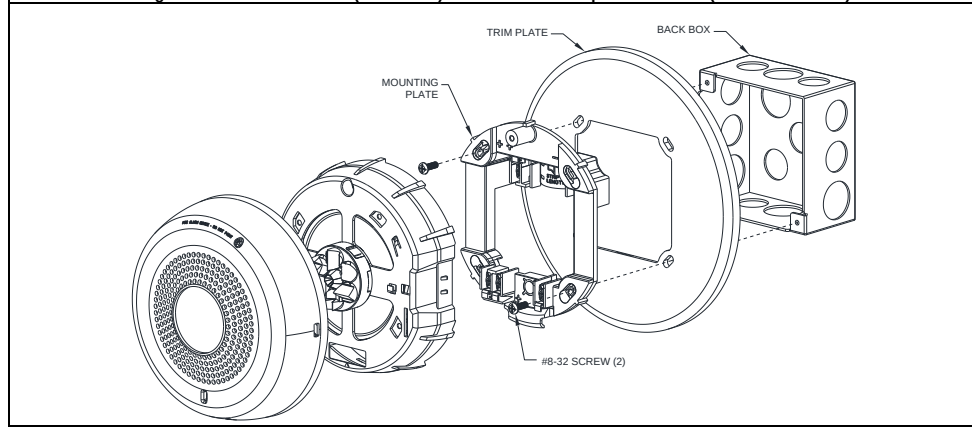


Figure 3B: Eluxa ELTP-UNI Trim Plate on Octal Box

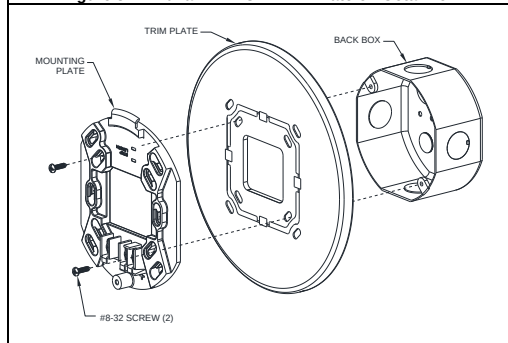


Figure 3C: Eluxa ELTP-UNI on Single Gang Back Box

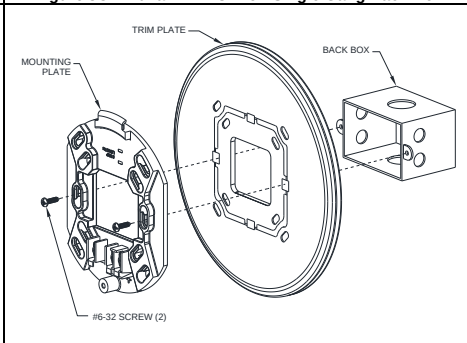


Figure 4B: Eluxa ELTP-UNI Trim Plate - Before


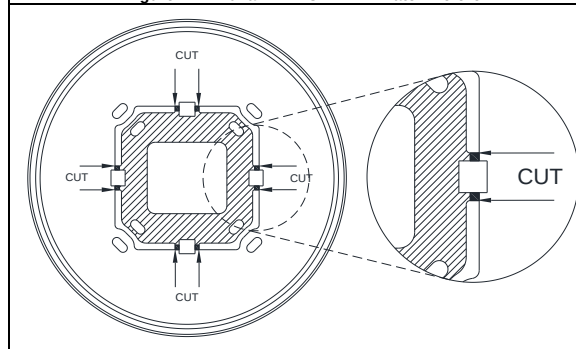


Figure 4C: Eluxa ELTP-UNI Trim Plate - After

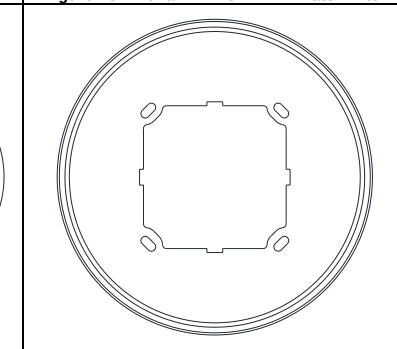

ELUXA ROUND CEILING TRIM PLATE MOUNTING PROCEDURE:

1. Read the installation instructions provided with Eluxa notification appliance before proceeding with the installation.
2. Mounting on 4" Square Back Box (See Figure 3A):
 - a) Place the Eluxa Ceiling Trim Plate over 4" square back box and pull wires through the wire opening.
 - b) Place Eluxa ceiling mounting plate over the Trim Plate and pull wires through the wire opening. Secure with 8-32 screws (supplied).
 - c) Connect field wiring and install appliance per the Eluxa appliance instruction sheet.
3. Mounting on Octal Back Box (See Figure 3B):
 - a) Place the Eluxa Ceiling Trim Plate over octal back box and pull the wires through wire opening.
 - b) Place Eluxa ceiling mounting plate over Eluxa Trim Plate and pull wires through the wire opening. Secure with 8-32 screws (supplied).
 - c) Connect field wiring and install appliance per the Eluxa appliance instruction sheet.
4. Mounting on Single Gang Back Box (See Figure 3C):
 - a) Place the Eluxa Ceiling Trim Plate over single gang back box and pull the wires through wire opening.
 - b) Place Eluxa ceiling mounting plate over Trim Plate and pull wires through the wire opening. Secure with 6-32 screws (supplied).
 - c) Connect field wiring and install appliance per the Eluxa appliance instruction sheet.

ELUXA ELTP-UNI TRIM PLATE MOUNTING PROCEDURE – 4" SQUARE BOX ONLY:

1. Read the installation instructions provided with Eluxa notification appliance before proceeding with the installation.
2. Eluxa Ceiling Trim Plate Conversion to 4" Square Only (See Figure 4B):
 - a) Using diagonal wire cutters, remove the center section (highlighted) by cutting the plastic "tabs" in eight places as shown in Figure 4B.
 - b) Eluxa Ceiling Trim Plate with center section removed is shown in Figure 4C. **Installs on 4" square back box only.**
2. Mounting on 4" Square Back Box (See Figure 4A):
 - a) Place the converted Eluxa Ceiling Trim Plate over 4" square back box and pull wires through the wire opening.
 - b) Place Eluxa ceiling mounting plate over the Trim Plate and pull wires through the wire opening. Secure with 8-32 screws (supplied).
 - c) Connect field wiring and install appliance per the Eluxa appliance instruction sheet.

Wiring method shall be in accordance with:

- 1) In the United States, the National Electrical Code, NFPA 70, and the National Fire Alarm and Signaling Code, NFPA 72.
- 2) In Canada, CSA C22.1, Canadian Electrical Code, Part I, Safety Standard for Electrical Installations, Section 32.

NOTE: Final acceptance is subject to Authorities Having Jurisdiction.

Any material extrapolated from this document or from Cooper Wheelock manuals or other documents describing the product for use in promotional or advertising claims, or for any other use, including description of the product's application, operation, installation, and testing is used at the sole risk of the user and Cooper Wheelock will not have any liability for such use. IN NO CASE WILL SELLER'S LIABILITY EXCEED THE PURCHASE PRICE PAID FOR A PRODUCT.

10/25