PSIREN Wireless Siren Mounting Template

For Wall Outlets <u>With</u> a Center Cover Plate Screw

Screw Hole Tab

"Center Line of Wall Socket"

Align this centerline with Wall Socket

5-1/4"

Magnet Screws (2)
(Use with battery powered units only)

Slide Screw
(Use with battery powered units only)

7/16"

ENSURE THIS BOX IS **1 INCH** X **1 INCH**

Magnet 1-5/8"

Note: The tamper magnet is secured to the wall; it is not installed on the siren.
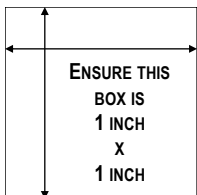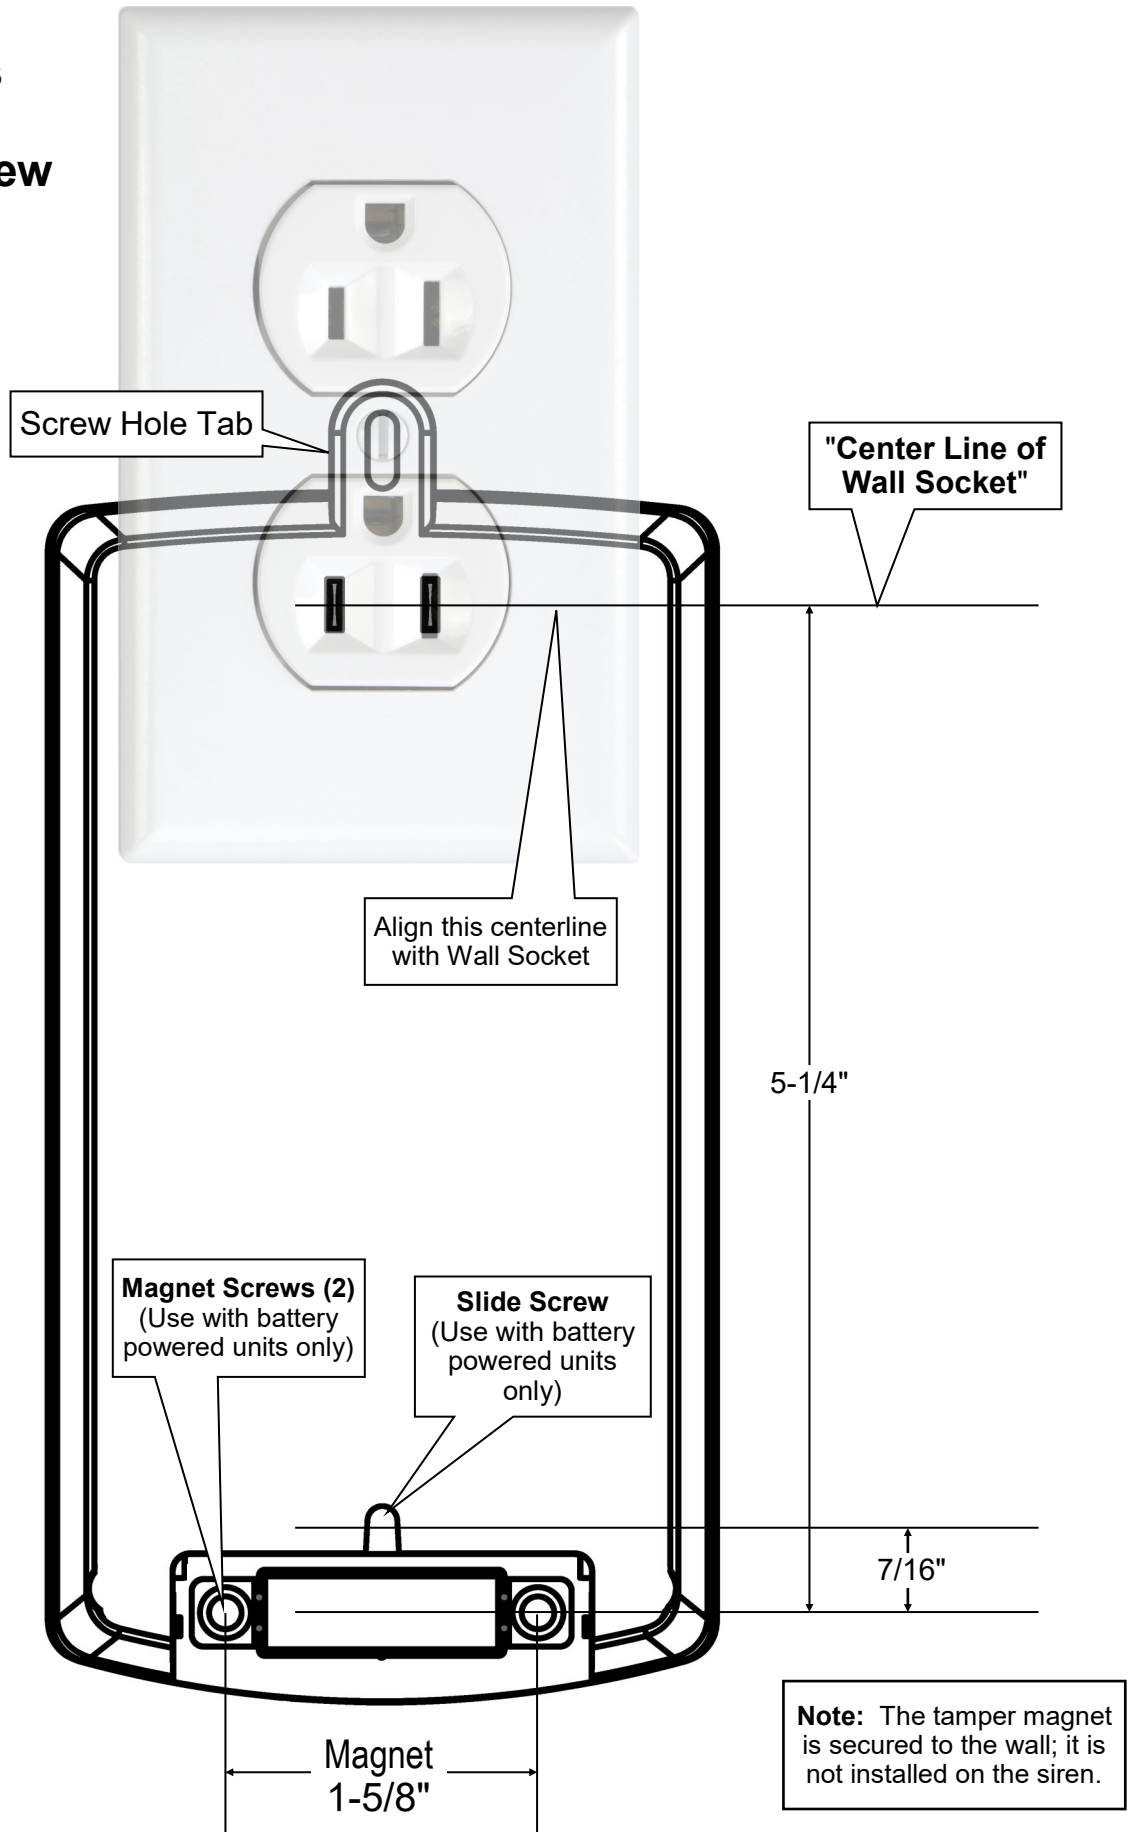
PSIREN Wireless Siren Mounting Template

For Wall Outlets **Without** a Center Cover Plate Screw

This template shows the unit plugged into the bottom receptacle, but either can be used (or invert the unit as required).

Remove the two screws from the siren housing and replace screws with bracket in place, as shown.

Screw Hole Tab

"Center Line of Wall Socket"

Align this centerline with Wall Socket

5-1/4"

Magnet Screws (2)
(Use with battery powered units only)

Slide Screw
(Use with battery powered units only)

7/16"

ENSURE THIS BOX IS 1 INCH X 1 INCH

Magnet 1-5/8"

Note: The tamper magnet is secured to the wall; it is not installed on the siren.