FIBER TRANSITION CASE (FTC2)

Installation Instructions: Gang Box

CONFIGURATIONS

125-1778	FTC2 Standard
125-1828	FTC2 w/ SC/APC fiber adapter
125-1827	FTC2 w/angled shutter SC/APC adapter

STEP 1

Pull Fiber
Through open gang box or mud ring.

STEP 2

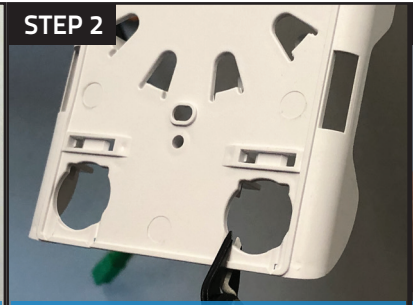

(If using angled adapter)
Remove Cut-away Tab
Using flush cutters on desired port.

STEP 3

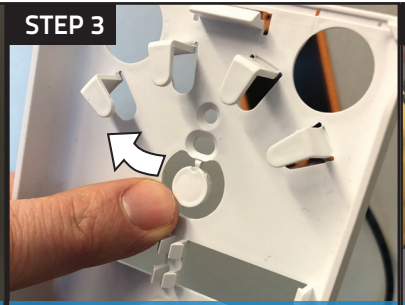

Remove Cap

STEP 4

Secure FTC2 to Gang Box
Using provided screws.

STEP 5

Remove Obstructing Fiber Tabs
As needed.

STEP 6

Insert Angled Adapter

STEP 7

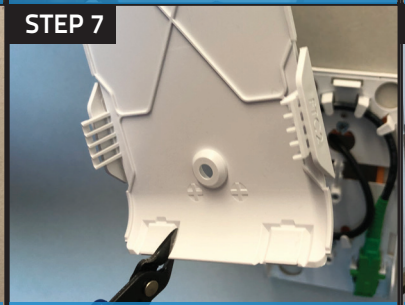

Open Breakout Port
Using flush cutters on desired port.

STEP 8

Install Lid
Secure with screw and cap.

FOR MORE INFORMATION CONTACT:
T 1.604.881.7875 F 1.604.881.7835
www.primex.com

452-2130

primex Fit everything. Together.

FIBER TRANSITION CASE (FTC2)

Installation Instructions: Inside Verge MDE

STEP 1

Install FTC2 in MDE
Using provided screws.

STEP 2

Install Hybrid Splice Adapter Clip
Press into position.

STEP 3

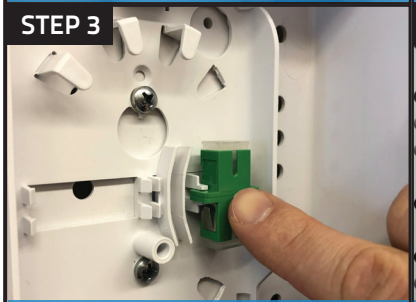

Install Adapter
Remove obstructing fiber tabs as required.

STEP 4

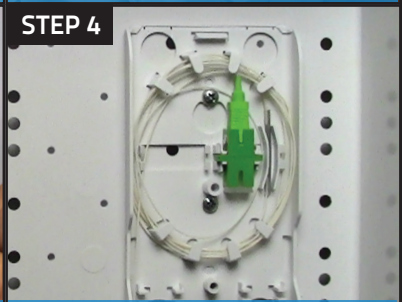

Install Splice Sleeve (if required)
Hybrid splice adapter clip accommodates single fusion, mechanical and ribbon splices.

PRODUCT FEATURES

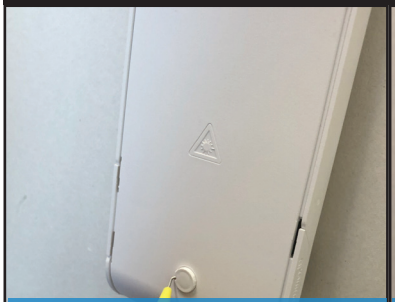

Remove Cap
Using telecom spudger tool.

Removing Lid
Press firmly with thumb and twist.

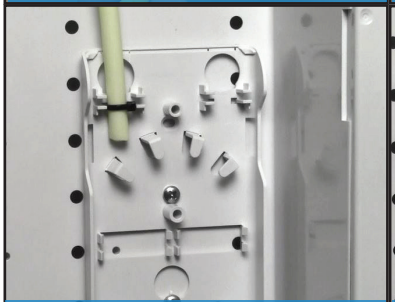

Installing Microduct
Install with ports facing upwards. Secure microduct with cable tie through slots.

Breakout Ports
For microduct and BIF fiber.

FOR MORE INFORMATION CONTACT:
T 1.604.881.7875 F 1.604.881.7835
www.primex.com

452-2130

primex Fit everything. Together.