


EN

USER  
MANUAL

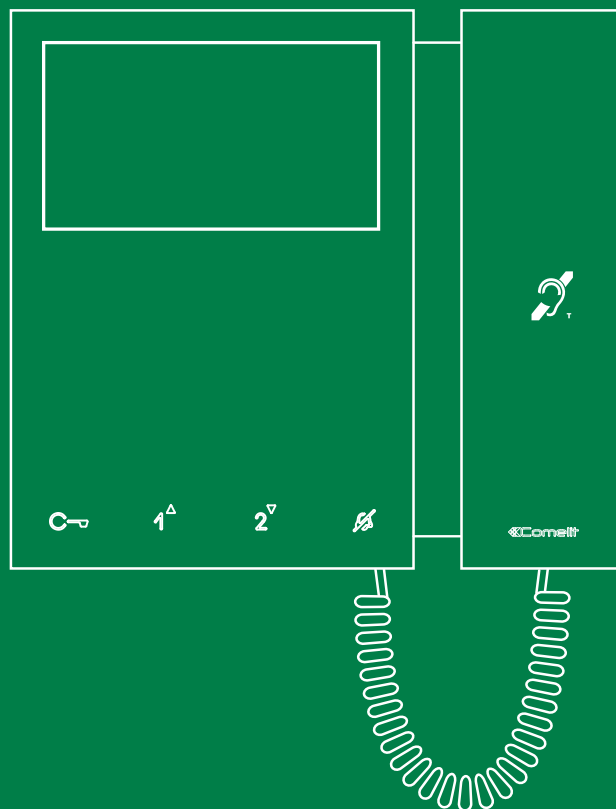

Mini handset ViP monitor  
art. 6702W

 **Comelit**<sup>®</sup>  
Passion. Technology. Design.

# Warning

## Intended use

This Comelit product was designed for use in the creation of audio and video communication systems in residential, commercial or industrial settings and in public buildings or buildings used by the public.

## Installation

All activities connected to the installation of Comelit products must be carried out by qualified technical personnel, with careful observation of the indications provided in the Manuals / Instruction sheets supplied with those products.

## Wires

Cut off the power supply before carrying out any maintenance procedures.

Use wires with a cross-section suited to the distances involved, observing the instructions provided in the system manual.

We advise against running the system wires through the same duct as the power cables (230V or higher).

## Safe usage

To ensure Comelit products are used safely:

- carefully observe the indications provided in the Manuals / Instruction sheets
- make sure the system created using Comelit products has not been tampered with / damaged.

## Maintenance

Comelit products do not require maintenance aside from routine cleaning, which should be carried out in accordance with the indications provided in the Manuals / Instruction sheets.

Any repair work must be carried out

- for the products themselves, exclusively by **Comelit Group S.p.A.**,
- for systems, by qualified technical personnel.

## Disclaimer

**Comelit Group S.p.A.** does not assume any responsibility for

- any usage other than the intended use
- non-observance of the indications and warnings contained in this Manual / Instruction sheet.

**Comelit Group S.p.A.** nonetheless reserves the right to change the information provided in this Manual / Instruction sheet at any time and without prior notice.

# Table of contents

Legend.....	3	Video memory .....	7
Mini 6702W.....	4	Record always .....	7
Key functions.....	4	Messages.....	7
LED signals .....	4	Video memory.....	7
Mini 6702W with accessory art. 6735W.....	5	Call divert.....	7
Key functions.....	5	<b>User setup menu .....</b>	<b>8</b>
LED signals .....	5	Language.....	8
Introduction .....	6	Keypad lock .....	8
Date and time settings.....	6	Information.....	8
<b>This function allows you to set the time and date of the device. ....</b>	<b>6</b>	Backlight adjustment .....	8
<b>Functions available .....</b>	<b>6</b>	Melody settings .....	8
Intercoms .....	6	<b>Installer setup menu .....</b>	<b>9</b>
Cameras.....	6		
Actuators.....	6		
Doors open .....	6		
Answering service setup.....	6		

# Legend

## **LOCK RELEASE key**

Opens the corresponding door lock.

## **ACTUATOR key**

Allows activation of the associated relay.

## **SELF-IGNITION key**

Allows ignition of the external video unit, and therefore viewing of the external image.

## **INTERCOM CALL**

Call from one internal unit to one or more internal units.


## **PRIVACY mode**

The ringtone will be silenced on receipt of a call from the external unit and from the switchboard.

## **DOCTOR function key**

Allows automatic operation of the lockrelease on receipt of a call from an external unit.

# Mini 6702W

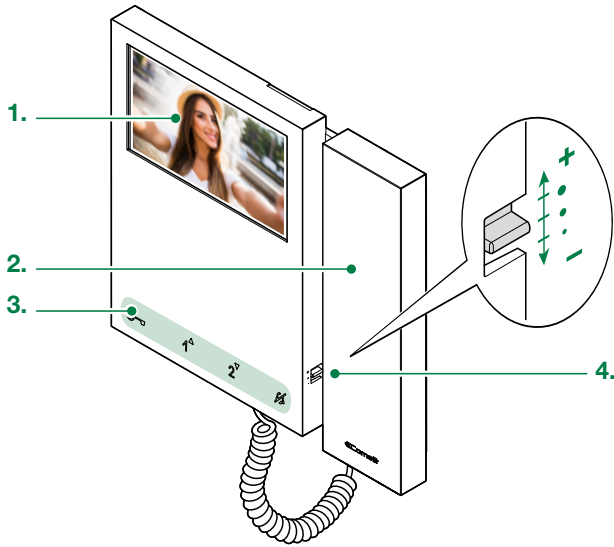

- 1. 4.3" 16:9 LCD display  
Adjustable backlighting \*
- 2. Handset  
Built-in magnetic induction audio amplification
- 3. Keys
- 4. Manual key tone and call audio volume adjustment

## Key functions (default)

### LOCK RELEASE

- ▶ SHORT PRESS: open the door

Programmable key \*

- ACTUATOR
- FUNCTION DISABLED

### 12 PROGRAMMABLE KEYS \*

- ▶ SHORT PRESS: implement the programmed function
- INTERCOM CALL
- SELF-IGNITION
- ALARMS
- LOCK RELEASE
- ACTUATOR
- FUNCTION DISABLED

### ARROW KEYS

- ▶ PRESS AND HOLD during a call: increase / reduce audio volume

### PRIVACY


- ▶ PRESS AND RELEASE: activate / deactivate Privacy function


Programmable key \*

- DOCTOR
- PRIVACY+DOCTOR


- ▶ PRESS AND RELEASE: activate / deactivate Privacy function
- ▶ PRESS AND HOLD: activate / deactivate the Doctor function

## LED signals

-  » FLASHING LED: incoming call
- » 1 FLASH: door open confirmed

-  » STEADY LED: Privacy mode activated
- » 3 FLASHES EVERY 5 SEC.: Doctor mode activated
- » STEADY AND FLASHING LED: Privacy and Doctor mode activated
- » 4 FLASHES: the device called is busy

# Mini 6702W with accessory art. 6735W

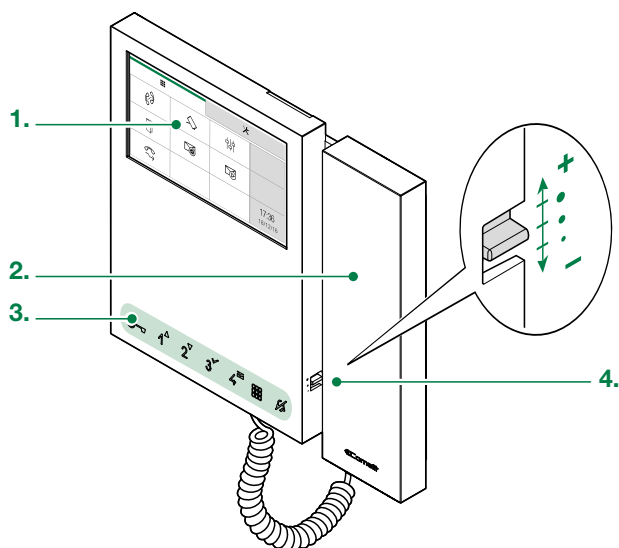

1. 4.3" 16:9 LCD display  
Adjustable backlighting
2. Handset  
Built-in magnetic induction audio amplification
3. Keys
4. Manual key tone and call audio volume adjustment

## Key functions (default)



### MENU

- ▶ PRESS AND RELEASE: turns display on/off
- ▶ PRESS AND HOLD (> 5 sec): access SETUP menu
- ▶ PRESS AND RELEASE during menu navigation: call ESC function / previous window / monitor standby



### LOCK RELEASE

- ▶ SHORT PRESS: open the door

#### Programmable key

- ACTUATOR
- FUNCTION DISABLED

## 1234 PROGRAMMABLE KEYS

- ▶ SHORT PRESS: implement the programmed function

- INTERCOM CALL
- SELF-IGNITION
- ALARMS
- LOCK RELEASE
- ACTUATOR
- FUNCTION DISABLED



### ARROW KEYS

- ▶ PRESS AND HOLD during a call: increase / reduce audio volume
- ▶ DURING MENU NAVIGATION: up / down / right / left



### CONFIRM SELECTION

- ▶ PRESS AND RELEASE: confirm a selection, select / deselect an option
- ▶ PRESS AND HOLD: Save setting



### MESSAGE MENU

- ▶ PRESS AND HOLD (>3 sec): access messages menu



### PRIVACY

- ▶ PRESS AND RELEASE: activate / deactivate Privacy function

#### Programmable key

- DOCTOR
- PRIVACY+DOCTOR

- ▶ PRESS AND RELEASE: activate / deactivate Privacy function
- ▶ PRESS AND HOLD: activate / deactivate the Doctor function

## LED signals



- » FLASHING LED: incoming call
- » 1 FLASH: door open confirmed



- » STEADY LED: *Video memory / Call divert activated*
- » FLASHING LED: signals the presence of a video message not yet viewed in the directory







- » STEADY LED: Privacy mode activated
- » 3 FLASHES EVERY 5 SEC.: Doctor mode activated
- » STEADY AND FLASHING LED: Privacy and Doctor mode activated
- » 4 FLASHES: the device called is busy

## Introduction

The menu icons vary depending on the type of system installed and the functions available.

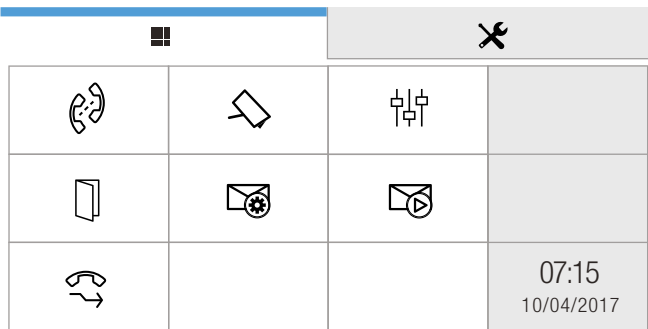- ▶ Press the soft-touch key  to access the display and view the main menu



- ▶ Scroll through the menu using the arrow keys 
- ▶ Confirm the selection by clicking on the tick symbol 
- ▶ Press Exit  to return to previous screen / turn off the display


### Date and time settings

This function allows you to set the time and date of the device.




- ▶ Access the dedicated section

- ▶ To automatically update the date and time via internet, select "Automatic date/time".

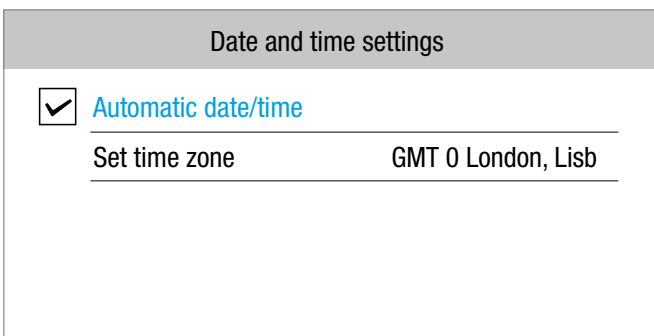

or you can set the date and time manually:

- ▶ Select "Set time"



Set the desired values for day / month / year / hours / minutes.

- ▶ Save the configuration


## Functions available

### Intercoms

This function allows you to call addresses saved in the directory.




- ▶ Access the dedicated section, then select the device you wish to call from the directory

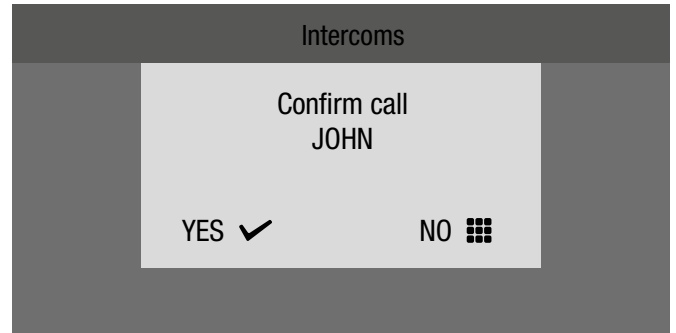

### Cameras


This function allows you to view a directory of cameras and to start live streaming.

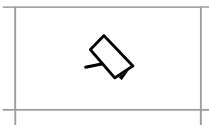

- ▶ Access the dedicated section, then select the camera you wish to interrogate from the directory

### Actuators


This function allows you to activate an actuator by selecting it from the programmed directory.

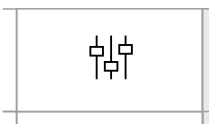

- ▶ Access the dedicated section, then select the command you wish to activate from the directory

### Doors open

This function allows you to view a directory of doors to check their status (open/closed).

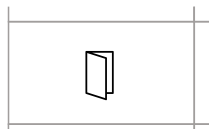


- ▶ Access the dedicated section to view the directory, then select the door to interrogate in order to start live streaming from the camera.

### Answering service setup

This function allows you to manage the parameters for the device's video memory function.



- ▶ Access the dedicated submenu

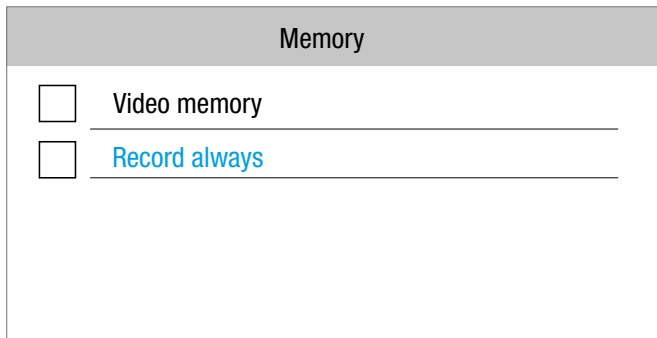

**Video memory**

This function automatically starts audio/video recording in the event of no reply.

- ▶ Tick the box to enable the function
- » The icon in the main menu changes colour
- » The soft-touch key LED illuminates (Steady light)

**Record always**

This function automatically starts audio/video recording on receipt of a call from an external unit.

- ▶ Tick the box to enable the function.





Both functions must be ticked

**Messages**

This function allows you to access the ViP messaging system of the device.



- ▶ LONG PRESS (> 3s) to access the dedicated video memory submenu

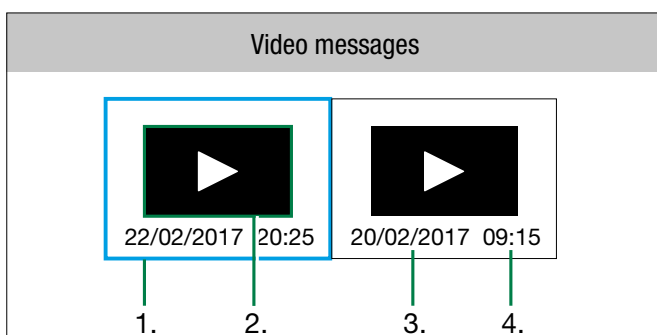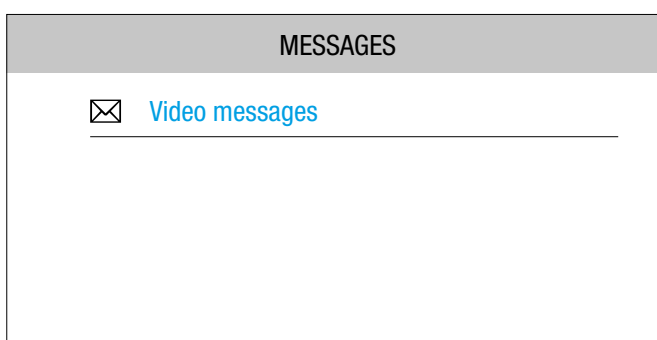

1. Selected video
2. Example of a previously viewed recording
3. Date
4. Time

- ▶ Click on the recording preview to START playback
- ▶ Click to STOP playback
- ▶ Long press to delete the video recording.

**Video memory**

This function allows you to enable/disable the video memory on the device.



- ▶ Scroll through the menu to the icon and press to confirm and enable the function
- » The icon in the main menu changes colour
- » The soft-touch key LED illuminates (Steady light)

**Call divert**

This function allows you to quickly enable/disable the call divert function.




- ▶ Scroll through the menu to the icon and press to confirm and enable the function
- » The icon in the main menu changes colour

## User setup menu




LONG PRESS (> 5s)

- ▶ Select *User setup menu* ✓
- ▶ Select one of the options in the list

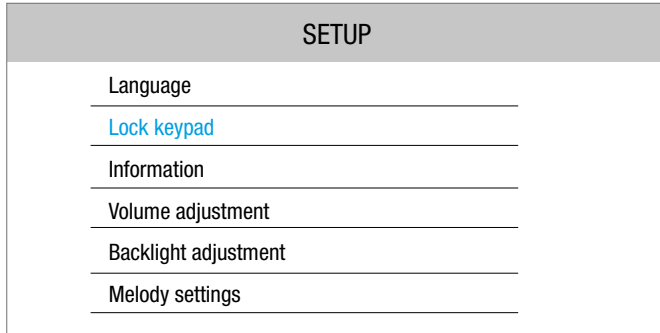

### Language


You can change the interface language.

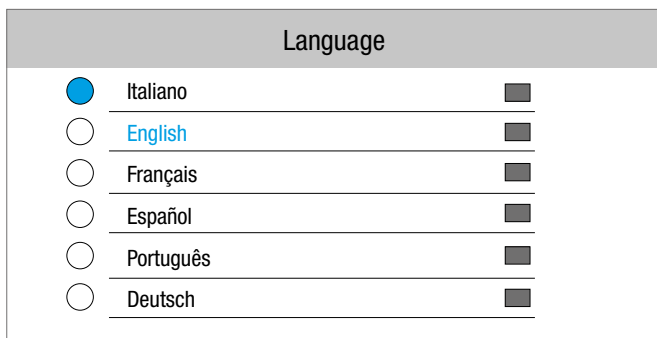

- ▶ Position the cursor on the desired option, then confirm the selection ✓ or exit

### Keypad lock


This function can be used to lock the device touch screen for 60 seconds for cleaning purposes.

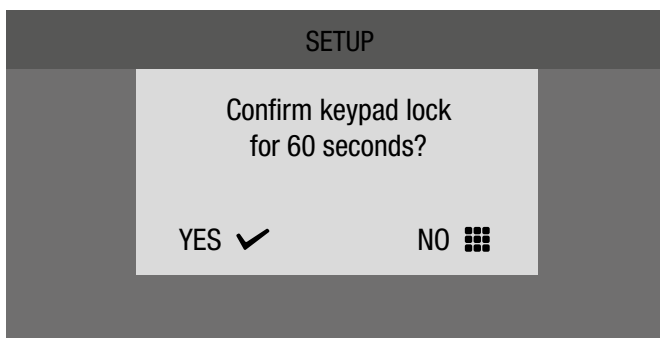

» After 60 seconds, the screen is unlocked automatically

### Information


This menu provides technical information about the device (e.g. type of device, versions, addresses, etc.).

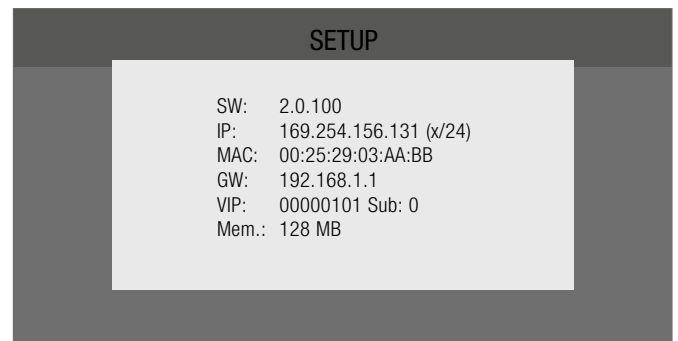

- Press the icon to exit the screen.

### Backlight adjustment


It is possible to increase and reduce the monitor backlighting level.

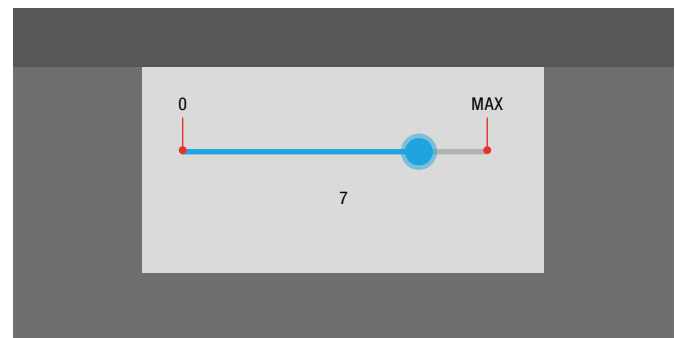

- ▶ Increase/decrease the value using the arrow keys ▲▼
- ▶ Confirm the selection by clicking on the tick symbol ✓
- ▶ Press Exit to return to the previous screen

### Melody settings

From the menu you can choose a melody for each of the device's call functions.

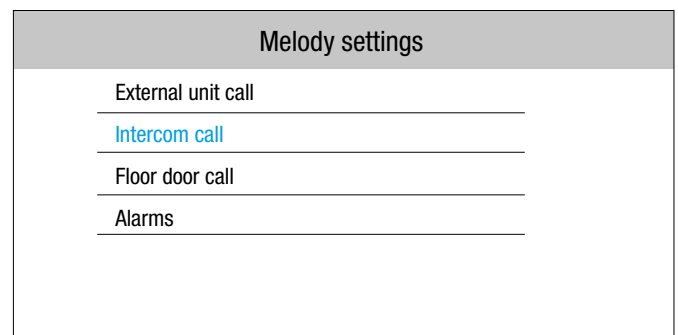

- ▶ Scroll through the options using the arrow keys ▲▼
- ▶ Press the tick symbol ✓ to access the submenu



Melody selection	
<input type="radio"/>	Melody 1
<input checked="" type="radio"/>	Melody 2
<input type="radio"/>	Melody 3
<input type="radio"/>	Melody 4
<input type="radio"/>	Melody 5
<input type="radio"/>	Melody 6

- ▶ Scroll through the options using the arrow keys ▲▼ to hear a preview of the melody and confirm the selection ✓

## Installer setup menu

Contact your regular installer to program and configure the internal unit and the system parameters.

LONG PRESS (> 5s)

- ▶ Select *Installer setup menu* and then press ✓
- ▶ Type in the password (default = 1111) and confirm ✓



## NAVIGATION TREE

- Directories .....
  - Intercoms .....
  - Actuators.....
  - Doors .....
  - Cameras.....
- Key programming.....
  - Lock-release .....
  - Actuator .....
  - Function disabled .....
  - 1234 .....
    - Intercom.....
    - Self-ignition.....
    - Alarms.....
    - Lock-release .....
    - Actuator .....
    - Function disabled .....
  - Privacy .....
    - Doctor.....
    - Privacy Doctor .....
    - Function disabled .....
- Total reset .....
- Addresses .....
  - ViP ADDRESS PROGRAMMING .....
- Set ringtone repetition.....
- Set call times .....
  - Awaiting reply .....
  - Talk .....
  - Intercom conversation.....
  - Reset wait time.....
- Call divert.....
  - Activate timed divert.....
- Alarms .....
  - Alarm .....
  - Panic.....
  - Fire.....
  - Priority call 4.....

CERTIFIED MANAGEMENT SYSTEMS



www.comelitgroup.com

Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy



1ª edizione 09/2018  
cod. 2G40001898