

# ( (

# Access & Power Integration

# T1CVK3F4

## 4 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove1 enclosure with TC1 Altronix/CDVI backplane
- One (1) eFlow6NB Power Supply/Charger
- One (1) ACM4 Fused Access Power Controller

# T2CVK7F10

### 10 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove2 enclosure with TCV2 Altronix/CDVI backplane
- One (1) eFlow104NB Power Supply/Charger
- One (1) ACM8 Fused Access Control Module
- One (1) ACM4 Fused Access Control Module
- One (1) PD8UL Fused Power Distribution Module

# T2CVK33F10

## 10 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with TCV2 Altronix/CDVI backplane
- Two (2) eFlow6NB Power Supply/Chargers
- Two (2) MOM5 PTC Power Distribution Modules with Fire Alarm Interface

# T2CVK33F10Q

# 10 Door Kit with PTC Outputs

Fully assembled kit includes:

- Trove2 enclosure with TCV2 Altronix/CDVI backplane
- One (1) LINQ2 Network Communication Module
- Two (2) eFlow6NB Power Supply/Chargers
- Two (2) MOM5 PTC Power Distribution Modules with Fire Alarm Interface

# T3CVK77F20

### 20 Door Kit with Fused Outputs

Fully assembled kit includes:

- Trove3 enclosure with TCV3 Altronix/CDVI backplane
- Two (2) eFlow104NB Power Supply/Chargers
- Two (2) ACM8 Fused Access Control Modules
- One (1) ACM4 Fused Access Control Module
- One (1) PD8UL Fused Power Distribution Module
- One (1) RSB2 Rocker Switch Bracket with Two (2) Rocker Switches (Not evaluated by UL)

All components of these Trove kits are UL Listed sub-assemblies.

Please refer to the included corresponding Sub-Assembly Installation Guides for further information.

# Installation Guide



All registered trademarks are property of their respective owners.

Rev. TCVK_042619 Installing Company:	_ Service Rep. Name:	
Address:		Phone #:

#### Overview:

Altronix Trove CDVI kits are pre-assembled and consist of Trove enclosures/backplanes with factory installed Altronix power supply/chargers and sub-assemblies. These kits also accommodate various combinations of CDVI Atrium A22K/A22NB/ADH10 boards for up to twenty (20) doors in a single enclosure.


#### **Configuration Chart:**

Altronix Model Number	Networkable	Power Supply Board Input Fuse Rating	Power Supply Board Battery Fuse Rating	120VAC 60Hz Input Current (A)	Maximum Supply Current for Main and Aux. Outputs on Power Supply board, MOM5 power distribution module or ACM4/ACM8 Access Power Controllers' outputs	Output	Output Range (VDC)	Fail-Safe/Fail-Secure or Dry Form "C" Outputs	Additional Fuse or PTC Protected Outputs	ACM4/ACM8 Board Input Fuse Rating	ACM4 Board Output Fuse Rating	ACM8 Board Output Fuse Rating	PD8UL Board Output Fuse Rating	MOM5 Output PTC Rating
T1CVK3F4	_	5A/250V	15A/ 32V	3.5	24VDC @ 5.7A	20.17- 26.4	20.28- 26.4	4	_	10A/ 250V	3A/ 32V	_	_	-
T2CVK7F10	_	6.3A/250V	15A/ 32V	4.5	24VDC @ 9.4A	20.17- 26.4	20.28- 26.4	12	8	10A/ 250V	2.5A/ 250V	2.5A/ 250V	3.5A/ 250V	_
T2CVK33F10	_	5A/250V	15A/ 32V	7.0	24VDC @ 5.9A + 24VDC @ 5.9A	20.17- 26.4	20.28- 26.4	_	10	_	_	_	_	2A/ 250V
T2CVK33F10Q	<b>✓</b>	5A/250V	15A/ 32V	7.0	24VDC @ 5.9A + 24VDC @ 5.9A	20.17- 26.4	20.28- 26.4	_	10	_	_	_	_	2A/ 250V
T3CVK77F20	_	6.3A/ 250V	15A/ 32V	9.0	24VDC @ 9.4A + 24VDC @ 9.7A	20.17- 26.4 9.7- 13.2	20.28- 26.4 10.03- 13.2	20	8	10A/ 250V	3A/ 32V	2.5A/ 250V	3.5A/ 250V	_

#### Installation Instructions:

Wiring methods shall be in accordance with the National Electrical Code/NFPA 70/ANSI, and with all local codes and authorities having jurisdiction. Product is intended for indoor use only.

- 1. Remove backplane from enclosure. Do not discard hardware.
  - If your application requires a raised backplane, re-mount it using metal spacers and screws (provided).
- 2. Mark and predrill holes in the wall to line up with the top three keyholes in the enclosure. Install two/three upper fasteners and screws in the wall with the screw heads protruding. Place the enclosure's upper keyholes over the two/three upper screws; level and secure. Mark the position of the lower two/three holes. Remove the enclosure. Drill the lower holes and install the fasteners. Place the enclosure's upper keyholes over the upper screws. Install the lower screws and make sure to tighten all screws.
- 3. Mount included UL Listed tamper switch(es) (Altronix Model TS112 or equivalent) in desired location, opposite hinge. Slide the tamper switch bracket onto the edge of the enclosure approximately 2" from the right side (*Fig. 1, pg. 2*). Connect tamper switch wiring to the Access Control Panel input or the appropriate UL Listed reporting device. To activate alarm signal open the door of the enclosure.
- 4. Mount CDVI A22K/A22NB/ADH10 boards to backplane, refer to pages 3-4.
- 5. Refer to the *eFlow Power Supply/Charger Installation Guide* (eFlow6NB, eFlow102NB, eFlow104NB) and corresponding *Sub-Assembly Installation Guide* (LINQ2, ACM4, ACM8, PD8UL, MOM5) for further installation instructions.

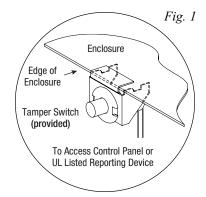

- 2 - Trove CDVI Kits

#### T1CVK3F4: Configuration of CDVI A22K/A22NB/ADH10 Boards


- 1. Fasten spacers (supplied with A22K/A22NB/ADH10) to CDVI A22K/A22NB/ADH10 board (Fig. 2b, pg. 3).
- 2. Mount CDVI A22K/A22NB/ADH10 boards into the correct positions (*Fig. 2, pg. 3*) by postioning spacers over appropriate holes on the backplane and depressing down on board to secure spacer to the backplane (*Fig. 2a, 2b, pg. 3*).

  Note: CDVI A22K/A22NB/ADH10 boards have one (1) RJ45 jack each.

Please make sure that they are mounted correctly, as shown in Fig. 2 below.

3. Fasten backplane to Trove2 enclosure utilizing pan head screws (provided).

Fig. 2

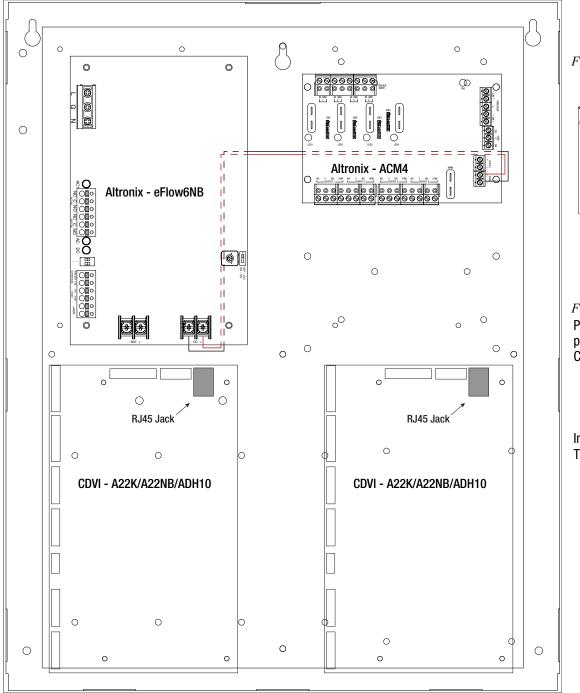

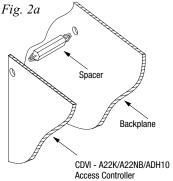


Fig. 2b

Plastic Spacer
pre-mounted into
CDVI Atrium modules

Insert into
TC1 backplane

#### T2CVK7F10: Configuration of CDVI A22K/A22NB/ADH10 Boards


- 1. Fasten spacers (supplied with A22K/A22NB/ADH10) to CDVI A22K/A22NB/ADH10 board (Fig. 3b, pg. 4).
- 2. Mount CDVI A22K/A22NB/ADH10 boards into the correct positions (*Fig. 3, pg. 4*) by postioning spacers over appropriate holes on the backplane and depressing down on board to secure spacer to the backplane (*Fig. 3a, 3b, pg. 4*).

  Note: CDVI A22K/A22NB/ADH10 boards have one (1) RJ45 jack each.

Please make sure that they are mounted correctly, as shown in Fig. 3 below.

3. Fasten backplane to Trove2 enclosure utilizing pan head screws (provided).

Fig. 3

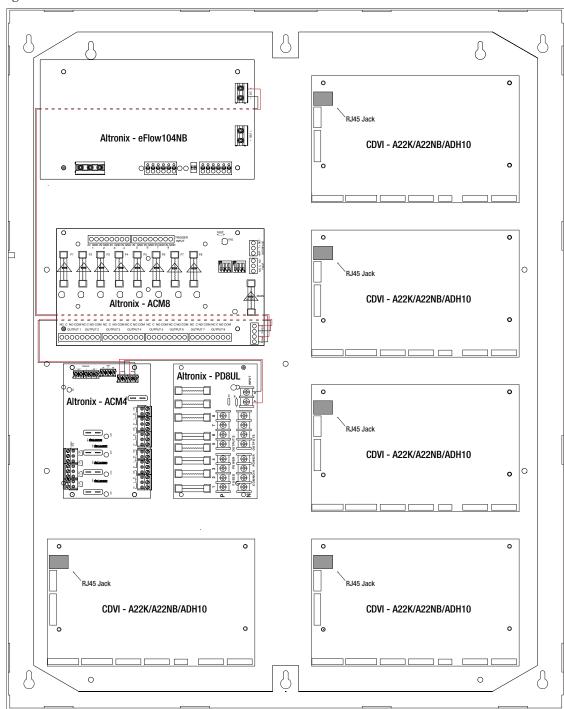

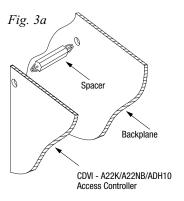


Fig. 3b

Plastic Spacer
pre-mounted into
CDVI Atrium modules

Insert into
TCV2 backplane

- 4 - Trove CDVI Kits

#### T2CVK33F10 and T2CVK33F10Q: Configuration of CDVI A22K/A22NB/ADH10 Boards


- 1. Fasten spacers (supplied with A22K/A22NB/ADH10) to CDVI A22K/A22NB/ADH10 board (Fig. 4b, pg. 5).
- 2. Mount CDVI A22K/A22NB/ADH10 boards into the correct positions (*Fig. 4, pg. 5*) by postioning spacers over appropriate holes on the backplane and depressing down on board to secure spacer to the backplane (*Fig. 4a, 4b, pg. 5*).

  Note: CDVI A22K/A22NB/ADH10 boards have one (1) RJ45 jack each.

Please make sure that they are mounted correctly, as shown in Fig. 4 below.

3. Fasten backplane to Trove2 enclosure utilizing pan head screws (provided).

Fig. 4

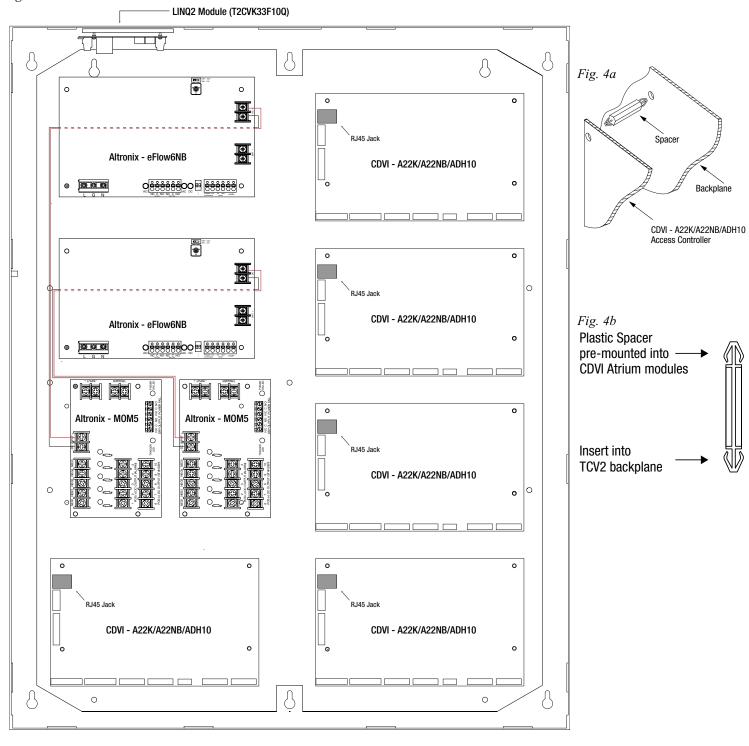

#### T3CVK77F20: Configuration of CDVI A22K/A22NB/ADH10 Boards


- 1. Fasten spacers (supplied with A22K/A22NB/ADH10) to CDVI A22K/A22NB/ADH10 board (Fig. 5b, pg. 6).
- 2. Mount CDVI A22K/A22NB/ADH10 boards into the correct positions (*Fig. 5, pg. 6*) by postioning spacers over appropriate holes on the backplane and depressing down on board to secure spacer to the backplane (*Fig. 5a, 5b, pg. 6*).

  Note: CDVI A22K/A22NB/ADH10 boards have one (1) RJ45 jack each.

Please make sure that they are mounted correctly, as shown in Fig. 5 below.

3. Fasten backplane to Trove3 enclosure utilizing pan head screws (provided).


Fig. 3

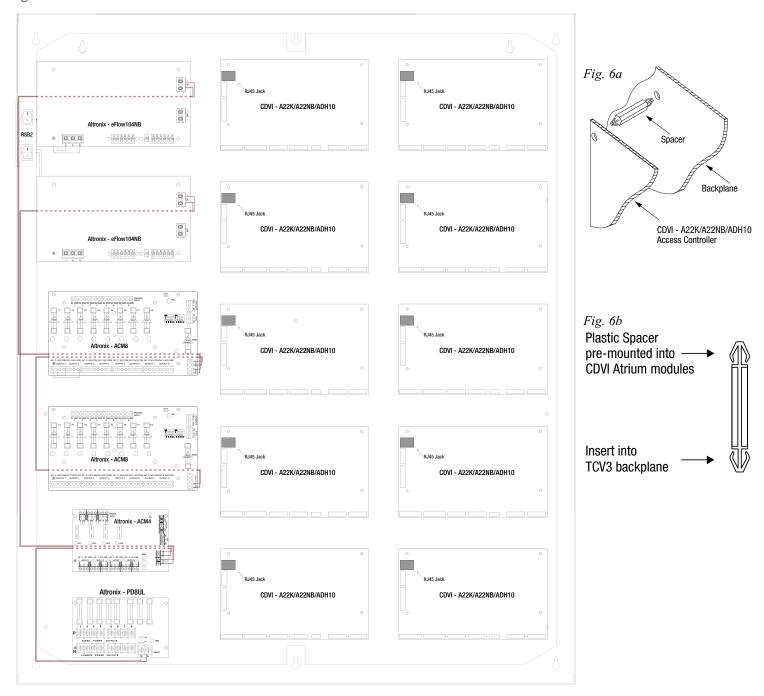

- 6 - Trove CDVI Kits



#### eFlow Power Supply/Chargers can be Controlled and Monitored while Reporting Power/Diagnostics from Anywhere over the Network...

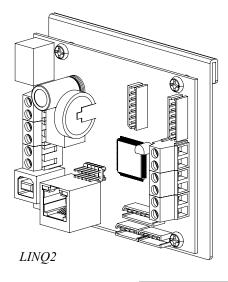

# $\Box$


#### LINQ2 - Network Communication Module

LINQ2 provides remote IP access to real-time data from eFlow power supply/chargers to help keep systems up and running at optimal levels. It facilitates fast and easy installation and set-up, minimizes system downtime, and eliminates unnecessary service calls, which helps reduce Total Cost of Ownership (TCO) - as well as creating a new source of Recurring Monthly Revenue (RMR).

#### Features:

- UL Listed in the U.S. and Canada.
- Local or remote control of up to (2) two Altronix eFlow power output(s) via LAN and/or WAN.
- Monitor real time diagnostics: DC output voltage, output current, AC & battery status/service, input trigger state change, output state change and unit temperature.
- Access control and user management: Restrict read/write, Restrict users to specific resources
- Two (2) integral network controlled Form "C" Relays.
- Three (3) programmable input triggers: Control relays and power supplies via external hardware sources.
- Email and Windows Dashboard notifications
- Event log tracks history.
- Secure Socket Layer (SSL).
- Programmable via USB or web browser includes operating software and 6 ft. USB cable.

#### LINQ2 Mounts Inside any Trove Enclosure

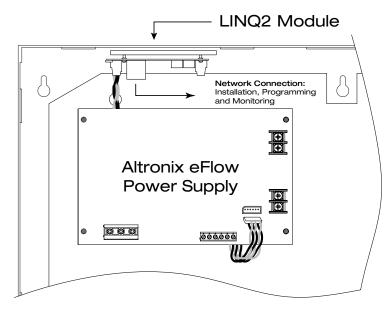

Trove CDVI Kits

#### Notes:


- 8 -

#### Notes:

- 9 - Trove CDVI Kits

#### T1CVK3F4 (Trove1) Enclosure Dimensions (H x W x D approximate):


18" x 14.5" x 4.625" (457mm x 368mm x 118mm)

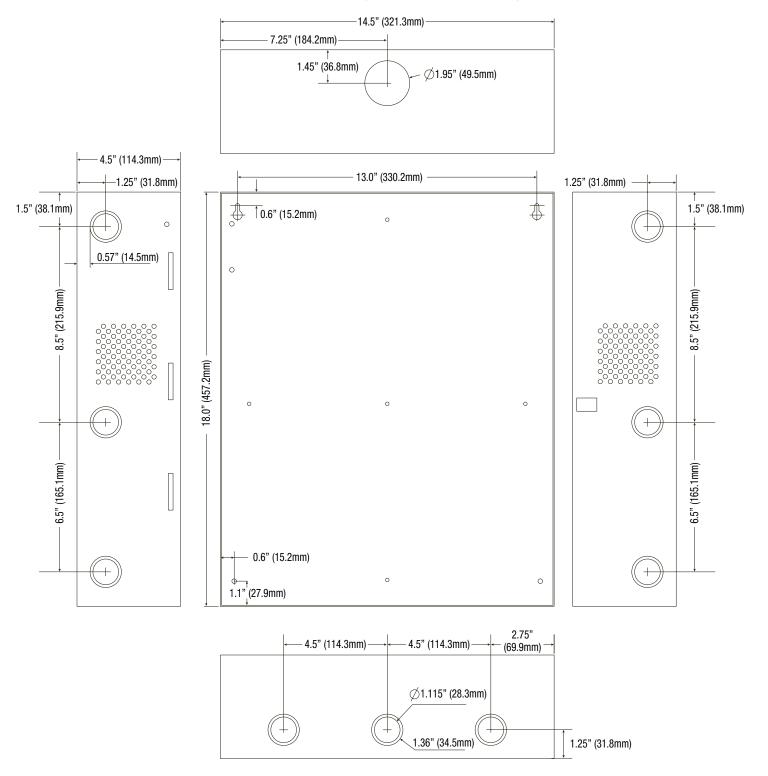

- 10 - Trove CDVI Kits

#### T2CVK7F10 and T2CVK33F10 (Trove2) Enclosure Dimensions (H x W x D approximate):

27.25" x 21.5" x 6.5" (692.2mm x 552.5mm x 165.1mm)

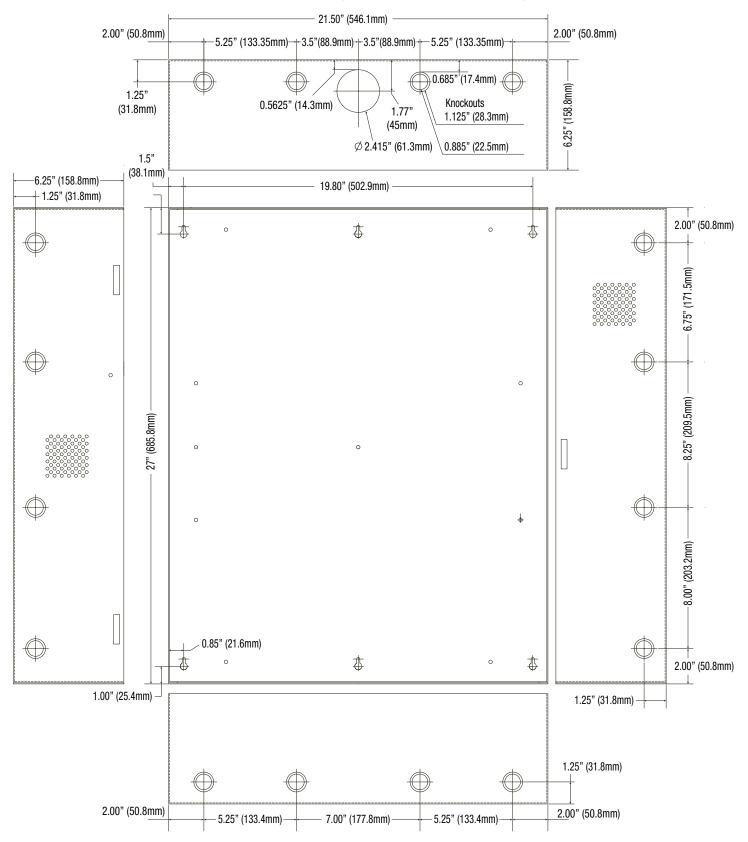

#### T3CVK77F20 (Trove3) Enclosure Dimensions (H x W x D approximate):

36.12" x 30.125" x 7.06" (917.5mm x 768.1mm x 179.3mm)

