

# ***R615DCUL Series Rack Mount UL Listed DC CCTV Power Supplies***

## ***Installation Guide***

### ***Models Include:***

#### ***R615DC8UL***

- 6-15VDC @ 4A.
- Eight (8) Fuse Protected Outputs.

#### ***R615DC416UL***

- 6-15VDC @ 4A.
- Sixteen (16) Fuse Protected Outputs.

#### ***R615DC616UL***

- 6-15VDC @ 6A.
- Sixteen (16) Fuse Protected Outputs.

#### ***R615DC8ULCB***

- 6-15VDC @ 4A.
- Eight (8) PTC Protected Outputs.

#### ***R615DC416ULCB***

- 6-15VDC @ 4A.
- Sixteen (16) PTC Protected Outputs.

#### ***R615DC616ULCB***

- 6-15VDC @ 6A.
- Sixteen (16) PTC Protected Outputs.



Rev. 050106



More than just power.™

## Overview:

Altronix R615DCUL Series Rack Mount CCTV Power Supplies provide 6-15VDC distributed via eight (8) or sixteen (16) fuse or PTC protected outputs for powering CCTV cameras, heaters, and other video accessories.

### R615DCUL Rack Mount Configuration Reference Chart:

Altronix Model Number	Total Output Current (Power)	Output Voltage	Number of Outputs	Class 2 Rated Power-Limited Outputs	PTC Protected Outputs (auto-resettable)	Fuse Protected Outputs	Output Current (max per output)	115VAC 50/60Hz Input Current
R615DC8UL	4A	6-15VDC	8	✓	–	✓	3.5A	0.9A
R615DC8ULCB	4A	6-15VDC	8	✓	✓	–	2.5A	0.9A
R615DC416UL	4A	6-15VDC	16	✓	–	✓	3.5A	0.9A
R615DC416ULCB	4A	6-15VDC	16	✓	✓	–	2.5A	0.9A
R615DC616UL	6A	6-15VDC	16	–	–	✓	3.5A	1.5A
R615DC616ULCB	6A	6-15VDC	16	✓	✓	–	2.5A	1.5A

## Specifications:

### Agency Listings:

- **UL 2044** Commercial CCTV Equipment.
- **CSA Standard C22.2 No.1-98** Audio, Video and Similar Equipment.
- **CE** European Conformity.

### Input:

- 115VAC, 50/60Hz.

### Output:

- Eight (8) or sixteen (16) fuse or PTC protected outputs
- 6-15VDC output.
- Outputs are rated @ 3.5A (fused) or 2.5A (PTC).
- Filtered and electronically regulated outputs.
- Short circuit and thermal overload protection.

### Features:

- Individual power LED indicators.
- Illuminated master power disconnect circuit breaker with manual reset.
- Removable terminal blocks with locking screw flange.
- Removable faceplate and sliding rear section for easy access.

### Rack Dimensions:

- 2U rack mount chassis for use in standard EIA 19" rack.
- Rack dimensions (H x W x D approx.): 3.26" x 19.125" x 8.5" (83mm x 486mm x 216mm).

## Installation Instructions:


1. Unit is factory set at 12VDC. To adjust the output voltage remove the top cover to access trimpot on the power supply board (*Fig. 1b, pg. 3*).
2. Mount unit in the desired rack location (Space unit at least 3" from any video monitors).
3. Set power switch on the back of the unit to the OFF position (*Fig. 1e, pg. 3*).
4. Plug the power cord into a grounded 115VAC 50/60 Hz receptacle (*Fig. 1d, pg. 3*).
5. Set power switch to the ON (RESET) position and measure output voltage before connecting devices (*Fig. 1e, pg. 3*). This helps avoiding potential damage.  
**CAUTION: Determine the maximum operating voltage of the equipment being powered before adjusting the output voltage.**
6. Set power switch on the back of the unit to the OFF position (*Fig. 1e, pg. 3*).
7. Connect devices to the removable terminal blocks marked [1P & 1N] through [8P & 8N] or [1P & 1N] through [16P & 16N], where applicable (*Fig. 1c, pg. 3*).  
 When wiring is completed on the terminal blocks, they can be locked down by tightening screw flanges. All terminals with common suffix (P) "1P, 2P..." are the same polarity (positive). All terminals with common suffix (N) "1N, 2N..." are the same polarity (negative).
8. Upon completion of the wiring, set power switch on the back of the unit to the ON (RESET) position (*Fig. 1e, pg. 3*).
9. Green power LEDs on faceplate will illuminate when DC output power is present. When an output is in a trouble condition (blown fuse or tripped PTC), the corresponding LED will not be illuminated (*Fig. 1, pg. 3*).
  - a. Blown fuse (R615DC416UL, R615DC616UL, and R615DC8UL) - Set power switch on the back of unit to the OFF position (*Fig. 1e, pg. 3*). Remove front faceplate to access fuses. Replace with fuses rated @ 3.5A/250VA (Altronix model # Fuse1).
  - b. Tripped PTC (R615DC416ULCB, R615DC616ULCB, and R615DC8ULCB) - To reset PTC, set power switch on the back of the unit to the OFF position (remove overloaded circuit condition prior to reset). After approximately 30 secs. set power switch to the ON (RESET) position (*Fig. 1e, pg. 3*).

10. Power switch with built-in circuit breaker:  
 OFF position - Switch not illuminated. Outputs not powered.  
 ON (RESET) position - Switch illuminated. Outputs powered.  
 Circuit breaker tripped - Switch not illuminated. Power LEDs on faceplate are not illuminated.  
 Outputs not powered. To reset circuit breaker set power switch to the ON (RESET) position (Fig. 1e, pg. 3).

**WARNING: To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to the National Electrical Code and all local codes.**

**CAUTION: Equipment to be installed / serviced by authorized / trained personnel only. Shut branch circuit power before installing / servicing equipment.**

Fig. 1

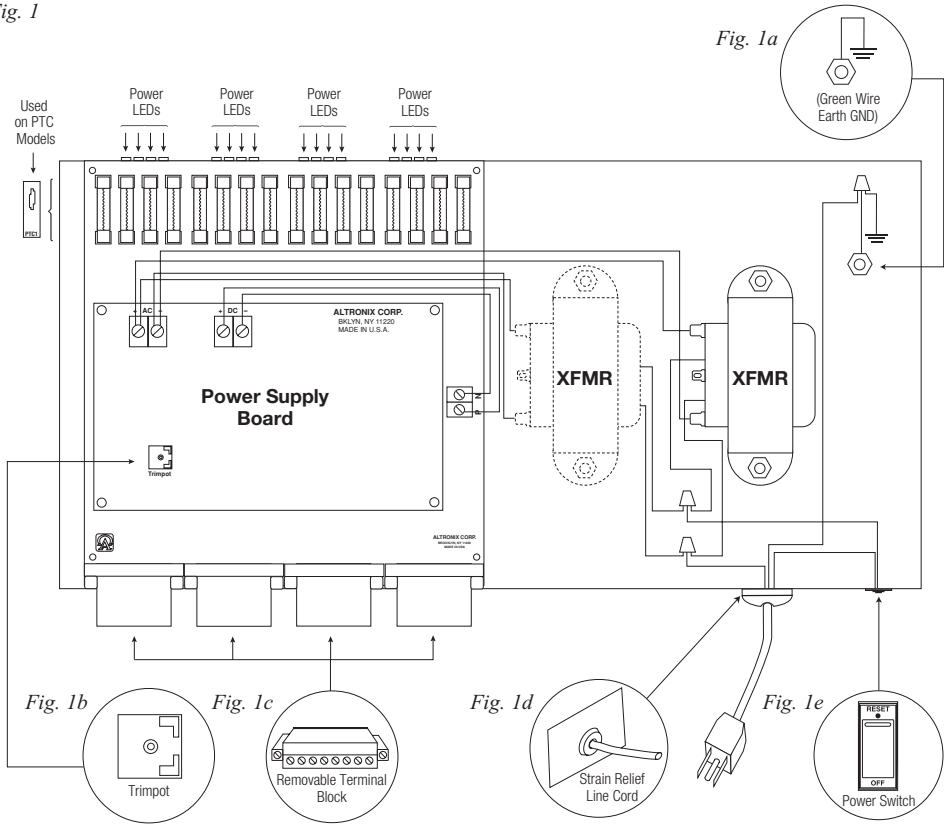

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of an insulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute an electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**




**CAUTION:** To reduce the risk of electric shock do not open enclosure. There are no user serviceable parts inside. Refer servicing to qualified service personnel.


# Enclosure Dimensions (H x W x D approximate):

3.26" x 19.125" x 8.5" (83mm x 486mm x 216mm)

## View from back

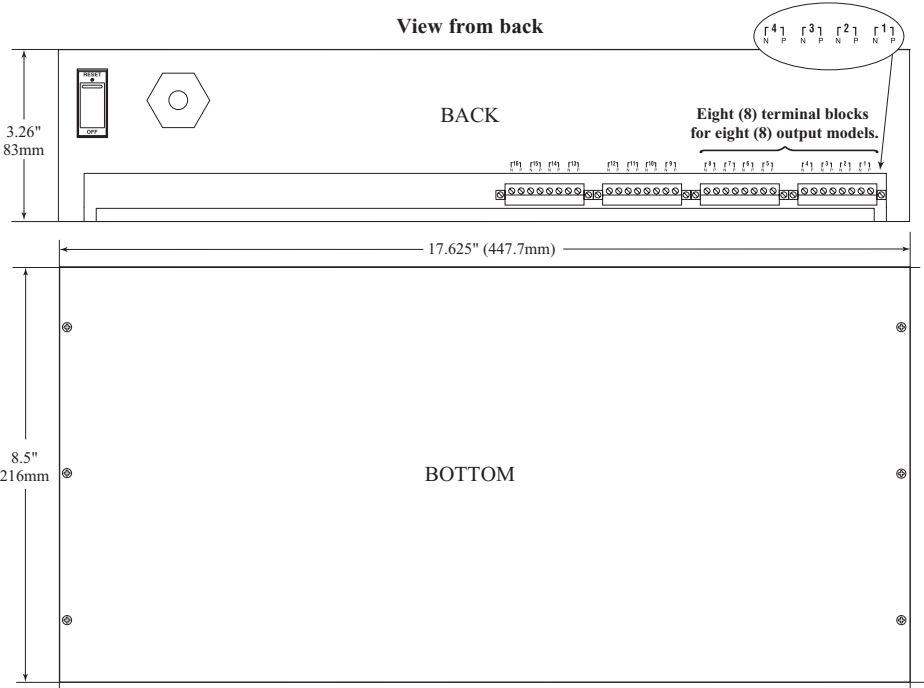

## View from front

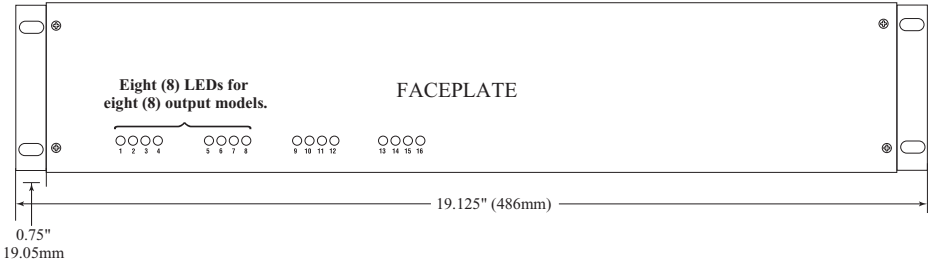

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056  
website: [www.altronix.com](http://www.altronix.com) | e-mail: [info@altronix.com](mailto:info@altronix.com) | Lifetime Warranty | Made in U.S.A.

HIR615DCUL Series

E22R