



**Overview:**

Models PT724A/DPT724A/PT724AE are extremely versatile 24 Hour 365 Day Event Timers designed to support a wide range of applications. Such applications include: Home and Building Automation, Security, Access Control, Lighting Control, Etc. PT724A/DPT724A/PT724AE are equipped with an independently controlled form “C” relay contact that provides many latching and/or momentary operations during a program schedule of your choice. The EE Prom memory allows for programming of unit prior to/or during field installation. Events may be set for single or multiple operations on a daily and/or weekly schedule. The block programming feature enables repeating an event on any combination of consecutive days. PT724A/DPT724A/PT724AE will compensate for daylight savings time if desired. Individually selected holiday exceptions can be programmed to over-ride regularly scheduled events.

**Specifications:**

**Input:**

- 12 to 24 VAC or VDC operation.

**Relay:**

- Form “C” relay contacts are rated 10A @ 120VAC/28VDC.
- Standby current: 10mA (relay off) 50mA (relay on).

**Features:**

- EE Prom memory protects against loss of programming due to power failure.
- Accurate crystal controlled clock.
- Momentary and/or Latching Events.
- 50 individually programmed daily/weekly events.
- Block programming capacity can accommodate a total of 350 events per week.
- 10 programmable Holiday dates.
- “First man in” option.
- Standard or Daylight Savings Time settings.
- Automatic compensation for leap year.

**Visual Indicators:**

- Alphanumeric LCD display simplifies programming.

**Battery Backup:**

- Built-in charger for 12VDC sealed lead acid or gel type batteries (Max charge current 100mA).
- Optional lithium battery backup maintains clock. Order Altronix part # LB2032.

**Mechanical:**

- **PT724A** - Timer module. Board Dimensions (approx.): 3” x 5.25” x 1” (76.2mm x 133.35mm x 25.4mm).
- **DPT724A** - Timer module equipped with snap track for DIN rail mount capability.
- **PT724AE** - Timer module in enclosure. Enclosure Dimensions (H x W x D approx.): 8.5” x 7.5” x 3.5” (215.9mm x 190.5mm x 88.9mm).

**Installation Instructions:**

1. Mount PT724A/PT724AE/DPT724A in desired location.

**Carefully Review:**

**Basic Operation** (pg. 2)

**Terminal Identification Table** (pg. 2)

**Push Button Layout and Description** (pg. 3)

**Programming Instructions** (pgs. 4-7)

2. Connect 12 to 24 volts AC or DC to terminals marked [+ DC - / ~ AC ~]. (when using DC carefully observe polarity).
3. Connect 12VDC battery (optional) to terminals marked [+ BAT - / 12VDC].
4. Insert lithium battery (optional/not included. Order part LB2032) in battery holder (Fig. 1, pg. 4) with the + positive side facing up.
5. Connect devices to be controlled to dry outputs marked [NO, C, NC].

**Note:** It is important to connect the positive (+) and negative (-) terminals of the device. Connect diode as close to the device as possible with the banded side facing the positive (+) terminal. This will reduce the possibility of interference.

6. Program clock and desired event schedule (see programming instructions pg. 4-6).

### **Basic Operation:**

PT724A/PT724AE/DPT724A controls an independently operated dry form “C” relay output. Relay can be programmed to: turn on (latch), turn off (release latch) or pulse (momentary toggle) at a specified time and day (this is referred to as an event). Events are programmed via the push buttons and LCD display. Events may be programmed to occur on any day of the week at any time. In addition, events may be repeated at a specific time on two (2) or more consecutive days (i.e. M-F, Sun-Th, etc). Multiple combinations of individual and block events may be programmed. Holiday exceptions are individually selected by date and will over-ride all regularly scheduled events.

### **Output Relay Modes:**

<b>Mode</b>	<b>Status</b>
<b>Relay OFF</b>	De-energizes the relay until a relay ON event is detected.
<b>Relay ON</b>	Energizes the relay until a relay OFF event is detected.
<b>Disable</b>	Used to cancel an existing programmed event.
<b>Pulse</b>	Momentarily energizes the relay for a selectable time period of 1 sec. to 15 secs.



Time is displayed in 24 hr. military format.

### **Terminal Identification Table:**


<b>Terminal Legend</b>	<b>Function/Description</b>
NO, C, NC	Dry Contact output used to switch controlled devices. When these relays are energized (ON) the NC and C terminals are open and the NO and C terminals are closed. When this relay is de-energized (Off) the NC and C terminals are closed and the NO and C terminals are open.
+ DC – ~ AC ~	AC or DC Input 12 to 24 volt. When using DC carefully observe polarity
+ BAT – 12VDC	12VDC stand-by battery input (battery leads provided).
FM	When this terminal is connected to DC neg. (-) the “First Man in” feature is enabled. The relay will remain in its present position until this connection is terminated. At that time the relay will resume normal operation and latest scheduled events will occur.

Fig. 1

**RELAY ON**  
**SU 01:01**

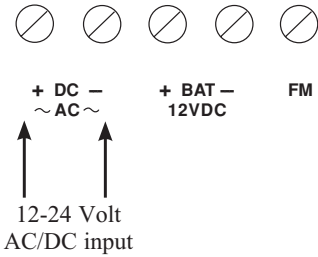

**Push Button Layout:**

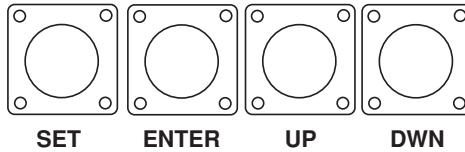

**Push Button Description Table:**

Push Button	Function/Description
SET	Scrolling keys for programming. Escaping out of existing programming.
ENTER	Accepts selections made to programming.
UP	Scrolls through selections.
DOWN	Scrolls through selections.

**UP** and **DOWN** keys can be used to select data entries. After scrolling to the correct entry, depress **ENTER** to accept.

## A. Setting Clock/Calendar:

Upon initial power up RLY OFF  
SU 01:01 will appear on display.

Depress **SET**. ENTER to  
SET TIME will appear on display.

Depress **ENTER**. 01/01/01  
SU/01:01 will appear on display.

Enter the current date, day of week and time (military) by depressing **UP** and **DWN** to make the selection then depress **ENTER** to accept.

Next select either DS (daylight savings mode) or ST (standard time mode) by depressing set until

ENTER to  
SET BK appears on display.

Depress **ENTER** to scroll until flashing cursor appears under DS (daylight savings mode) in display. To change mode depress **UP** or **DWN** once ST (standard time mode) will appear in display. Depress **ENTER** to accept correct selection.

**Note:** The flashing cursor denotes location of data entry selection to be made. If an entry was made in error or requires changing, depress **SET** to backspace, make the correct selection and depress **ENTER** to accept data and advance the cursor.

To change or program clock/calendar simply repeat the steps above.

## B. Setting Events:

Depress **SET** until ENTER to  
SET EVENT appears on display.

Depress **ENTER**. #01^OFF  
SU 00:00 will appear on display.

Depress **ENTER** until the flashing cursor appears under OFF in display. Now select type of event required, by scrolling using the **UP** and **DWN** push buttons until either:

ON - Relay ON (latching mode).

OFF - Relay OFF (latching mode).

PL - Relay Pulse ( momentary).

appears in display and depressing **ENTER** will make selection.

When selecting the pulse mode PL01 will appear in the display. It is now necessary to assign the length of time (duration of relay activation). The pulse can range in length from 1 second minimum to 15 seconds maximum and is selected by using **UP** or **DWN** push buttons, then depressing **ENTER** to accept.

**Note:** If pulse duration is not selected relay output defaults to 1 second.

Next select the day of the week and time (military) by scrolling using **UP** and **DWN** push buttons and depress **ENTER** to accept.

You may continue to program events by repeating the previous steps or exit programming by depressing **SET**.

**Note:** When programming additional events it is necessary to select the next consecutive event number following the last event program to continue.

**Note:** When it is required to program a block of days of the week (Block) or more consecutive days, depress **SET** until the cursor appears on the first day of the week desired. Depress **UP** and **DWN** to select day. Depress **ENTER** to confirm selection, then cursor will appear at the location of the last day of the week desired. Depress **UP** and **DWN** to select day. Depress **ENTER** to confirm selection. Depress **ENTER** again to escape.

**Example:**

- 1) Monday through Thursday depress **MON** followed by **THURS**.
- 2) Wednesday through Sunday depress **WED** followed by **SUN**.

**C. Setting Block Events (weekly repeat):**

Depress **SET** until ENTER to SET BK appears on display.

Depress **ENTER**. BK=SA/SU TIME=DS will appear on display.

Flashing cursor will appear at the location of the first day of the week desired. Depress **UP** and **DWN** to select day. Depress **ENTER** to confirm selection, then cursor will appear at the location of the last day of the week desired. Depress **UP** and **DWN** to select day. Depress **ENTER** to confirm selection. Depress **ENTER** again to escape.

**D. Setting Holiday Events:**

Depress **SET** until ENTER to SET EVENT appears on display.

Depress **ENTER**. #01^ON HL 00:00 will appear on display.

Next select HL to indicate as holiday event and time by scrolling using **UP** and **DWN** push buttons and depress **ENTER** to accept.

You may continue to program more holiday events by repeating the previous steps or exit programming by depressing **SET**.

**E. Setting Holiday Dates:**

It is now necessary to assign these holiday events specific calendar dates which they are to occur. To select Holiday events depress **SET** until

ENTER to SET HOL appears on display.

Depress **ENTER**. #01^HOL SU 00:00 will appear on display.

**Note:** Holiday events will override all regularly programmed events.

**F. Delete/Disable Events or Edit Events:**

Previously programmed regularly scheduled and/or holiday events may be deleted/disabled without having to erase all events.

Depress **SET** until ENTER to SET EVENT appears on display.

Depress **ENTER**. #01^ON TU 00:00 will appear on display.

**G.Delete All Events:**

All previously programmed events can be deleted by depressing **SET** until

ENTER to CLR MEM

appears on display.

Depress **ENTER**.

CLEAR MEMORY?

will appear on display.

Depress **ENTER**.

PRESS UP & ACCEPT

will appear on display.

Depressing **UP** push button will now clear all events previously programmed. If you wish to escape from this selection depress any of the other push buttons: **SET**, **ENTER** and **DWN**.

**PT724AE**

**Enclosure Dimensions (H x W x D approximate):**  
8.5" x 7.5" x 3.5" (215.9mm x 190.5mm x 88.9mm)

